

Tail light clusters , (8VA)

From July 2018





Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Onboard supply control unit, Left tail light cluster, Right tail light cluster

- J519 Onboard supply control unit
- MX3 Left tail light cluster
- MX4 Right tail light cluster
- M6 Rear left turn signal bulb
- M8 Rear right turn signal bulb
- M21 Left brake and tail light bulb
- M22 Right brake and tail light bulb
- T4ak 4-pin connector, black
- T4al 4-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

- 51 Earth point, on right in luggage compartment
- 424 Earth connection 2, in left rear end wiring harness
- 427 Earth connection 3, in right rear end wiring harness
- * see applicable current flow diagram for fuses in interior

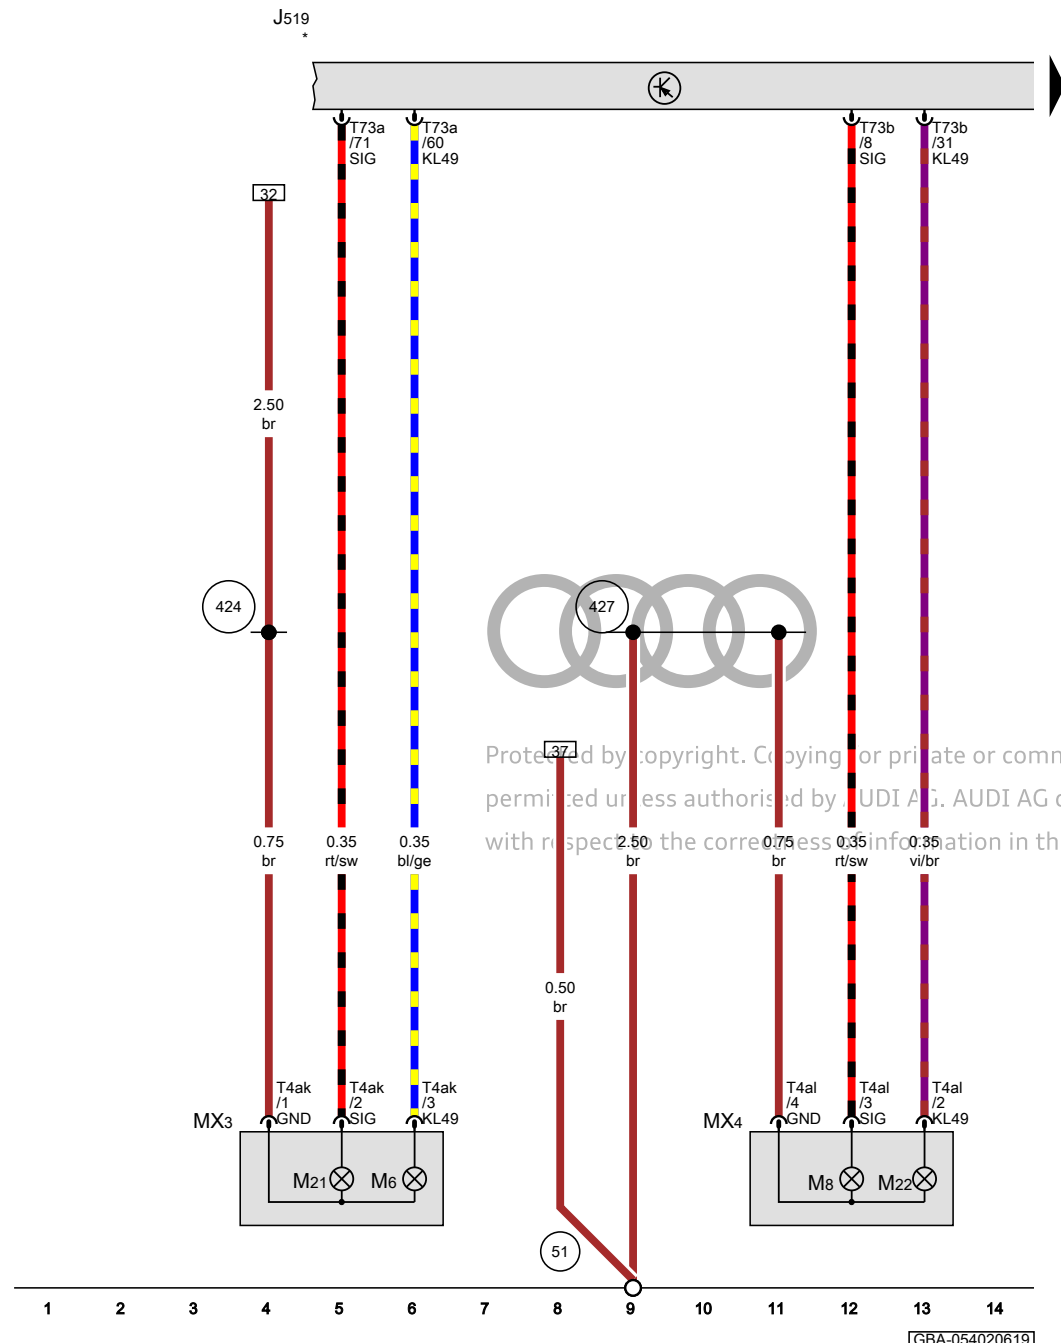

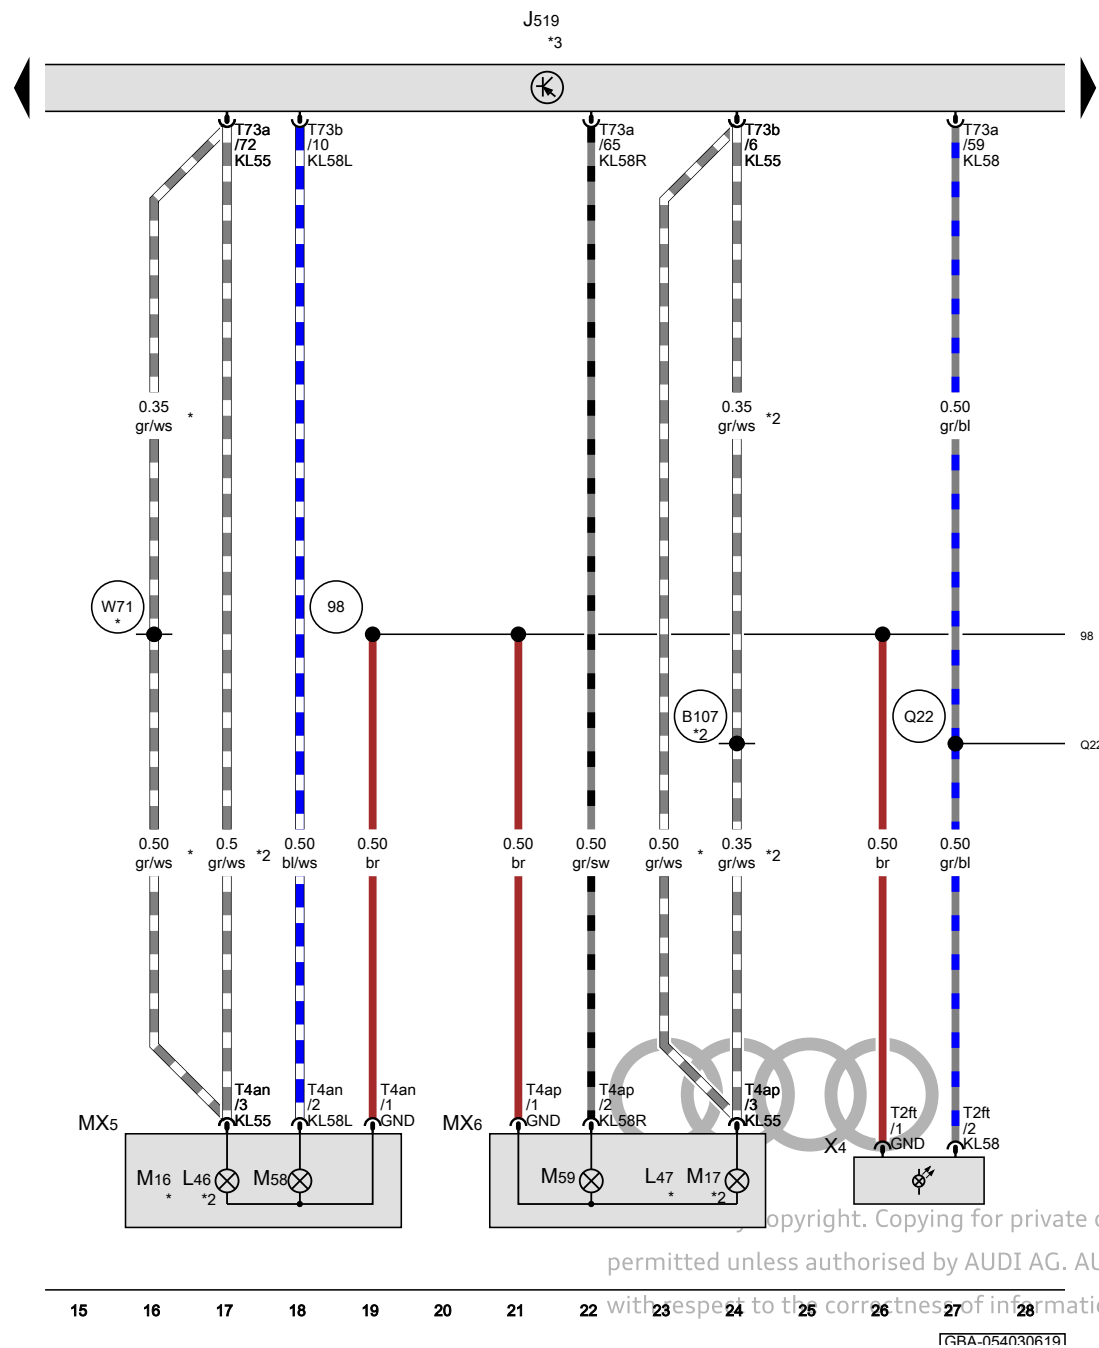

Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2, Left number plate light

- J519 Onboard supply control unit
- L46 Rear left fog light bulb
- L47 Rear right fog light bulb
- MX5 Left tail light cluster 2
- MX6 Right tail light cluster 2
- M16 Left reversing light bulb
- M17 Right reversing light bulb
- M58 Left brake and tail light bulb 2
- M59 Right brake and tail light bulb 2
- T2ft 2-pin connector, black
- T4an 4-pin connector, brown
- T4ap 4-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- X4 Left number plate light


- 98 Earth connection, in rear lid wiring harness
- B107 Connection (reversing light), in main wiring harness
- Q22 Connection 1, in rear lid wiring harness
- W71 Connection (reversing light), in rear wiring harness

- * For right-hand drive models
- *2 For left-hand drive models
- *3 see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1540306191



C24	Suppression filter
J519	Onboard supply control unit
M25	High-level brake light bulb
T2fu	2-pin connector, black
T2h	2-pin connector, black
T2n	2-pin connector, black
T73a	73-pin connector, black
X5	Right number plate light
50	Earth point, on left in luggage compartment
75	Earth point, rear right pillar
98	Earth connection, in rear lid wiring harness
423	Earth connection 1, in right rear end wiring harness
Q22	Connection 1, in rear lid wiring harness
Q44	Connection 2, in rear lid wiring harness
*	Pre-wired component
*2	see applicable current flow diagram for fuses in interior

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink