


Lane change assist , (7Y1),(7Y5)

From July 2019



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Data bus diagnostic interface, Blind Spot Monitor control unit, Fuse holder C

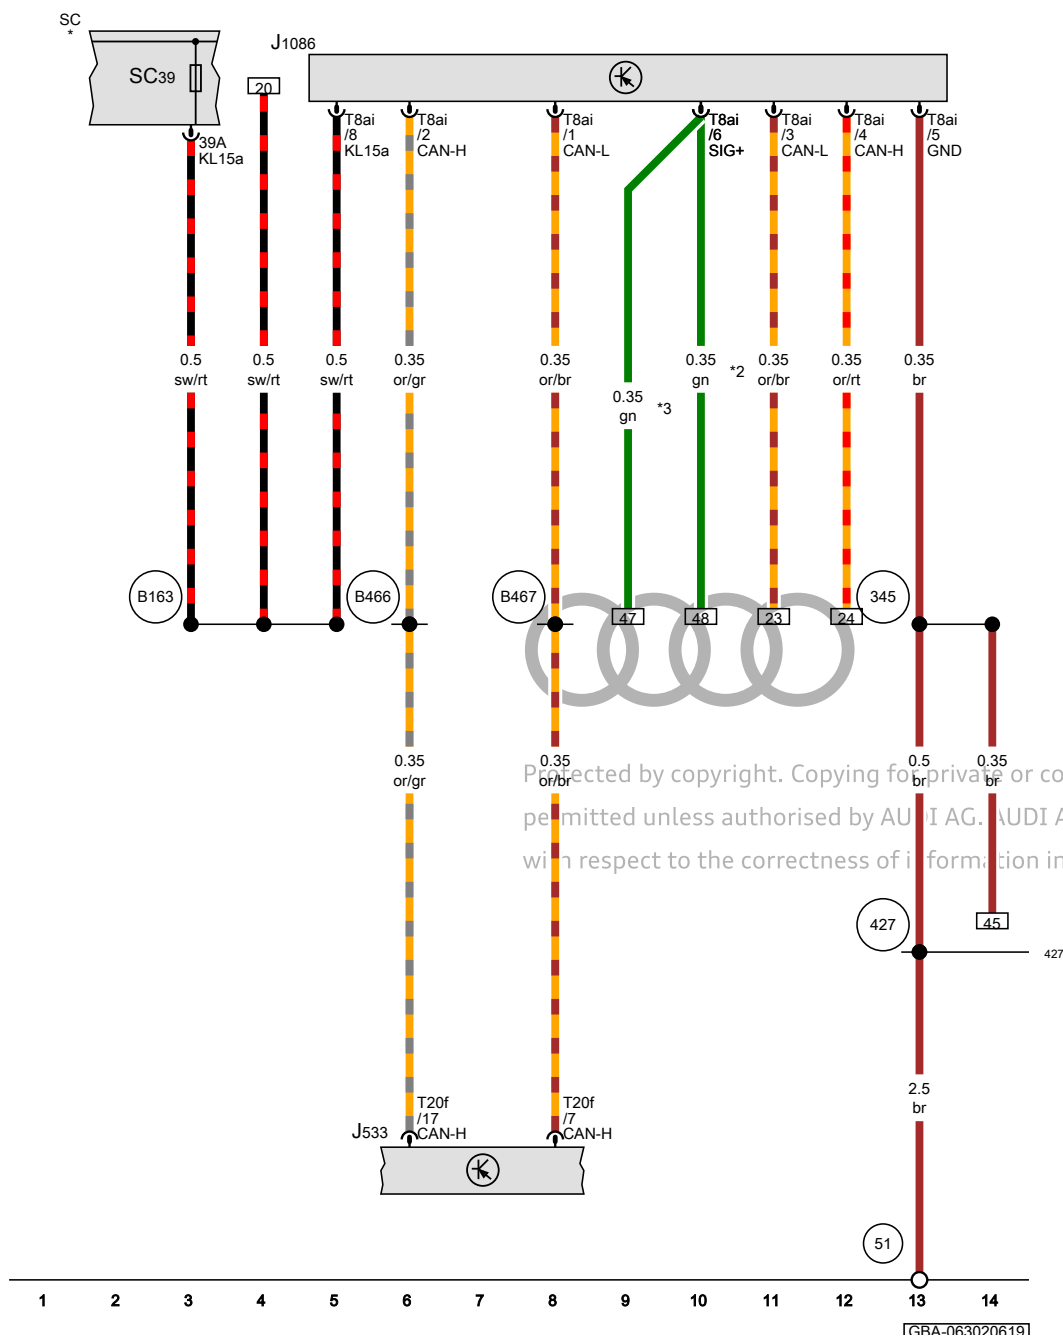

- J533 Data bus diagnostic interface
- J1086 Blind Spot Monitor control unit
- SC Fuse holder C
- SC39 Fuse 39 on fuse holder C
- T8ai 8-pin connector, black
- T20f 20-pin connector, red


- 51 Earth point, on right in luggage compartment
- 345 Earth connection, in bumper wiring harness
- 427 Earth connection 3, in right rear end wiring harness
- B163 Positive connection 1 (15), in interior wiring harness
- B466 Connection 2, in main wiring harness
- B467 Connection 3, in main wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 For left-hand drive models
- *3 For right-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Driver side exterior mirror, Passenger side exterior mirror

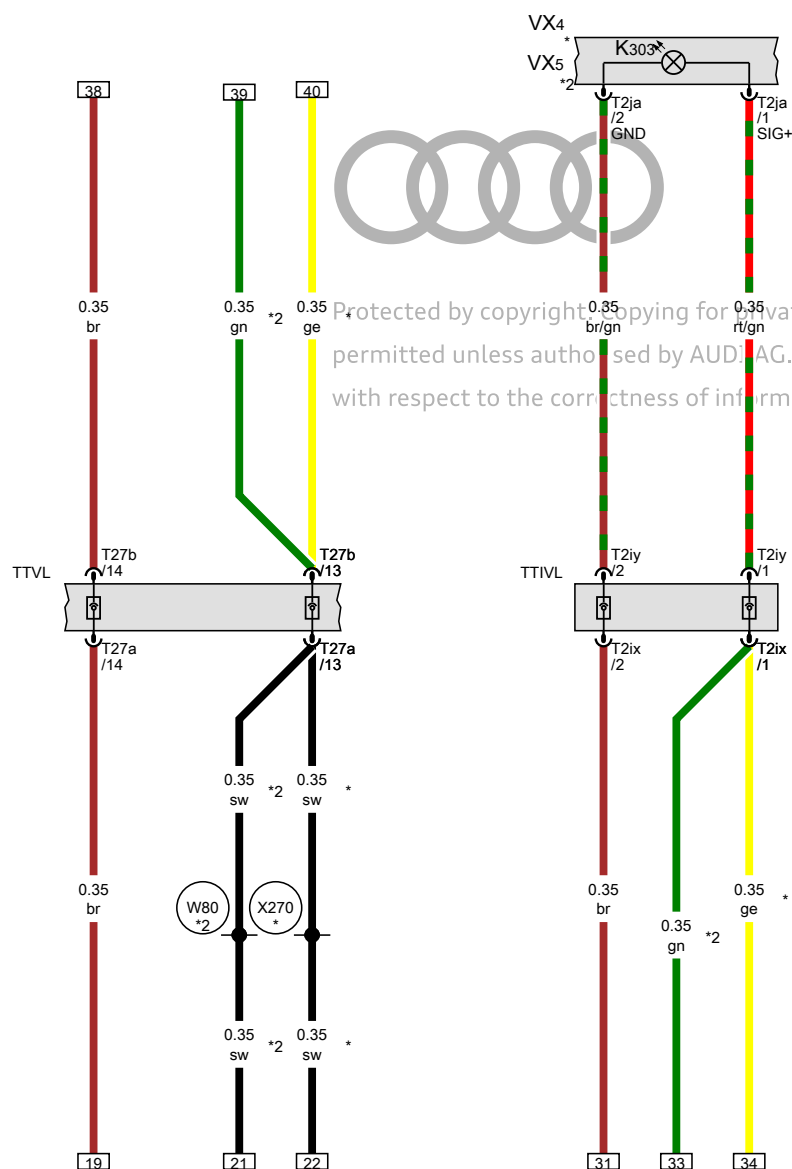

- K303 Blind Spot Monitor warning lamp in left exterior mirror
- T2ix 2-pin connector, black
- T2iy 2-pin connector, black
- T2ja 2-pin connector, black
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- TTIVL Coupling point in front left door
- TTVL Coupling point for front left door
- VX4 Driver side exterior mirror
- VX5 Passenger side exterior mirror

- W80 Connection 2 in rear wiring harness
- X270 Connection (30), rear bumper wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Driver side exterior mirror, Passenger side exterior mirror


- K304 Blind Spot Monitor warning lamp in right exterior mirror
- T2iv 2-pin connector, black
- T2iw 2-pin connector, black
- T2jb 2-pin connector, black
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTIVR Coupling point in front right door
- TTVR Coupling point for front right door
- VX4 Driver side exterior mirror
- VX5 Passenger side exterior mirror

B482 Connection 18, in main wiring harness

X273 Positive connection (30), in rear bumper

* For left-hand drive models

*2 For right-hand drive models

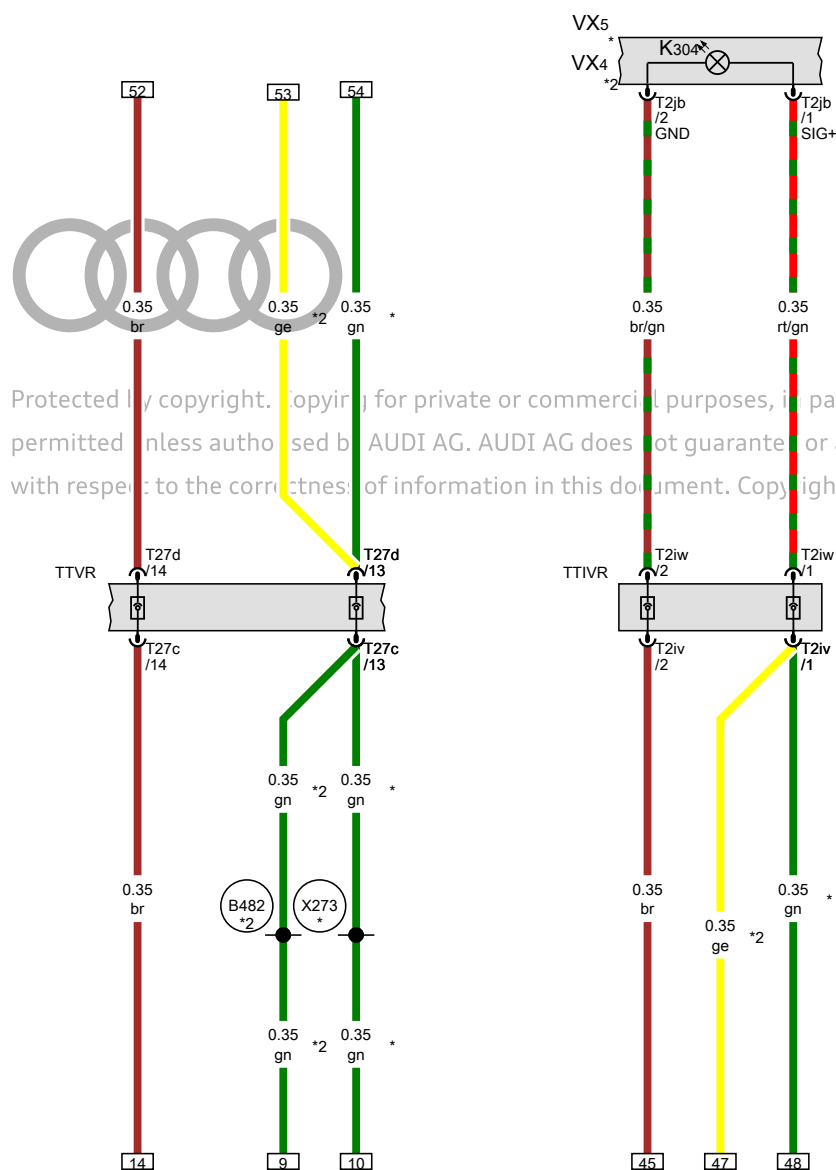

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink