


INDICATORS

Component Index

- Dash Fuse Box
- Fuel Tank Unit
- Oil Pressure Switch
- Powertrain Control Module (PCM)


INDICATORS

Circuit Schematic

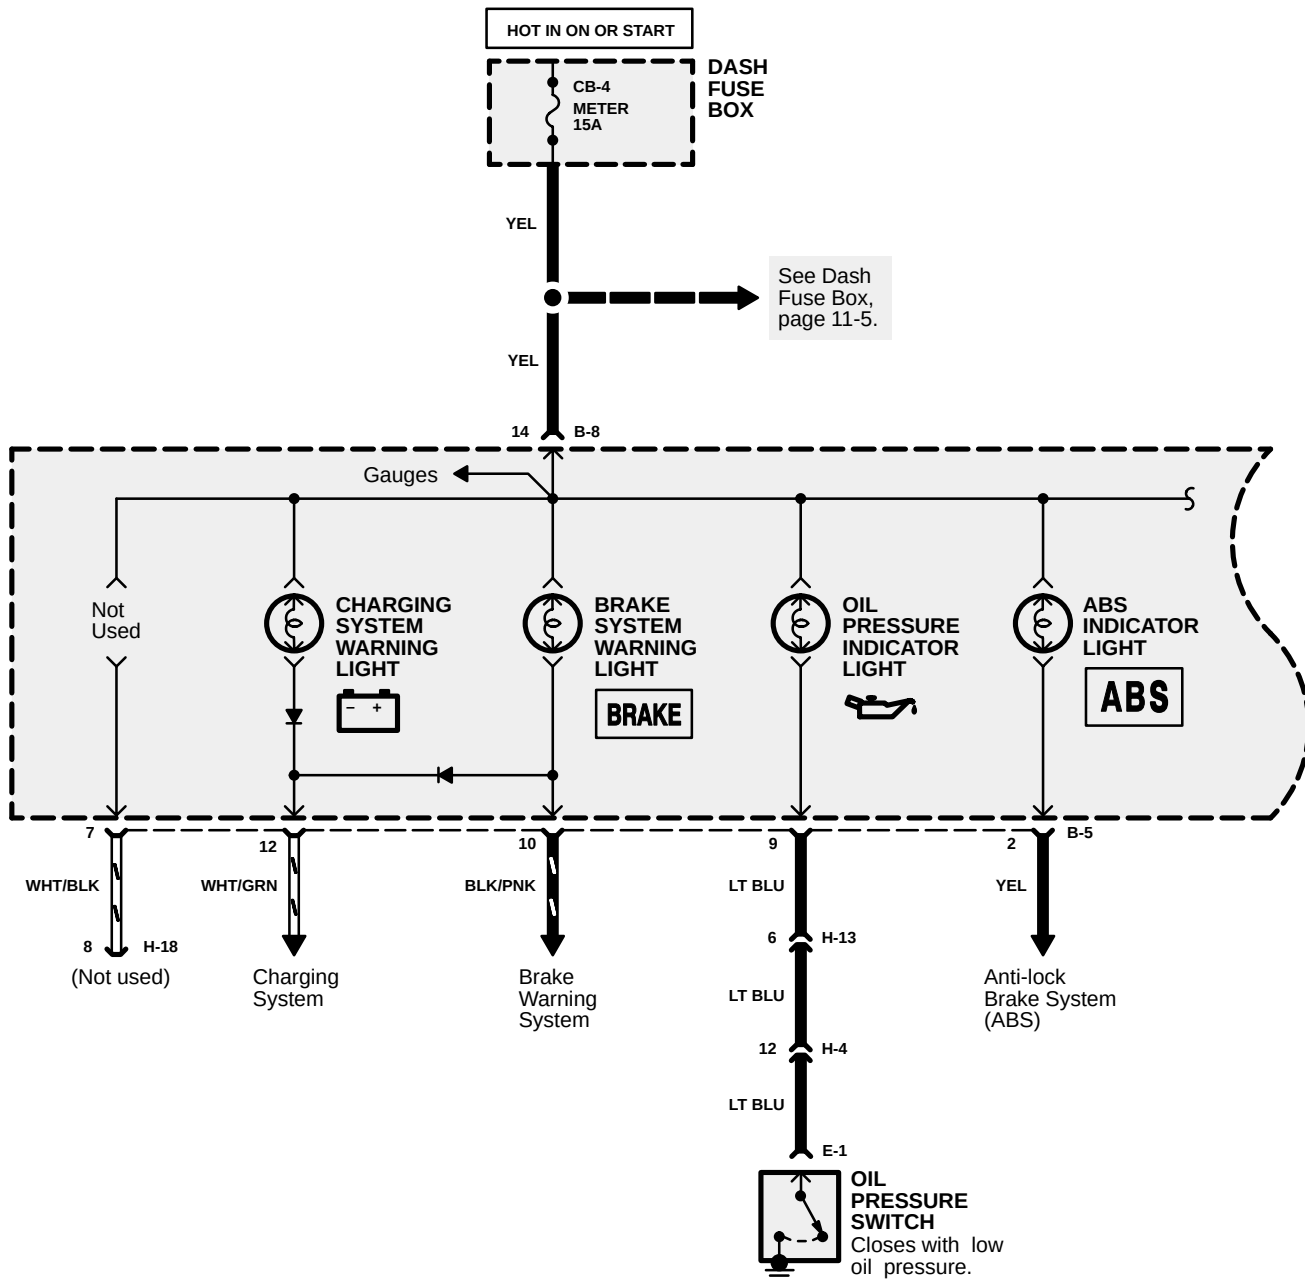


INDICATORS

Circuit Schematic

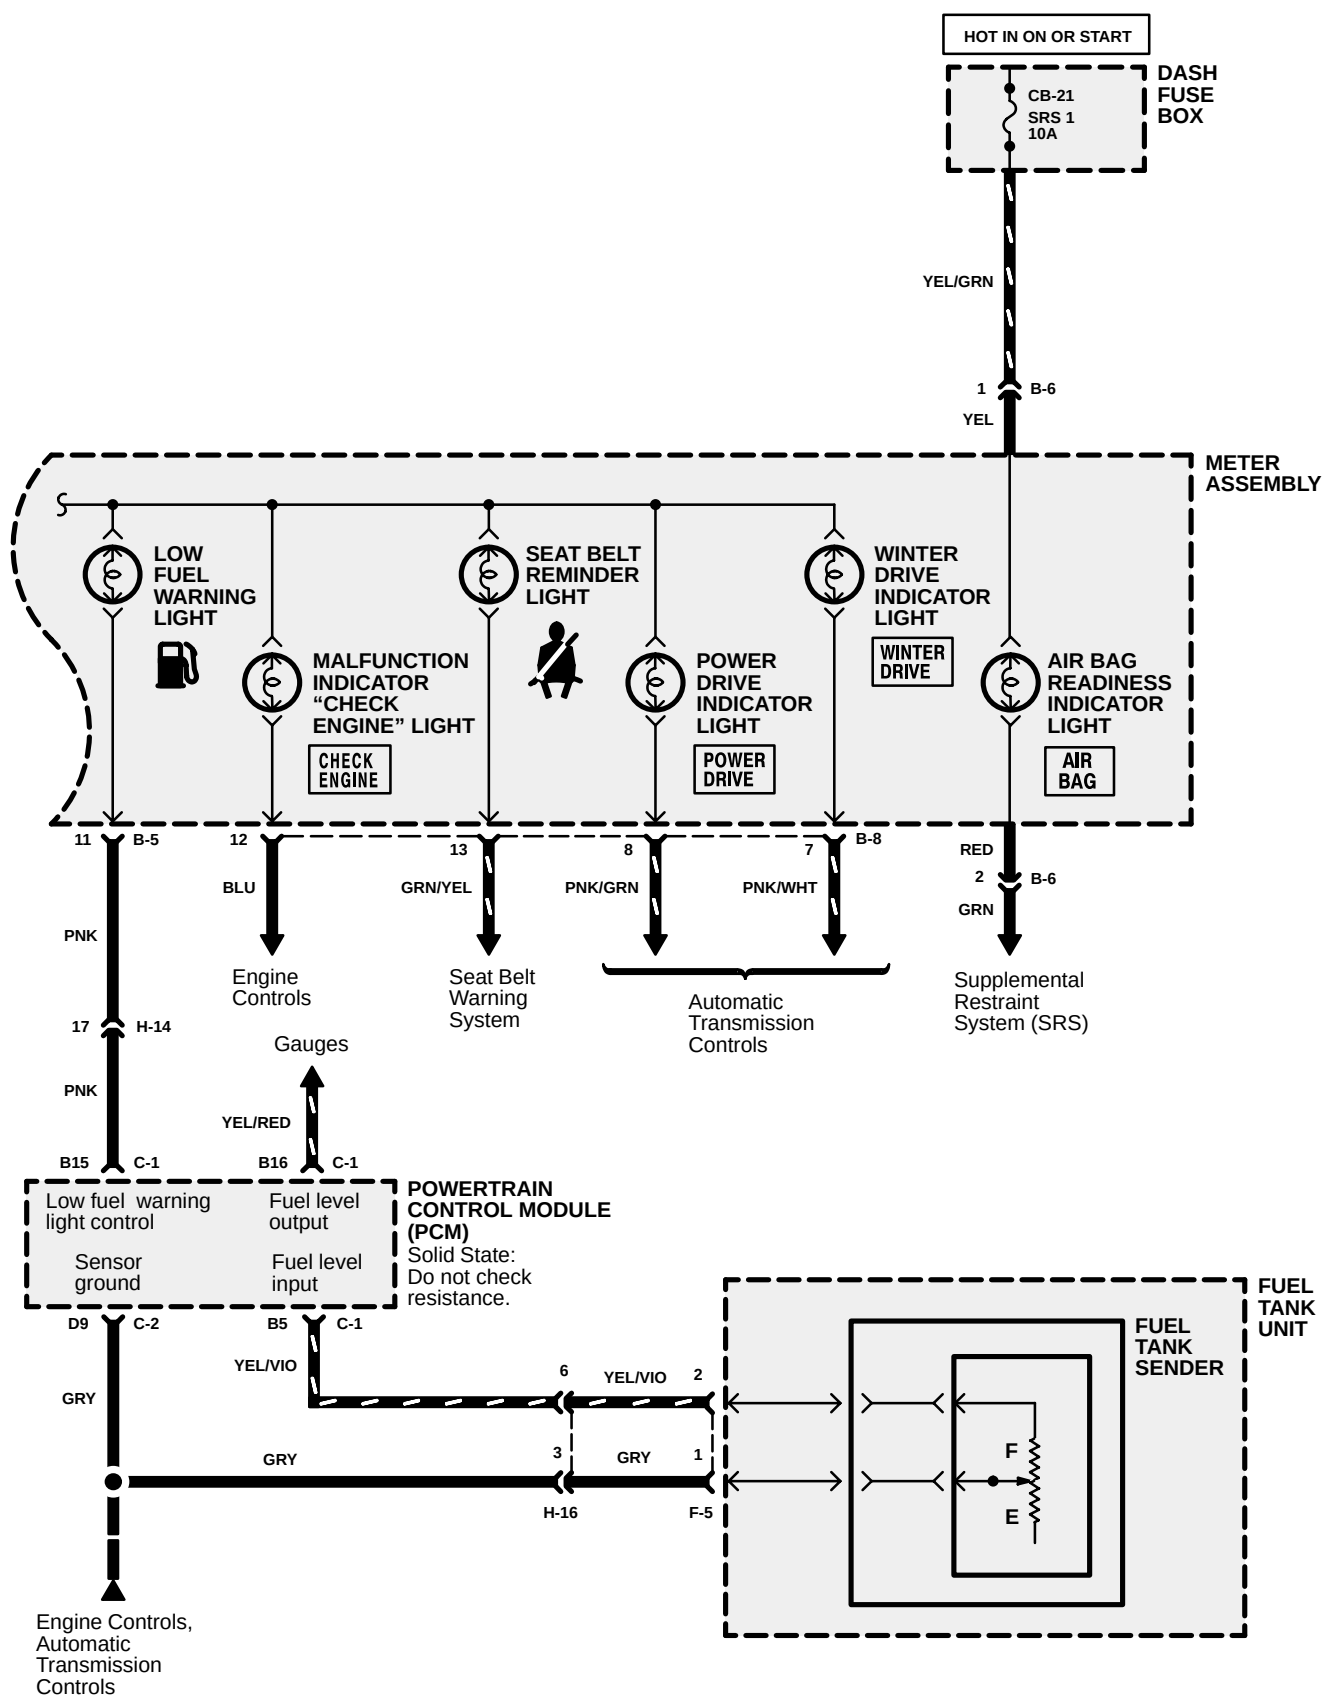


INDICATORS

Circuit Schematic

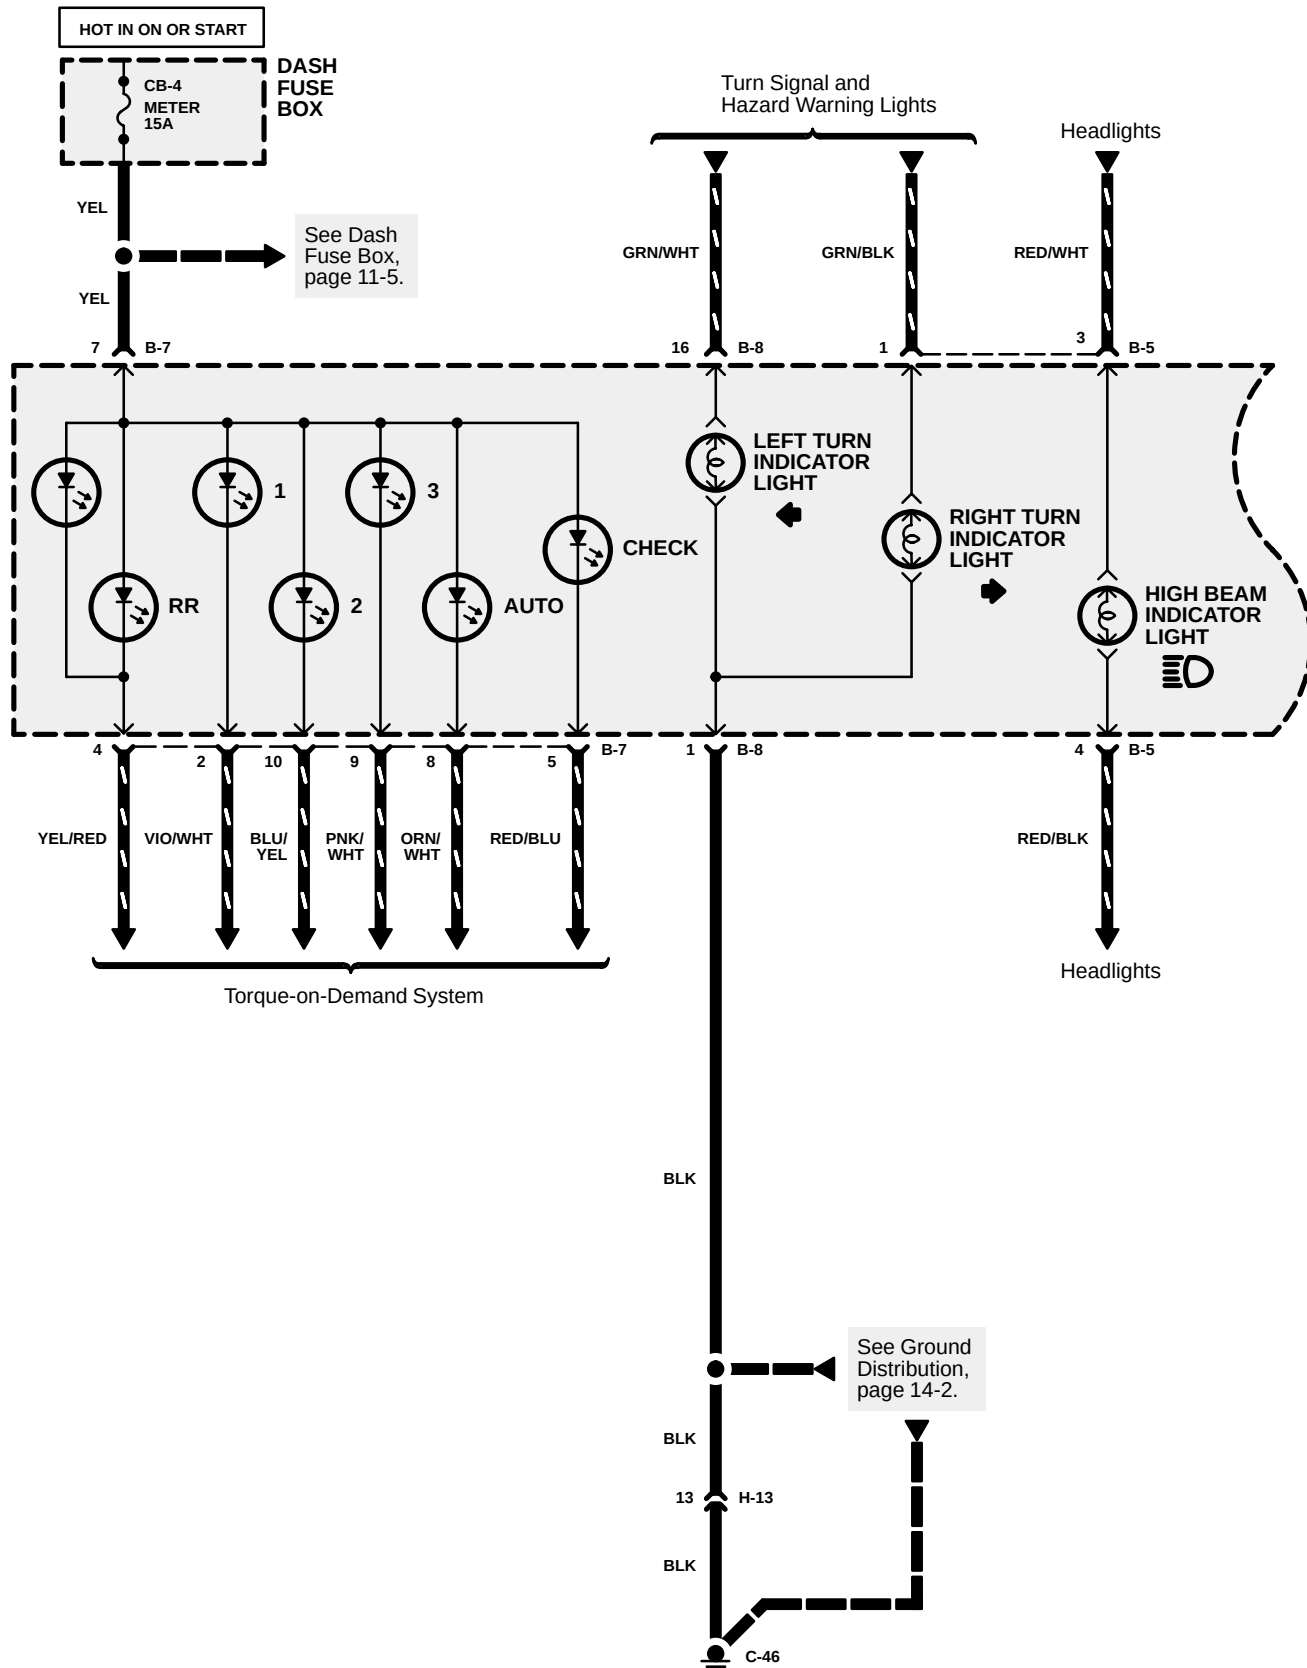

INDICATORS

Circuit Schematic

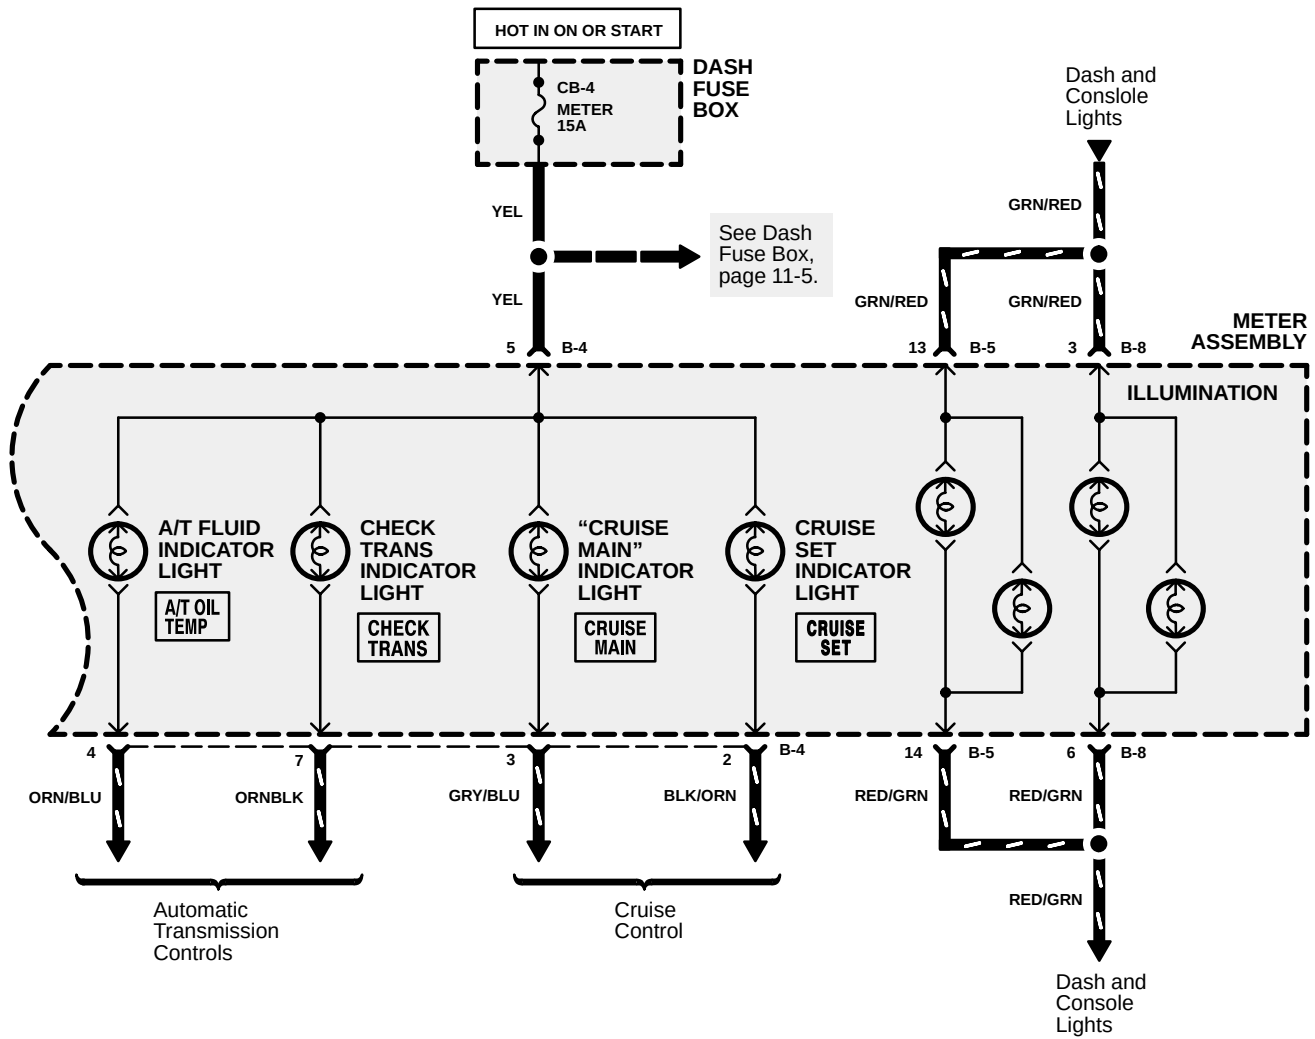

INDICATORS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Dash Fuse Box	Behind left I/P side trim panel 36
Fuel Tank Unit	Beneath rear of vehicle, in right front of fuel tank 89
Oil Pressure Switch	Lower front of engine 8
Powertrain Control Module (PCM)	Behind front console 52
<u>Connector</u>	
B-4 (7-WHT)	Behind left side of I/P, on rear of meter assembly 49
B-5 (16-WHT)	Behind left side of I/P, on rear of meter assembly 49
B-6 (2-YEL)	Behind left side of I/P, on rear of meter assembly 49
B-7 (10-WHT)	Behind left side of I/P, on rear of meter assembly 49
B-8 (16-BLK)	Behind left side of I/P, on rear of meter assembly 49
H-4 (16-BLU)	Left rear of engine compartment on bracket 15
H-13 (22-WHT)	Behind left side of I/P, above left kick panel on bracket 42
H-14 (22-BLU)	Behind left side of I/P, above left kick panel on bracket 42
H-16 (20-WHT)	In floor, below right front seat 66
<u>Ground</u>	
C-46	Behind left kick panel 40

Circuit Operation

The indicator lights are controlled by different conditions set forth in their associated systems. See the associated system for the indicator light circuit description.

Low Fuel Warning Light

The powertrain control module (PCM) monitors the fuel level by the resistance level in the fuel tank unit. The PCM then uses this information to provide ground to the low fuel warning light, illuminating it when the fuel level is low.

Bulb Check

With the starter switch in ON or START, battery voltage is applied through the METER fuse CB-4 to the indicator lights. The generator will provide ground to the circuit until the engine is running. The lights go on to test the light bulbs and then go off after the engine is started.