Instrument Panel Lower Center Trim Replacement

Removal Procedure

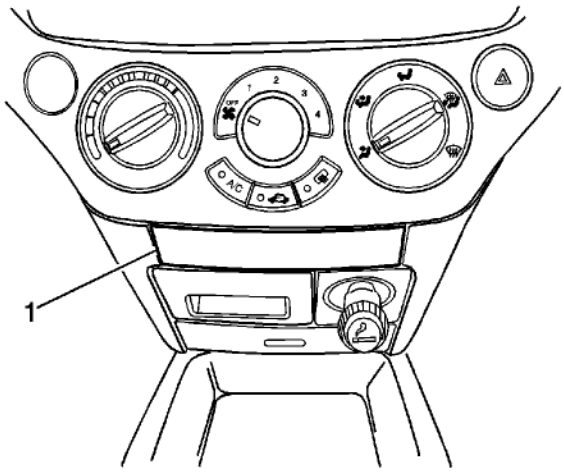

Remove the instrument panel lower center trim panel (1) using a taped flat-bladed tool.

Installation Procedure

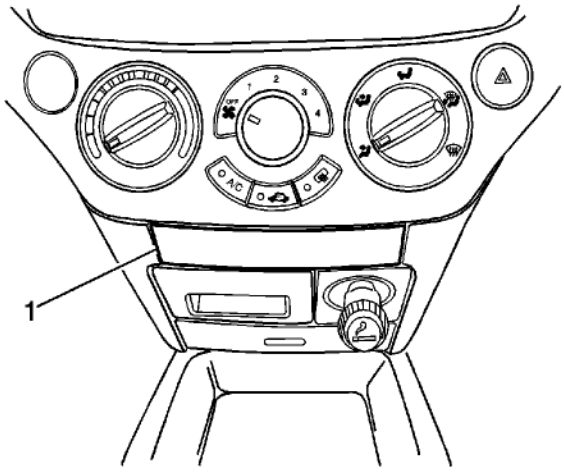

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

Install the instrument panel lower center trim panel (1).

cardiagn.com

Instrument Panel Center Trim Panel Replacement

Removal Procedure

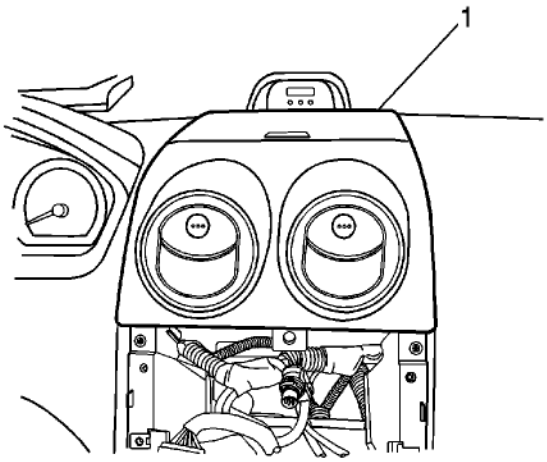

1. Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement.
2. Using a taped flat-bladed tool, remove the instrument panel center trim panel (1).

Installation Procedure

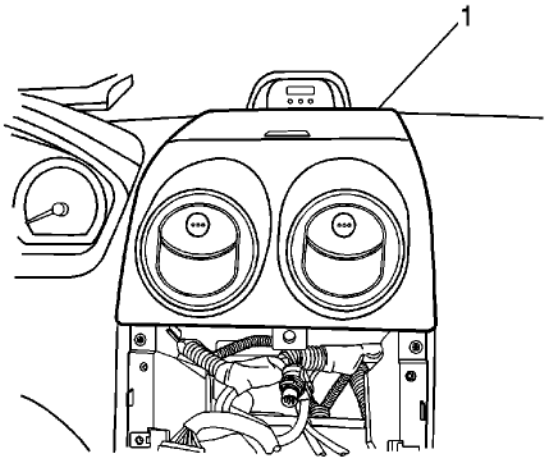

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

1. Install the instrument panel center trim panel (1).
2. Install the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement.

cardiagn.com

Instrument Panel Lower Trim Panel Replacement

Removal Procedure

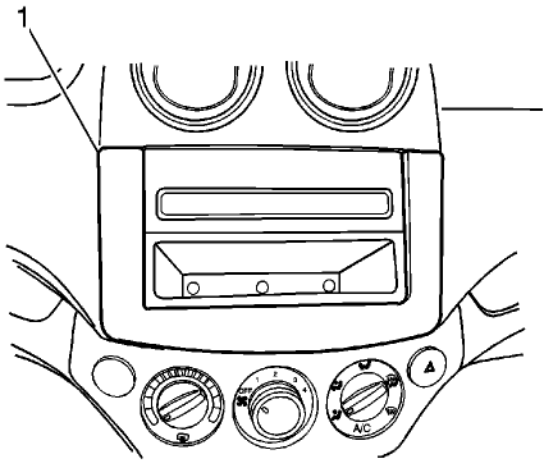

Remove the instrument panel lower trim panel (1) using a taped flat-bladed tool.

Installation Procedure

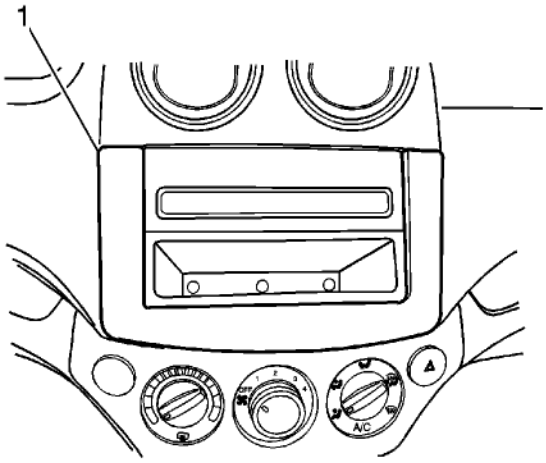

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

Install the instrument panel lower trim panel (1).

cardiagn.com

Ashtray Replacement

Removal Procedure

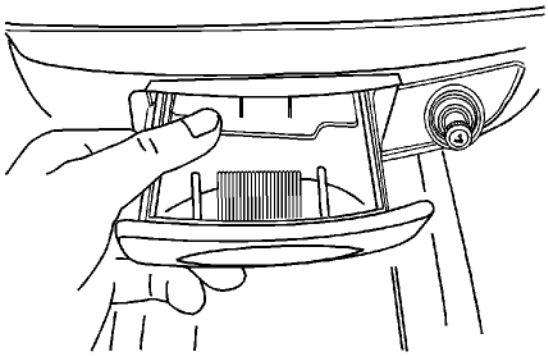

Remove the ashtray.

Installation Procedure

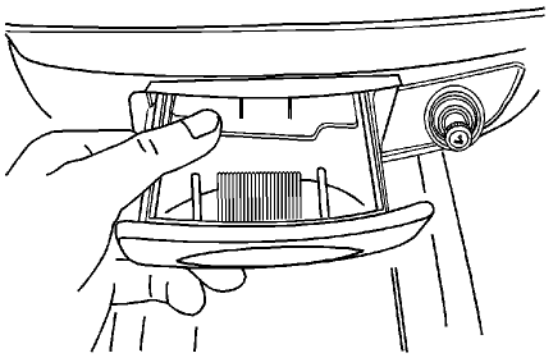

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

Install the ashtray.

cardiagn.com

Instrument Panel Storage Compartment Replacement

Removal Procedure

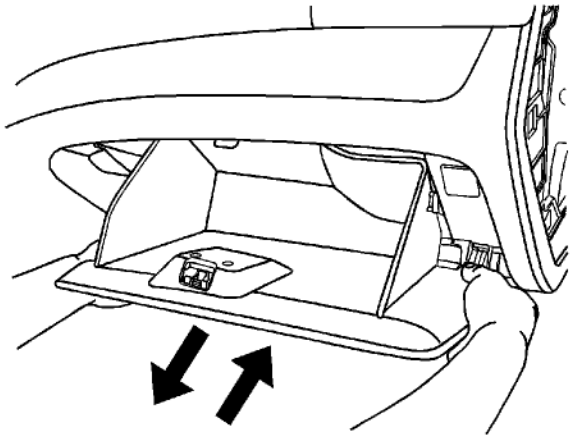

Open and remove the glove box.

Installation Procedure

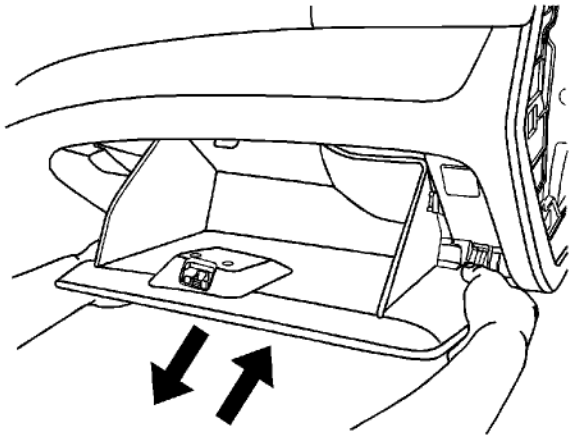

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

1. Position the glove box in the instrument panel.
2. Install the glove box.

cardiagn.com

Instrument Panel Assembly Replacement (Notchback)

Removal Procedure

Warning: Refer to Battery Disconnect Warning in the Preface section.

1. Disconnect the negative battery cable. Refer to Battery Negative Cable Disconnection and Connection.
2. Remove the driver air bag module from the steering wheel, if equipped. Refer to Inflatable Restraint Steering Wheel Module Replacement.
3. Remove the steering wheel from the steering column. Refer to Steering Wheel Replacement.
4. Remove the steering column trim cover. Refer to Steering Column Replacement.

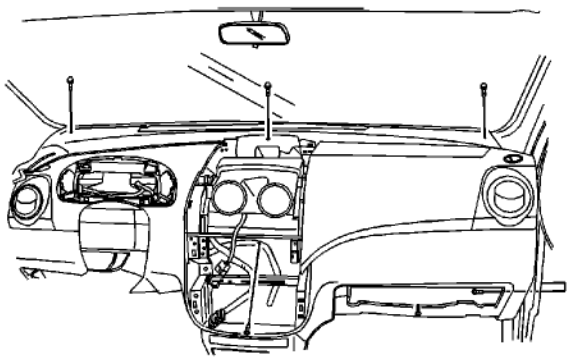

5. Remove the signal lamp switch and the wiper switch. Refer to Turn Signal Multifunction Switch Replacement and Windshield Wiper and Washer Switch Replacement.
6. Remove the windshield pillar garnish moldings. Refer to Windshield Pillar Garnish Molding Replacement.
7. Remove the instrument cluster assembly. Refer to Instrument Cluster Replacement.
8. Remove the side cover.
9. Using a taped flat-bladed tool, gently pry and remove the instrument panel lower cover.
10. Remove the instrument panel center vent panel.
11. Remove the cigar lighter and ashtray. Refer to Cigar Lighter Housing Replacement and Ashtray Replacement.
12. Remove the cupholder. Refer to Cupholder Replacement.

cardiagn.com

© 2010 General Motors Corporation. All rights reserved.

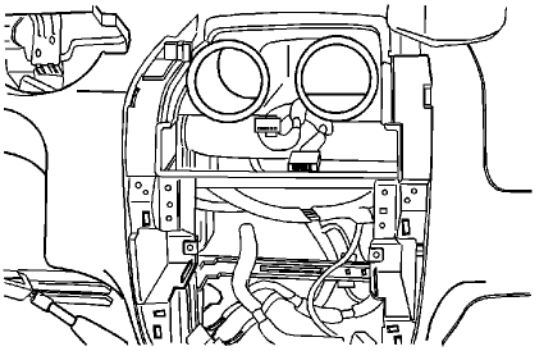

13. Remove the A/C controller from the instrument panel. Refer to Heater and Air Conditioning Control Replacement.
14. Remove the audio system from the instrument panel. Refer to Radio Replacement.
15. Remove the digital clock. Refer to Clock Replacement.
16. Remove the glove box assembly from the instrument panel. Refer to Instrument Panel Storage Compartment Replacement.
17. Remove the screws from the ALDL connector.
18. Disconnect the necessary electrical connectors.

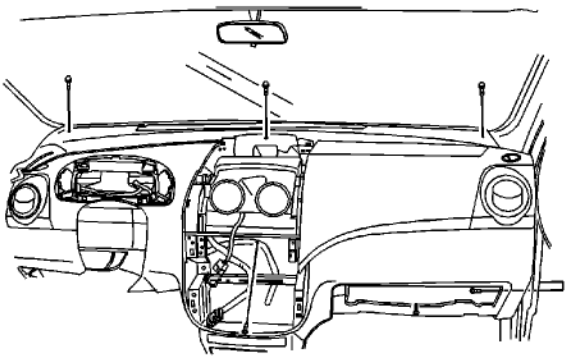

19. Remove the three bolts from the upper instrument panel.

cardiagn.com

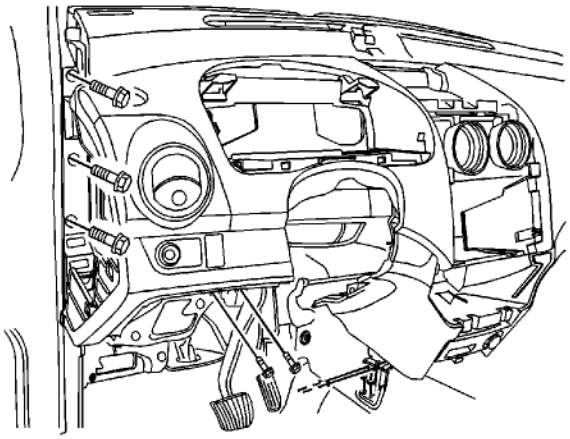

20. Remove the instrument panel screw behind the HVAC controls.
21. Remove the instrument panel bolts above the steering column.
22. Remove the instrument panel bolts from the ends of the instrument panel.
23. Remove the two nuts from the lower left center of the instrument panel.

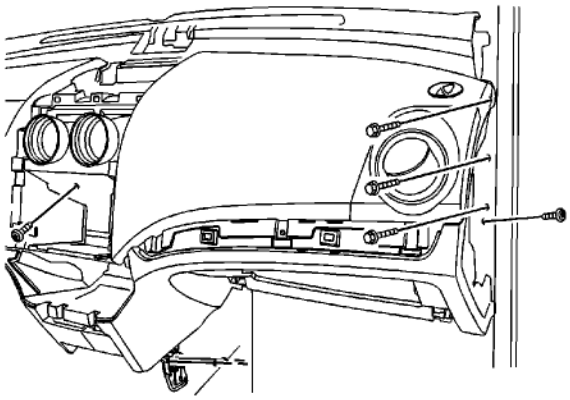

24. Remove the instrument panel end screws.
25. Remove the two nuts from the lower right center of the instrument panel.
26. Remove the tie-bar retaining bolts.
27. Disconnect the wire harness from the instrument panel.
28. Remove the instrument panel from the vehicle.

Installation Procedure

Caution: Refer to Fastener Caution in the Preface section.

cardiagn.com

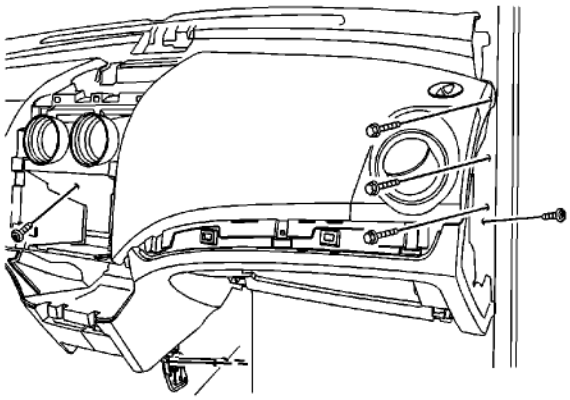

1. Install the instrument panel assembly with the right side end screws and tighten to **20 N·m (15 lb ft)**.
2. Install the tie bar retaining bolts and tighten to **20 N·m (15 lb ft)**.
3. Connect the wire harness to the instrument panel.
4. Install the two nuts to the lower right center of the instrument panel.
5. Connect the ALDL connector with the screws.

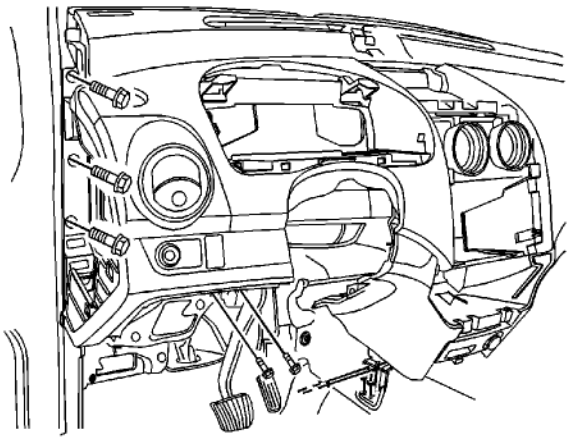

6. Install the instrument panel bolts to the left side of the instrument panel and tighten to **20 N·m (15 lb ft)**.
7. Install the two nuts to the lower left center of the instrument panel.
8. Install the instrument panel bolts above the steering column and tighten to **20 N·m (15 lb ft)**.
9. Install the instrument panel screw behind the HVAC assembly and tighten to **4 N·m (35 lb in)**.

cardiagn.com

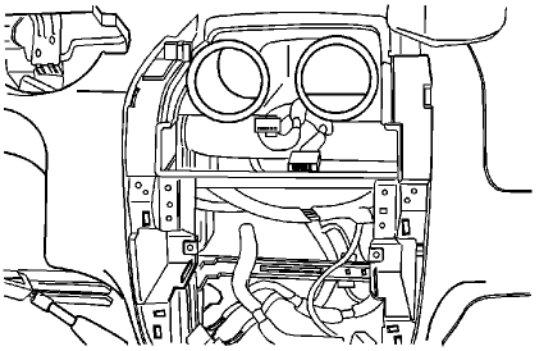

10. Install the digital clock. Refer to Clock Replacement.
11. Install glove box assembly to the instrument panel. Refer to Instrument Panel Storage Compartment Replacement.
12. Install the audio system to the instrument panel. Refer to Radio Replacement.
13. Install the A/C controller to the instrument panel. Refer to Heater and Air Conditioning Control Replacement.
14. Install the cupholder. Refer to Cupholder Replacement.
15. Install the cigar lighter and ashtray. Refer to Cigar Lighter Housing Replacement and Ashtray Replacement.

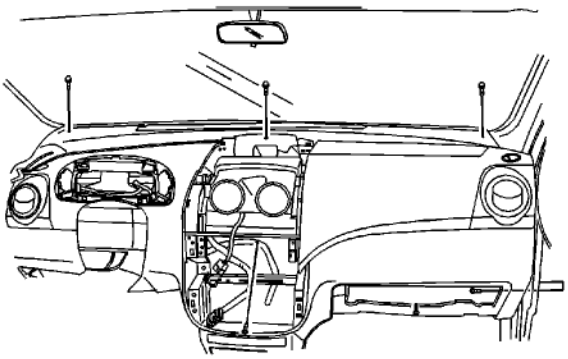

16. Install the instrument panel center vent panel.
17. Install the instrument panel lower cover.
18. Connect the necessary electrical connectors.
19. Install the side cover.
20. Install the instrument cluster assembly. Refer to Instrument Cluster Replacement.

cardiagn.com

21. Install the windshield pillar garnish molding. Refer to Windshield Pillar Garnish Molding Replacement.
22. Install the signal lamp switch and the wiper switch. Refer to Turn Signal Multifunction Switch Replacement for signal, and refer to Windshield Wiper and Washer Switch Replacement.
23. Install the steering column trim cover. Refer to Steering Column Replacement.
24. Install the steering wheel to the steering column. Refer to Steering Wheel Replacement.
25. Install the driver air bag module to the steering wheel, if equipped. Refer to Inflatable Restraint Steering Wheel Module Replacement.
26. Connect the negative battery cable. Refer to Battery Negative Cable Disconnection and Connection.

cardiagn.com

Console Shift Lever Bezel Replacement

Removal Procedure

Warning: Refer to Battery Disconnect Warning in the Preface section.

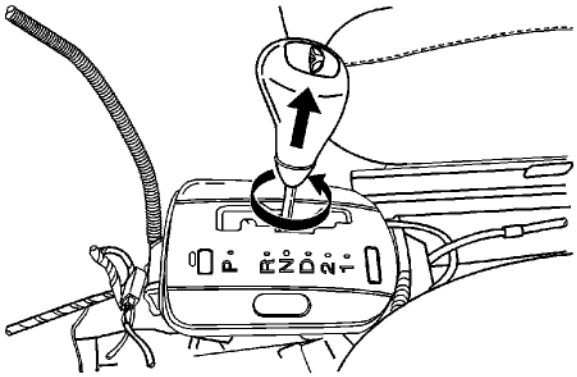

1. Disconnect the negative battery cable.
2. Remove the floor console. Refer to Front Floor Console Replacement.
3. Remove the shift select lever knob.

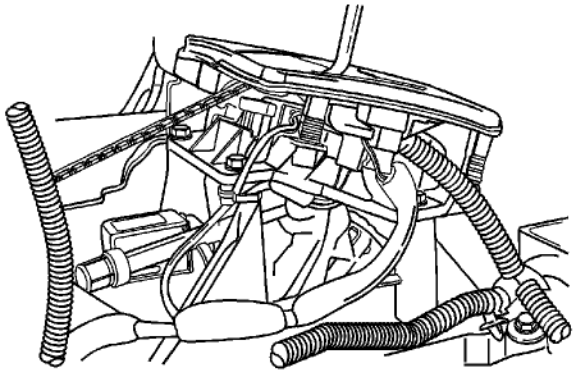

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

4. Disconnect the connectors.
5. Remove the shift select cover from the shift select housing.

Installation Procedure

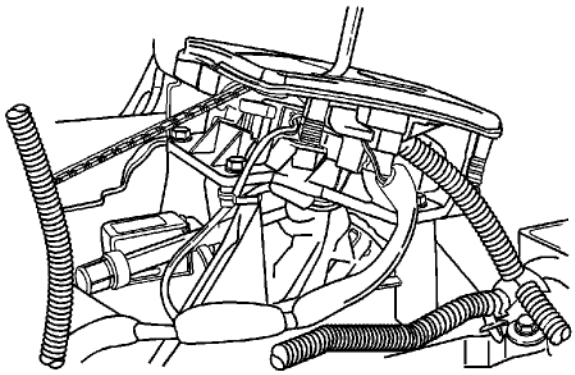

1. Connect the connectors to the shift select cover.
2. Install the shift select cover to the hole.

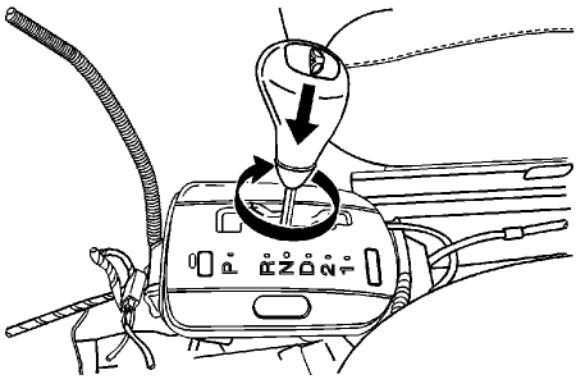

3. Install the shift select lever knob.
4. Install the floor console. Refer to Front Floor Console Replacement.
5. Connect the negative battery cable.

cardiagn.com

Front Floor Console Replacement (Notchback)

Removal Procedure

Warning: Refer to Battery Disconnect Warning in the Preface section.

1. Disconnect the negative battery cable.
2. Remove the gearshift lever boot, if equipped.

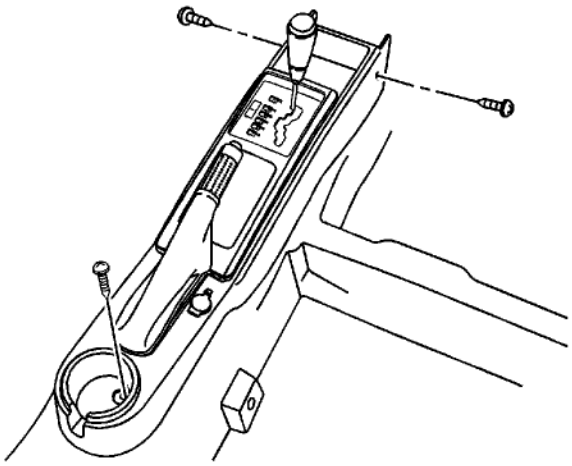

3. Remove the screws from the floor console.

© 2010 General Motors Corporation. All rights reserved.

cardiagn.com

4. Remove the floor console cover.
5. Remove the parking brake cover.
6. Disconnect the electrical connector.
7. Remove the floor console.

Installation Procedure

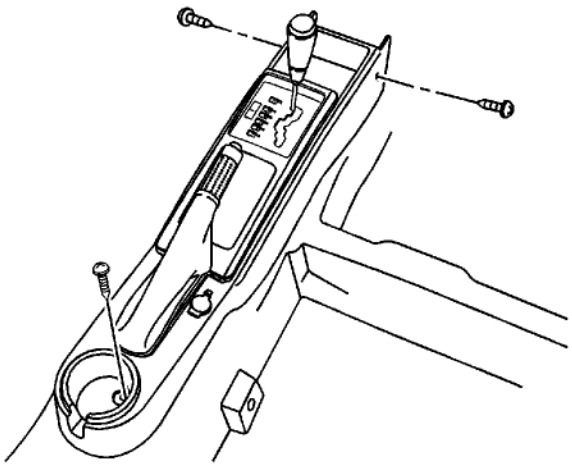

1. Connect the electrical connector.

   Caution: Refer to Fastener Caution in the Preface section.

2. Install the floor console with the screws and tighten to **4 N·m (35 lb in)**.
3. Install the parking brake cover.
4. Install the floor console cover.

cardiagn.com

5. Install the gearshift lever boot, if equipped.
6. Connect the negative battery cable.

cardiagn.com