


LF7132-2 spare parts catalogue

(with flexible cable, 201006)

1.Engine&Transmission

(LF479)


1.01 Cylinder head cover

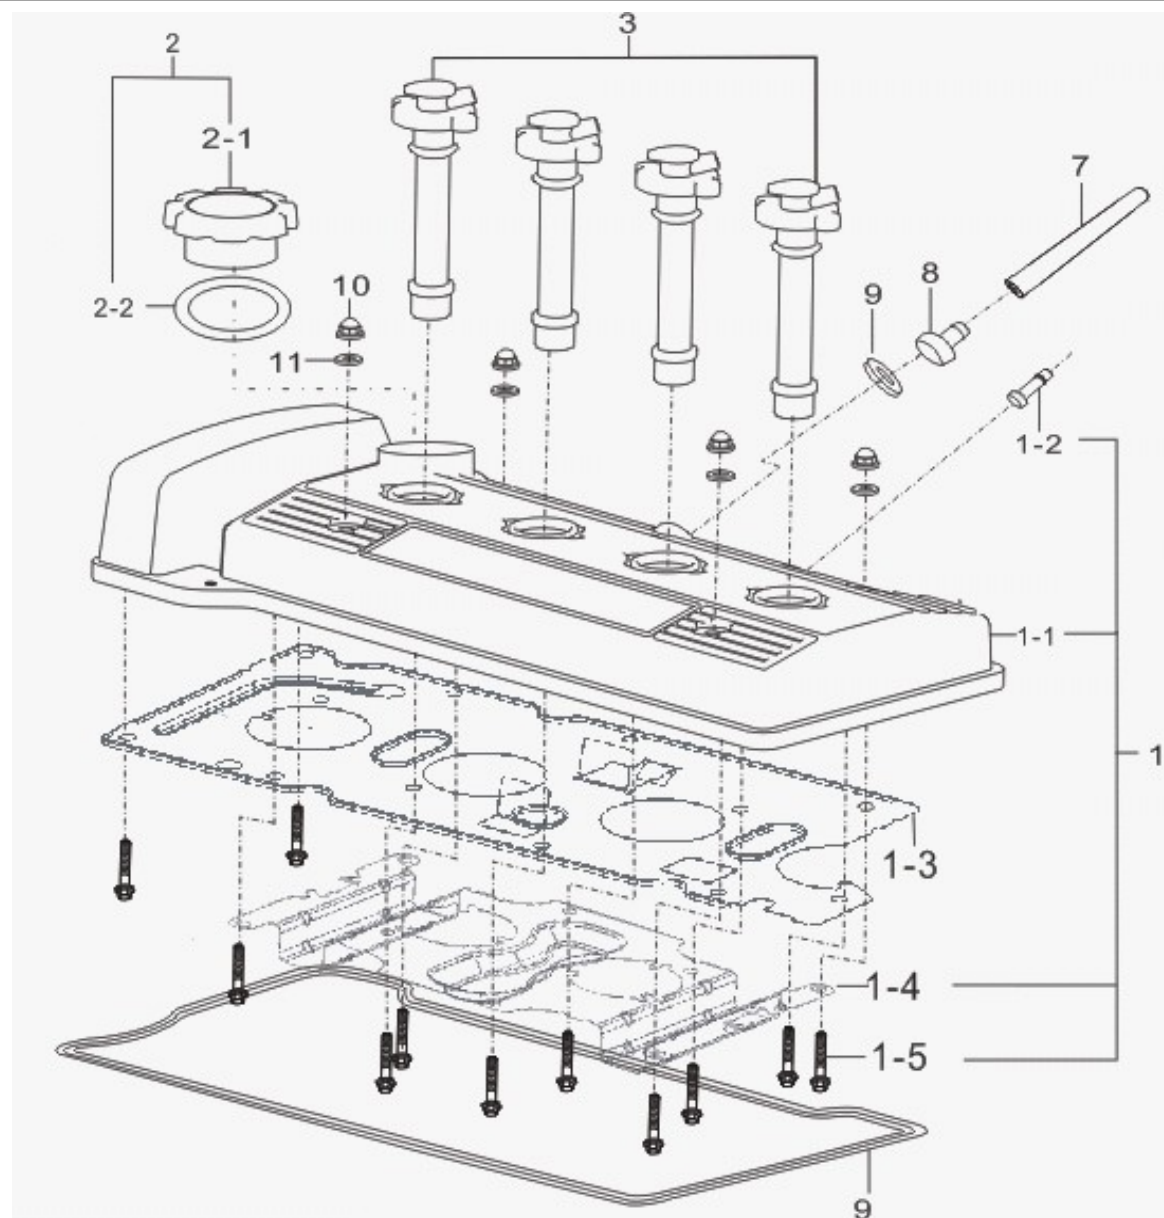

1.01 Cylinder head cover

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1003200A	气缸盖罩总成	Cylinder head cover assy.	1		√
1-1	LF479Q1-1003210A	气缸盖罩	Cylinder head cover	1		
1-2	LF479Q1-1003202A	气缸盖罩通气嘴	Blowhole	1		
1-3	LF479Q1-1003212A	挡油板（ I ）	Oil baffle I	1		√
1-4	LF479Q1-1003213A	挡油板（ II ）	Oil baffle II	1		√
1-5	LF479Q1-1003214A	挡油板安装螺栓	Bolt	12		
2	LF479Q1-1003230A	加油口盖总成	Oil filler cap assy.	1		
2-1	LF479Q1-1003201A	加油口盖	Oil Filler Cap	1		√
2-2	LF479Q1-1003204A	加油口盖密封垫	Oil Filler Cap seal	1		
3	LF479Q1-3707000A	高压阻尼线总成	Ignition cable kit	1		√
7	LF479Q1-1014011A	PCV阀通气软管	PCV hose	1		√
7	LF479Q3-1014011A1	PCV阀通气软管	PCV hose	1	plastic in-manifold	√
8	LF479Q1-1014100A	PCV阀总成	PCV assy.	1		√
9	LF479Q1-1003015A	气缸盖罩密封垫	Gasket,cylinder head cover	1		√
10	LF479Q1-1003018A	气缸盖罩螺母	Nut	4		√
11	LF479Q1-1003017A	气缸盖罩螺栓密封垫	Seal,cylinder head cover bolt	4		√
12	LF479Q1-1014014A	PCV阀密封圈	PCV seal	1		√
	LF479Q1-1003203A	汽缸盖罩油封	Seal,cylinder head cover	4		√

1.02 Cylinder head

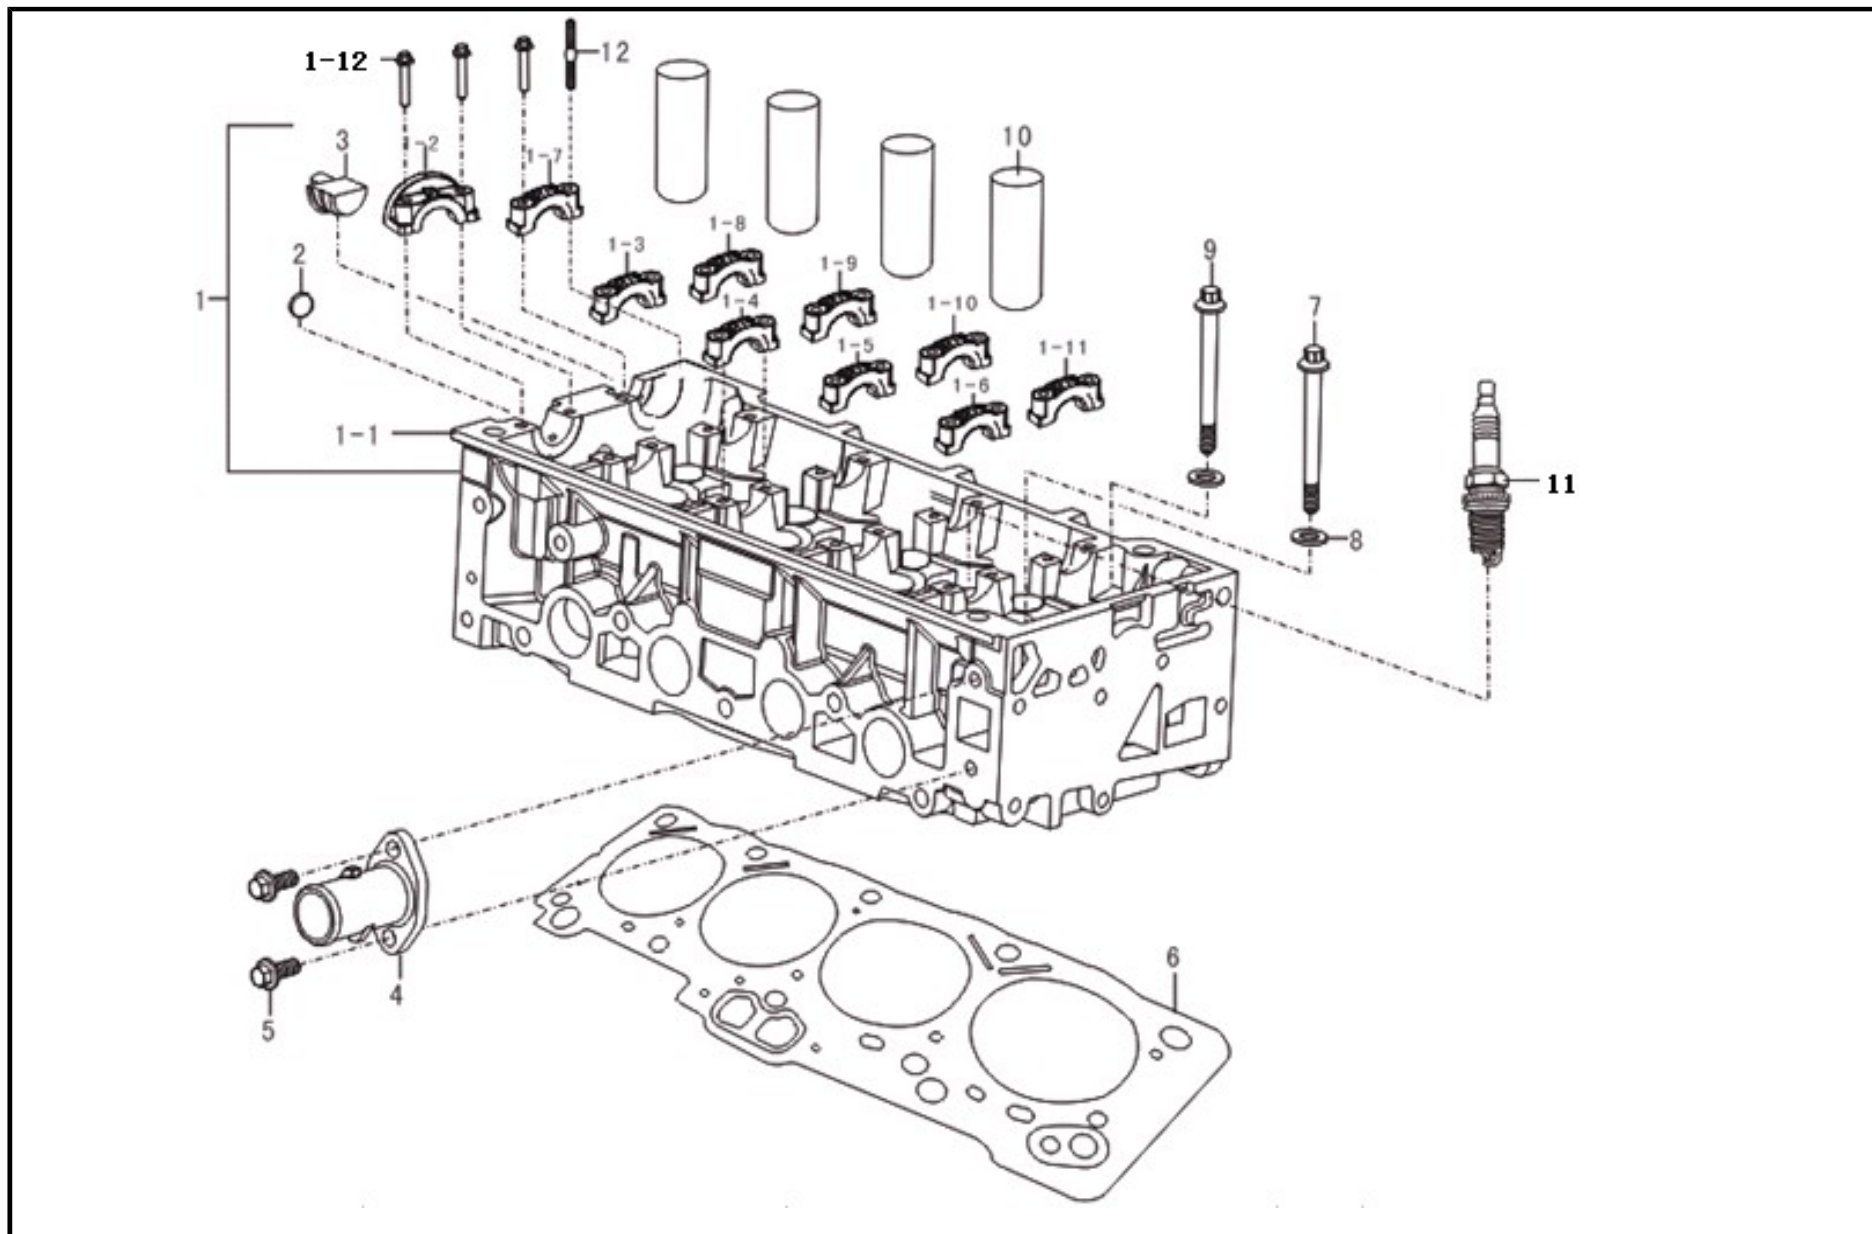

1.02 Cylinder head

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1003100A	气缸盖总成	Cylinder head assy.	1		√
1-1	LF479Q1-1003101A	气缸盖体	Cylinder head	1		
1-2	LF479Q1-1003109A	排气凸轮轴轴承盖 I	Exhaust Camshaft Bearing Cap 1	1	cannot supply separately	
1-3	LF479Q1-1003110A	排气凸轮轴轴承盖 II	Exhaust Camshaft Bearing Cap 2	1	cannot supply separately	
1-4	LF479Q1-1003111A	排气凸轮轴轴承盖 III	Exhaust Camshaft Bearing Cap 3	1	cannot supply separately	
1-5	LF479Q1-1003112A	排气凸轮轴轴承盖 IV	Exhaust Camshaft Bearing Cap 4	1	cannot supply separately	
1-6	LF479Q1-1003113A	排气凸轮轴轴承盖 V	Exhaust Camshaft Bearing Cap 5	1	cannot supply separately	
1-7	LF479Q1-1003104A	进气凸轮轴轴承盖 I	Intake Camshaft Bearing Cap 1	1	cannot supply separately	
1-8	LF479Q1-1003105A	进气凸轮轴轴承盖 II	Intake Camshaft Bearing Cap 2	1	cannot supply separately	
1-9	LF479Q1-1003106A	进气凸轮轴轴承盖 III	Intake Camshaft Bearing Cap 3	1	cannot supply separately	
1-10	LF479Q1-1003107A	进气凸轮轴轴承盖 IV	Intake Camshaft Bearing Cap 4	1	cannot supply separately	
1-11	LF479Q1-1003108A	进气凸轮轴轴承盖 V	Intake Camshaft Bearing Cap 5	1	cannot supply separately	
1-12	LF479Q1-1003114A	凸轮轴主轴承盖紧固螺栓	Bolt	16	cannot supply separately	√
2	LF479Q1-1003102A	气缸盖碗形堵塞 I	Bowl Plug 1	1		
3	LF479Q1-1003016A	半圆塞	Semi-Circle Plug	1		√
4	LF479Q1-1300017A	出水管	Outlet tube	1		√
5	Q1840820	六角法兰面螺栓	Hex flange bolt	2		√
6	LF479Q1-1003300A	气缸盖密封垫总成	Gasket,cylinder head	1		√
7	LF479Q1-1003013A	气缸盖连接组合螺栓（排气侧）	Cylinder head bolt(exhaust)	5		√
8	LF479Q1-1003014A	垫圈	Cylinder head bolt washer	10		√


1.02 Cylinder head

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
9	LF479Q1-1003012A	气缸盖连接组合螺栓（进气侧）	Cylinder head bolt(intake)	5		√
10	LF479Q1-3707011A	火花塞套筒	Spark pulg guild pipe	4		√
11	LF479Q1-3707800A	火花塞	Spark plug	4		√
12	LF479Q1-1003019A	气缸盖罩双头螺栓	Bolt	4		√

△=set on cylinder Head, can't be ordered separately

1.03 Cylinder block

1	2
---	---

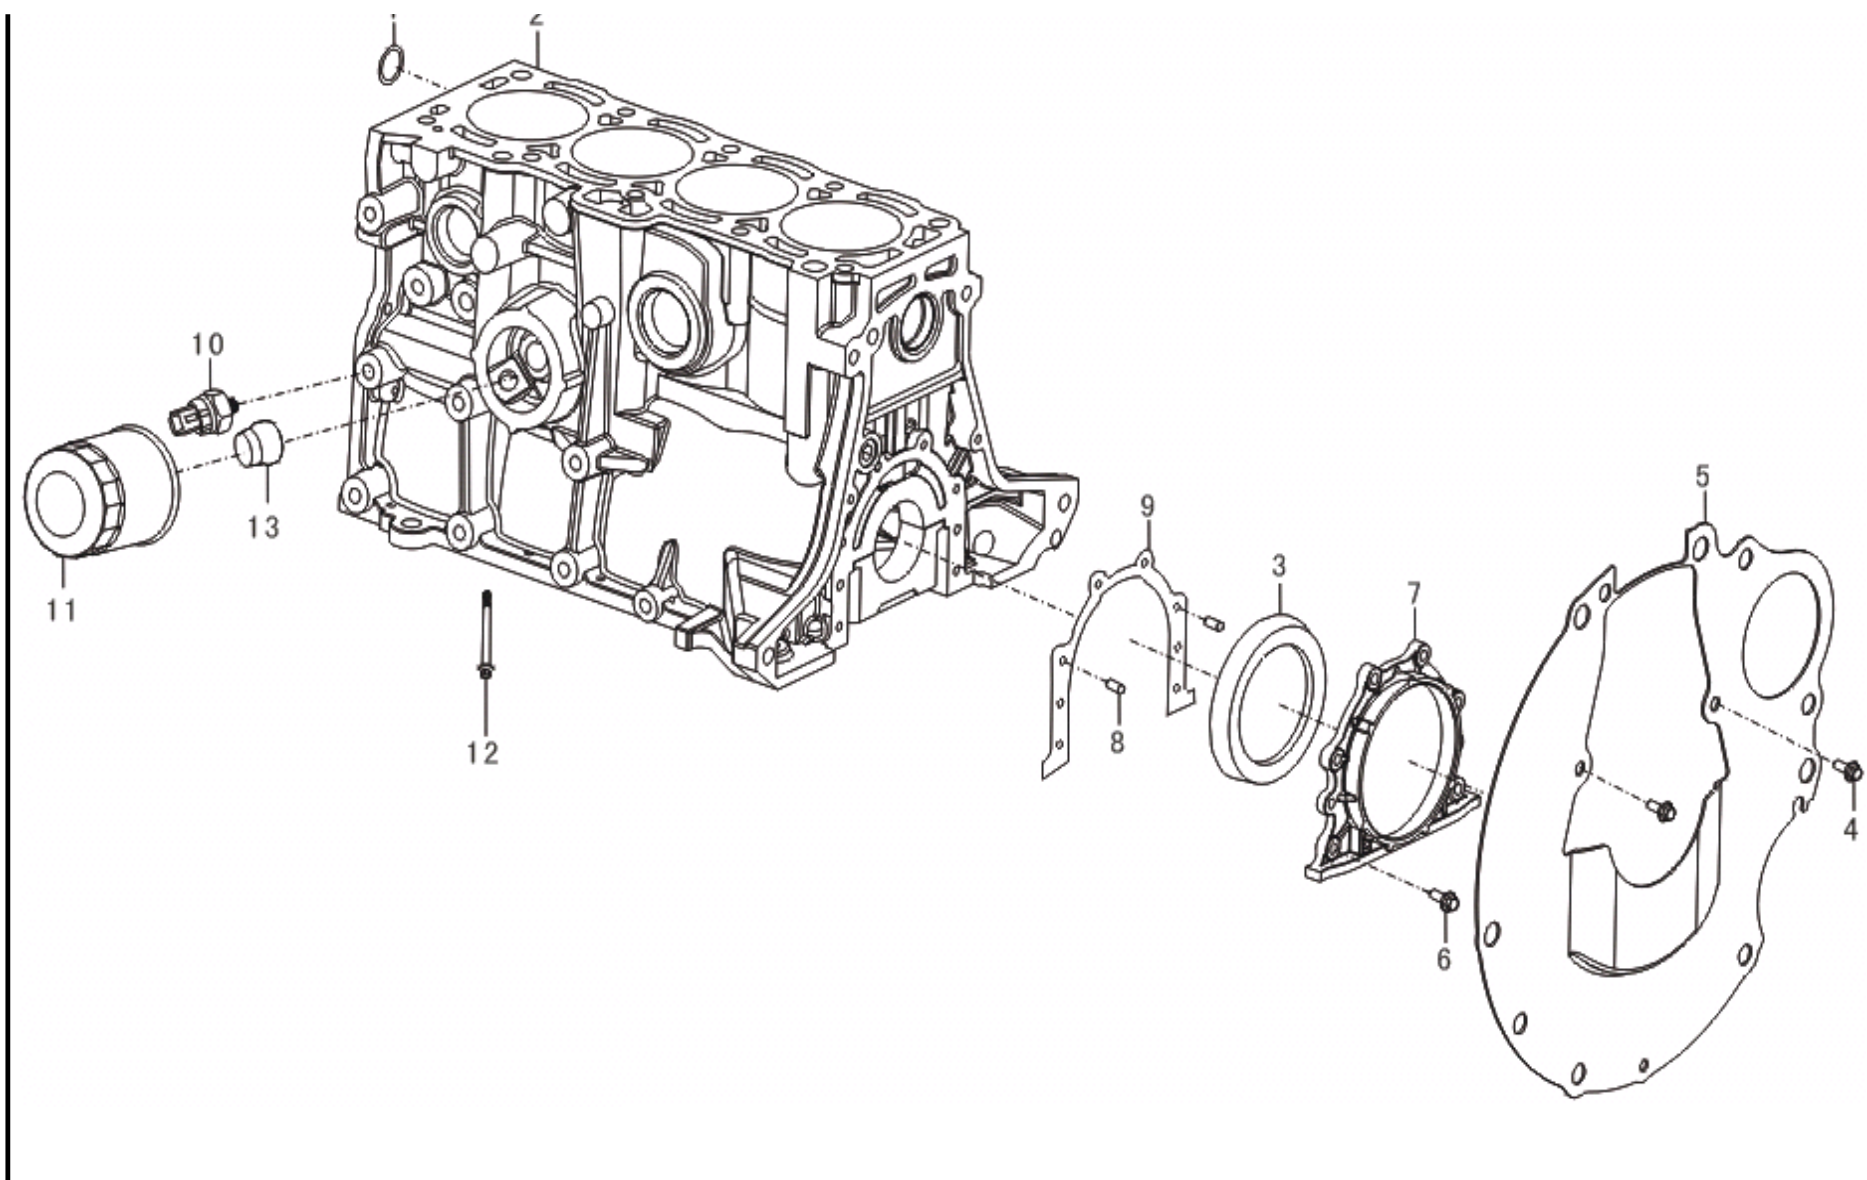


1.03 Cylinder block

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

1	LF479Q1-1307012A	水泵O型密封圈	Ring seal	1		√
2	LF479Q1-1002100A	曲轴箱总成	Crank case assy.	1		√
3	LF479Q1-1005019A	曲轴后端盖油封	Crankshaft rear seal	1		√
4	Q1841016	螺栓	Hex bolt	2		√
5	LF479Q1-1701012A	变速器隔板	Transimission Plate	1		√
6	Q1840616	六角法兰面螺栓	Hex flange bolt	6		√
7	LF479Q1-1005018A	曲轴后端盖	Crankshaft rear cover	1		√
8	Q5220614	曲轴后端盖定位销	Crankshaft rear cover pin	2		√
9	LF479Q1-1005017A	曲轴后端盖密封垫	Crankshaft rear gasket	1		√
10	LF479Q1-1005017A	机油压力报警器	Oil pressure warner	1		√
11	LF479Q1-1017100A	机油滤清器总成	Oil Filter Assy	1		√
12	LF479Q1-1002107A	曲轴箱轴承盖紧固螺栓	Crank case bearing cap bolt	10		√
13	LF479Q1-1017011A	机油滤清器连接管	Oil Filter connecting pipe	1		√

1 04 Valve timing mechanism

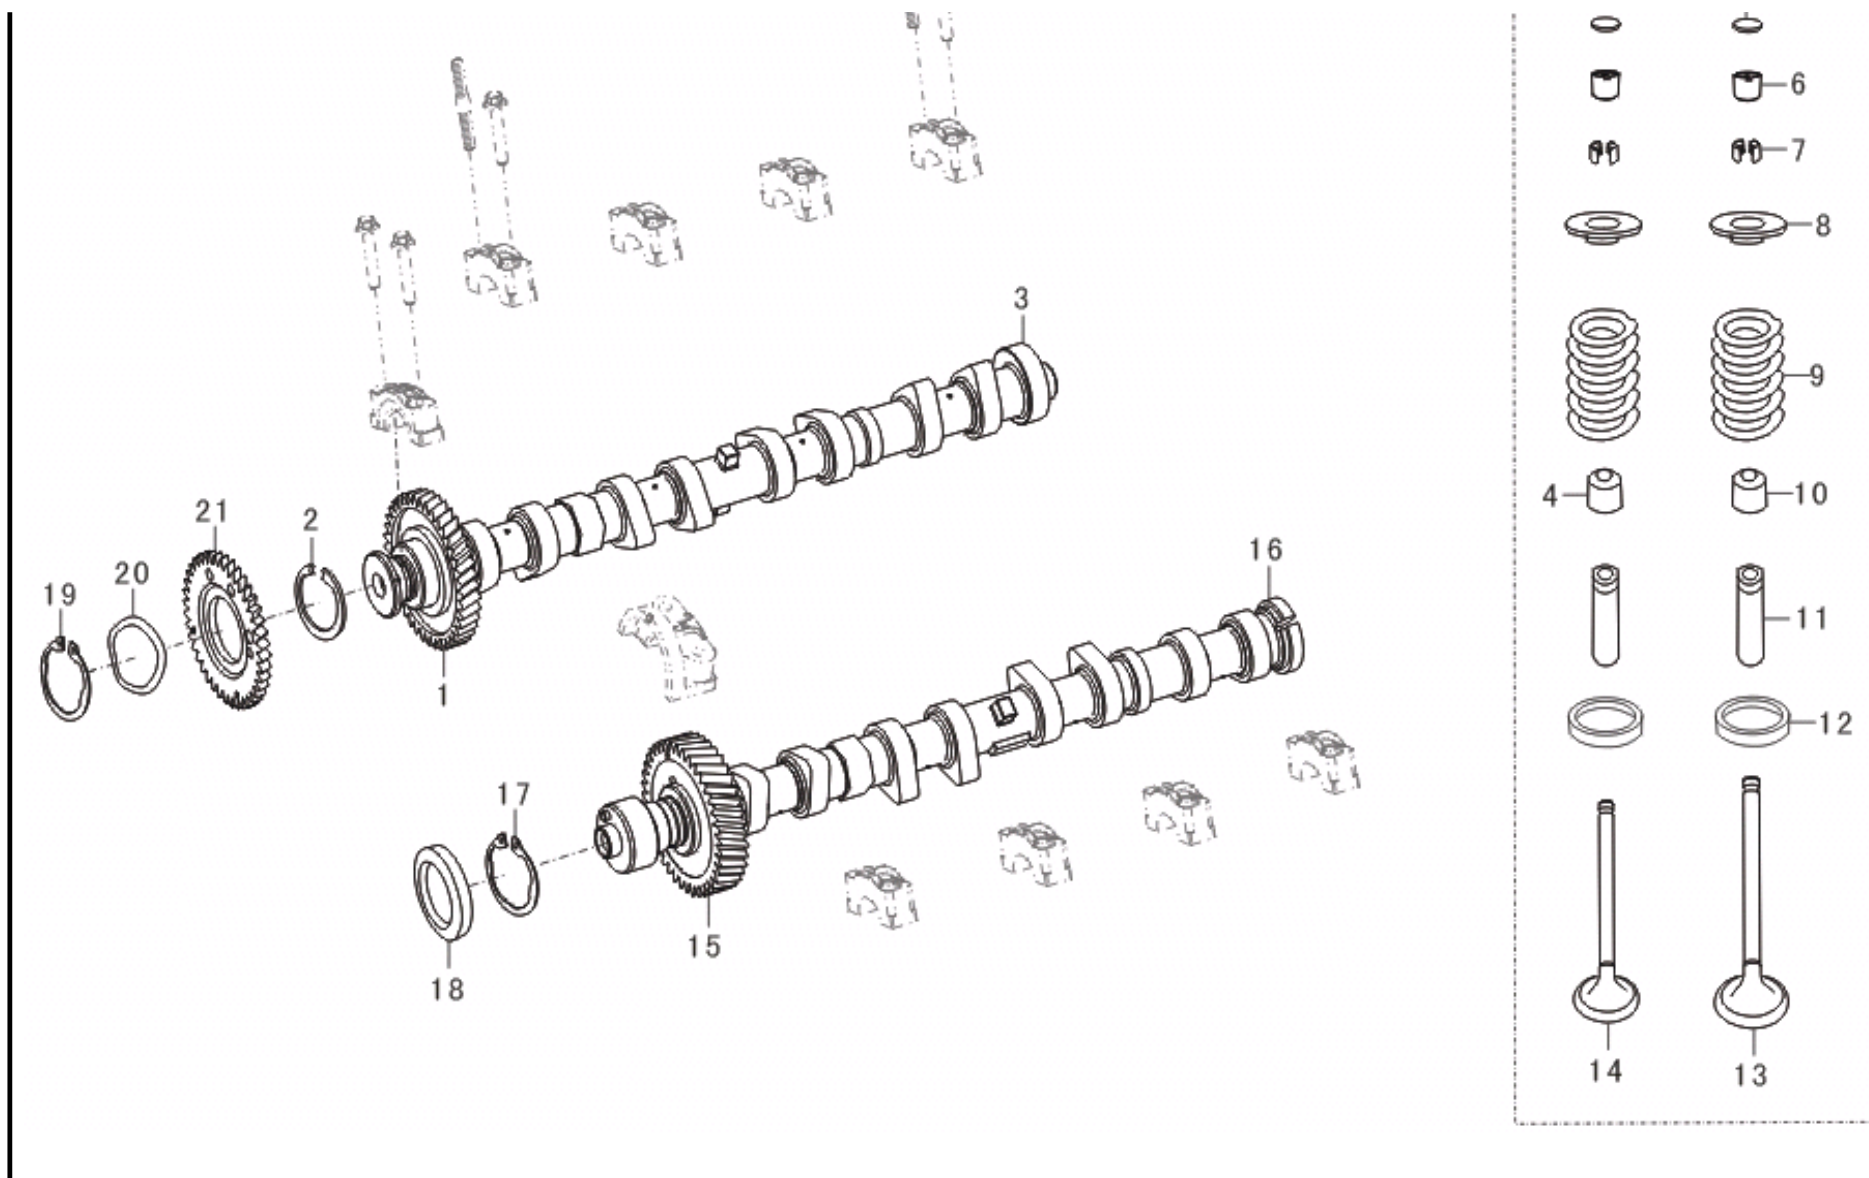

1.04 配气机构 Valve timing mechanism

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

1	LF479Q1-1006105A	进气正时齿轮	Intake timing gear	1		√
2	LF479Q1-1006103A	消隙弹簧	Backlash spring	1		√
3	LF479Q1-1006101A	进气凸轮轴	Intake Camshaft	1		√
4	LF479Q1-1007018A	进气门油封	Intake valve seal	8		√
5	LF479Q1-1007021A-1	填隙片	Shim	demand	235× (10 ⁻²) mm	√
5	LF479Q1-1007021A-2	填隙片	Shim	demand	240× (10 ⁻²) mm	√
5	LF479Q1-1007021A-3	填隙片	Shim	demand	245× (10 ⁻²) mm	√
5	LF479Q1-1007021A-4	填隙片	Shim	demand	250× (10 ⁻²) mm	√
5	LF479Q1-1007021A-5	填隙片	Shim	demand	255× (10 ⁻²) mm	√
5	LF479Q1-1007021A-6	填隙片	Shim	demand	260× (10 ⁻²) mm	√
5	LF479Q1-1007021A-7	填隙片	Shim	demand	265× (10 ⁻²) mm	√
5	LF479Q1-1007021A-8	填隙片	Shim	demand	270× (10 ⁻²) mm	√
5	LF479Q1-1007021A-9	填隙片	Shim	demand	275× (10 ⁻²) mm	√
5	LF479Q1-1007021A-10	填隙片	Shim	demand	280× (10 ⁻²) mm	√
5	LF479Q1-1007021A-11	填隙片	Shim	demand	285× (10 ⁻²) mm	√
5	LF479Q1-1007021A-12	填隙片	Shim	demand	290× (10 ⁻²) mm	√
5	LF479Q1-1007021A-13	填隙片	Shim	demand	295× (10 ⁻²) mm	√
5	LF479Q1-1007021A-14	填隙片	Shim	demand	300× (10 ⁻²) mm	√
5	LF479Q1-1007021A-15	填隙片	Shim	demand	305× (10 ⁻²) mm	√
5	LF479Q1-1007021A-16	填隙片	Shim	demand	310× (10 ⁻²) mm	√

1.04 配气机构 Valve timing mechanism

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

5	LF479Q1-1007021A-17	填隙片	Shim	demand	315× (10 ⁻²) mm	√
5	LF479Q1-1007021A-18	填隙片	Shim	demand	320× (10 ⁻²) mm	√
5	LF479Q1-1007021A-19	填隙片	Shim	demand	325× (10 ⁻²) mm	√
5	LF479Q1-1007021A-20	填隙片	Shim	demand	330× (10 ⁻²) mm	√
5	LF479Q1-1007021A-21	填隙片	Shim	demand	335× (10 ⁻²) mm	√
5	LF479Q1-1007021A-22	填隙片	Shim	demand	340× (10 ⁻²) mm	√
5	LF479Q1-1007021A-23	填隙片	Shim	demand	345× (10 ⁻²) mm	√
5	LF479Q1-1007021A-24	填隙片	Shim	demand	350× (10 ⁻²) mm	√
6	LF479Q1-1007019A	挺柱	Tappet	16		√
6	LF479Q3-1007020A	整体式挺柱	Tappet	16		√
7	LF479Q1-1007016A	气门锁片	Valve Lock	32		√
8	LF479Q1-1007015A	气门弹簧座	Valve Spring Retainer	16		√
9	LF479Q1-1007013A	气门弹簧	Valve Spring	16		√
10	LF479Q1-1007017A	排气门油封	Exhaust Valve Seal	8		√
11	LF479Q1-1003121A	气门导管	Valve Guide	16	cannot supply separately	
12	LF479Q1-1007014A	气门弹簧底座	Valve Spring Seat	16		√
13	LF479Q1-1007011A	排气门	Exhaust Valve	8		√
14	LF479Q1-1007012A	进气门	Intake Valve	8		√
15	LF479Q1-1006202A	排气正时齿轮	Exhaust timing gear	1		√


1.04 配气机构 Valve timing mechanism

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
16	LF479Q1-1006201A	排气凸轮轴	Exhaust Camshaft	1		√

17	LF479Q1-1006203A	排气齿轮卡环	Exhaust gear snap ring	1		√
18	LF479Q1-1006011A	凸轮轴油封	Camshaft shaft seal	1		√
19	LF479Q1-1006107A	进气齿轮卡环	Exhaust gear snap ring	1		√
20	LF479Q1-1006104A	波形垫	Wave Washer	1		√
21	LF479Q1-1006106A	进气正时齿轮副齿	Intake timing sub gear	1		√
△=set on cylinder Head, can't be ordered separately						

1.05 Crankshaft and piston rod



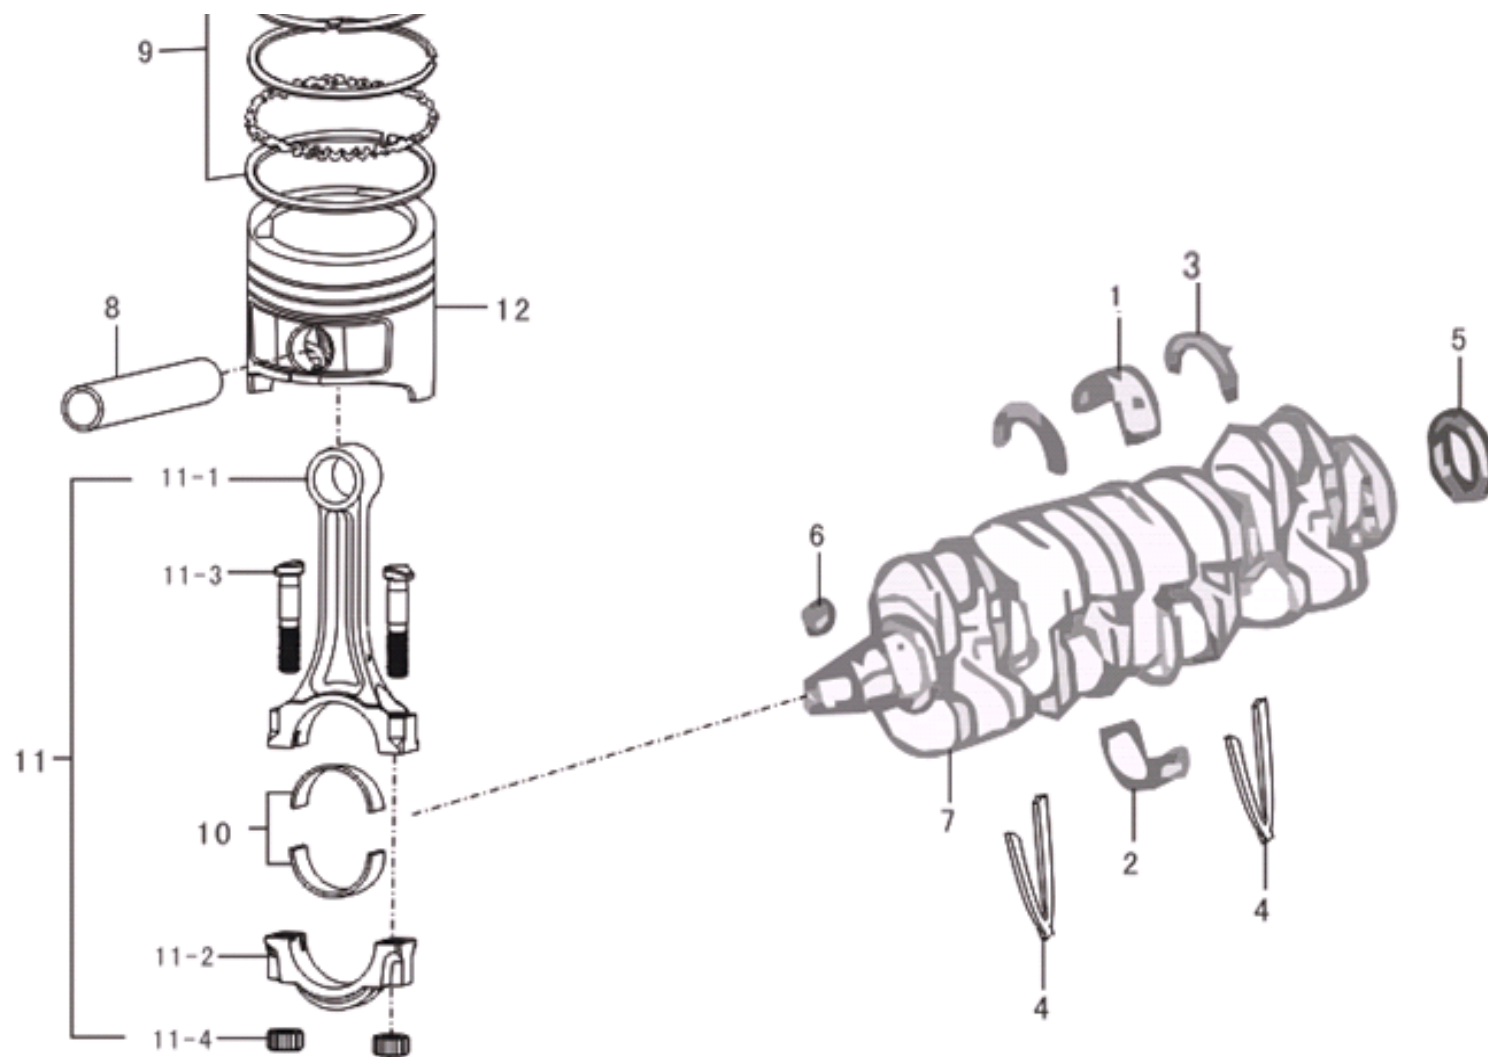


1.05 Crankshaft and piston rod

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1005010A	曲轴上轴瓦	Crankshaft bearing	1		√

2	LF479Q1-1005024A	曲轴下轴瓦	Crankshaft lower bearing	5		
3	LF479Q1-1005013A	曲轴上止推片	Crankshaft upper thrust washer	2		√
4	LF479Q1-1005014A	曲轴下止推片	Crankshaft lower thrust washer	2		√
5	LF479Q1-1005022A	曲轴前油封	Crankshaft front seal	1		√
6	Q5500519	曲轴半圆键	Crankshaft woodruff key	1		√
7	LF479Q1-1005011A	曲轴	Crankshaft	1		√
8	LF479Q1-1004013A	活塞销	Piston Pin	4		√
9	LF479Q1-1004200A	活塞环组件	Piston ring kit	4		√
10	LF479Q1-1004010A	连杆轴瓦	Rod Bearing	1		√
11	LF479Q1-1004100A	连杆总成	Rod	4		√
11-1	LF479Q1-1004102A	连杆体	Rod	4		
11-2	LF479Q1-1004103A	连杆端盖	Rod cap	4		
11-3	LF479Q1-1004104A	连杆螺栓	Rod bolt	8		
11-4	LF479Q1-1004105A	连杆紧固螺母	Rod nut	8		
12	LF479Q1-1004012A	活塞	Piston	4		√

1.06 Timing agency and front cover



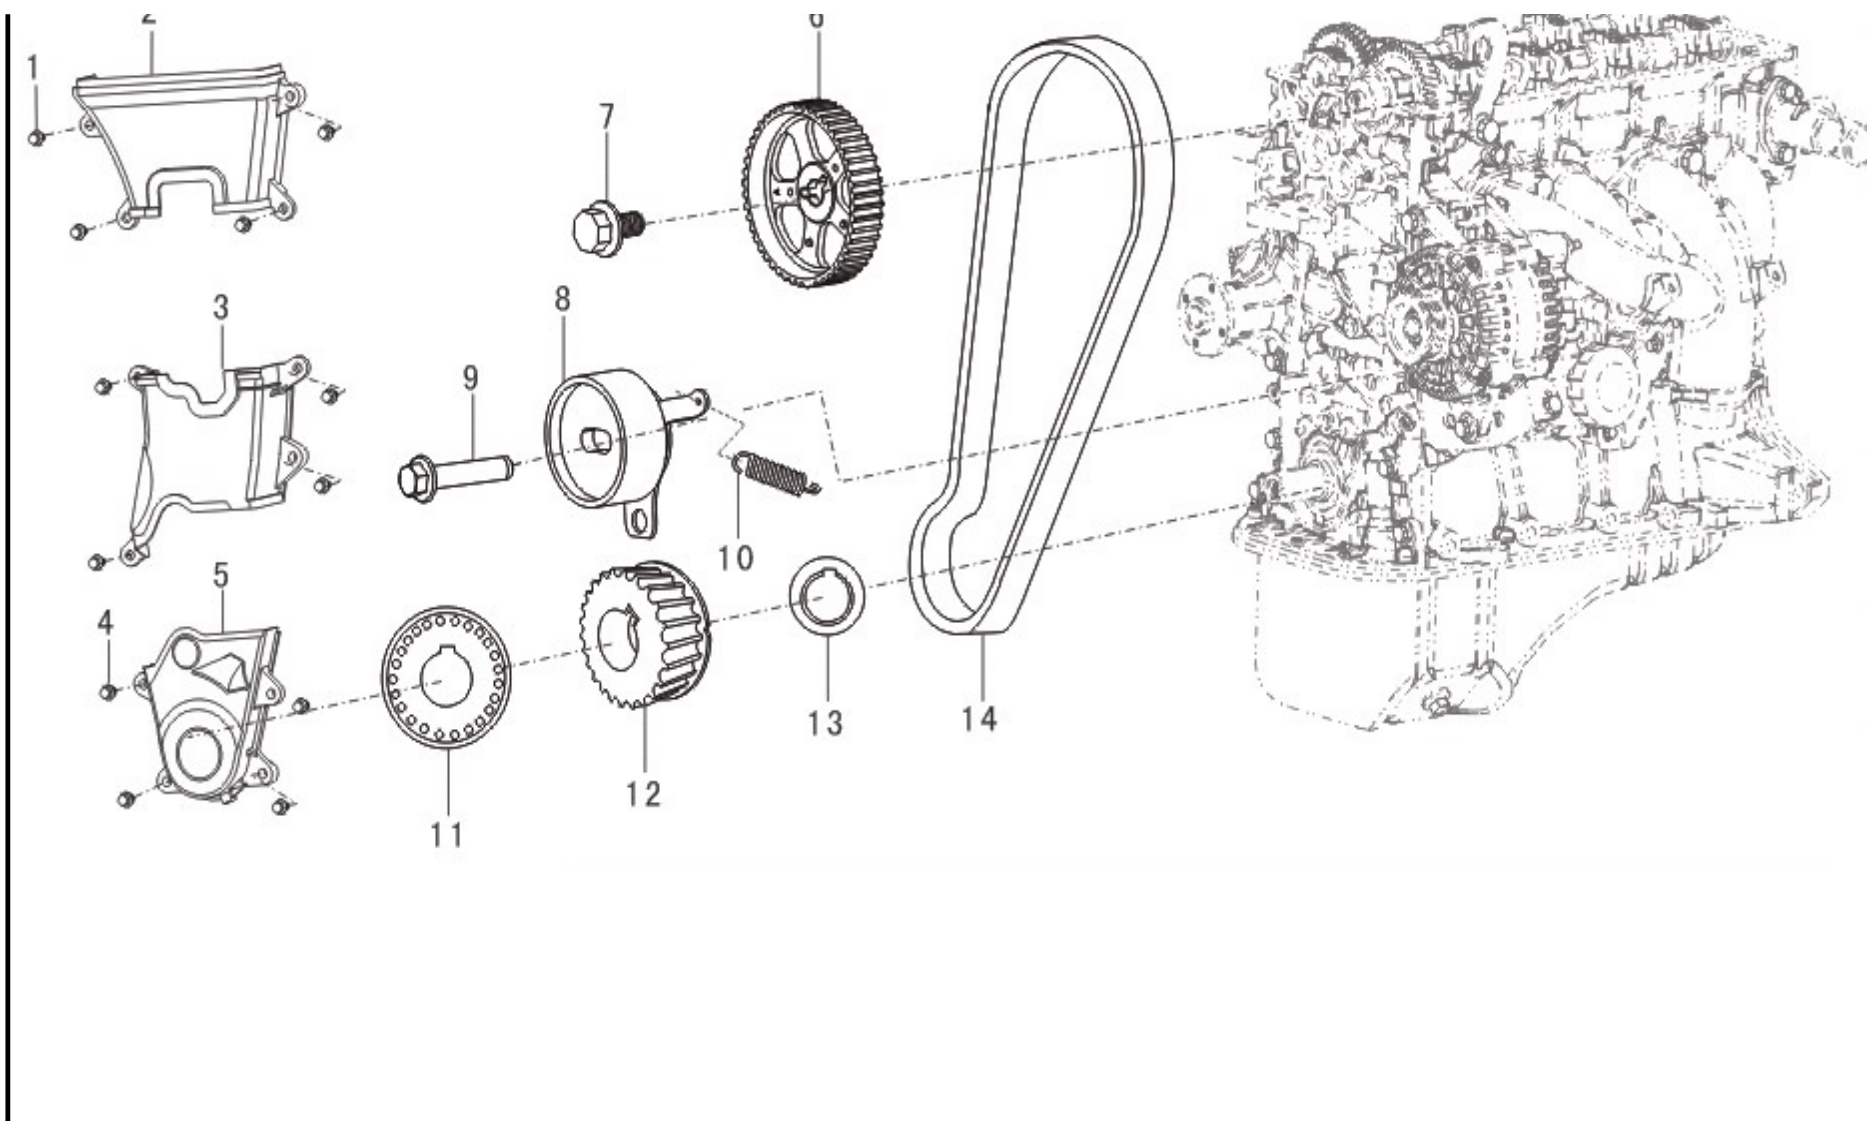


1.06 Timing agency and front cover

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840620	六角法兰面螺栓	Hex flange bolt	6		√

2	LF479Q1-1025021A	前罩壳上体	Front cover upper	1		√
3	LF479Q1-1025022A	前罩壳中体	Front cover middle	1		√
4	Q1840625	螺栓	Bolt	3		√
5	LF479Q1-1025023A	前罩壳下体	Front cover lower	1		√
6	LF479Q1-1025014A	凸轮轴正时皮带轮	Camshaft timing pulley	1		√
7	LF479Q1-1005023A	螺栓	Flywheel bolt	1		√
8	LF479Q1-1025100A	张紧轮总成	Tenioner	1		√
9	Q1841040	螺栓	Bolt	1		√
10	LF479Q1-1025025A	张紧轮弹簧	Tenioner spring	1		√
11	LF479Q1-1025018A	曲轴正时皮带轮前挡片	Front plate,crankshaft timing pulley	1		√
12	LF479Q1-1025012A	曲轴正时皮带轮	Crank shaft timing pulley	1		√
13	LF479Q1-1025019A	曲轴正时皮带轮后挡片	End plate ,crankshaft timing pulley	1		√
14	LF479Q1-1025016A	正时皮带	Timing belt	1		√

1.07 油底壳



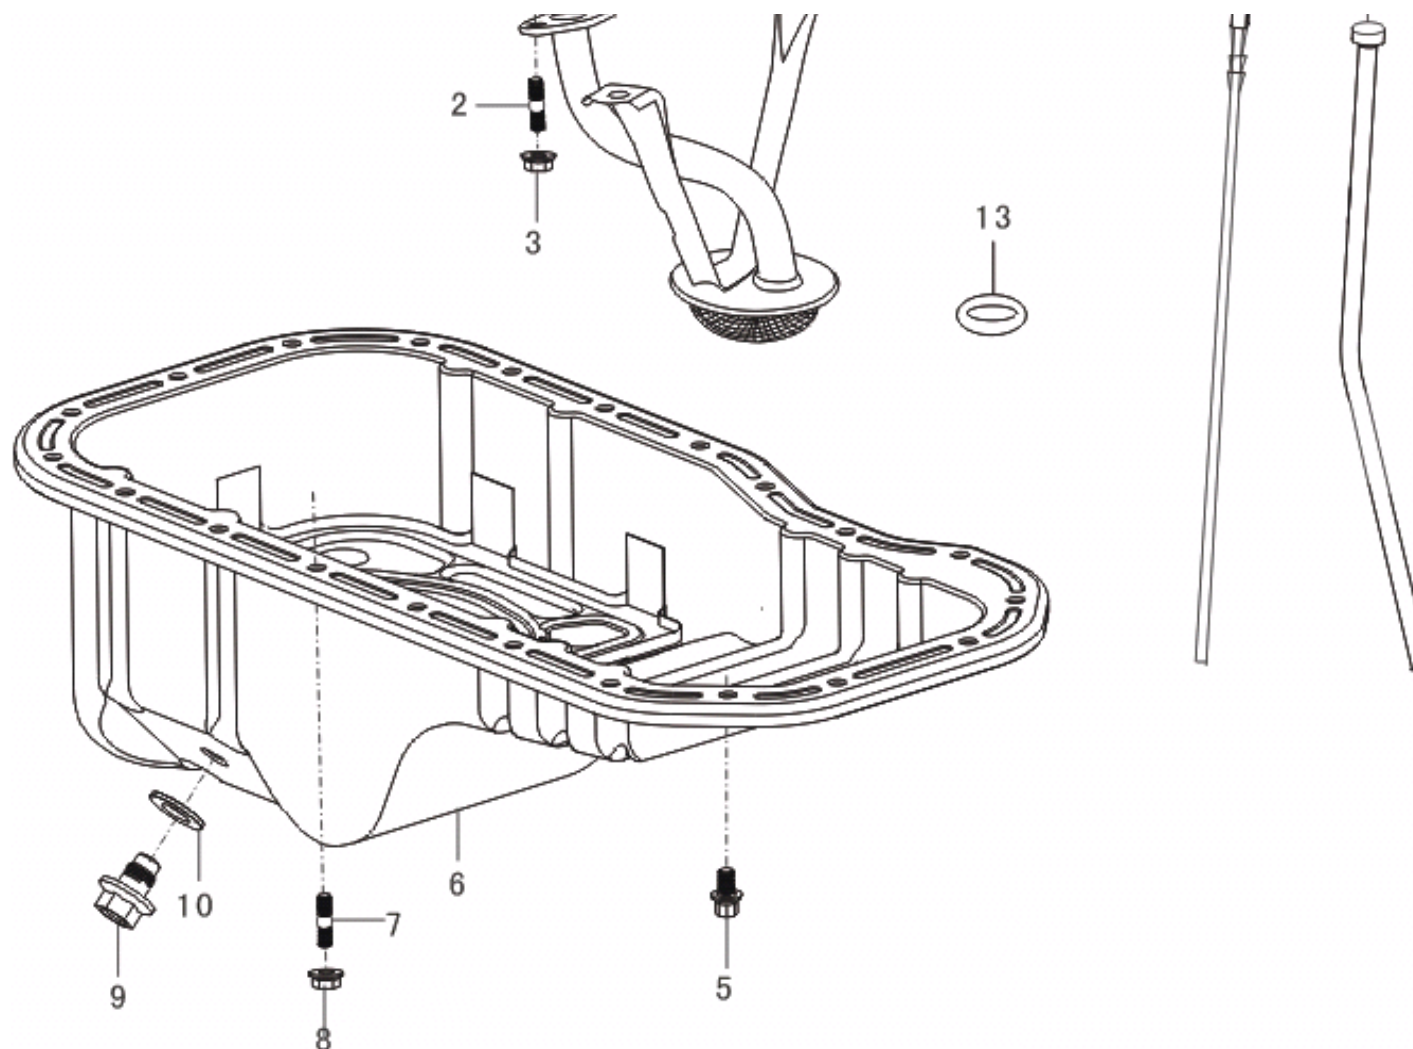



1.07 油底壳 Oil pan

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1010011A	机油集滤器密封垫	Gasket, oil strainer	1		√

2	Q123B0616	双头螺柱	Blot	2		√
3	Q32006	六角法兰面螺母	Hex flange bolt	2		√
4	LF479Q1-1010100A	机油集滤器总成	Oil strainer sub-assy	1		√
5	Q1840612	六角法兰面螺栓	Hex flange bolt	19		√
6	LF479Q1-1009100A	机油盘总成	Oil Pan	1		√
7	LF479Q1-1009012A	双头螺柱	Thru-stud	2		√
8	Q32006	六角法兰面螺母	Hex flange bolt	2		√
9	LF479Q1-1009013A	放油螺塞	Oil plug	1		√
10	Q40112T4F	放油螺塞垫片	Oil plug washer	1		√
11	LF479Q1-1009015A	油位计导管	Oil level gauge guide	1		√
12	LF479Q1-1009300A	油位计总成	Oil level gauge assy	1		√
13	LF479Q1-1009011A	油位计导管O型密封圈	O seal	1		√

1.08 In

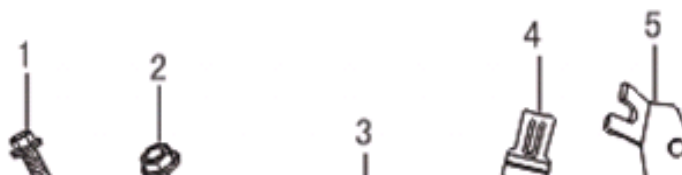

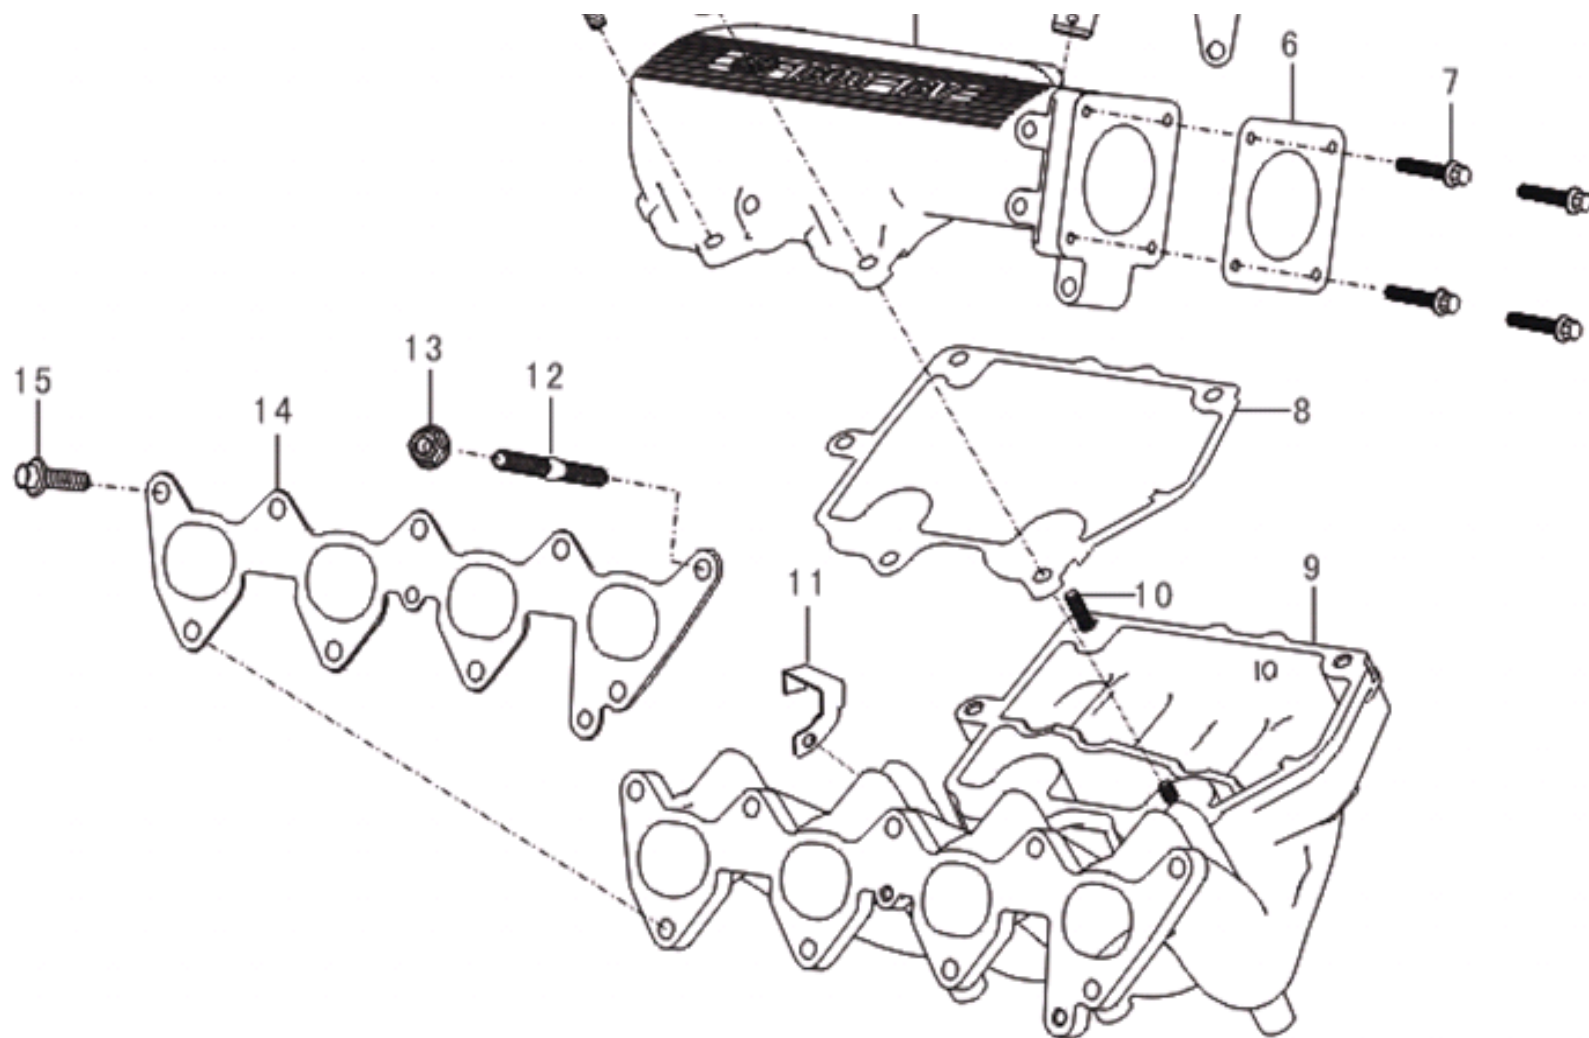

1.08 In-manifold


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840825	螺栓	Bolt	3		√

2	Q32008	六角法兰面螺母	Hex flange nut	2		√
3	LF479Q1-1008201A	进气歧管上体	upper intake manifold	1		√
4	LF479Q1-1104014A	碳罐控制阀托架	Canister Control Valve bracket	1		√
4	LF479Q3-1104014A1	碳罐控制阀托架	Canister Control Valve bracket	1	Plastic in-manifold	√
5	LF479Q1-1108011A	油门拉索支架	Throttle cable bracket	1		√
5	LF479Q3-1108011A1	油门拉索支架	Throttle cable bracket	1	Plastic in-manifold	√
6	LF479Q1-3765011A	节气门体密封垫	Throttle gasket	1		√
7	Q1840650	螺栓	Throttle bolt	4		√
8	LF479Q1-1008203A	进气歧管上下体密封垫	Gasket upper&lower intake manifold	1		√
9	LF479Q1-1008202A	进气歧管下体	Lower intake manifold	1		√
10	LF479Q1-1008018A	双头螺柱	Thru-stud	2		√
11	LF479Q1-3614011A	进气温度压力传感器支架	Bracket,temperature&pressure sensor	1	delphi	√
11	LF479Q3-3614011B	进气温度压力传感器支架	Bracket,temperature&pressure sensor		Sun&teck	√
12	LF479Q1-1008018A	双头螺柱	Thru-stud	2		√
13	Q32008	六角法兰面螺母	Hex flange nut	2		√
14	LF479Q1-1008014A	进气歧管密封垫	Intake manifold gasket	1		√
15	Q1840830	进气歧管螺栓	Bolt,Intake manifold	7		√

1.(




1

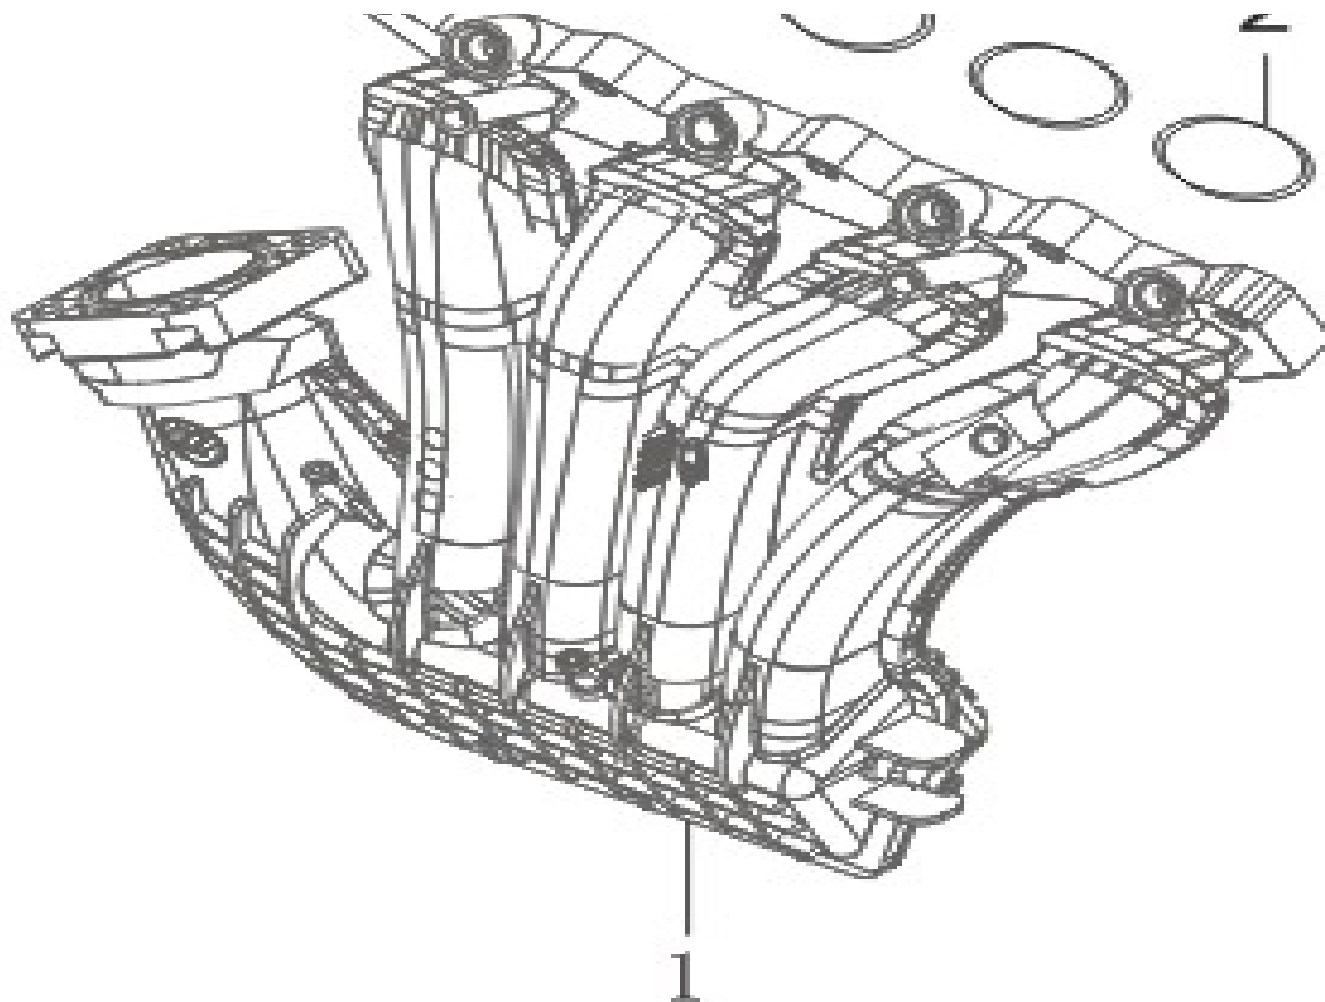

1.08 In-manifold (plastic)

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q3-1008200A1	进气歧管总成	Intake manifold	1	Plastic	√

2	LF479Q3-1008227A	密封垫	Seal	4		

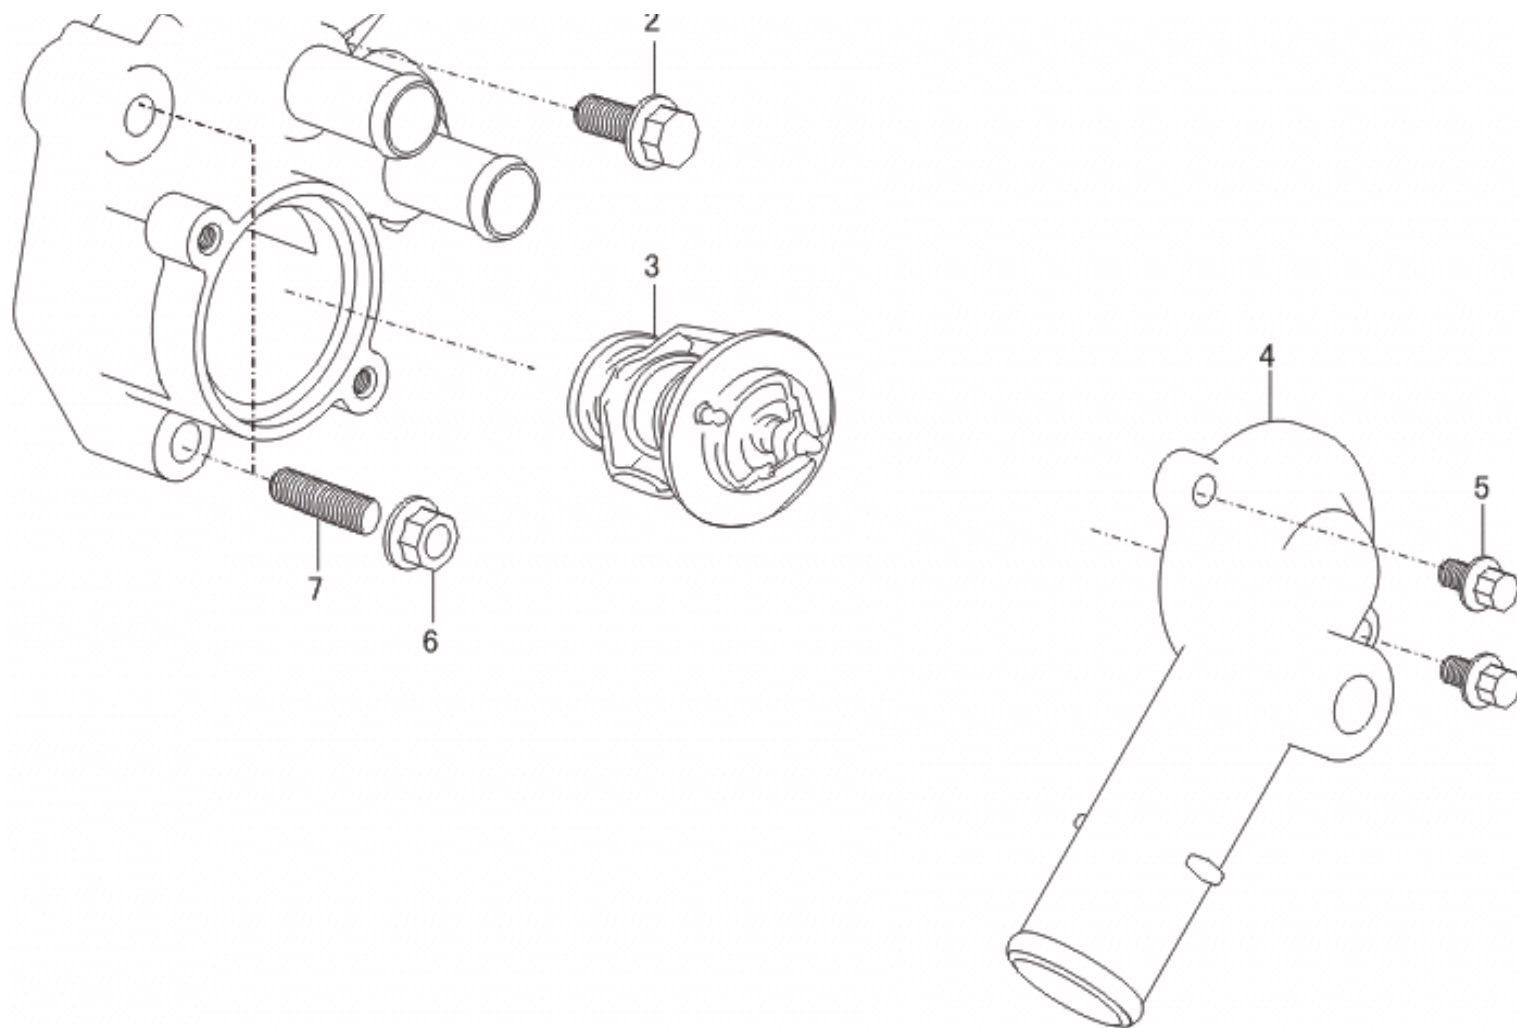


1.09 Thermostat

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1306201A	节温器座总成	Thermostat seat	1		√

2	Q1840840	螺栓	Bolt	1		√
3	LF479Q1-1306100A	节温器总成	Thermostat assy	1		√
4	LF479Q1-1300015A	进水管	Inlet tube	1		√
5	Q1840620	六角法兰面螺栓	Hex flange bolt	2		√
6	Q32008	六角法兰面螺母	Hex flange nut	2		√
7	LF479Q1-1306012A	节温器座双头螺柱	Thru-stud,thermostat seat	2		√



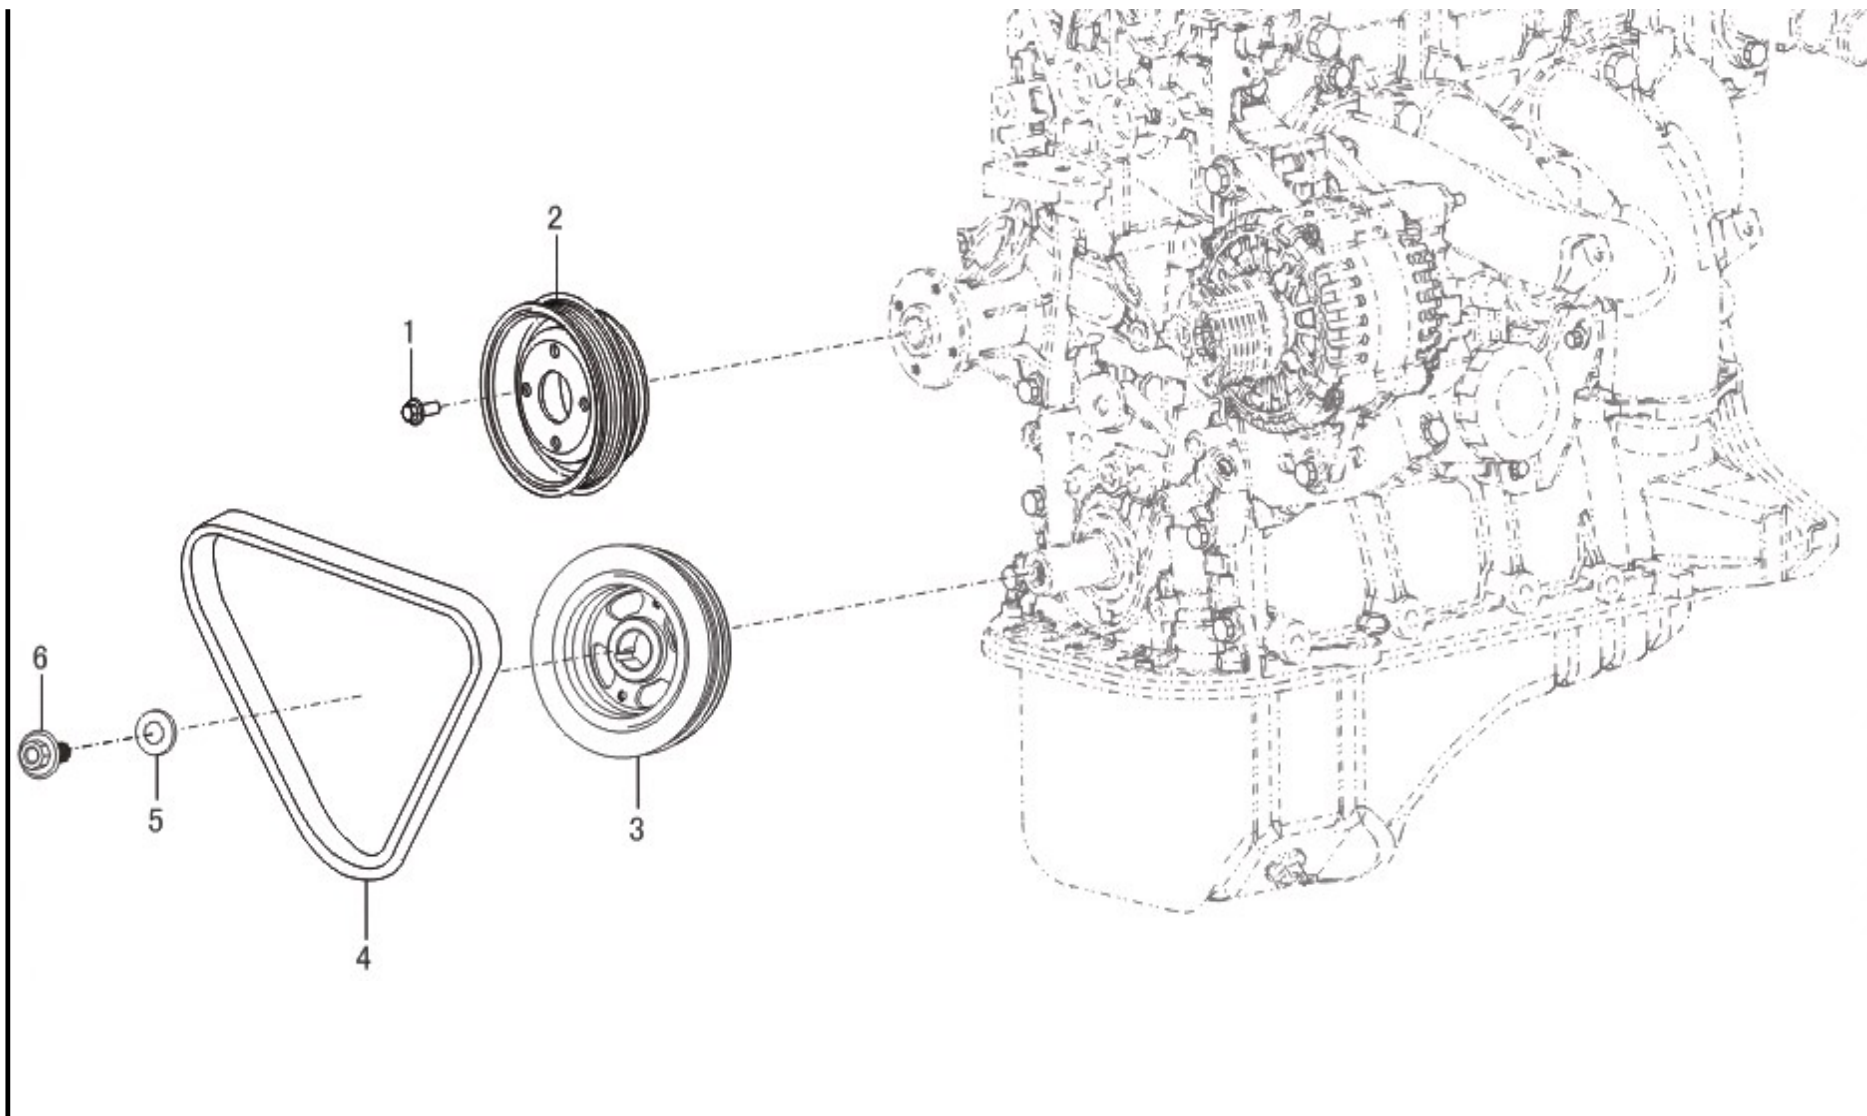


1.10 Pulley system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840612	六角法兰面螺栓	Bolt	4		√


2	LF479Q1-1025011A	水泵皮带轮	Water pump pulley	1		√
3	LF479Q1-1025013A	曲轴皮带轮	Crankshaft Pulley	1		√
4	LF479Q1-1025015A	水泵、发电机皮带	Water pump and generator belt	1		√
5	Q40212	垫圈	Washer	1		√
6	LF479Q1-1025024A	曲轴皮带轮螺栓	Crankshaft pulley bolt	1		√



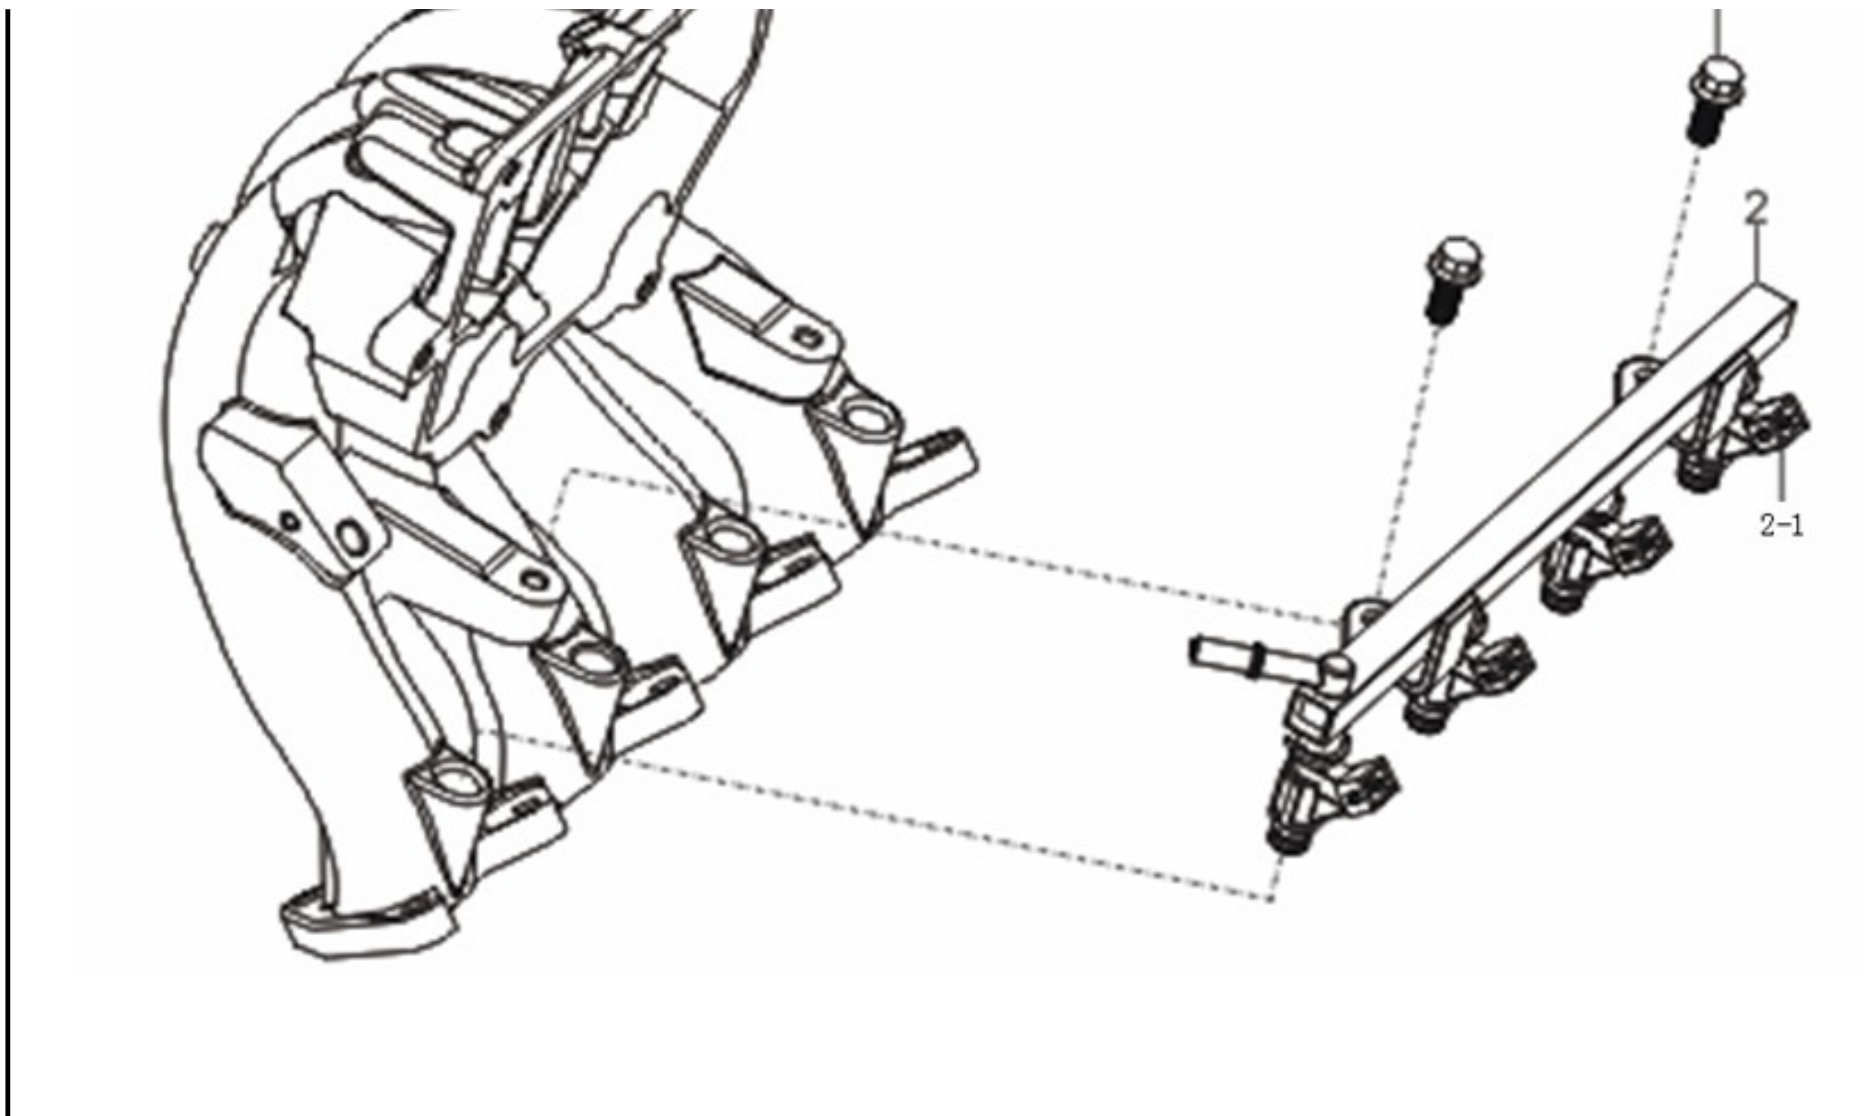

1.11 Fuel distributor

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840825	六角法兰面螺栓	Bolt	2		√

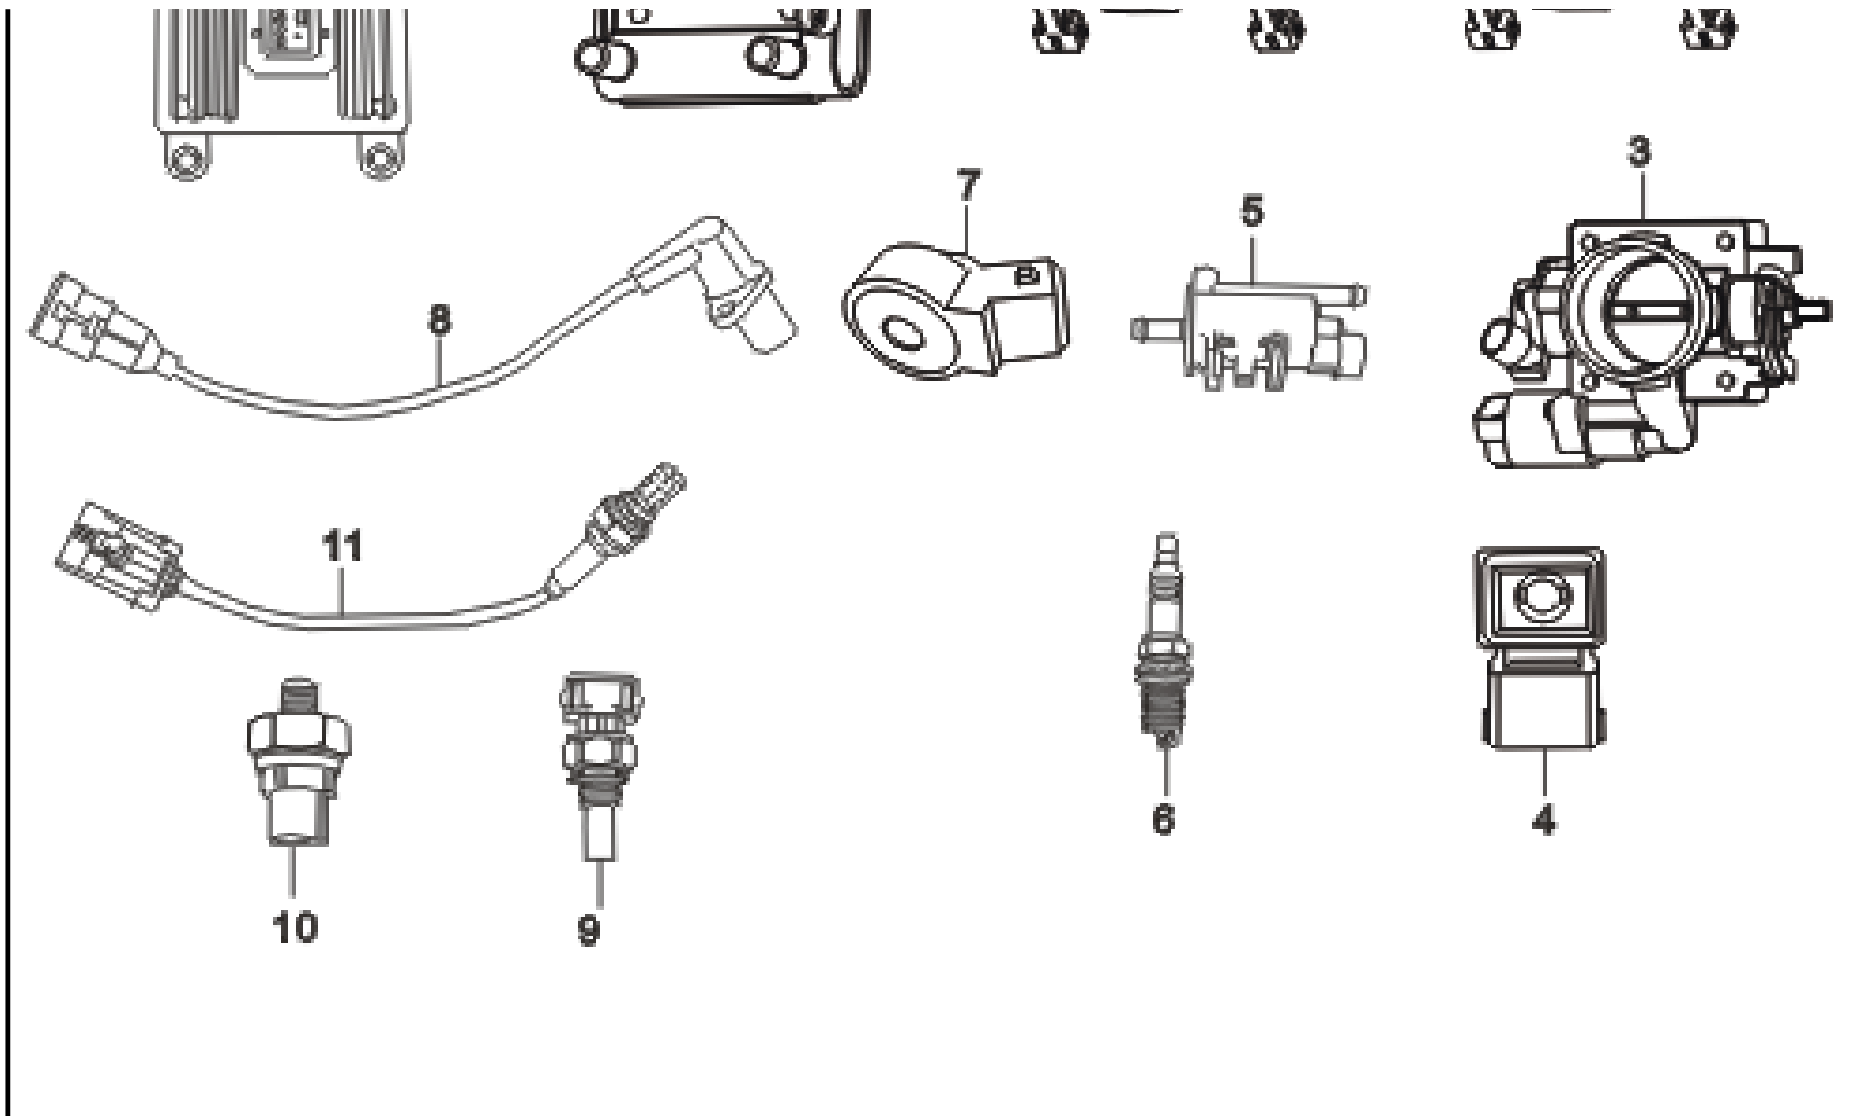


1.12 EFI system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3612100B3	ECU	ECU	1	Sun&teck, III emission	

1	FAB3612100	ECU	ECU	1	Delphi, IV emission	√
1	FAB3612100D1	ECU	ECU	1	Delphi, IV emission, immobilizer	
2	LBA3705100	点火线圈总成	Ignition Coil	1	Delphi	√
2	LBA3705100B1	点火线圈总成	Ignition Coil	1	Sun&teck	
3	LBA1132100	节气门体总成	Throttle assy	1	Delphi	√
3	LBA1132100B1	节气门体总成	Throttle assy	1	Sun&teck	
4	LBA3614300	进气温度压力传感器	Temperature And Pressure Sensor	1	Delphi	√
4	LBA3614300B1	进气温度压力传感器	Temperature And Pressure Sensor	1	Sun&teck	
5	LBA1130310	碳罐控制阀	Canister Control Valve	1	Delphi	√
5	LBA1130310B1	碳罐控制阀	Canister Control Valve	1	Sun&teck	
6	LF479Q1-3707800A	火花塞总成	Spark Pluge	4		√
7	LBA3612400	爆震传感器	Knock Sensor	1	Delphi	√
7	LBA3612400B1	爆震传感器	Knock Sensor	1	Sun&teck	
8	LBA3612600	曲轴位置传感器	Crankshaft Position Sensor	1	Delphi	√
8	LBA3612600B1	曲轴位置传感器	Crankshaft Position Sensor	1	Sun&teck	
9	LBA3616100	水温传感器	Water Temperature Sensor	1	Delphi	√
9	LBA3616100B1	水温传感器	Water Temperature Sensor	1	Sun&teck	
10	LF479Q1-3818100A	机油压力报警器	Oil pressure warner	1		√
11	LBA3612300	氧传感器	Oxygen Sensor	2	Delphi	√

1.12 EFI system



P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
11	LBA3612300B1	氧传感器	Oxygen Sensor	2	Sun&teck	

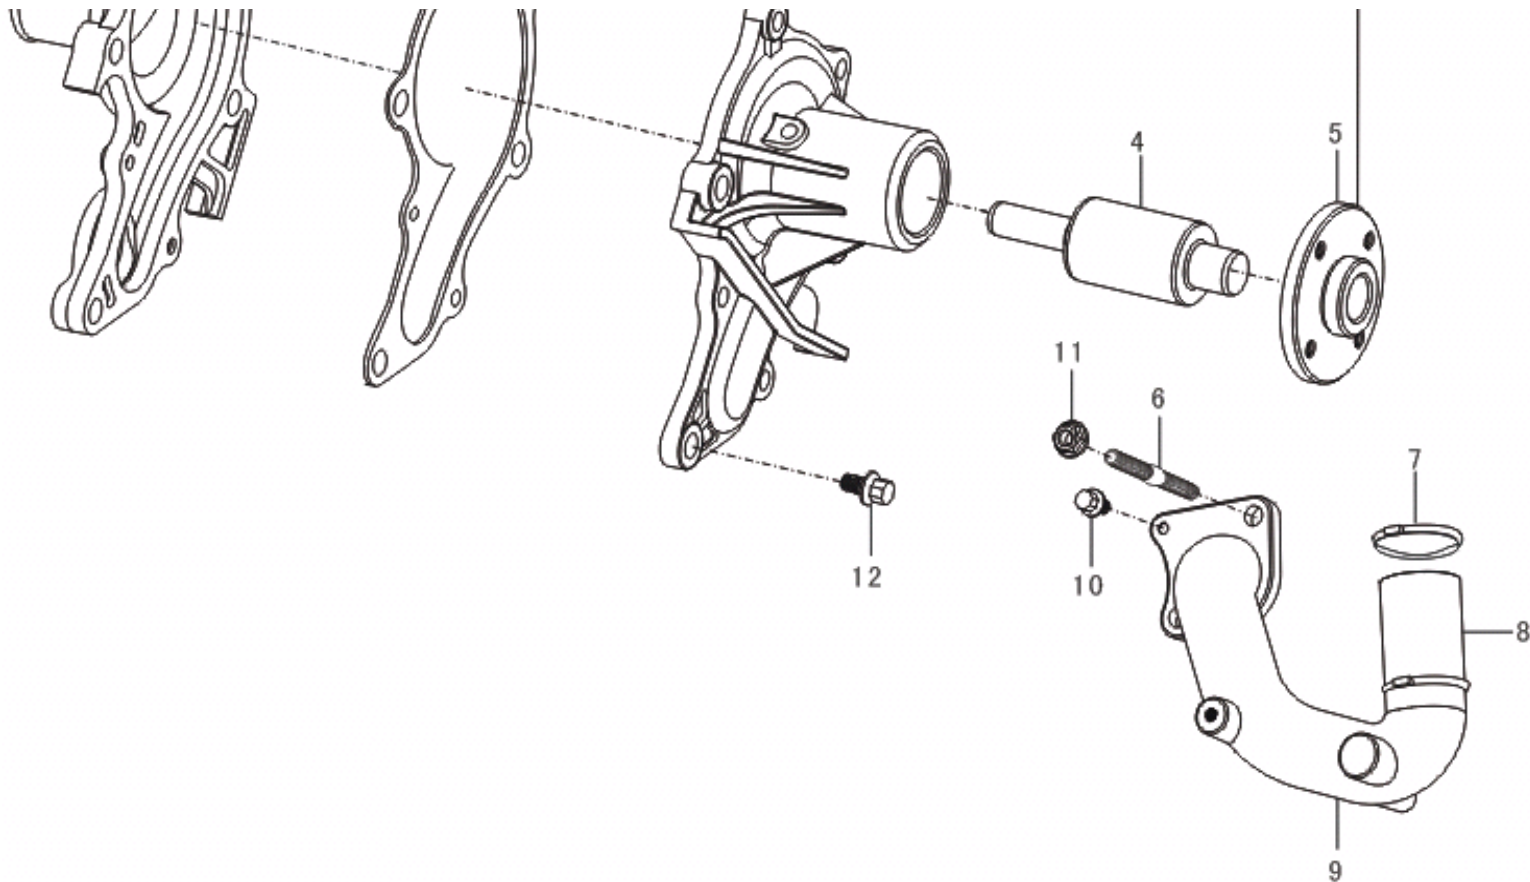


1.13 Water pump

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1307103A	水泵盖	Water Pump cap	1		
2	LF479Q1-1307104A	水泵体密封垫	Water Pump gasket	1		


3	LF479Q1-1307102A	水泵体	Water Pump Body	1		
4	LF479Q1-1307107A	轴连轴承	Bearing	1		
5	LF479Q1-1307106A	法兰	Flange	1		
6	LF479Q1-1307017A	双头螺柱	Bolt	2		√
7	Q676B45	管夹	Clip	2		√
8	LF479Q1-1307015A	水泵进水胶管	Inlet Water Hose	1		√
9	LF479Q1-1307013A	水泵进水管	Inlet Water Hose	1		√
10	Q1840610	螺栓	Bolt	1		√
11	Q32008	六角法兰面螺母	Hex flange nut	2		√
12	Q150B0835	螺栓	Bolt	3		
13	LF479Q3-1307100A-1	水泵总成	Water Pump	1		√
	LF479Q1-1307011B	水泵进水管密封垫	Inlet Water Hose gasket	1		√

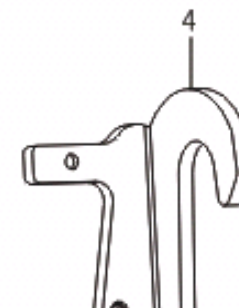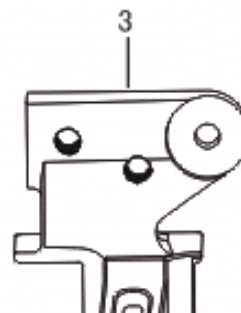

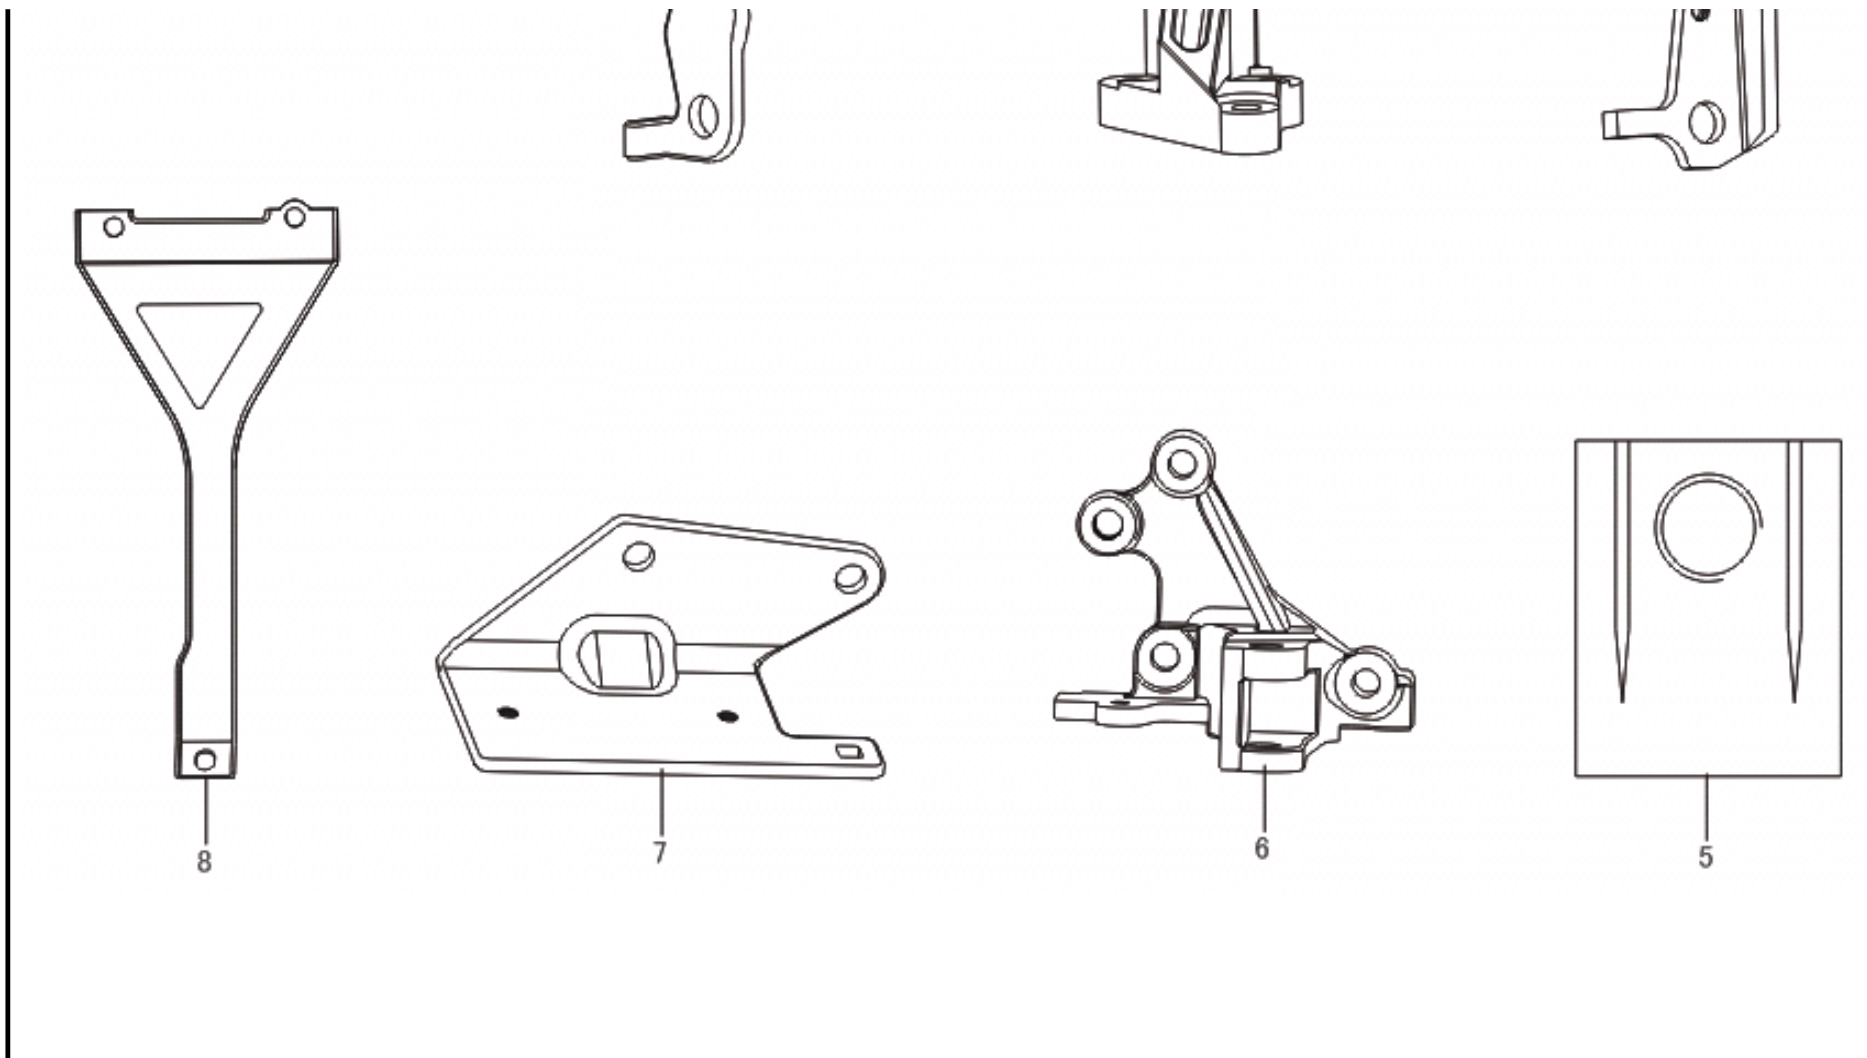


1.14 Auxiliary device

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-3701011A	发电机调节支架	Generator adjusting bracket	1		√
2	LF479Q1-1024012A	缸盖右吊钩	Cylinder head right hook	1		√

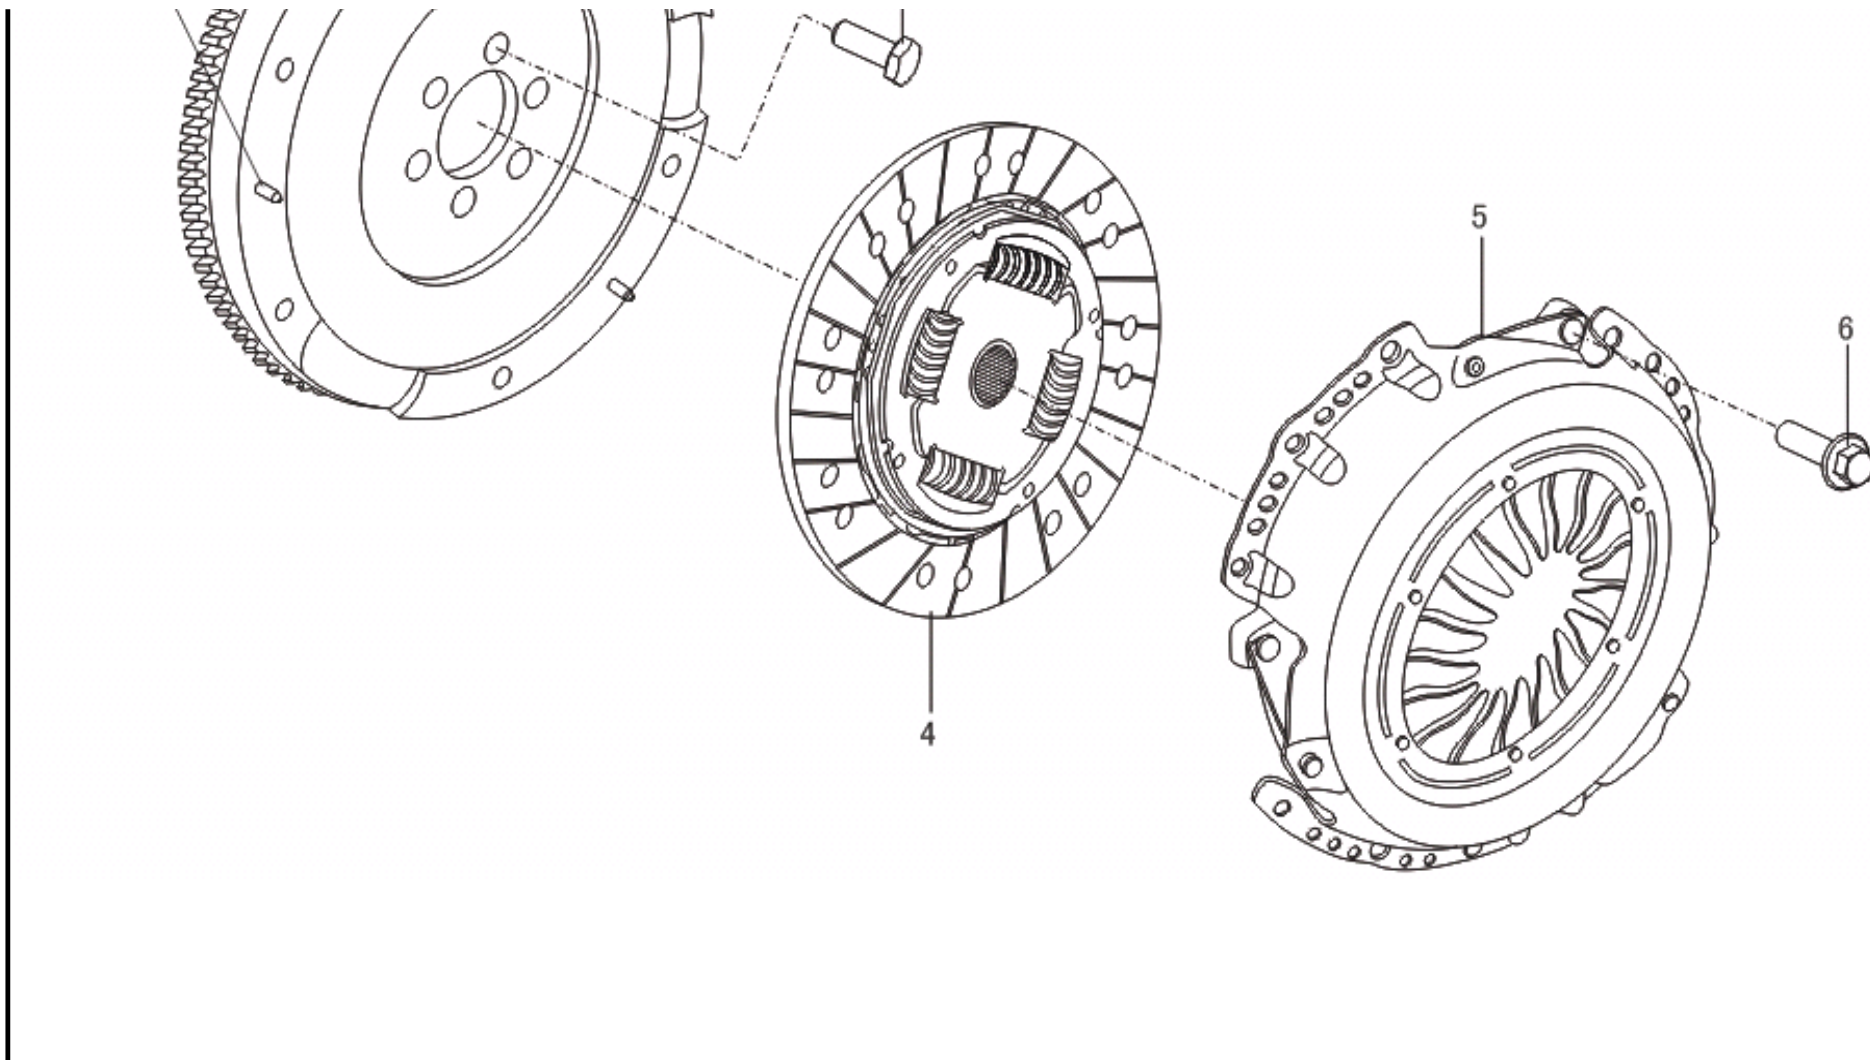

1.15 Clutch

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q5220820	定位销	Pin	3		√
2	LF479Q1-1005100A	飞轮齿圈总成	Flywheel rim	1		√

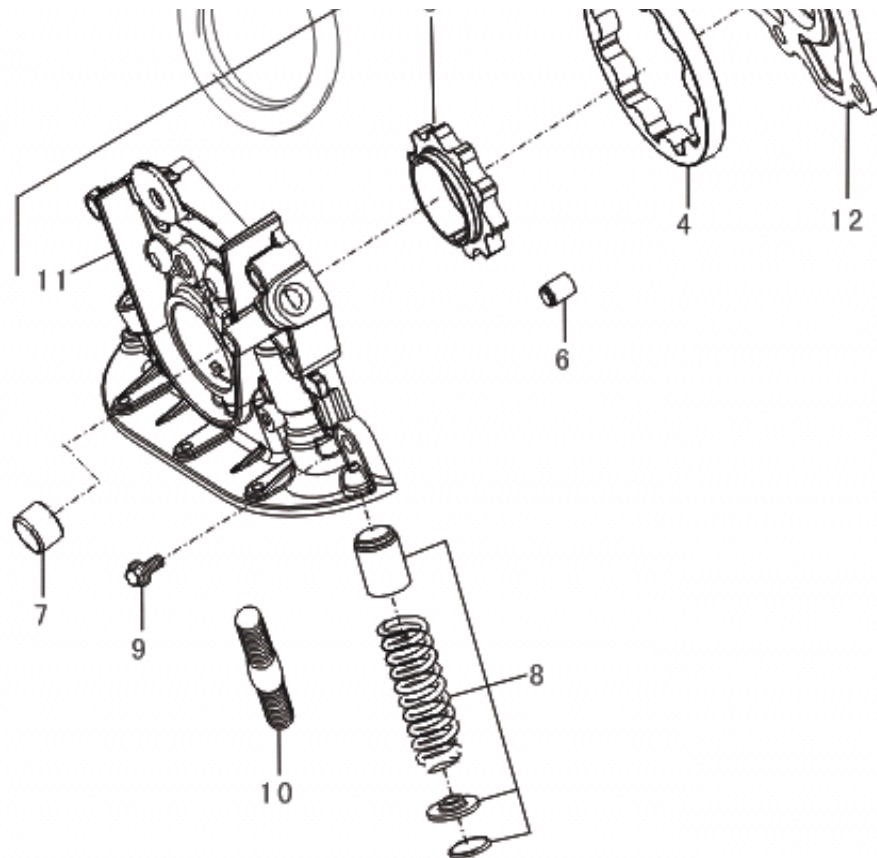


1.16 Oil pump


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1011100A	机油泵总成	Oil Pump Assy	1		√
2		螺钉	Screw	5		


3	LF479Q1-1011104A	定位销	Set Pin	2		
4	LF479Q1-1011107A	机油泵外转子	Drive Gear, outer	1		
5	LF479Q1-1011106A	机油泵内转子	Drive Gear, inner	1		
6	LF479Q1-1011012A	机油泵定位销	Oil pump pin	2		√
7	Q61903	螺塞	Plug	2		
8	LF479Q1-1011108A	机油泵安全阀	Oil Pump Relief Valve	1		
9	Q1840825	六角法兰面螺栓	Bolt	3		√
10		双头螺柱	Bolt	2		
11	LF479Q1-1011101A	泵体	Oil Pump body	1		
12	LF479Q1-1011102A	泵盖	Oil Pump cap	1		
13	LF479Q1-1011011A	机油泵密封垫	Gasket, oil pump	1		√



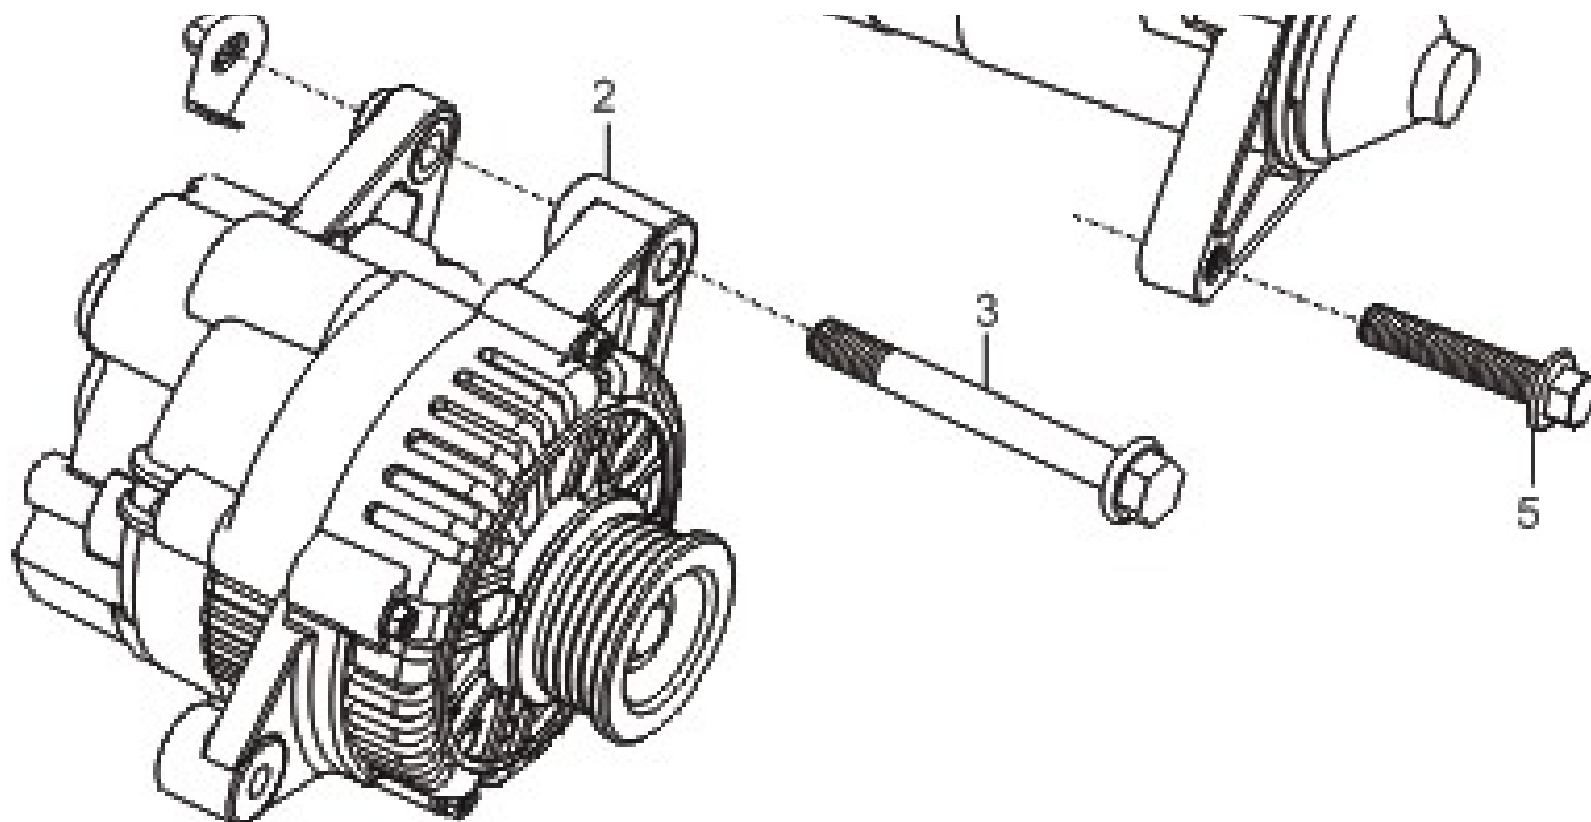

1.17

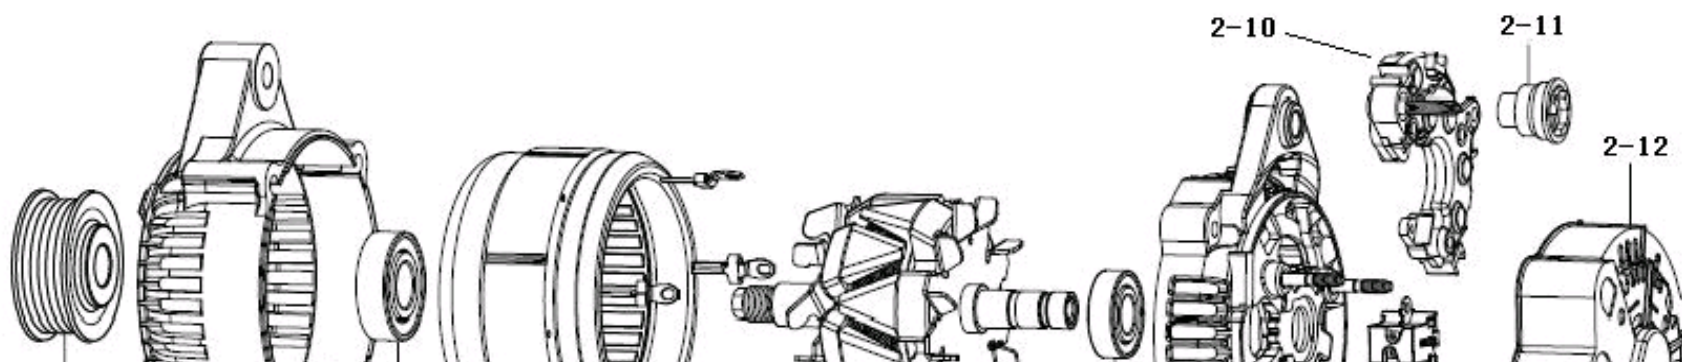

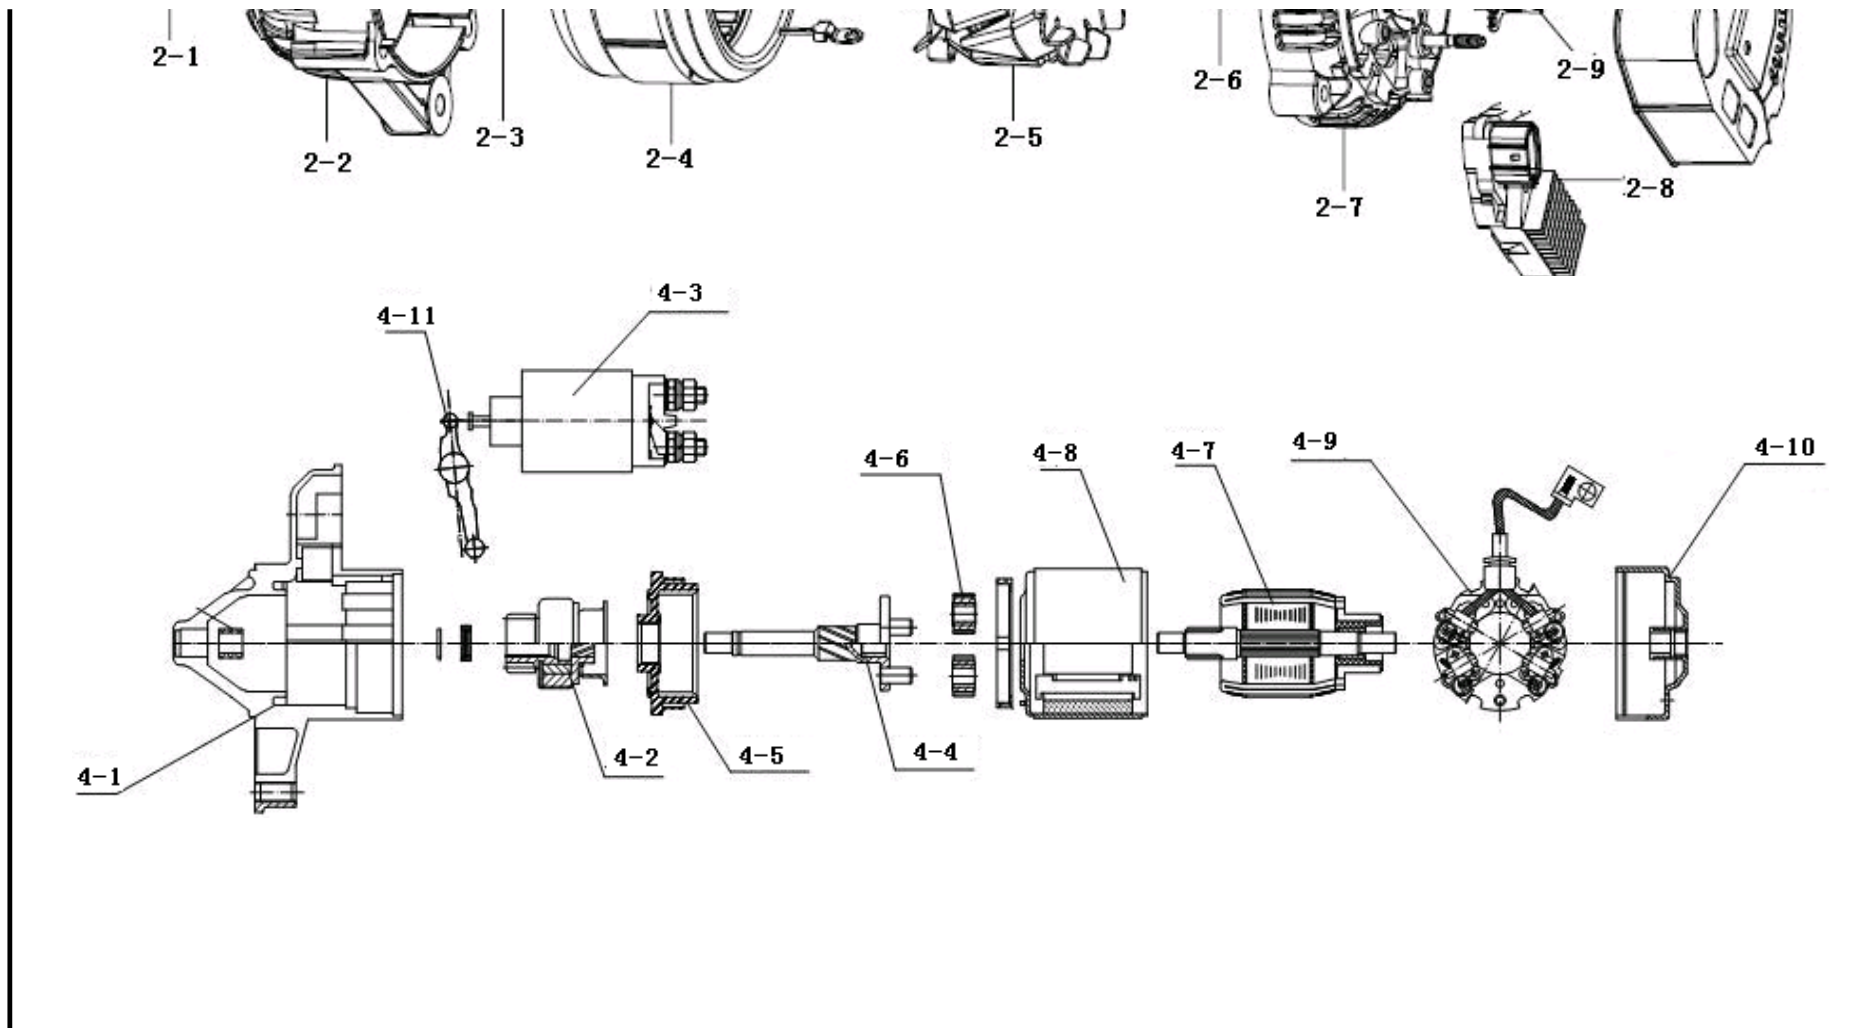


1.17 起动电机和发电机 Starter and Generator


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-3701013A	发电机紧固螺母	Generator nut	1		√
2	LF479Q1-3701100A	发电机总成	Generator assy.	1		√

3	Q18410105	螺栓	Generator bracket bolt	1		√
4	LF479Q1-3708100A	启动电机总成	Startor assy.	1		√
5	Q1841040	螺栓	Bolt	2		√
2-1	LF479Q3-3701110A	皮带轮	Pulley	1	Generator spare part	
2-2	LF479Q3-3701120A	前端盖	Front cap	1	Generator spare part	
2-3	LF479Q3-3701130A	前滚动轴承	Bearing	1	Generator spare part	
2-4	LF479Q3-3701140A	定子	Stater	1	Generator spare part	
2-5	LF479Q3-3701150A	转子	Rotor	1	Generator spare part	
2-6	LF479Q3-3701160A	后滚动轴承	Bearing	1	Generator spare part	
2-7	LF479Q3-3701170A	后盖组成	End cap	1	Generator spare part	
2-8	LF479Q3-3701180A	电压调节器	Voltage regulator	1	Generator spare part	√
2-9	LF479Q3-3701190A	电刷总成	Brush	1	Generator spare part	
2-10	LF479Q3-3701111A	整流器	Rectifier	1	Generator spare part	√
2-11	LF479Q3-3701112A	绝缘套	Insulant	1	Generator spare part	
2-12	LF479Q3-3701113A	罩盖	Cover	1	Generator spare part	
4-1	LF479Q3-3708110A	前盖总成	Front cap assy.	1	Startor spare part	
4-2	LF479Q3-3708120A	单向器	unidirectional	1	Startor spare part	
4-3	LF479Q3-3708130A	电磁开关	Solenoid Switch	1	Startor spare part	√

1.17 起动电机和发电机 Starter and Generator

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
4-4	LF479Q3-3708140A	星轮轮轴总成	Star gear	1	Startor spare part	
4-5	LF479Q3-3708150A	减速齿轮总成	Reducing gear	1	Startor spare part	

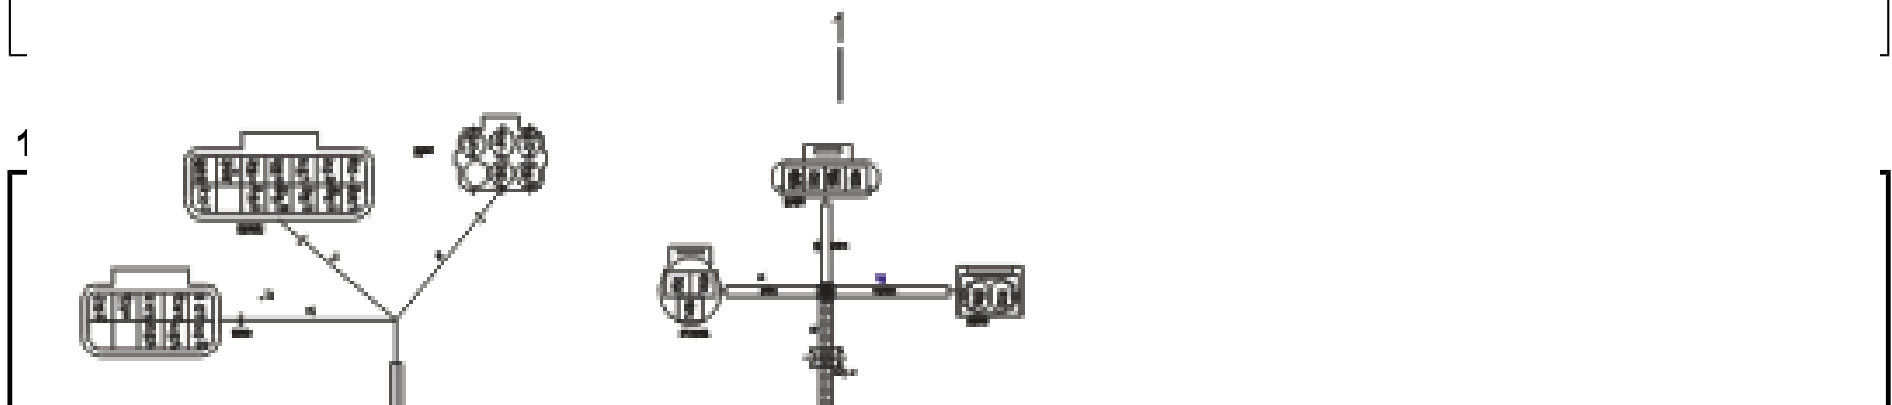[illegible]

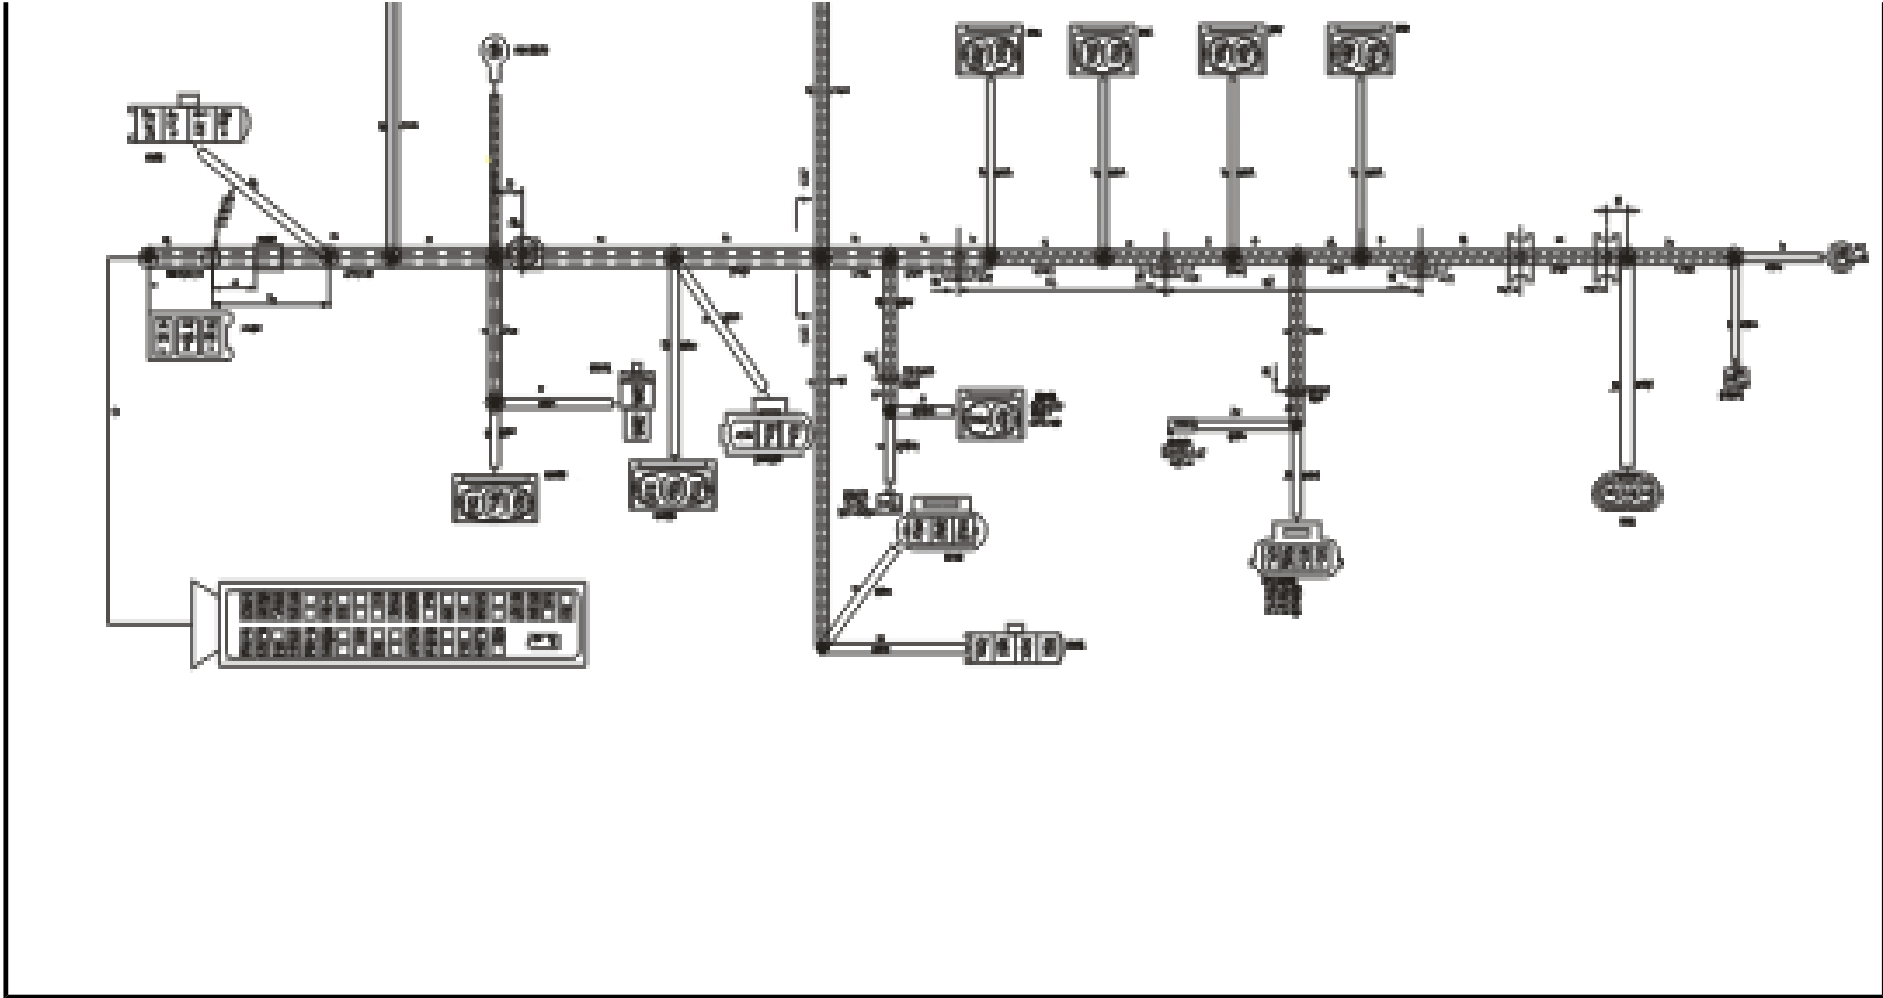



1.18 Engine harness

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q3-4001100C14	发动机线束	Engine harness	1	Sun&teck+OBD	√

[illegible]


1.19 变速

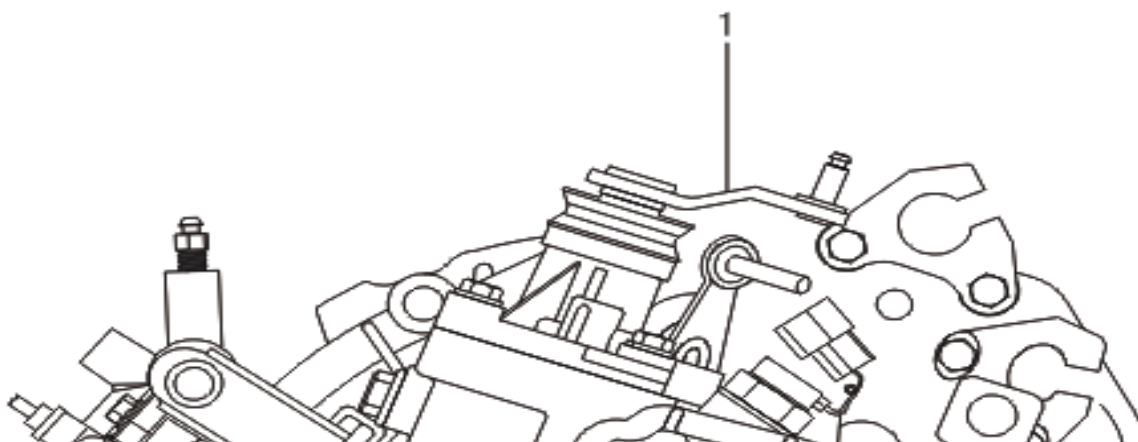

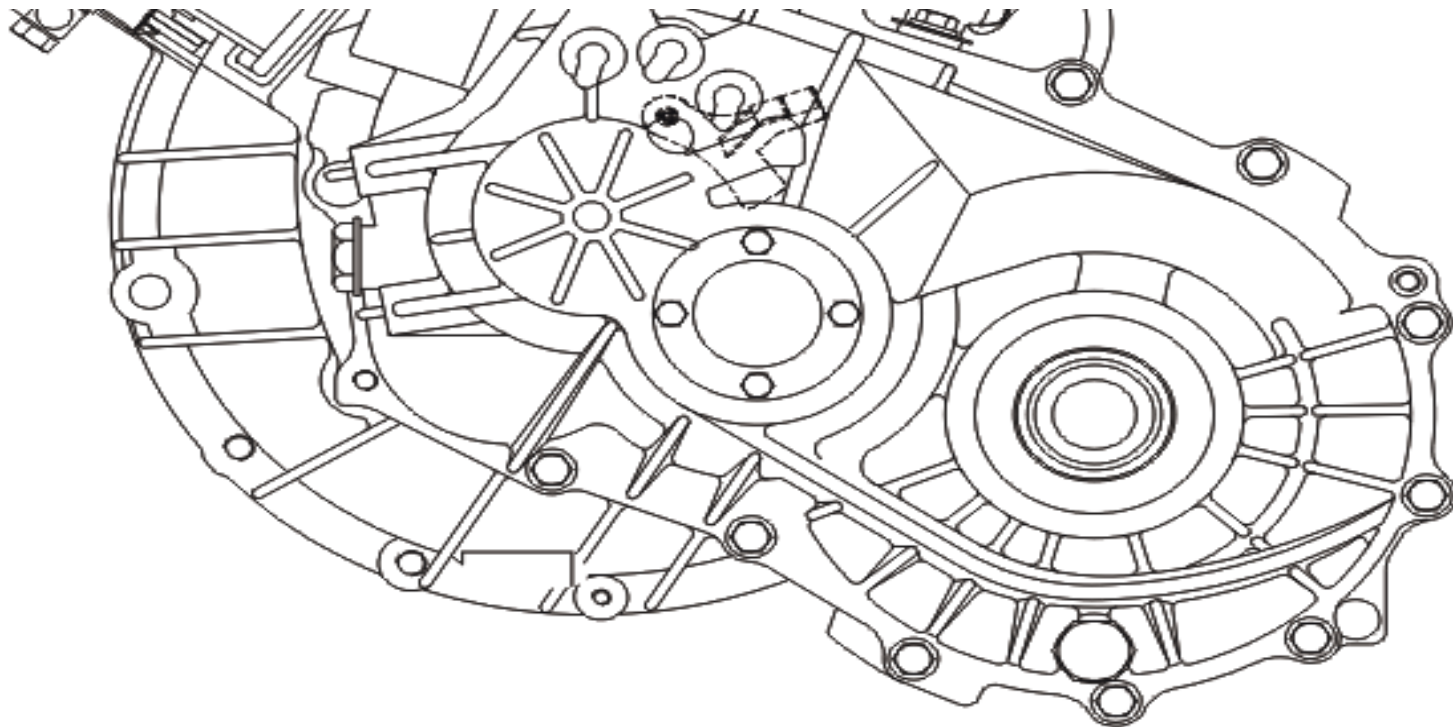

1.19 变速器总成 Transmission

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1700000E1	变速器总成	Transmission assy.	1		√
1	LF479Q1-1700000H1	变速器总成	Transmission assy.	1		

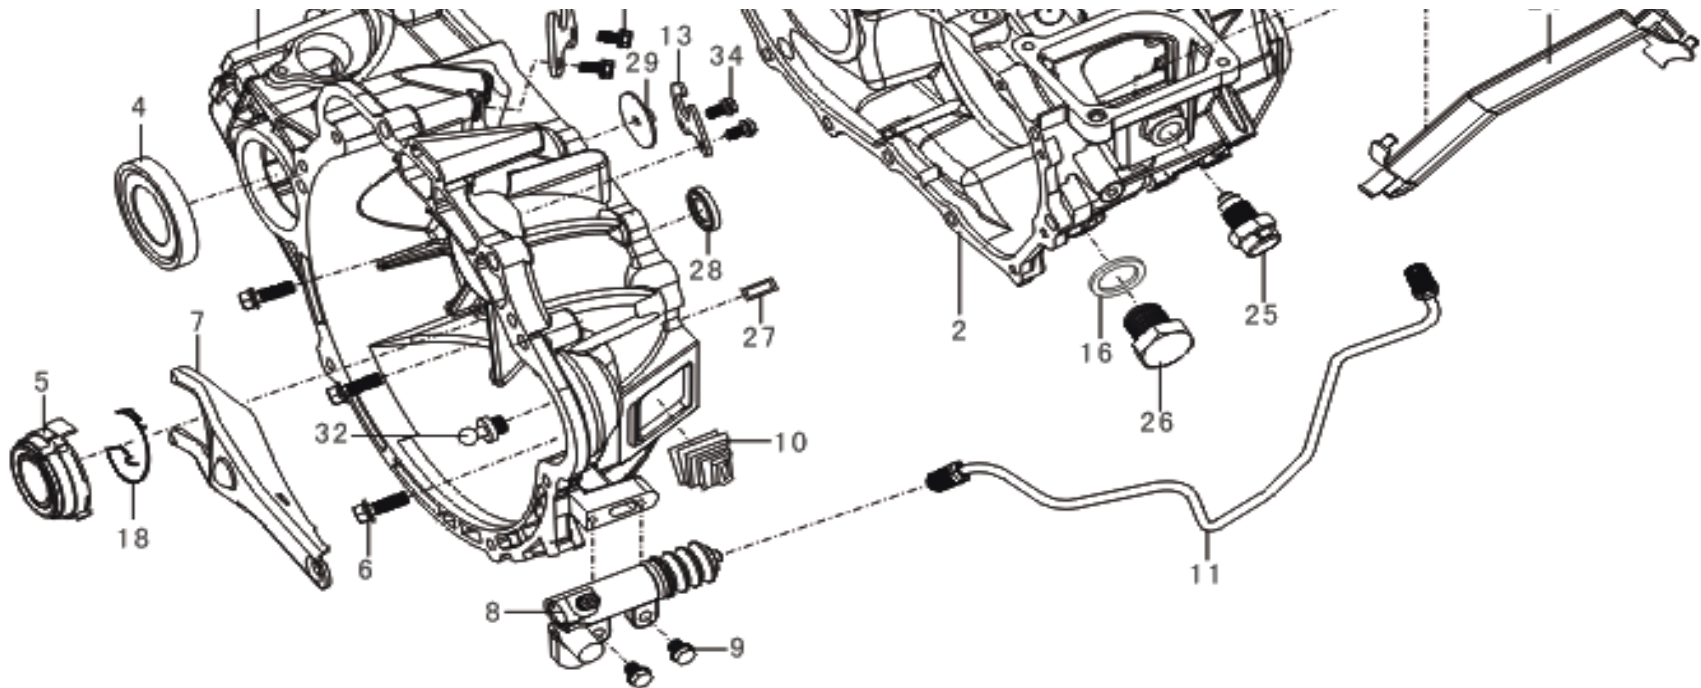

1.20 变速器壳体 Transmission shell


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q1-1701011D	离合器壳体	Clutch shell	1		√
2	LF479Q1-1701021D1	变速器壳体	Transmission shell	1		√
3	LF481Q1-1701028A	定位销	Set Pin	2	Φ10×25	√


4	LF481Q1-2303322A	差速器油封	Differential T seal	2		√
5	LF481Q1-1701334A	分离轴承	Throwout bearing	1		√
6	Q1840835	六角法兰面螺栓	Hex flange bolt	14		√
7	LF481Q1-1701330A	分离拨叉	Throwout fork	1		√
8	LF481Q1-1702160A	离合器分泵	Clutch slave cylinder	1		√
9	LF481Q1-1702159A	分离泵紧固螺栓	Bolt	2	M8×25	√
10	LF481Q1-1701331A	分离拨叉护套	Throwout fork sleeve	1		√
11	LF481Q1-1702170A	液压油管	Hydraulic tube	1		√
12	LF481Q1-1702038A	换档拉索支架	Shift cable bracket	1		√
13	LF481Q1-1702039A	换位拉索支架	Transposition cable bracket	1		√
14	LF481Q1-1701027A	倒档灯开关总成	Reverse light switch	1		√
15	LF481Q1-1701029A	铝垫圈	Aluminum washer	1		√
16	LF481Q1-1701029B	铜垫圈	Copper washer	3	18.2×25×2	√
17	LF481Q1-1702037A	变速器壳衬套	Transmission shell sleeve	1	15×18×10	√
18	LF481Q1-1701332A	分离卡簧	Throwout circlip	1		√
19	Q1840816	六角法兰面螺栓	Hex flange bolt	2		√
20	LF481Q1-1701335A	线卡	Clip	2		√

1.20 变速器壳体 Transmission shell

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
21	LF479Q1-1702210D	叉轴定位座组件 I	Fork shaft positioner 1	1		√
22	LF479Q1-1702230D	叉轴定位座组件 II	Fork shaft positioner 2	1		√
23	LF479Q1-1702240D	叉轴定位座组件 III	Fork shaft positioner 3	1		√

24	LF479Q1-1701034D	导油槽	Oil passage	1		√
25	LF481Q1-1701033A	换挡定位总成	Shift position device	1		√
26	LF479Q1-1701026D	磁性油塞组件	Oil bolt plug	2	M18×1.5	√
27	LF481Q1-1701336A	方形磁铁	Square magnet	1		√
28	LF481Q1-1701030A	输入轴油封	Input shaft S seal	1	23×37×7R	√
29	LF481Q1-1701190A	导油端垫	Oil passage cap	1		√
30	LF481Q1-1701024A	油管支架	Tube bracket	1		√
31	LF481Q1-1701025A	油管支架螺栓	Tube bracket bolt	1	M8×15	√
32	LF479Q1-1701333D	分离拨叉支撑柱	Throwout fork support	1		√
33	LF481Q1-1701029C	铜垫圈	Copper washer	2		√
34	Q1840820	六角法兰面螺栓	Hex flange bolt	4		√
	LF479Q1-3802100A	里程表传感器	Speedometer sensor	1		√
	LF479Q1-3802100B1	整体式里程表传感器	Speedometer sensor	1	integrative	√

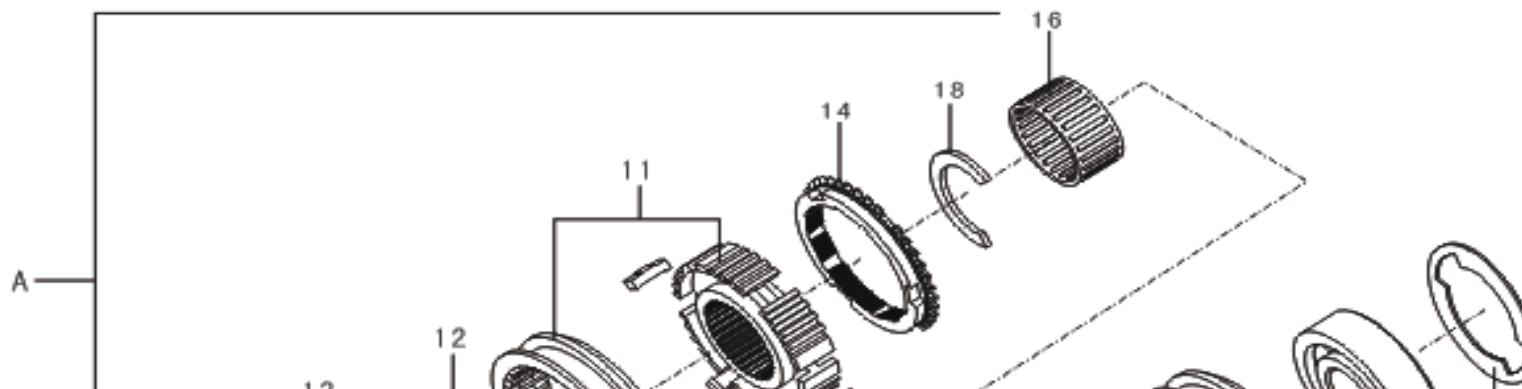

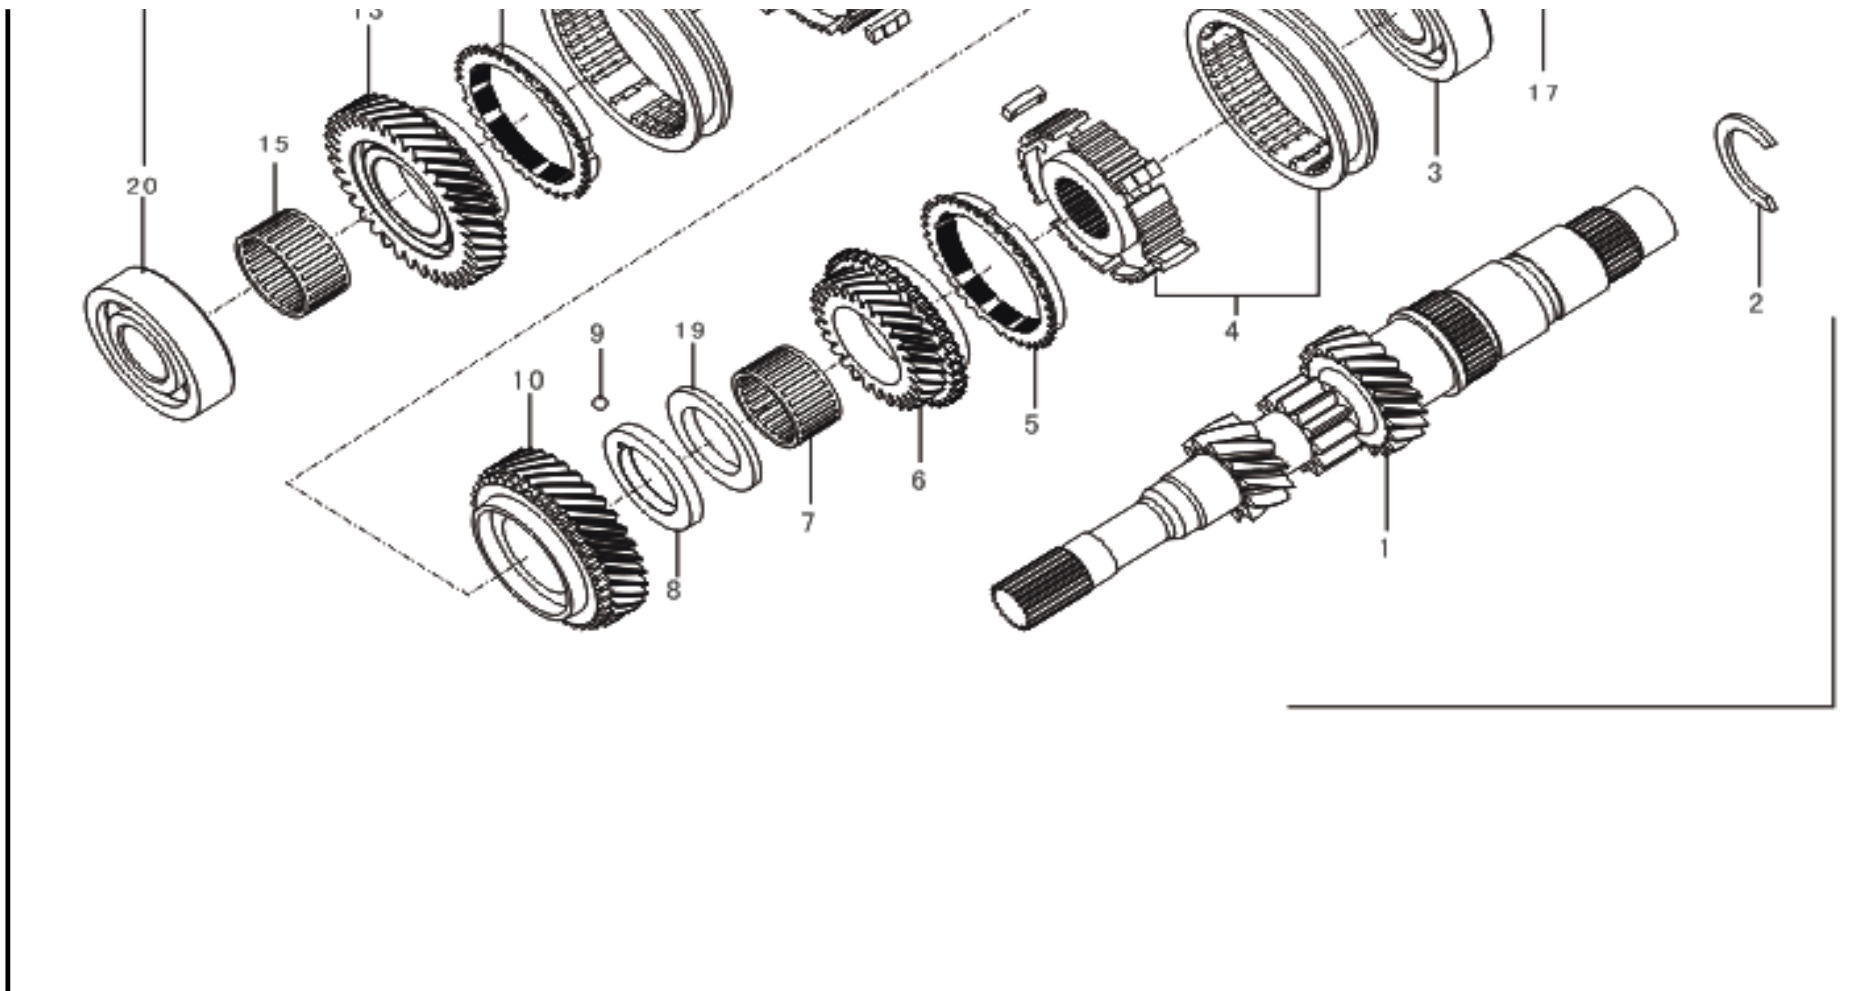


1.21 输入轴总成 Input shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-1701300E1	输入轴总成	Input shaft assy.	1		
1	LF479Q1-1701391E1	输入轴	Input shaft	1		√
2	LF479Q1-1701461D	止推垫挡圈 I	Thrust washer circlip	1	S=2.90	

2	LF479Q1-1701462D	止推垫挡圈 II	Thrust washer circlip	1	S=2.85 optional	
2	LF479Q1-1701463D	止推垫挡圈 III	Thrust washer circlip	1	S=2.95 optional	
2	LF479Q1-1701464D	止推垫挡圈 IV	Thrust washer circlip	1	S=3.75 optional	
2	LF479Q1-1701465D	止推垫挡圈 V	Thrust washer circlip	1	S=3.70 optional	
3	TM6305-2RS	输入轴轴承	Input shaft bearing	1		√
4	LF479Q1-1701070D	五档同步器总成	Fifth synchronize assy.	1		√
5	LF481Q1-1701069A	五档同步环	Fifth synchronize rim	1		√
6	LF479Q1-1701350D	五档主动齿轮组件	Fifth drive gear	1		√
7	LF479Q1-1701077D	五档滚针轴承	Input fifth needle bearing	1	K313418.8TN	√
8	LF479Q1-1701045D	输入四档止推垫	Input forth thrust washer	1		√
9	LF481Q1-1701044A	输入四档止推垫定位球	Input forth thrust washer ball	1	Φ5	√
10	LF479Q1-1701340D	四档主动齿轮组件	Forth drive gear	1		√
11	LF479Q1-1701060D	三、四档同步器总成	Third forth synchronize assy.	1		√
12	LF481Q1-1701059A	三档同步环	Third synchronize rim	1		√
13	LF479Q1-1701330E1	三档主动齿轮组件	Third drive gear	1		√
14	LF481Q1-1701065A	四档同步环	Forth synchronize rim	1		√
15	LF481Q1-1701076A	三、四档滚针轴承	Third forth needle bearing	1	K34×39×20DTN	√

1.21 输入轴总成 Input shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
16	LF479Q1-1701075D	四档滚针轴承	Input forth needle bearing	1	K343948.3TN	√
17	LF479Q1-1701471D	垫片 I	Washer	1	S=2.0	√
17	LF479Q1-1701472D	垫片 II	Washer	1	S=1.8 optional	

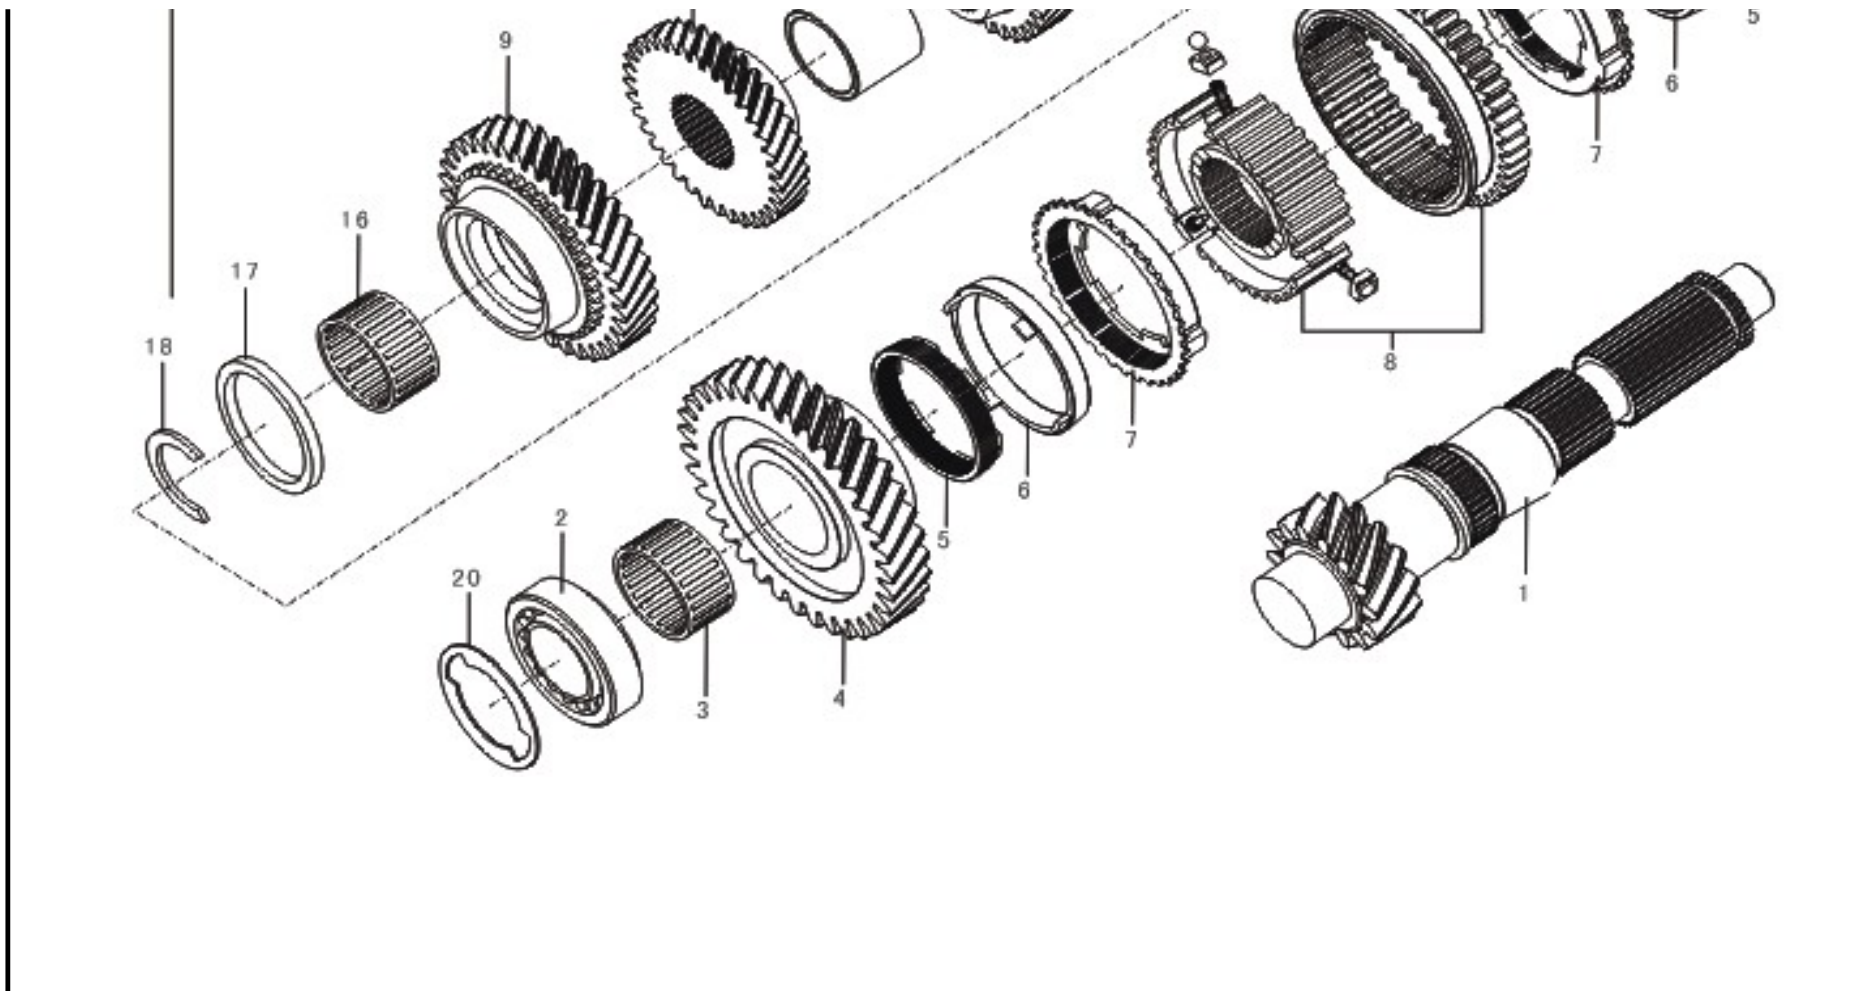


1.22 输出轴总成 Output shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-1701500E1	输出轴总成	Output shaft assy.	1		
1	LF479Q1-1701591E1	输出轴	Output shaft	1		√
2	32006	输出轴前轴承	Output shaft front bearing	1		√

3	LF479Q1-1701103D	一档滚针轴承	First needle bearing	1	KS343922.8TNB	√
4	LF479Q1-1701110E1	一档从动齿轮组件	First driven gear	1		√
5	LF479Q1-1701651D	一二档内同步环	First second synchronize rim, inner	2		√
6	LF479Q1-1701652D	一二档中间环	First second synchronize rim, middle	2		√
7	LF479Q1-1701653D	一二档外同步环	First second synchronize rim, outer	2		√
8	LF479Q1-1701120D	一、二档同步器总成	First second synchronize assy.	1		√
9	LF479Q1-1701130E1	二档从动齿轮组件	Second driven gear	1		√
10	LF479Q1-1701136E1	三档从动齿轮组件	Third driven gear	1		√
11	LF479Q1-1701696D	三、四档间隔套	Third forth spacer	1		√
12	LF479Q1-1701138D	四档从动齿轮组件	Forth driven gear	1		√
13	LF479Q1-1701140D	五档从动齿轮组件	Fifth driven gear	1		√
14	LF479Q1-1701661D	齿轮档圈 I	Circlip	1	2.46×28×34	√
14	LF479Q1-1701662D	齿轮档圈 II	Circlip	1	2.32×28×34	
14	LF479Q1-1701663D	齿轮档圈 III	Circlip	1	2.39×28×34	
14	LF479Q1-1701664D	齿轮档圈 IV	Circlip	1	2.53×28×34	
14	LF479Q1-1701665D	齿轮档圈 V	Circlip	1	2.60×28×34	
15	32205	输出轴后轴承	Output shaft rear bearing	1		√

1.22 输出轴总成 Output shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
16	LF479Q1-1701127D	二档滚针轴承	Second gear needle bearing	1	K343922.3TN	√
17	LF481Q1-1701043A	输出二档、输入四档滚针隔环	Input second, output forth space ring	2		√
18	LF479Q1-1701681D	齿毂挡圈 I	Circlip	1	S=3	√

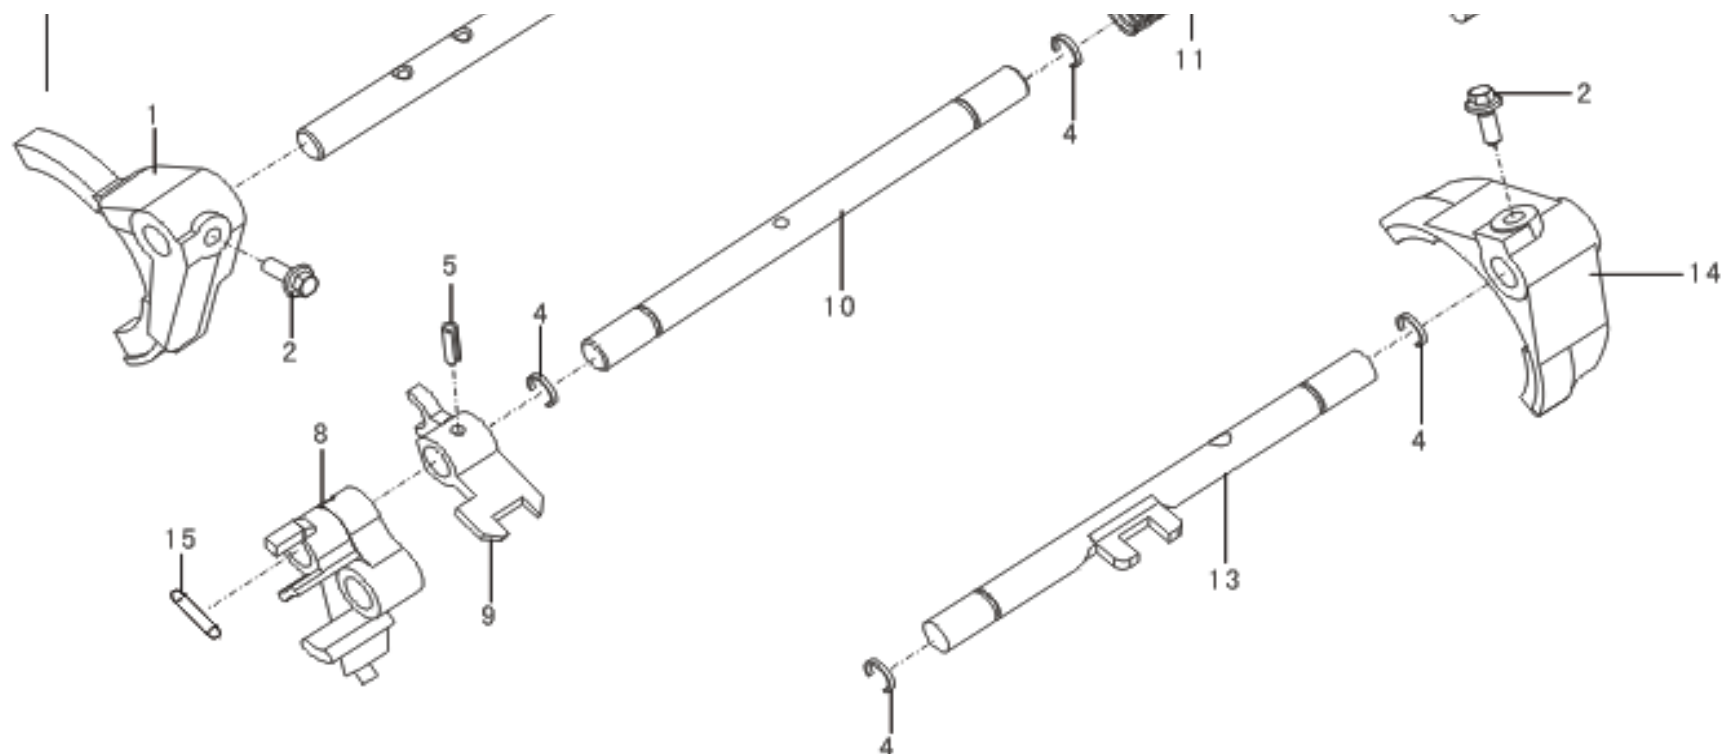



1.23 拨叉轴总成 Fork shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-1702400D1	拨叉轴总成	Fork shaft assy.	1		√
1	LF479Q1-1702053D	一、二档换挡拨叉	First second fork	1		√
2	LF481Q1-1702054A	换挡叉止动螺栓	Shift fork stop bolt	2	M6×0.75	√

3	LF479Q1-1702051D1	一、二档拨叉轴	First second fork shaft	1		√
4	LF481Q1-1702057A	叉轴档圈	Fork shaft circlip	5	1.5×11.6×16.6	√
5	Q5280522	弹性圆柱销	Spring pin	2	Φ5.5×22	√
6	LF481Q1-1702052A	一、二档换档导块	First second shift block	1		√
7	LF481Q1-1702082A	互锁销 II	Interlock pin	1	Φ6×17.5	√
8	LF479Q1-1702075D	倒档换档导块	Reverse shift block	1		√
9	LF479Q1-1702072D	五、倒档换档导块	Fifth reverse shift block	1		√
10	LF479Q1-1702071D1	五档、倒档拨叉轴	Fifth reverse fork shaft	1		√
11	LF479Q1-1702471D	拨叉回位弹簧	Fork spring	1		√
12	LF479Q1-1702073D1	五档换档拨叉	Fifth fork	1		√
13	LF479Q1-1702061D1	三、四档拨叉轴	Third forth fork shaft	1		√
14	LF479Q1-1702062D	三、四档换档拨叉	Third forth fork	1		√
15	LF481Q1-1702081A	互锁销 I	Interlock pin	1	Φ6×13.8	√

1.2

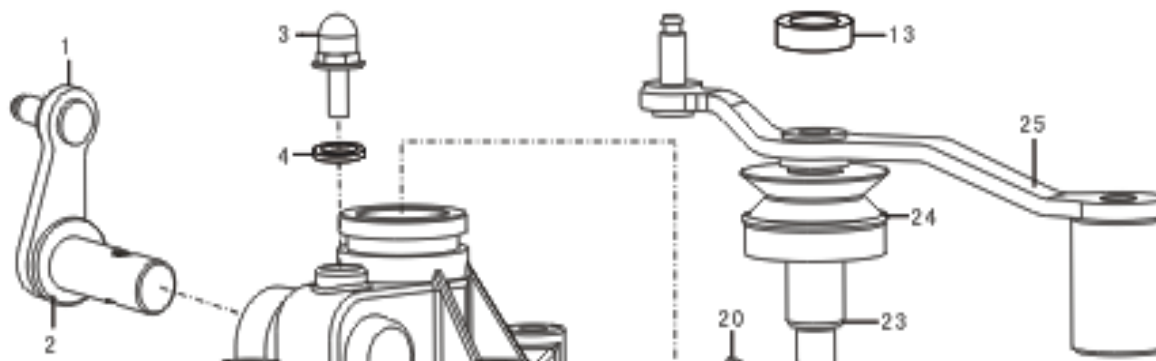

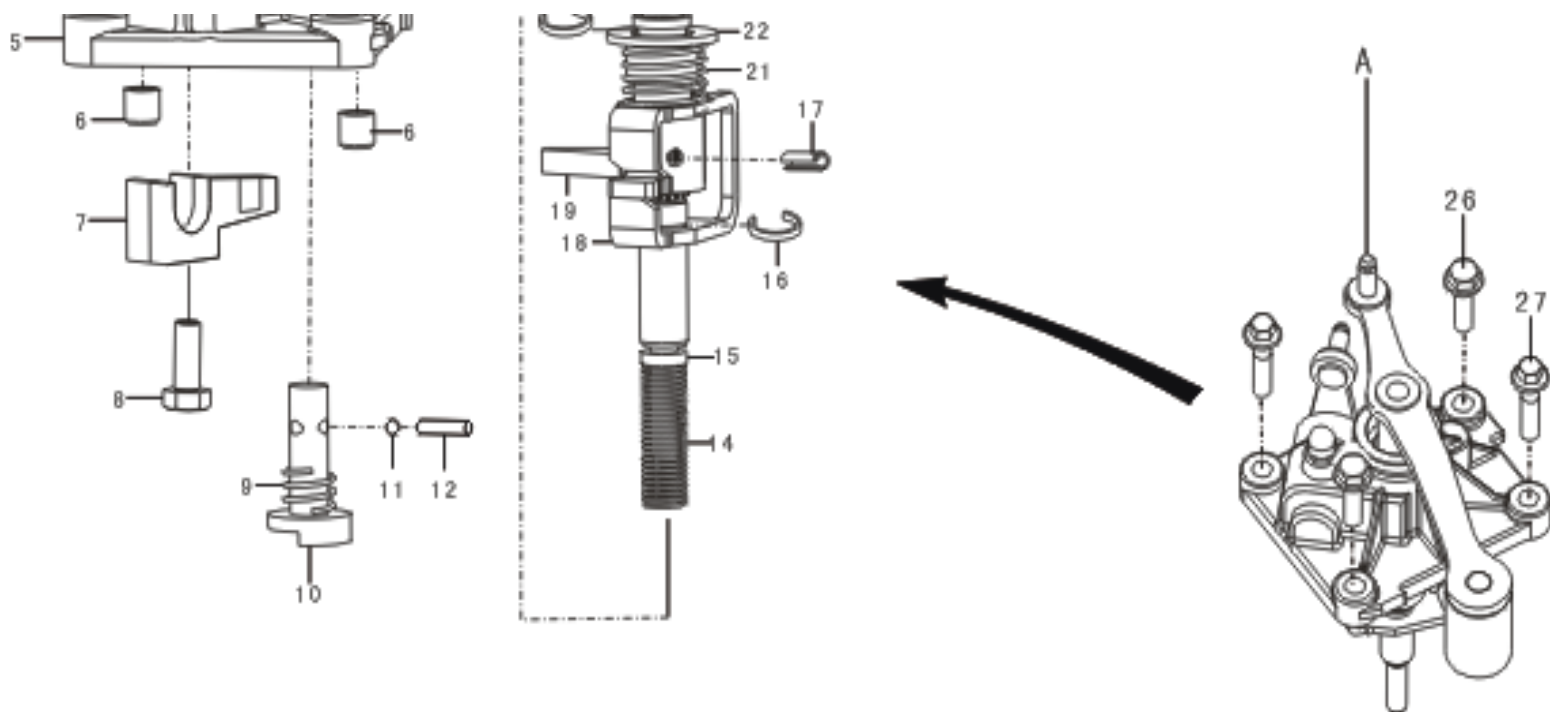


1.24 换选档机构 Shift system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-1702100E1	换挡机构总成	Shift system assy.	1		√
1	LF481Q1-1702030A	换位摇臂组件	Transposition swing arm	1		√
2	LF481Q1-1702035A	换位摇臂油封	Transposition swing arm seal	1	16×26×6.3/7	√

3	LF481Q1-1702130A	通气塞总成	Vent valve assy.	1		√
4	LF481Q1-1702141A	通气塞垫片	Vent valve gasket	1	10×14×1.5	√
5	LF481Q1-1702151A	换档盖	Shift cap	1		√
6	LF481Q1-1702016A	换档盖定位环	Shift cap position ring	2		√
7	LF481Q1-1702114A	换位摆杆	Transposition swing lever	1		√
8	LF481Q1-1702115A	换位摆杆螺栓	Transposition swing lever bolt	1	M8×21	√
9	LF479Q1-1702122D	回位弹簧Ⅲ	Pin	1		√
10	LF481Q1-1702120A	五倒档互锁凸轮	Fifth reverse cam	1		√
11	LF481Q1-1702121A	五倒档互锁凸轮密封球	Fifth reverse cam seal ball	1	Φ6.2	√
12	Q5230420	圆柱销	Pin	1		√
13	LF481Q1-1702036A	换档导轴油封	Shift shaft seal	1	18×28×8	√
14	LF481Q1-1702155A	回位弹簧Ⅰ	Return spring	1		√
15	LF481Q1-1702154A	换档导轴尼龙垫圈	Shift shaft washer	1	14.5×9×3	√
16	LF481Q1-1702137A	换档导轴档圈Ⅰ	Shift shaft circlip	1	13×18.6×1.5	√
17	Q5280526	弹性圆柱销	Pin	1		√
18	LF481Q1-1702108A	换档摆杆互锁架	Shift swinglever interlock bracket	1		√
19	LF481Q1-1702142A	换档摆杆	Shift swinglever	1		√

1.24 换选档机构 Shift system


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
20	LF481Q1-1702138A	换档导轴档圈Ⅱ	Shift shaft circlip	1	15×21×1.5	√
21	LF481Q1-1702156A	回位弹簧Ⅱ	Return spring	1		√
22	LF481Q1-1702128A	回位弹簧座	Return spring seat	1		√

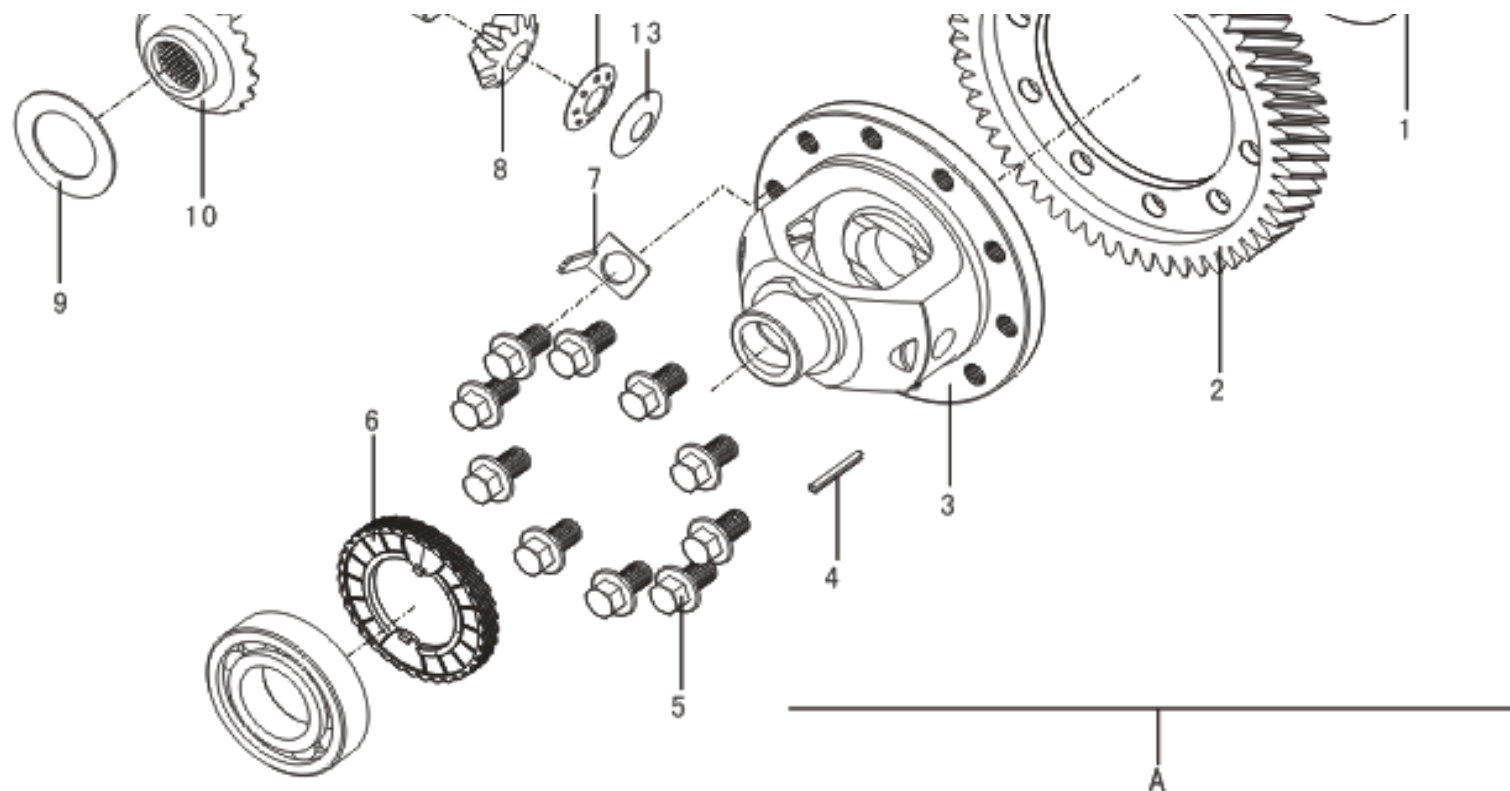


1.25 差速器 Differential

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-2303300E1	差速器总成	Differential assy.	1		√
A	LF479Q1-2303300H1	差速器总成	Differential assy.	1		
1	32008	差速器轴承	Differential bearing	2		√

2	LF479Q1-2303308E1	差速器齿圈	Differential gear	1		√
3	LF479Q1-2303301D	差速器壳体	Differential shell	1		√
4	Q5240435	滚花圆柱销	Pin	1	4×35	√
5	LF481Q1-2303311A	差速器螺栓	Differential bolt	10	M12×1	√
6	LF481Q1-2303309A	里程表主动齿轮	Speedometer drive gear	1		√
6	LF479Q1-2303309G1	里程表感应齿圈	Speedometer induction gear	1		√
7	LF481Q1-2303315A	齿圈螺旋锁紧片	Locker washer	2		√
8	LF481Q1-2303303A	行星齿轮	Planet gear	2		√
9	LF481Q1-2303304A	半轴齿轮垫片 I	Differential axle gear washer	2		√
9	LF481Q1-2303304B	半轴齿轮垫片 II	Differential axle gear washer 2	2		
10	LF481Q1-2303302A	半轴齿轮	Differential axle gear	2		√
11	LF479Q1-2303306D	行星齿轮轴	Planet gear shaft	1		√
12	LF481Q1-2303305A	行星齿轮垫片	Planet gear washer	2		√
13	LF479Q1-2303381D	调整垫片 I	Adjust washer 1	1		√
13	LF479Q1-2303382D	调整垫片 II	Adjust washer 2	1	optional	

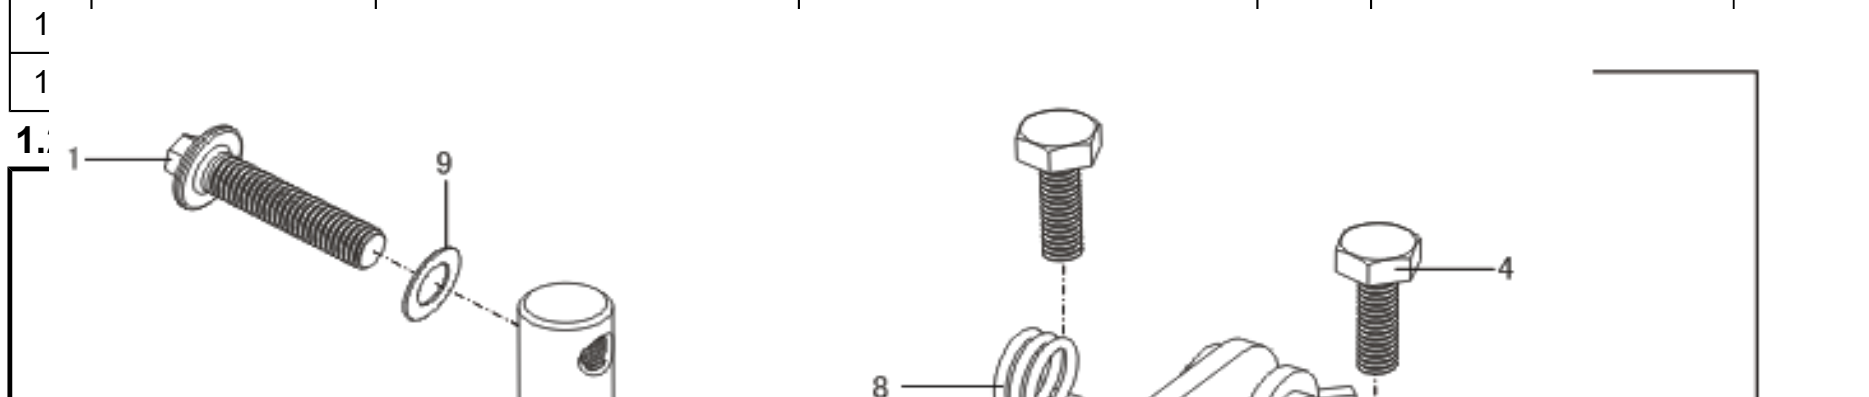

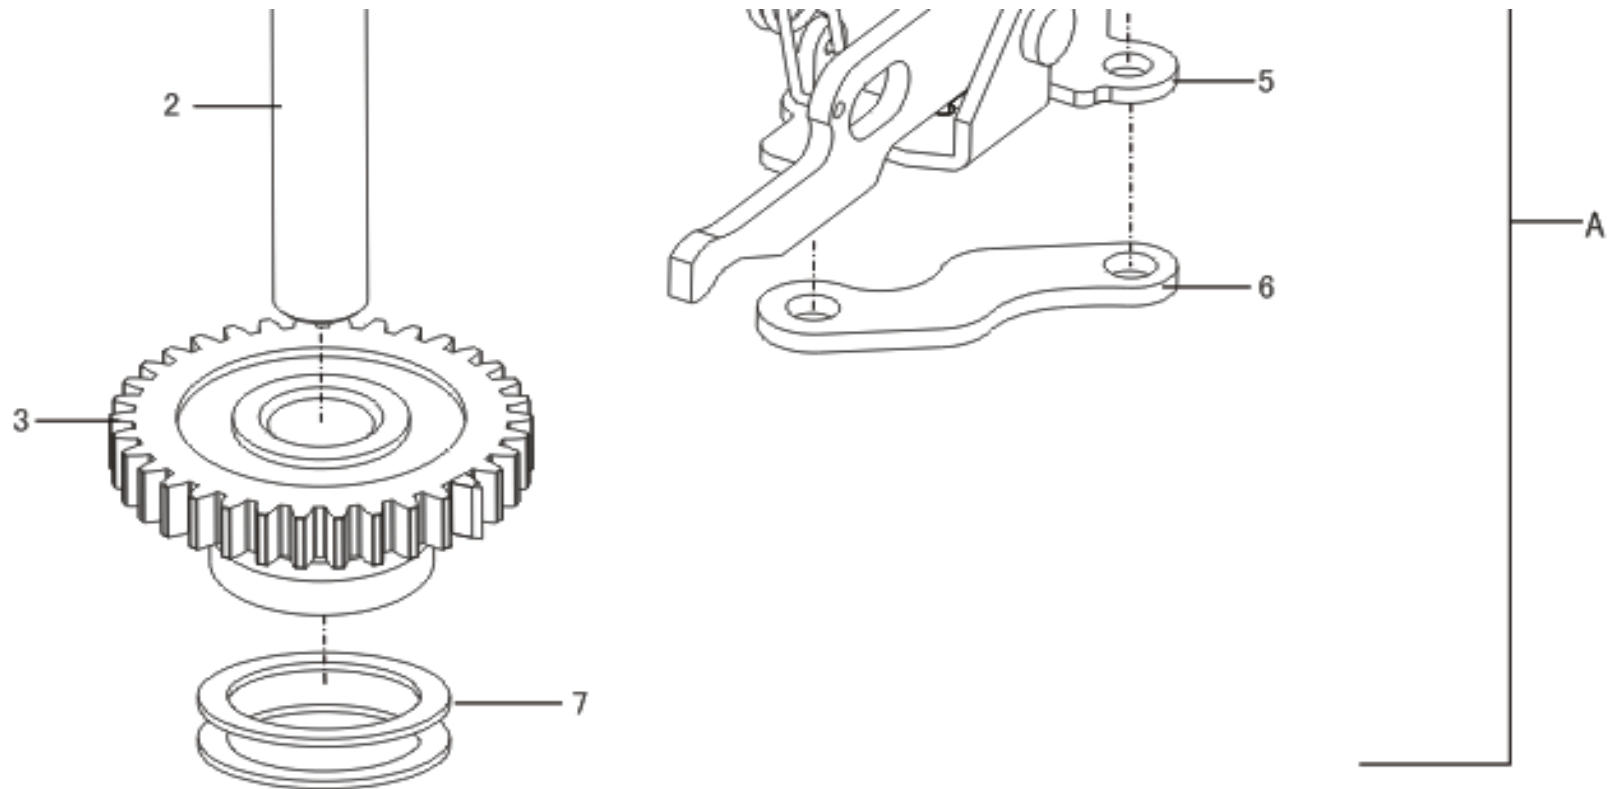

1.26 倒档机构 Reverse mechanism

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
A	LF479Q1-1702300D	倒档机构总成	Reverse mechanism assy.	1		✓
1	Q1860840	六角法兰面螺栓	Hex flange bolt	1		✓
2	LF481Q1-1701081A	倒档中间齿轮轴	Reverse middle gear shaft	1		✓


3	LF479Q1-1701080D	倒档中间齿轮总成	Reverse middle gear assy.	1		√
4	Q150B0822	六角头螺栓	Hex bolt	2		√
5	LF481Q1-1701090A	倒档摆臂支架总成	Reverse swing arm bracket	1		√
6	LF481Q1-1701085A	倒档摆臂支架垫	Washer	1		√
7	LF479Q1-1701087D	垫片	Washer	2		√
8	LF481Q1-1701093A	复位扭簧	Spring	1		√
9	LF481Q1-1701086A	铝垫圈	Aluminum washer	1		√

Engine assy.


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
	LF479Q3-1000000A1	发动机总成	Engine assy.	1		√


[illegible]

2.Chassis

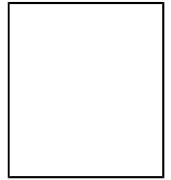

2.01 Engi

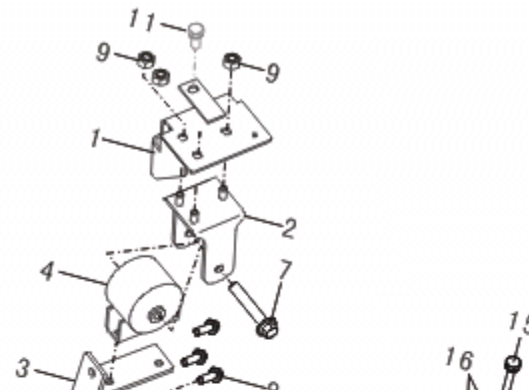

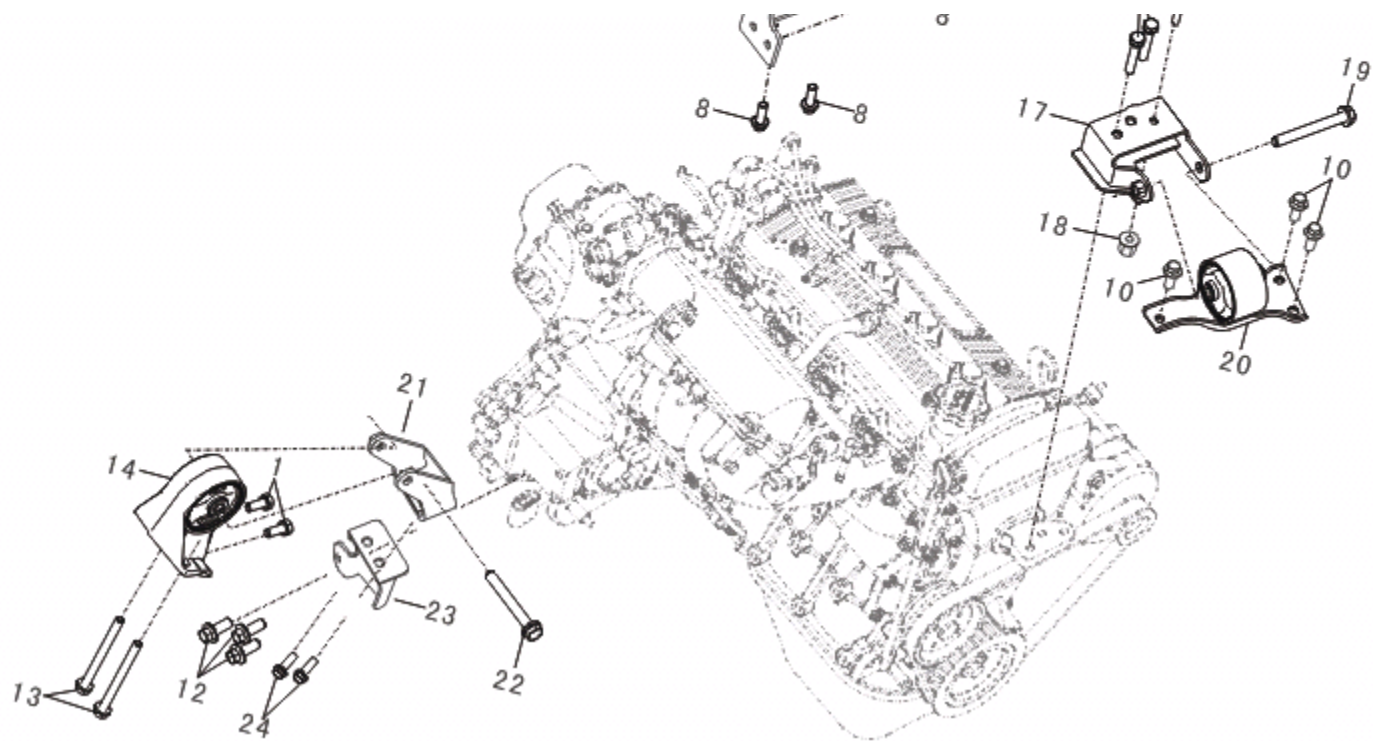


2.01 Engine suspension

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F1001340C1	左悬置连接支架组件 I	Left suspension bracket 1	1		√
2	F1001350C1	左悬置连接支架组件 II	Left suspension bracket 2	1		√
3	F1001360C1	左悬置连接支架组件 III	Left suspension bracket 3	1		√
4	LAL1001310	发动机左悬置组件	Left suspension component	1		√

5	F1001240C1	后悬置连接支架组件 I	Rear suspension bracket 1	1		√
6	F1001250C1	后悬置连接支架组件 II	Rear suspension bracket 2	1		√
7	231B-12100TF3	六角法兰面螺栓	Hex flange bolt	1		
8	231-1025TF3	六角法兰面螺栓	Hex flange bolt	5		√
9	GB/T889.2	1型非金属嵌件六角锁紧螺母	Nut	3	M10×1.25	√
10	231-1020TF3	六角法兰面螺栓	Hex flange bolt	4		√
11	204-1025TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	6		
12	231-1025T1F3	六角法兰面螺栓	Hex flange bolt	3		√
13	204-10110	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	2		√
14	F1001210	后悬置组件	Rear suspension component	1		√
15	244-1060	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	1		
16	207-1055TF3	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	2		
17	F1001440	右悬置连接支架组件	Right suspension connect bracket	1		√
18	101-0815	六角法兰面螺母	Hex flange nut	1		

2.01 Engine suspension

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
19	204-12100TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	1		
20	F1001410	右悬置组件	Right suspension component	1		√
21	F1001240C1	后悬置连接支架组件 I	Rear suspension bracket 1	1		√
22	204-1295TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	1		
23	F1001250C1	后悬置连接支架组件 II	Rear suspension bracket 2	1		√

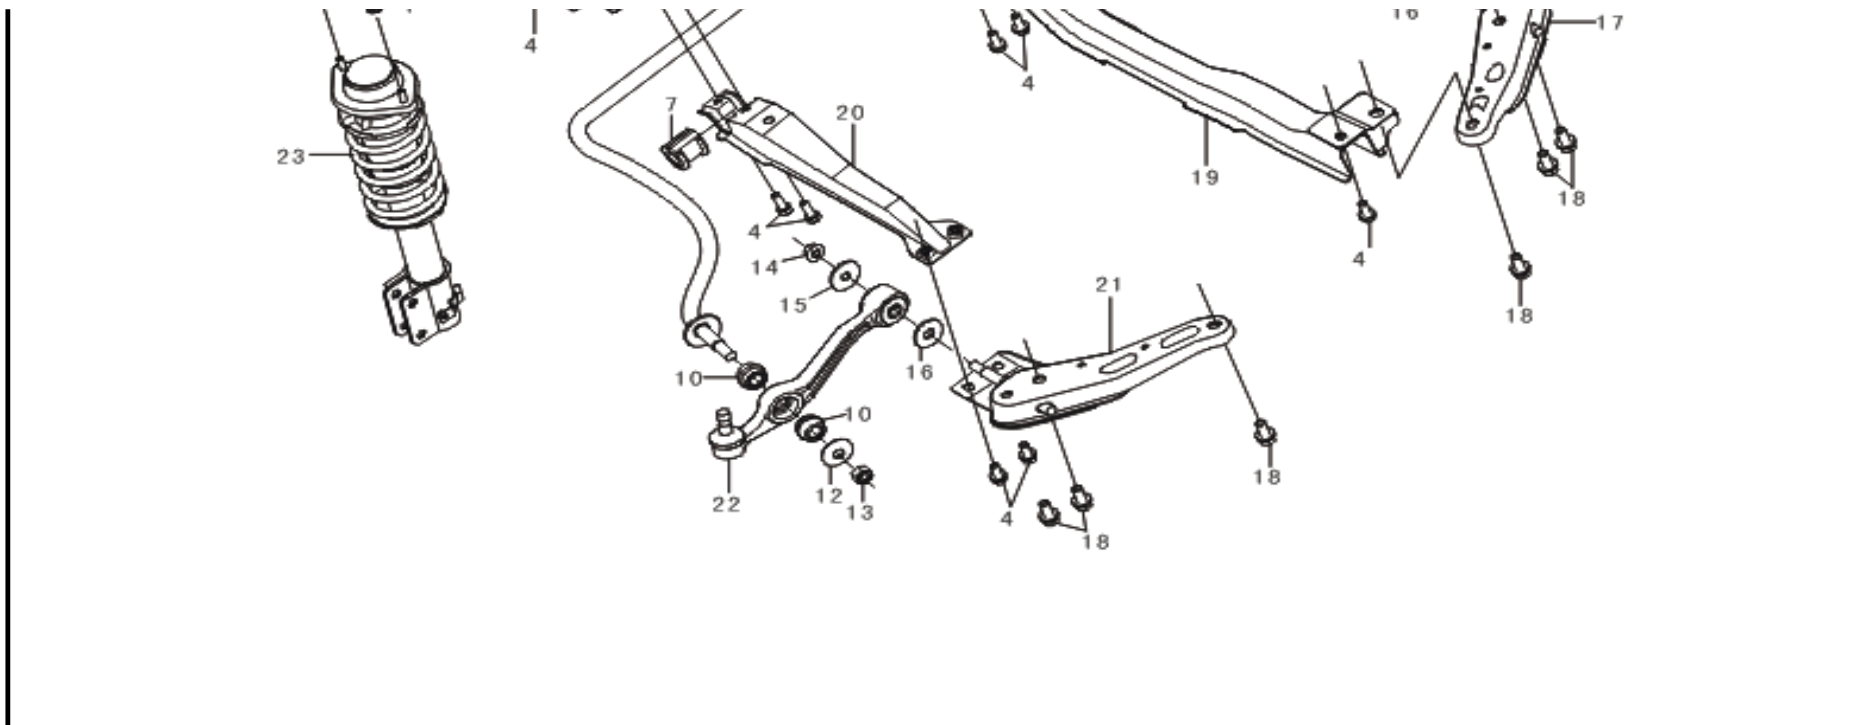

2.02 Front suspension


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q33008T13F3	全金属六角法兰面锁紧螺母	Allmetal hex flange locknut	4		√
2	F2905600	右前支柱总成	Front right shock absorber assy.	1		√
3	F2901260	右前稳定杆安装座板组件	Front stabilizer bar fixing plate,right	1		√
4	204-1025TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	16		
5	F2901210	左前稳定杆安装座板组件	Front stabilizer bar fixing plate,left	1		√
6	F2906110	前横向稳定杆组件	Front stabilizer bar	1		√
7	F2906341	横向稳定杆缓冲套	Front stabilizer bar sleeve	2		√


8	F2906311	横向稳定杆固定块	Front stabilizer bar fixation	1		√
9	Q341C10	1型六角螺母	Hex nut	1		√
10	F2906271	横向稳定杆缓冲垫	Front stabilizer bar damper	4		√
11	F2904200	右前摆臂总成	Front right swing arm	1		√
12	F2906261	连接杆垫片	Washer	2		√
13	Q341B14	1型六角螺母	Hex nut	2		√
14	101B-1212T13F3	六角法兰面螺母	Hex flange nut	2		√
15	Q40212	大垫圈	Big washer	2		√
16	Q40214	大垫圈	Big washer	2		√
17	F2901360	右前摆臂安装支架组件	Front right swing arm bracket	1		√
18	214-1230	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	6		√

2.02 Front suspension

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
19	F2901460	右前悬架托梁组件	Front suspension beam,right	1		√
20	F2901410	左前悬架托梁组件	Front suspension beam,left	1		√
21	F2901310	左前摆臂安装支架组件	Front left swing arm bracket	1		√
22	F2904100	左前摆臂总成	Front left swing arm	1		√
23	F2905100	左前支柱总成	Front left shock absorber assy.	1		√
	F2901460B1	右前悬架托梁组件	Right bracket, engine lower protect panel	1		√
	F2901410B1	左前悬架托梁组件	Left bracket, engine lower protect panel	1		√
	F2802310	发动机下护板组件	Engine lower protect panel	1		√

2.03 Rear susper

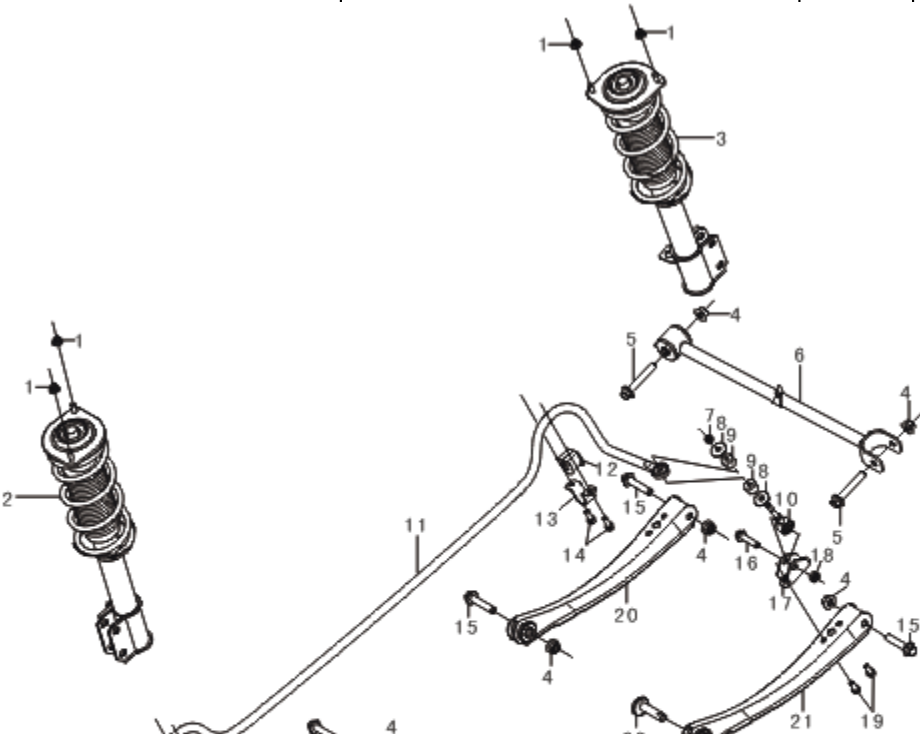

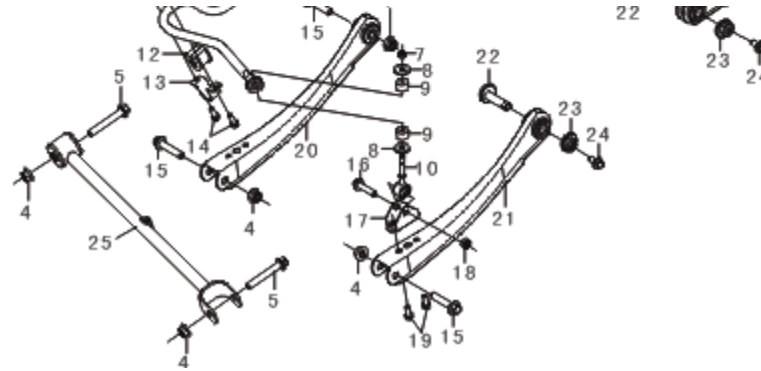

2.03 Rear suspension


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q33008T13F3	全金属六角法兰面锁紧螺母	Allmetal hex flange locknut	4		√
2	F2915100	左后支柱总成	Rear left shock absorber assy.	1		√
3	F2915600	右后支柱总成	Rear right shock absorber assy.	1		√
4	101B-1212T13F3	六角法兰面螺母	Hex flange nut	10		√
5	231B-1275TF3	六角法兰面螺栓	Hex flange bolt	4		√
6	F2914510	右后悬纵向拉杆组件	Rear suspension draglink,right	1		√
7	Q33408	全金属六角锁紧螺母	Allmetal hex flange locknut	2		√
8	F2916121	后横向稳定杆挡圈	Circlip,rear stabilizer bar	4		√
9	F2916217	后横向稳定杆连接减震套	Damper,rear stabilizer bar	4		√
10	F2916210	后横向稳定杆连接杆组件	Con-rod,rear stabilizer bar	2		√


11	F2916111	后横向稳定杆	Rear stabilizer bar	1		√
12	F2916341	后横向稳定杆缓冲套	Damper sleeve,rear stabilizer bar	2		√
13	F2916331	后横向稳定杆固定块	Fix plate,rear stabilizer bar	2		√
14	Q1420820	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	4		√
15	231B-1260TF3	六角法兰面螺栓	Hex flange bolt	6		√
16	231-1045TF3	六角法兰面螺栓	Hex flange bolt	2		√
17	F2916310	后横向稳定杆安装座组件	Rear stabilizer bar seat	2		√
18	Q341C10	1型六角螺母	Hex nut	2		√

2.03 Rear suspension

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
19	Q1420820	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	4		√
20	F2914100	后横向摆臂总成 I	Rear swing arm I	2		√
21	F2914200	后横向摆臂总成 II	Rear swing arm II	2		√
22	F2914311	后轮前束调整凸轮	Rear Wheel adjust cam	2		√
23	F2914312	后轮前束调整板	Rear Wheel adjust plate	2		√
24	231-1020TF3	六角法兰面螺栓	Hex flange bolt	2		√
25	F2914410	左后悬纵向拉杆组件	Rear suspension draglink,left	1		√

2.04 Fr

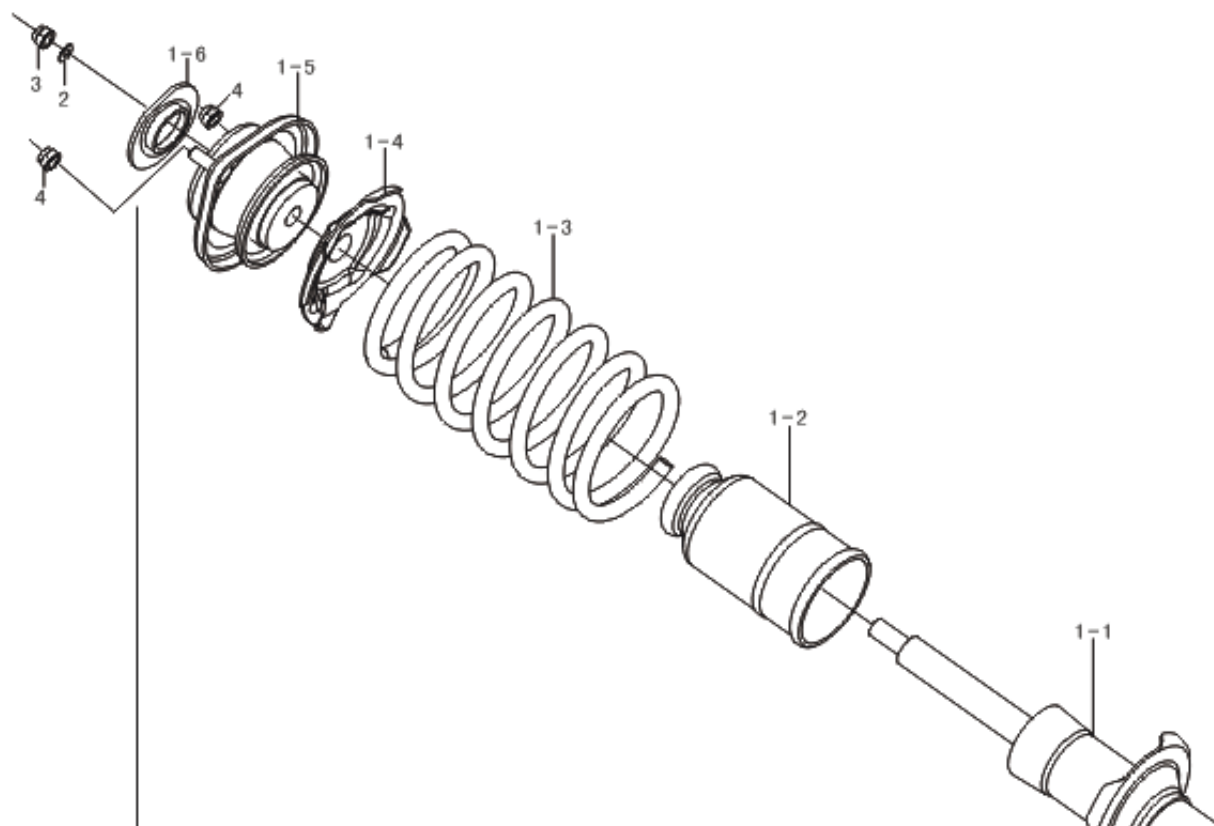


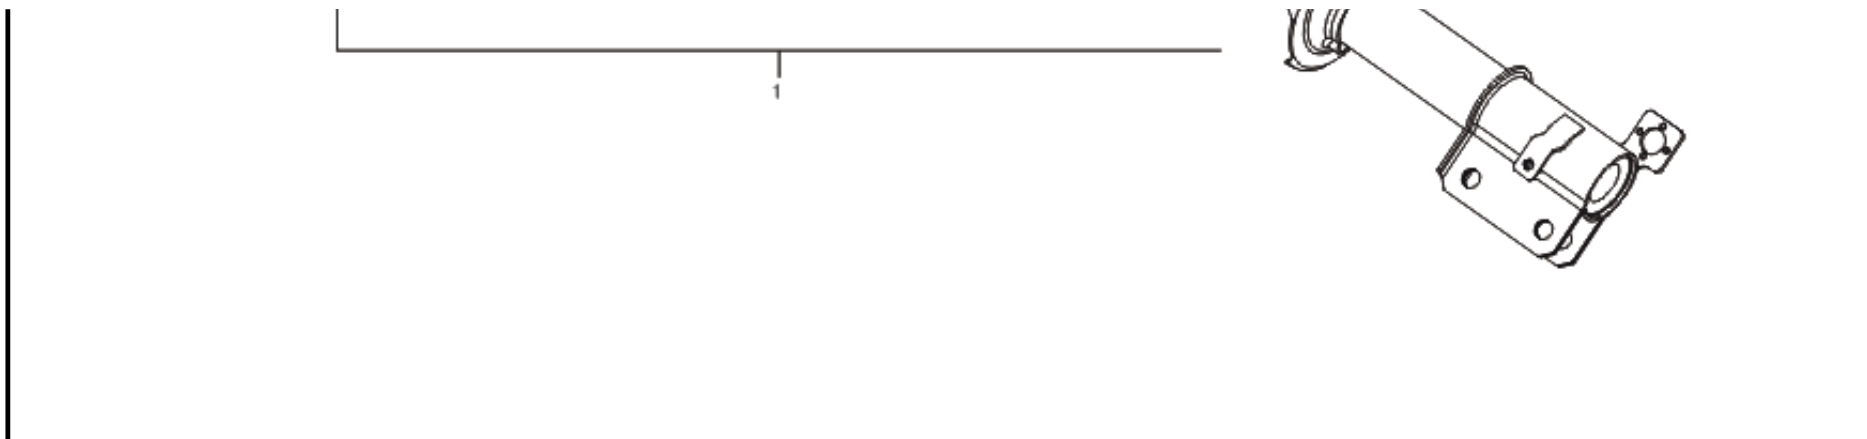

2.04 Front shock absorber

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F2905100	左前支柱总成	Front left shock absorber assy.	1		√
1	F2905600	右前支柱总成	Front right shock absorber assy.	1		√
1-1	F2905200	左前减震器总成	Front left shock absorber	1		√
1-1	F2905700	右前减震器总成	Front right shock absorber	1		√
1-2	F2905541	防尘罩	Boot	2		√
1-3	F2905511	前弹簧	Front coil spring	2		√
1-4	F2905450	前弹簧上支承座组件	Upper seat,front coil spring	2		√
1-5	F2905410	前支柱上安装支座组件	Front shock absorber seat	2		√
1-6	F2905481	防尘盖	Dust proof cap	2		√
2	507-1302	平垫圈	Flat washer	2		√
3	107-1214T13F3	非金属嵌件六角锁紧螺母	Non-metal hex lock nut	2		√
4	Q33008T13F3	全金属六角法兰面锁紧螺母	Allmetal hex flange locknut	4		√

2.05 Re

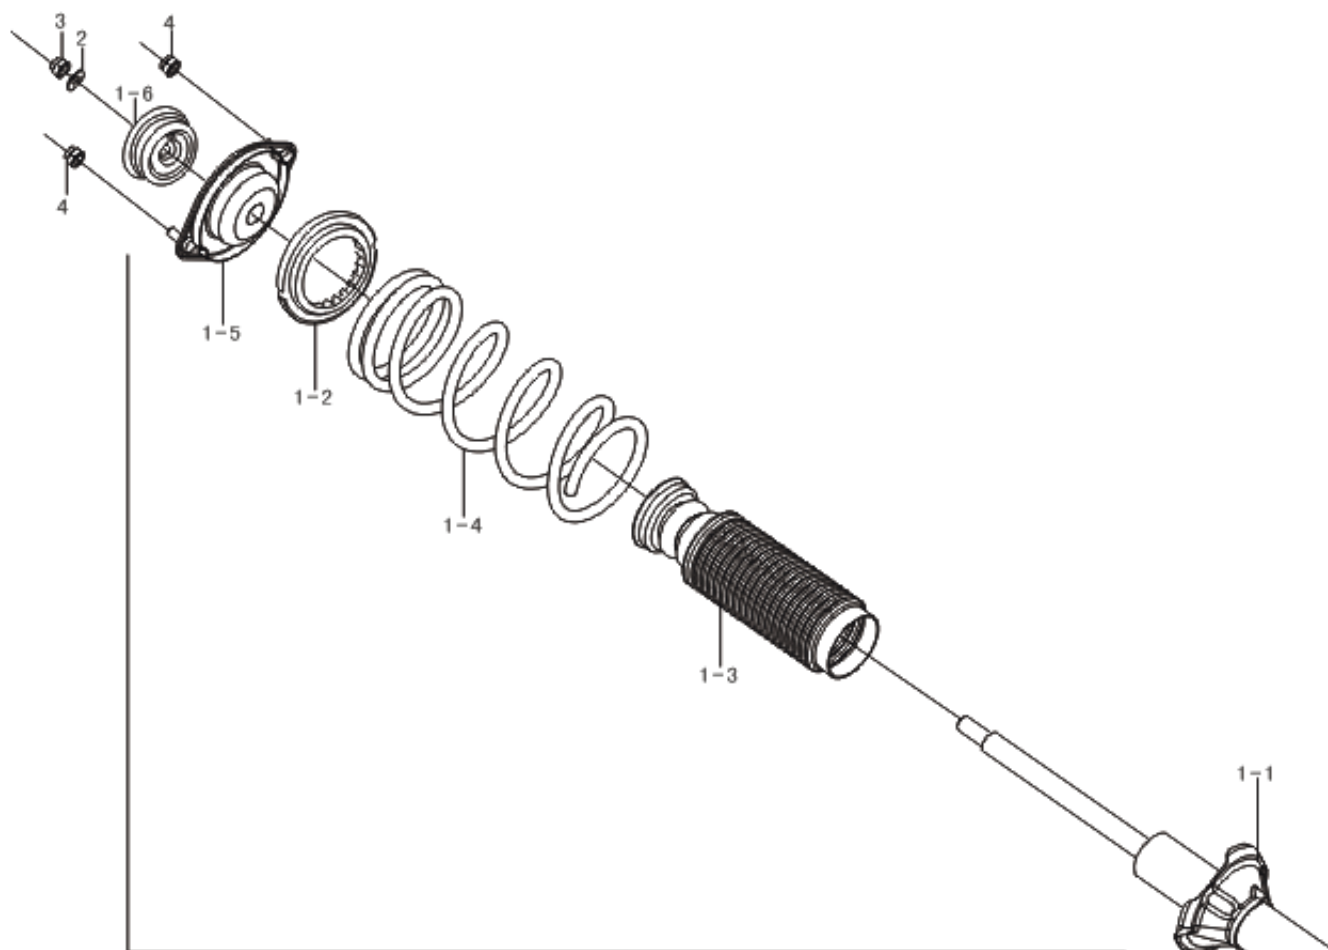





2.05 Rear shock absorber

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F2915100	左后支柱总成	Rear left shock absorber assy.	1		√
1	F2915600	右后支柱总成	Rear right shock absorber assy.	1		√
1-1	F2915200	左后减震器总成	Rear left shock absorber	1		√
1-1	F2915700	右后减震器总成	Rear right shock absorber	1		√
1-2	F2915451	后弹簧上支承座	Upper seat, rear coil spring	2		√
1-3	F2915541	防尘罩	Boot	2		√
1-4	F2915511	后弹簧	Rear coil spring	2		√
1-5	F2915410	后支柱上安装支座组件	Rear shock absorber seat	2		√
1-6	F2915481	防尘盖	Dust proof cap	2		√
2	507—1302	平垫圈	Flat washer	2		√
3	107—1214T13F3	非金属嵌件六角锁紧螺母	Non-metal hex lock nut	2		√
4	Q33008T13F3	全金属六角法兰面锁紧螺母	Allmetal hex flange locknut	4		√

2.06

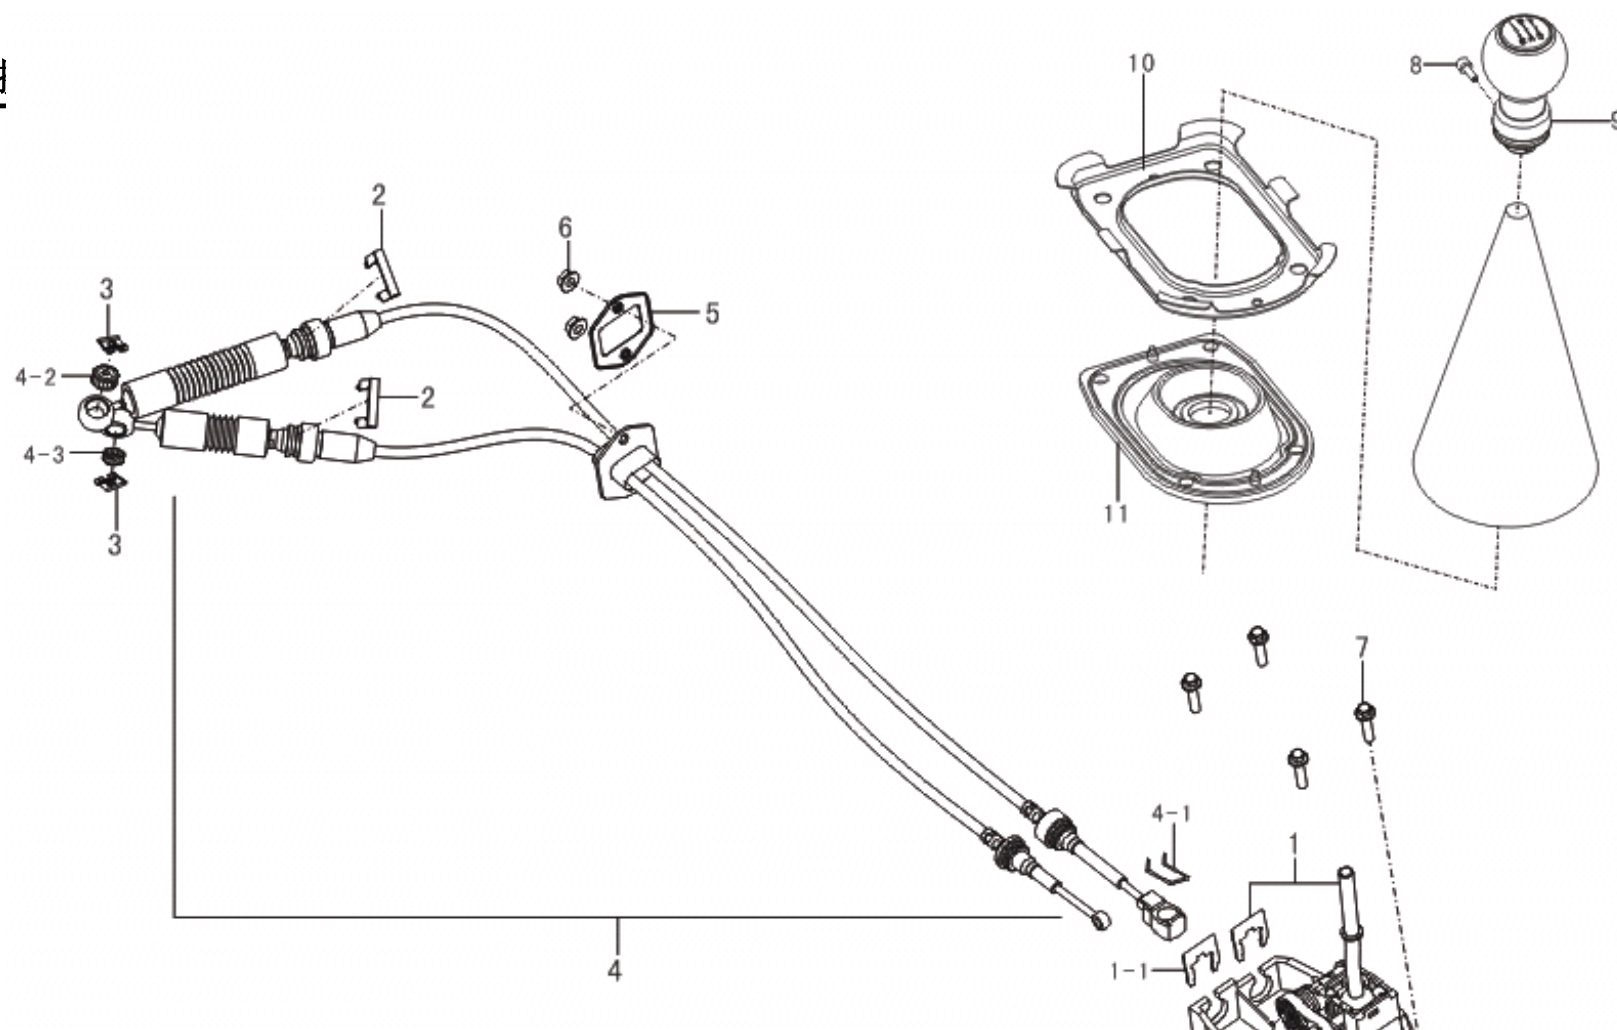


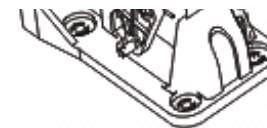

2.06 换档机构 Shift system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	SUPPLY
1	F1703100C1	换挡支座总成	Gearshift mount	1		√
1-1	L1703012	卡片	Clip	2		√
2	L1703017	E型卡	“E” Clip	2		√
3	L1703016	变速拉索接头固定卡	End clip, gear shift cable	2		√
4	F1703500C1	换、选档软轴总成	Gear shift cable	1		√
4-1	L1703216	弹性卡子	Elastic clip	1		
4-2	L1703212	大振减胶套	Damper sleeve	1		
4-3	L1703222	振减胶套	Damper sleeve	1		
5	F1703671C1	密封胶套	Seal	1		√
6	Q32006	六角法兰面螺母	Nut	2		√
7	Q1410825L	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper elastic washer	4		√
8	Q218B0412	内六角圆柱头螺钉	Inner hex screw	1		
9	F1703210B1B24	换挡手柄杆组件	Gearlever handle	1	black	√
10	F1703681	密封胶套压板	Pressure palte,rubber seal	1		√
11	F1703671	密封胶套	Rubber seal	1		√

2.07 C

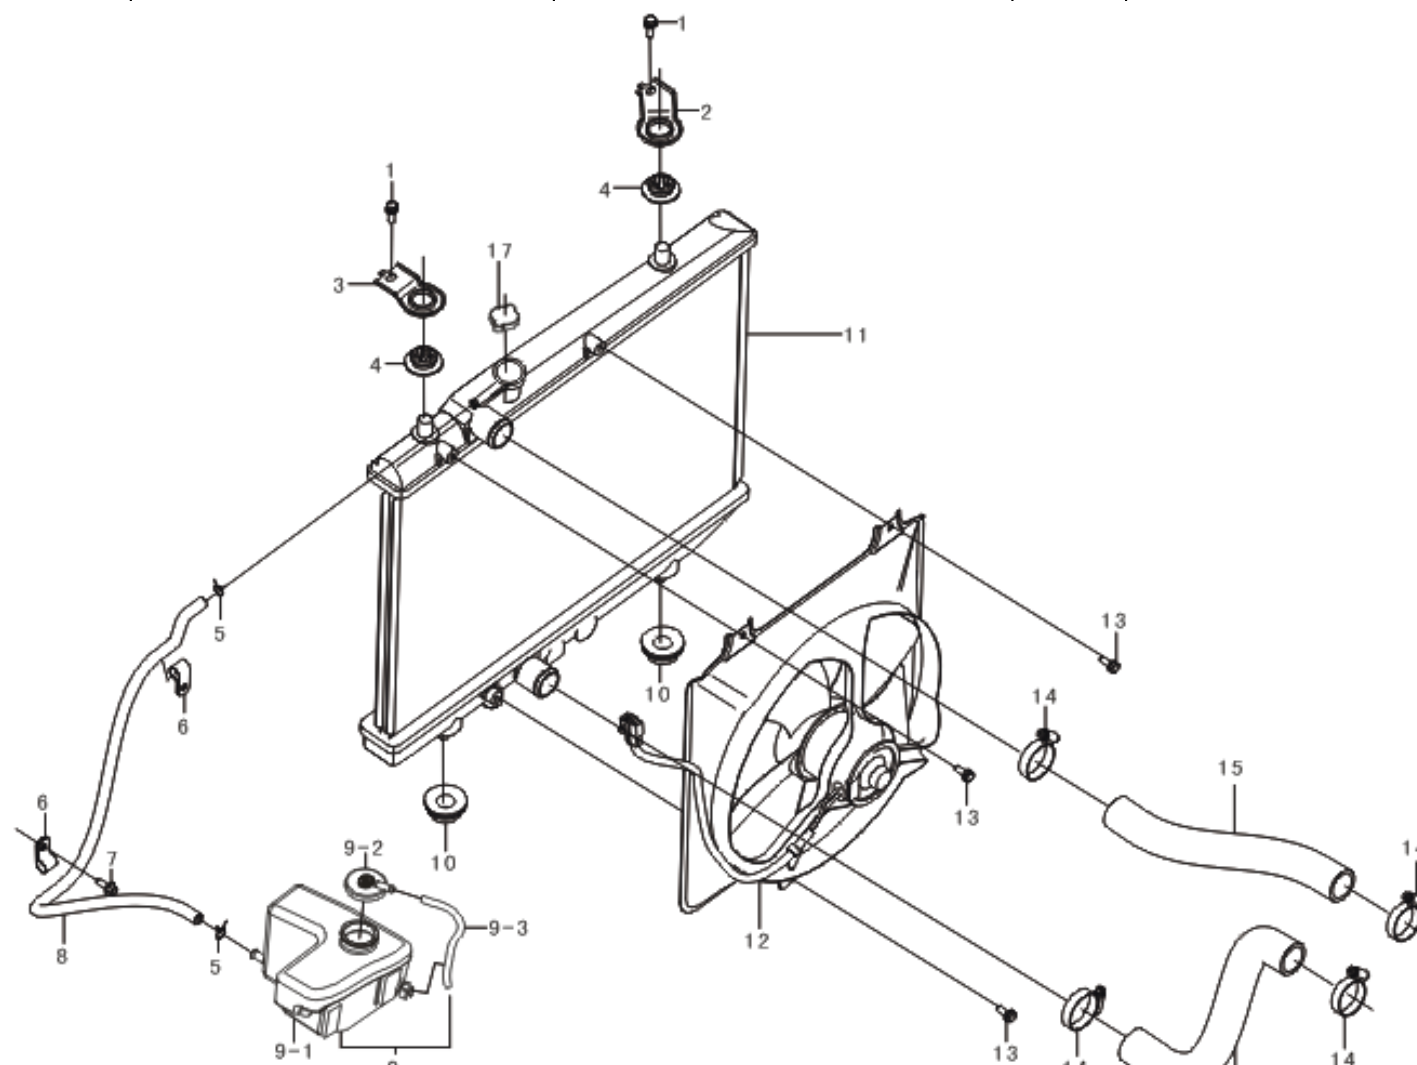


2.07 Cooling system


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1460620	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
2	F1302211	散热器右上安装支架	Radiator right upper bracket	1		√
3	F1302111	散热器左上安装支架	Radiator left upper bracket	1		√
4	F1302171	散热器上安装衬套	Radiator upper fixing sleeve	2		√
5	Q67512	A型蜗杆传动式软管环箍	Hoop	2		√
6	F1303511	水管安装支架	Pipe bracket	2		√
7	Q1840616	六角法兰面螺栓	Hex flange bolt	1	M6	√
8	F1303310	溢水管组件	Drain pipe	1		√
9	F1311100	膨胀水箱总成	Expansion tank assy	1		√
9-1	F1311110	膨胀水箱组件	Expansion tank body	1		
9-2	F1311170	膨胀水箱盖组件	Expansion tank cap	1		
9-3	F1311181	通气管	Vent hose	1		
10	F1302371	散热器下安装衬套	Radiator lower fixing sleeve	2		√
11	F1301000B1	散热器	Radiator	1		√
12	F1308100C1	电子风扇带护风罩总成	Cooling fan assy.	1		
13	Q1410616	六角头螺栓和平垫组合件	Hex bolt,taper springness washer and flat washer	3		√

--	--	--	--	--	--	--

2.08 Steering system

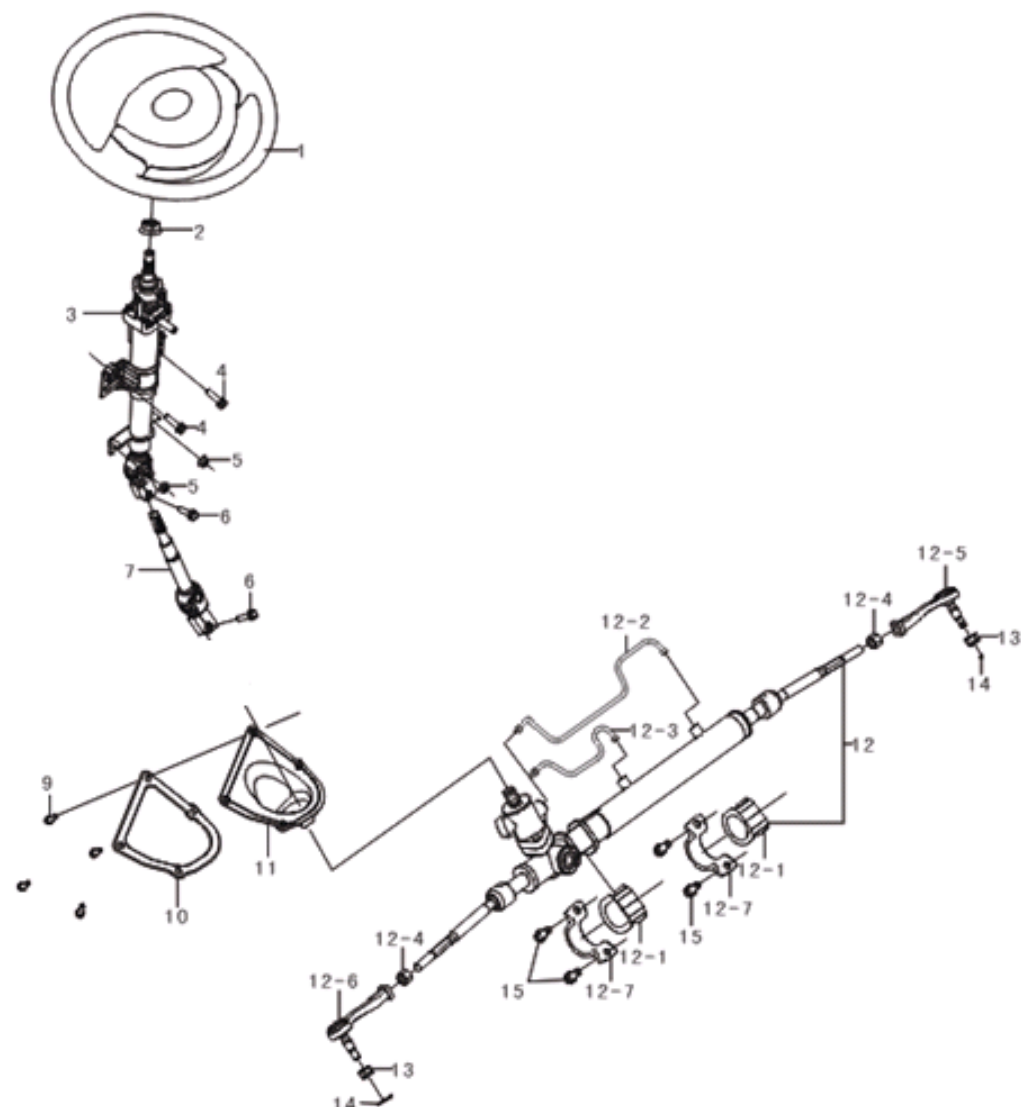

This diagram shows an exploded view of a mechanical assembly. At the top, a circular component with concentric rings is shown. Below it is a vertical assembly of various parts, including a long shaft and several smaller components. A callout '7' points to a specific part of this vertical assembly. To the right, a long, angled shaft is shown with several callouts: '12' points to the main shaft, '12-1' points to a specific section of the shaft, and '16' points to a small component at the end of the shaft. Below the angled shaft, there are two triangular components, one of which is shown in a disassembled state with callouts '1' and '2' pointing to its parts.

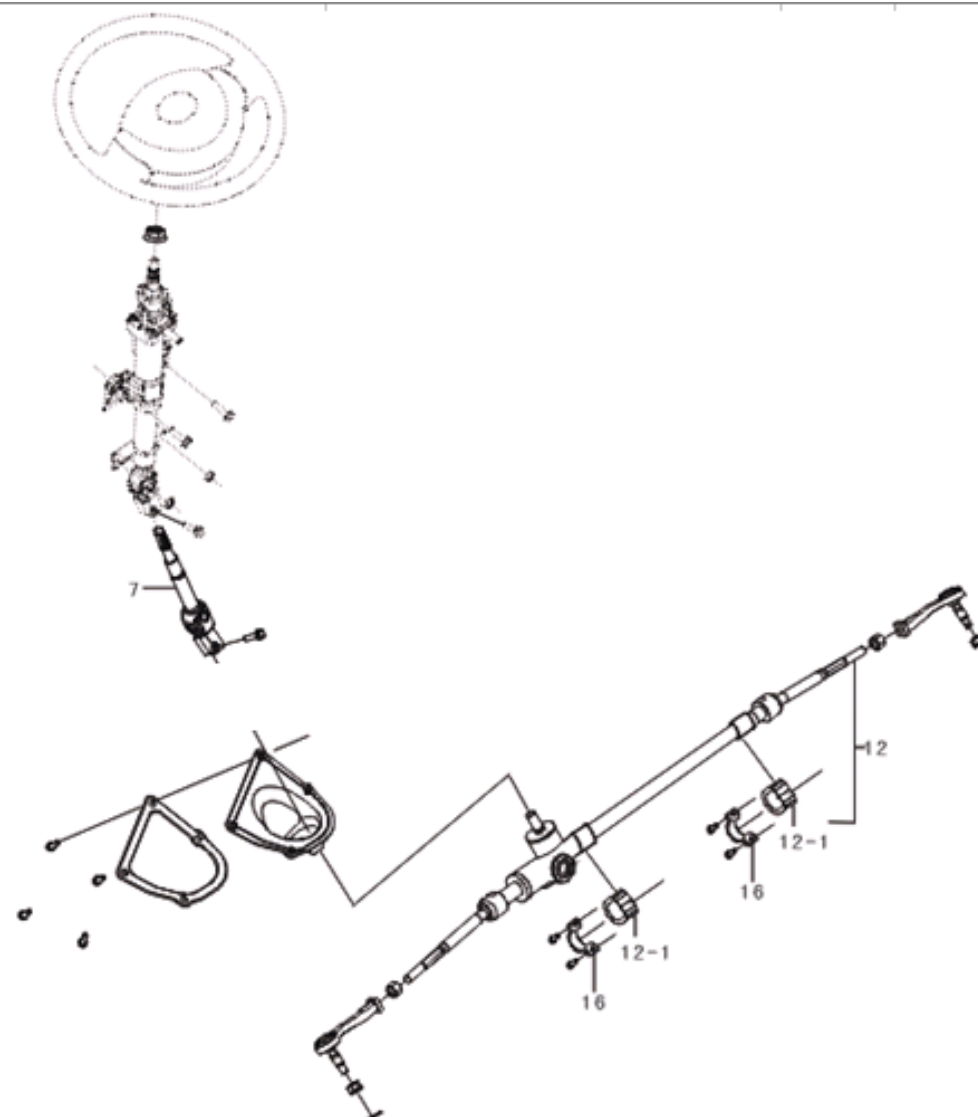


2.08 Steering system


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3402100B24	方向盘总成	Steering wheel	1	optical airbag	√
1	F3402100B1B24	方向盘总成	Steering wheel	1		√
2	101—1414T13F3	六角法兰面螺母	Hex flange nut	1		√
3	F3404100	上转向轴总成	Upper steering shaft assy.	1	Hydraulic	√
3	F3404100B1	上转向轴总成	Upper steering shaft assy.	1	Mechanical	√
4	Q1410830	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	2		√
5	Q32008	六角法兰面螺母	Hex flange nut	2		√
6	Q1410830	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	2		√
7	F3404400	下转向轴总成	Lower steering shaft assy.	1	Hydraulic	√
7	F3404400B1	下转向轴总成	Lower steering shaft assy.	1	Mechanical	√
9	Q1460620	六角头螺栓和弹簧垫圈平垫圈组合件	Hex bolt and washers	4		√
10	F3404741	防尘套安装支架	Dustproof bracket	1		√
11	F3404731	转向管柱防尘罩II	Steering shaft dustproof II	1		√
12	F3401100	转向器总成	Steering gear assy.	1	Hydraulic	√
12	F3401100B1	转向器总成	Steering gear assy.	1	Mechanical	√
12-1	F3401871	转向器缓冲套	Steering gear sleeve	2	Hydraulic	√
12-1	F3401871B1	转向器缓冲套	Steering gear sleeve	2	Mechanical	
12-2	F3401520	右油管组件	Right oil pipe	1	Hydraulic	√

2.08 Steering system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
12-3	F3401510	左油管组件	Left oil pipe	1	Hydraulic	√
12-4	115-1210	六角螺母	Hex nut	2		
12-5	F3401730	右球头销组件	Right ball joint	1		√
12-6	F3401630	左球头销组件	Left ball joint	1		√
12-7	F3401851	转向器固定块	Steering gear fix plate	2	Hydraulic	√
12-7	F3401851B1	转向器固定块	Steering gear fix plate	2	Mechanical	
13	Q387C10	六角开槽薄螺母	Hex nut	2		√
14	Q5002520	开口销	Cotter pin	2		√
15	204-1035TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	4		

2.09 Steering system pipeline



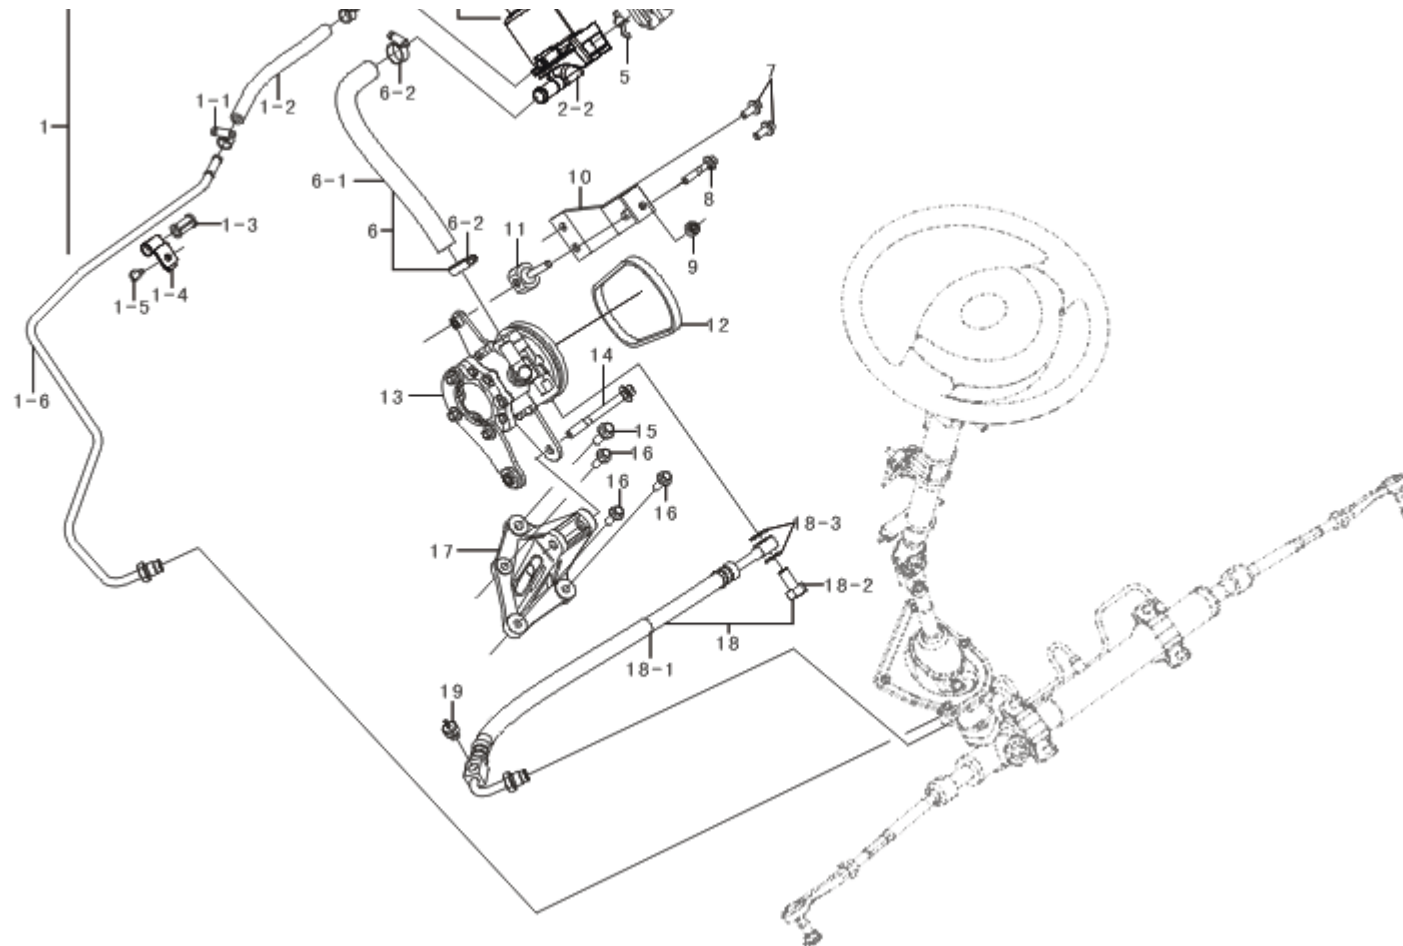

2.09 Steering system pipeline

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3406300	转向器回油管总成	Steering reflux pipe assy.	1		√



1-1	Q67516	A型蜗杆传动式软管环箍	Hoop	2		√
1-2	F3406321	转向器回油管 II	Steering reflux pipe component II	1		
1-3	F3506771	油管护套	Pipe sleeve	1		
1-4	F3506711	油管固定卡	Pipe clamp	1		
1-5	Q1410616	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	1		√
1-6	F3406310	转向器回油管组件 I	Steering reflux pipe component I	1		
2	F3408100	动力转向油壶总成	Power steering reservior assy.	1		√
2-1	F3408170	转向油壶盖组件	Oil reservoir cap of steering power pump	1		
2-2	F3408110	转向油壶体组件	Oil reservoir of steering power pump	1		
3	Q1410616	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	2		√
4	F3408211	动力转向油壶支架	Power steering reservior bracket	1		√
5	F3408212	动力转向油壶卡片	Power steering reservior clip	1		√
6	F3406100	转向油泵进油管总成	Steering pump intake pipe assy.	1		√
6-1	F3406111	转向油泵进油管	Steering pump intake pipe	1		
6-2	Q67529	A型蜗杆传动式软管环箍	Hoop	2		
7	Q1840820	六角法兰面螺栓	Hex flange bolt	2	M8	√
8	Q1840845	六角法兰面螺栓	Hex flange bolt	1		√


2.09 Steering system pipeline

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
9	Q32008	六角法兰面螺母	Hex flange nut	1		√
10	F3407611	转向油泵支架I	Steering pump bracket I	1		√

11	F3407671	转向油泵支架连接螺栓	Bolt,Steering pump bracket	1		√
12	F3407810	转向油泵皮带	Belt,Steering pump bracket	1		√
13	F3407100	动力转向油泵总成	Power steering pump	1		√
14	231-1090TF3	六角法兰面螺栓	Hex flange bolt	1		√
15	231-1025TF3	六角法兰面螺栓	Hex flange bolt	1		√
16	Q1840820	六角法兰面螺栓	Hex flange bolt	3	M8	√
17	F3407631	转向油泵支架II	Steering pump bracket II	1		√
18	F3406200	转向器进油管总成	Steering intake pipe assy.	1		√
18-1	F3406210	转向器进油管组件	Steering intake pipe	1		
18-2	221—1630	轴向径向螺栓	Bolt	1		
18-3	507—1602	平垫圈	Flat washer	2		
19	L3612340	动力转向开关	Power steering switch	1		√

2.10 Air filter

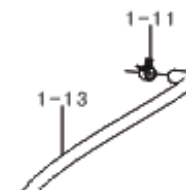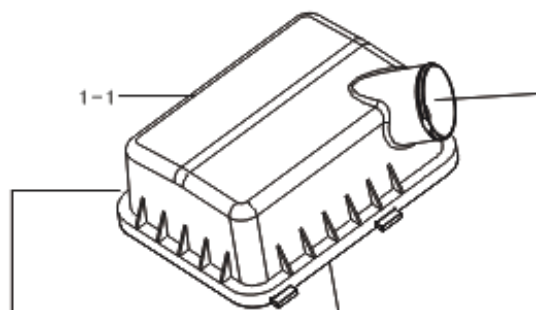

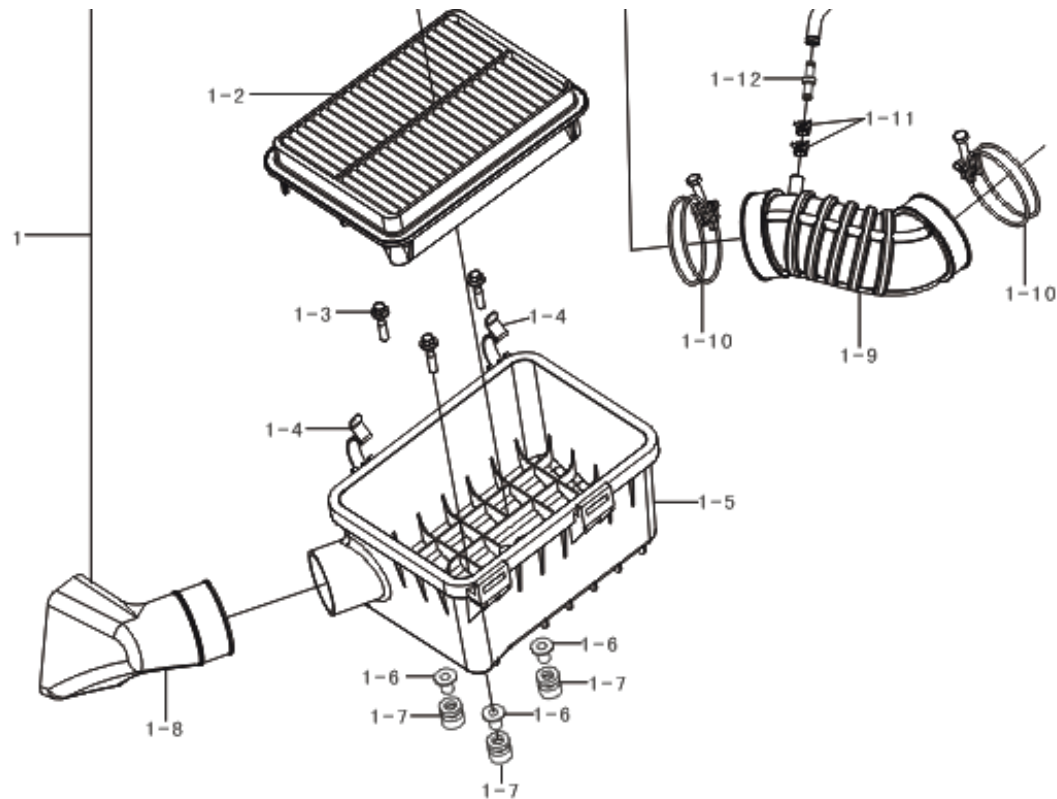


2.10 Air filter


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F1109000B1	空气滤清器	Air filter	1		√
1-1	F1109111	空滤器上盖	Upper shell,air filter	1		
1-2	F1109160	空滤器滤芯组件	Air filter element	1		√
1-3	Q1840630	六角法兰面螺栓	Hex flange bolt	3		√

1-4	F1109241	弹簧卡夹	Spring clamp	2		
1-5	F1109121	空滤器下盖	Lower shell,air filter	1		
1-6	F1109231	衬管	Sleeve,air filter	3		
1-7	F1109221	减震垫	Damper,air filter	3		
1-8	F1109311	空滤器进气管	Inlet pipe,air filter	1		
1-9	F1109611B1	发动机进气管	Engine suction pipe	1		
1-10	F1109620	发动机进气管环箍	Hoop,Engine section pipe	2		
1-11	Q673B95	钢带弹性环箍	Hoop	3		
1-12	F1109711	连接管	Connect pipe	1		
1-13	F1109671	曲轴箱通风管	Crankcase vent hose	1		

2.11 E

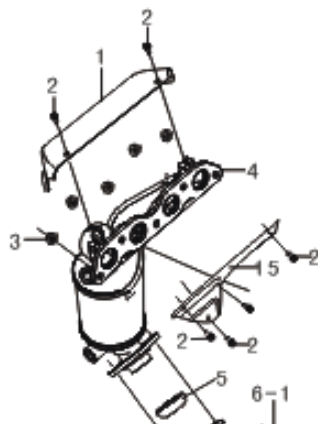

1

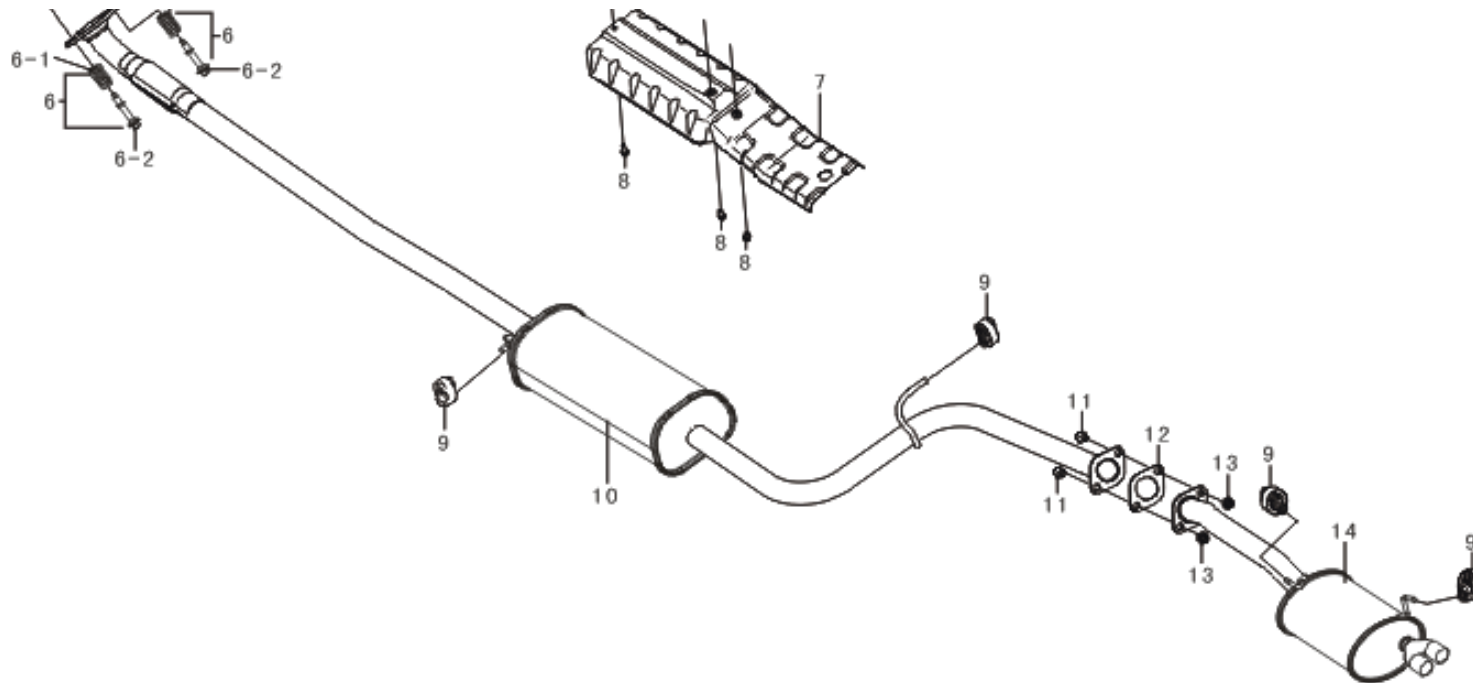



2.11 Exhaust system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	LF479Q3-1008011A	排气歧管上隔热罩	Exhaust manifold heat Insulator,upper	1		
2	Q1860612	上下隔热罩螺栓	Heat Insulator bolt	6		√
3	Q32010	排气歧管锁紧螺母	Exhaust manifold lock nut	5		√
4	LF479Q3-1008100A1	排气歧管带催化器总成	Exhaust manifold with catalyst assy.	1		√
5	F1200250	密封垫组件	Gasket	1		√
6	F1200310	压簧带螺栓组件	Bolt with pressure spring	2		√

6-1	F1200312	压簧	Pressure spring	2		
6-2	F1200311	压簧螺栓	Bolt	2		
7	F1208211	中隔热板	Middle heat Insulator	1		√
8	Q1410616	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	3		√
9	F1200011	消声器悬置块	Muffler rubber suspension	4		√
10	F1201100	前消声器总成	Front muffler	1		√
11	204-1035TF3	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	2		
12	L1200017	小密封垫	Gasket	1		√
13	101B-1010T13F3	六角法兰面螺母	Hex flange nut	2		√
14	F1201600	后消声器总成	Rear muffler	1		√
15	LF479Q3-1008012A	排气歧管下隔热罩	Exhaust manifold heat Insulator,Lower	1		√

2.12 Fuel

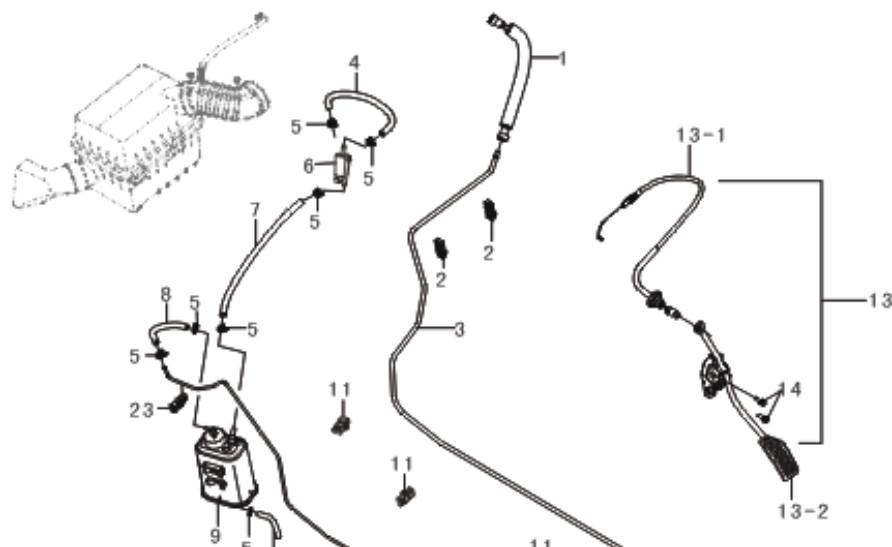

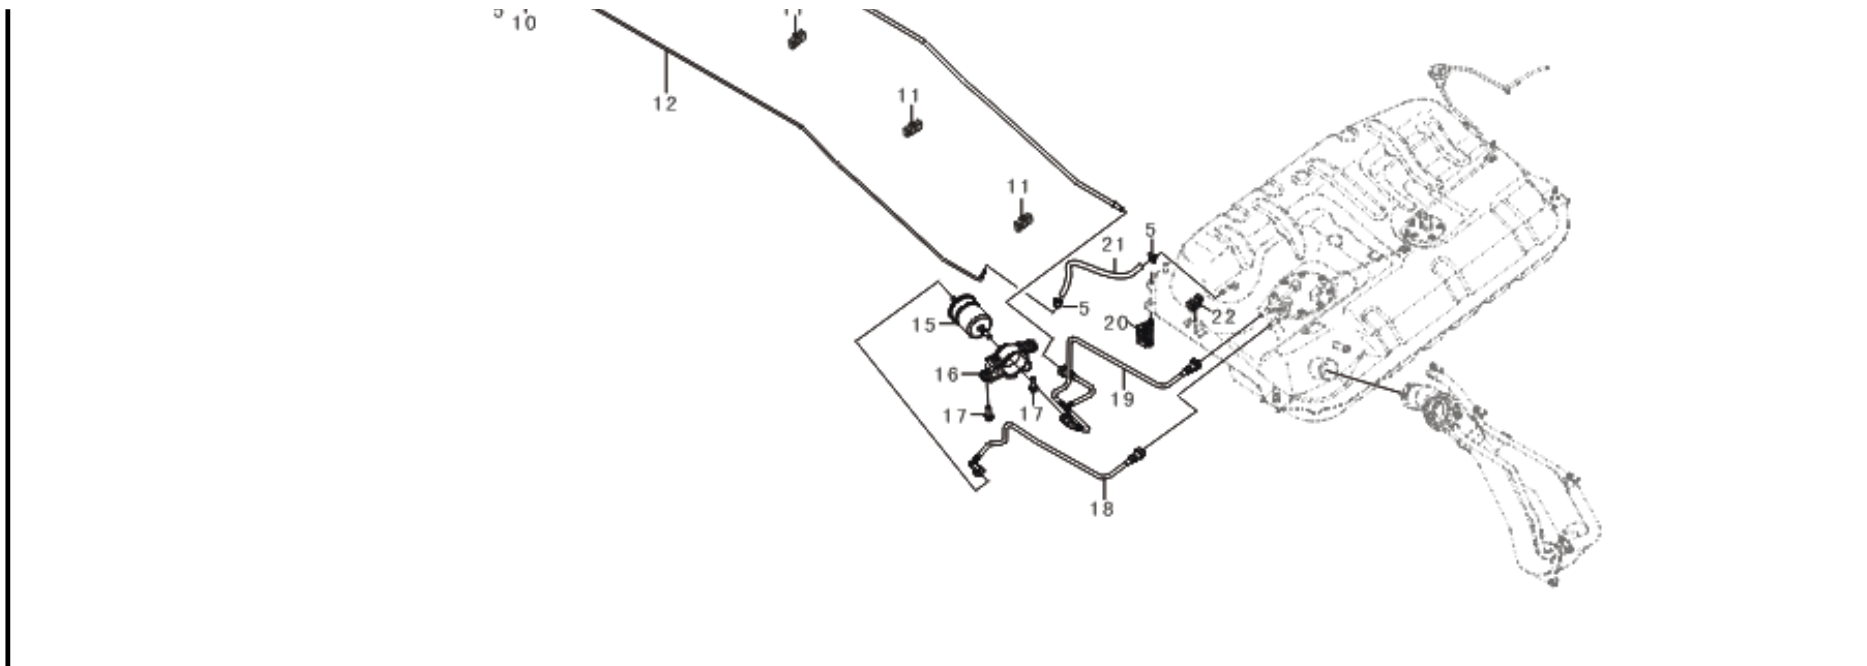

2.12 Fuel supply


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F1104330	发动机进油管组件III	Engine fuel inlet pipe III	1		√
2	903D-1250	三管夹D	Clamp D	2	for 3 tube	
3	F1104320	发动机进油管组件 II	Engine fuel inlet pipe II	1		√
4	LBA1130109	燃油蒸汽控制阀/节气门连接软管	Hose connecting fuel valve and throttle	1		
5	Q67512	A型蜗杆传动式软管环箍	Hoop	7		√
6	LBA1130310B1	碳罐电磁阀	Canister Control Valve	1		√
7	F1130141	燃油蒸发连接管IV	Fuel evaporating pipe IV	1		√
8	F1130131	燃油蒸发连接管III	Fuel evaporating pipe III	1		√


9	F1130200	碳罐总成	Can Canister	1		√
10	F1130271	碳罐通气管	Hose of Can Canister	1		√
11	902B-1708	两管夹B	Clamp B	5	for 2 tube	√
12	F1130121	燃油蒸发连接管 II	Fuel evaporating pipe II	1		√
13	F1108000	油门操纵机构	Throttle controller	1		
13-1	F1108500	油门拉索总成	Throttle cable assy.	1		√
13-2	F1108100	踏板及绞座总成	Throttle pedal assy.	1		√
14	Q1460620	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
15	F1117100	燃油滤清器总成	Fuel filter assy.	1		√
16	F1117410	滤清器支架组件	Fuel filter bracket	1		√

2.12 Fuel supply

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
17	Q1840820	六角法兰面螺栓	Hex flange bolt	2	M8	√
18	F1104110	油箱出油管组件	Fuel tank outtake pipe	1	before 17th Oct 2009	√
18	F1104110B1	油箱出油管组件	Fuel tank outtake pipe	1	after 17th Oct 2009	√
19	F1104210	滤清器出油管组件	Fuel filter outtake pipe	1	before 17th Oct 2009	√
19	F1104210B1	滤清器出油管组件	Fuel filter outtake pipe	1	after 17th Oct 2009	√
20	903C-1811	三管夹C	Clamp C	1	for 3 tube	√
21	F1130111	燃油蒸发连接管 I	Fuel evaporating pipe I	1		√
22	L1104012	硬管管夹	Tube clamp	1		√
23	903E-288	三管夹E	Clamp E	1	for 3 tube	√

2.13 Brake

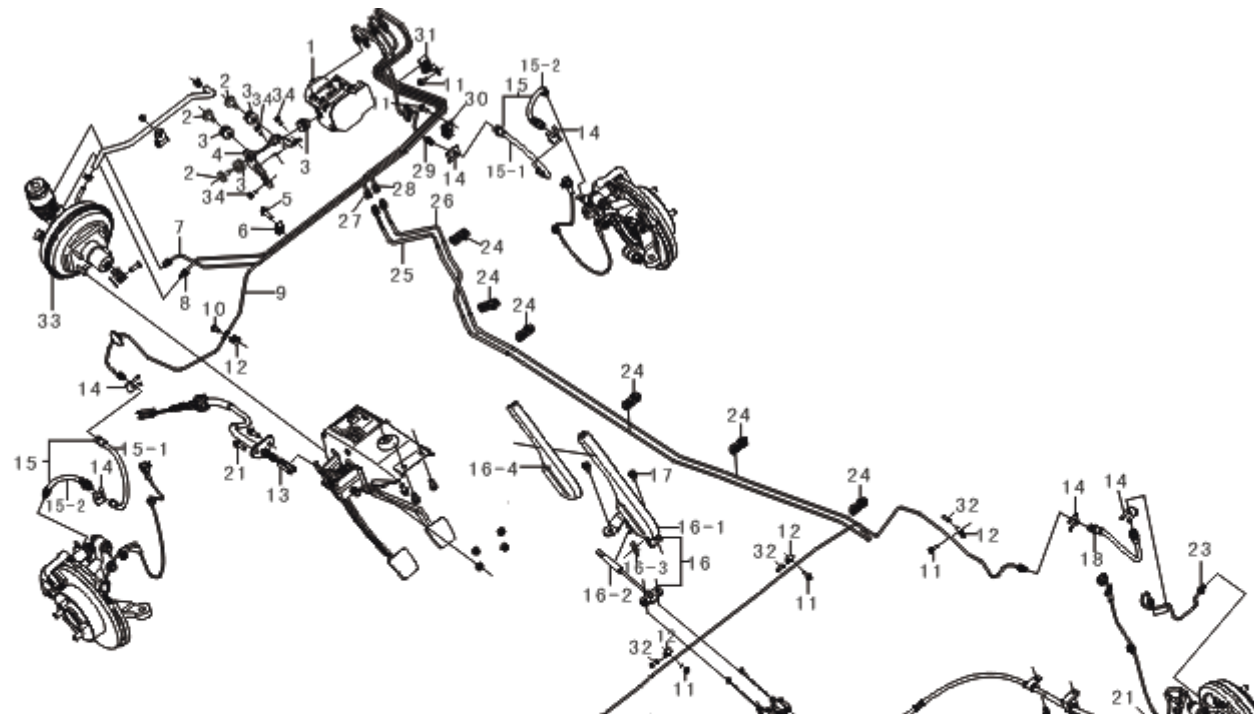

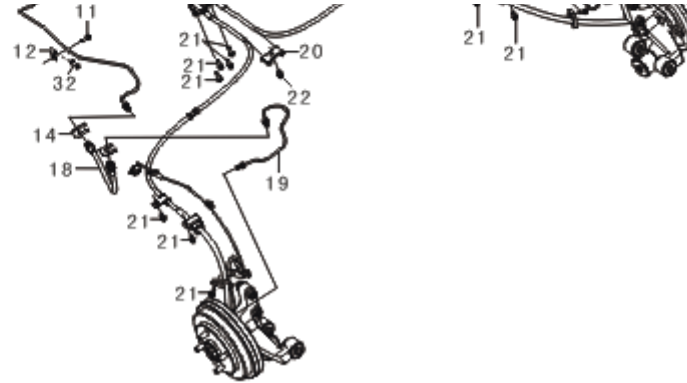

2.13 Brake system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3550100	ABS机构总成	ABS HECU	1		√
1	F3550100F1	机械式ABS	MABS	1		√
2	F3550831	ABS机构安装螺栓	Bolt,ABS HECU	3		√
3	F3550811	ABS机构安装衬垫	Gasket,ABS HECU	3		√
4	F3550711	ABS支架	Bracket,ABS HECU	1		√
5	Q1840625	六角法兰面螺栓	Hex flange bolt	1		√
6	903E-288	三管夹E	Clamp E	1	for 3 tube	√
7	F3506110	制动总泵主出油管	Master oil outtake pipe,brake pump	1		√
7	F3506110F1	制动总泵主出油管	Master oil outtake pipe,brake pump	1	MABS	√
8	F3506160	制动总泵次出油管	Sub oil outtake pipe,brake pump	1		√
8	F3506160F1	制动总泵次出油管	Sub oil outtake pipe,brake pump	1	MABS	√

9	F3506210	左前制动管 I	Front left brake tube I	1		√
9	F3506210F1	左前制动管 I	Front left brake tube I	1	MABS	
10	Q1840616	六角法兰面螺栓	Hex flange bolt	1	M6	√
11	Q1840616	六角法兰面螺栓	Hex flange bolt	6	M6	√
12	Q68606F4	单管夹片	Clamp	5	for 1 tube	√
13	F1602500A2	离合拉索总成	Clutch cable	1		√
14	L3506106	E型卡片	E shape clip	8		√

2.13 Brake system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
15	F3506240	左前制动管 II	Front left brake tube II	2		√
15-1	F3506250	左前制动管 II 前段组件	Front left brake tube II,fore part	2		
15-2	F3506260	左前制动管 II 后段组件	Front left brake tube II,rear part	2		
16	F3508300B15	驻车制动操纵杆总成	Parking brake lever assy.	1	Pale grey	√
16-1	F3508310	驻车制动操纵杆组件	Parking brake lever	1		
16-2	F3508380	手制动拉索调节座组件	Parking brake cable adjustor seat	1		
16-3	F3508390	手制动拉索调节螺母组件	Parking brake cable adjustor nut	1		
16-4	F3508371	手制动操纵杆套	Parking brake lever sleeve	1		
17	Q1840816	六角法兰面螺栓	Hex flange bolt	2		√
18	F3506470	左后制动管 III	Rear left brake tube III	2		√
19	F3506510	左后制动管 IV	Rear left brake tube IV	1		√
20	F3508811	驻车制动拉索固定扣	Parking brake cable clamp	1		√


21	Q1460620	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	12		√
22	Q1840616	六角法兰面螺栓	Hex bolt,taper springness washer and flat washer	1		√
23	F3506710	右后制动管Ⅳ	Rear right brake tube Ⅳ	1		√
24	903D-1250	三管夹D	Clamp D	6	for 3 tube	
25	F3506640	右后制动管Ⅱ	Rear right brake tube Ⅱ	1		√
25	F3506640F1	右后制动管Ⅱ	Rear right brake tube Ⅱ	1	MABS	


2.13 Brake system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
26	F3506440	左后制动管Ⅱ	Rear left brake tube Ⅱ	1		√
26	F3506440F1	左后制动管Ⅱ	Rear left brake tube Ⅱ	1	MABS	
27	F3506610	右后制动管Ⅰ	Rear right brake tube Ⅰ	1		√
27	F3506610F1	右后制动管Ⅰ	Rear right brake tube Ⅰ	1	MABS	
28	F3506410	左后制动管Ⅰ	Rear left brake tube Ⅰ	1		√
28	F3506410F1	左后制动管Ⅰ	Rear left brake tube Ⅰ	1	MABS	
29	F3506310	右前制动管Ⅰ	Front right brake tube Ⅰ	1		√
29	F3506310F1	右前制动管Ⅰ	Front right brake tube Ⅰ	1	MABS	
30	B3506320	六管夹组件	Clamp	1	for 6 tubes	√
31	906B-1926	六管夹组件B	Clamp B	1	for 6 tubes	√
33	F3540000	真空助力器带制动泵总成	Vacuum booster with pump assy.	1	for ABS	√
34	Q1410616	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and taper springness washer	3		√
	F3550710F1	ABS支架组件Ⅰ	MABS bracket component 1	1	MABS	√

	F3550730F1	ABS支架组件 II	MABS bracket component 2	1	MABS	√
	F3550751F1	ABS支架	MABS bracket	1	MABS	√
	F3550811F1	ABS机构安装衬垫	MABS washer	1	MABS	√

2.14 Brake system(non-ABS)

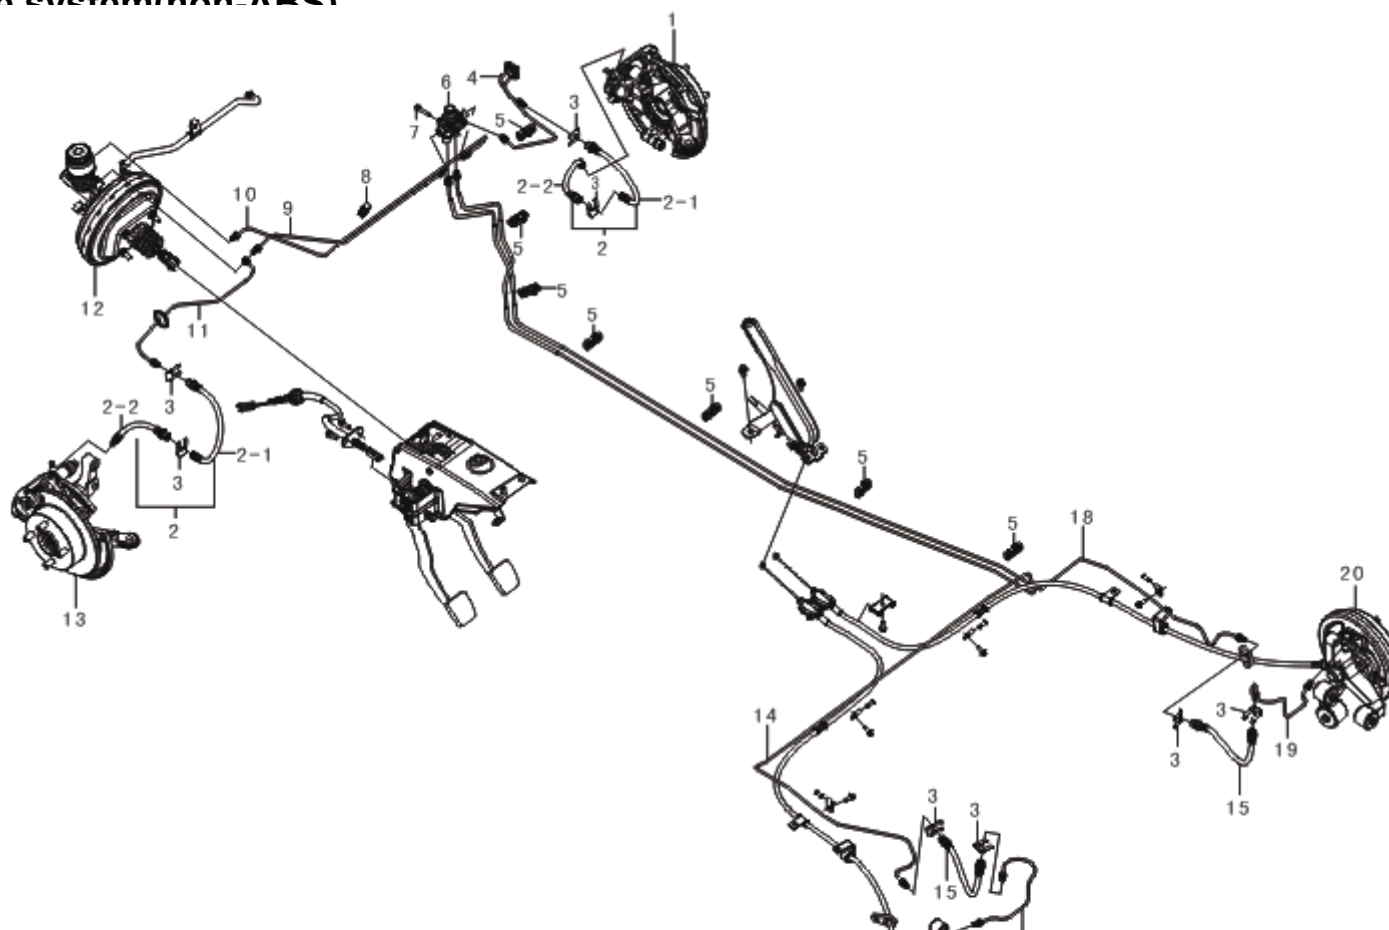


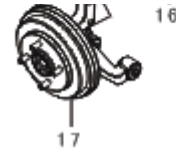

2.14 Brake system(non-ABS)

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3501100E1	左前制动器总成	Front left brake assy.	1		√
2	F3506240	左前制动管 II	Front left brake tube II	2	the same as ABS	√
2-1	F3506250	左前制动管 II 前段组件	Front left brake tube II,fore part	2		
2-2	F3506260	左前制动管 II 后段组件	Front left brake tube II,rear part	2		
3	L3506106	E型卡片	E shape clip	8		√
4	F3506310E1	右前制动管 I	Front right brake tube I	1		√
5	903D-1250	三管夹D	Clamp D	9	for 3 tube	
6	F3525100	比例阀总成	Proportional Valve	1	before 2009.6.19	√
6	F3525100F1	比例阀总成	Proportional Valve	1	after 2009.6.19	√
7	Q1400635	六角头螺栓和平垫组合件	Hex bolt,taper springness washer and flat washer	1		√
8	903E-288	三管夹E	Clamp E	1	for 3 tube	√
9	F3506160E1	制动总泵次出油管	Sub oil outtake pipe,brake pump	1		√
10	F3506110E1	制动总泵主出油管	Master oil outtake pipe,brake pump	1		√
11	F3506210E1	左前制动管 I	Front left brake tube I	1		√
11	F3506210F1	左前制动管 I	Front left brake tube I	1	MABS	

2.15 Brake device

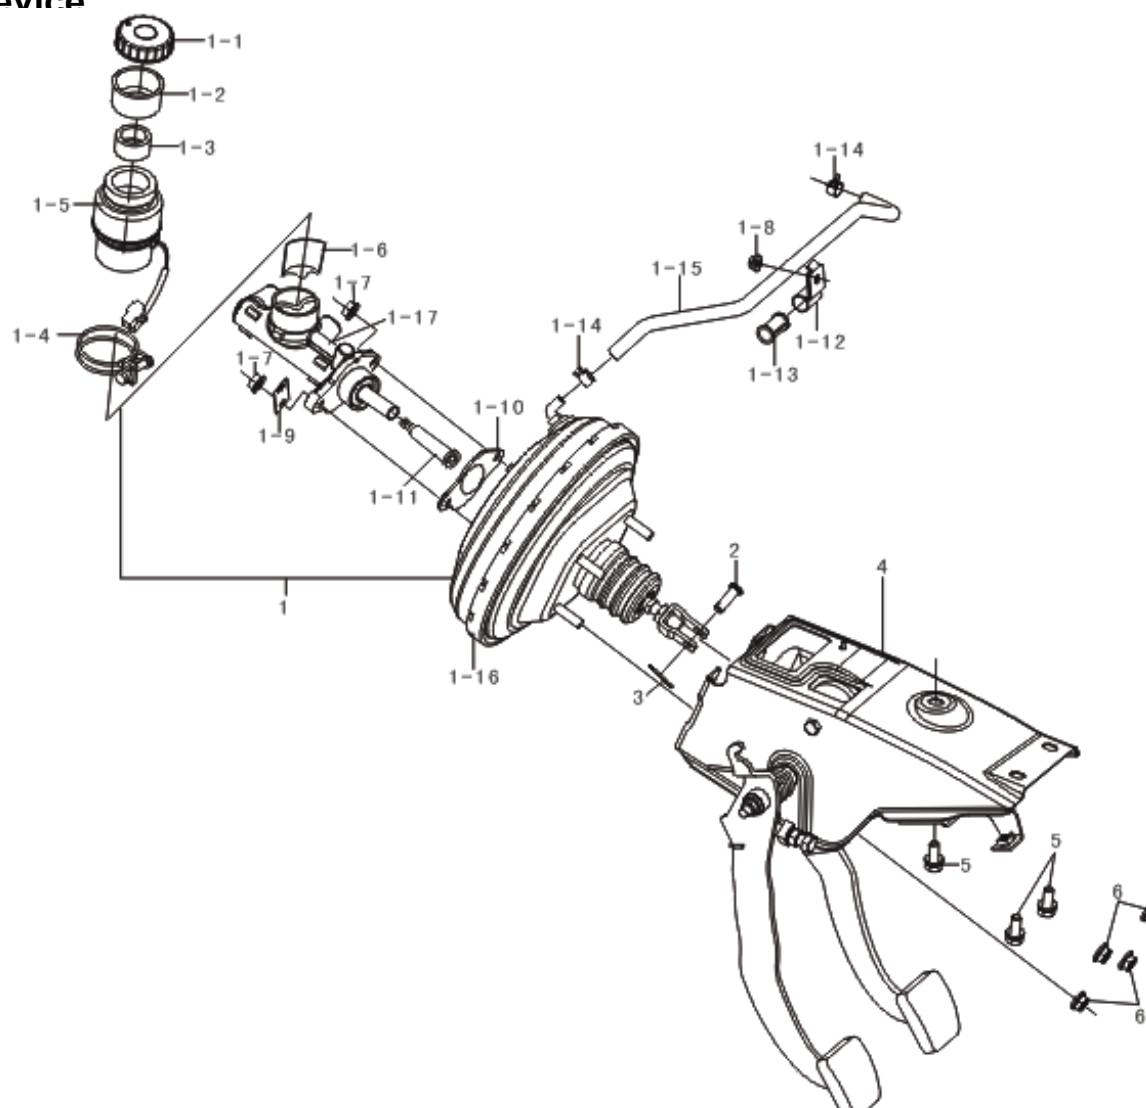


2.15 Brake device

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3540000C1	真空助力器带制动泵总成	Vacuum booster with pump assy.	1	ABS	√
1-1	F3540751	制动油壶锁紧盖	Brake fluid pot cap	1		
1-2	F3540760	制动油壶滤网组件	Brake fluid pot filter	1		
1-3	F3540770	制动油壶浮子组件	Brake fluid pot float	1		
1-4	702—55	双钢丝弹性环箍	Circlip	1		
1-5	F3540710C1	制动油壶本体组件	Brake fluid pot	1		
1-6	F3540151	挡板	Baffle	1		
1-7	Q32008	六角法兰面螺母	Hex flange nut	2		√
1-8	Q32006	六角法兰面螺母	Hex flange nut	1		√
1-9	F3540981	制动油位传感器支架	Bracket,brake fluid oil level sensor	1		
1-10	F3540841	密封垫	Gasket	1		
1-11	F3540332	顶杆	Pushing rod	1		
1-12	F3540971	助力真空管固定卡	Vacuum hose clip	1		
1-13	F3540991	助力真空管护套	Vacuum hose sleeve	1		
1-14	Q673B17	钢带型弹性环箍	Hoop	2		
1-15	F3540931	助力真空管	Vacuum hose	1		√
1-16	F3540400	真空助力器总成	Vacuum booster assy.	1	ABS	
1-16	F3540400E1	真空助力器总成	Vacuum booster assy.	1	Non-ABS	


2.15 Brake device

[illegible]

2.16 Front brake

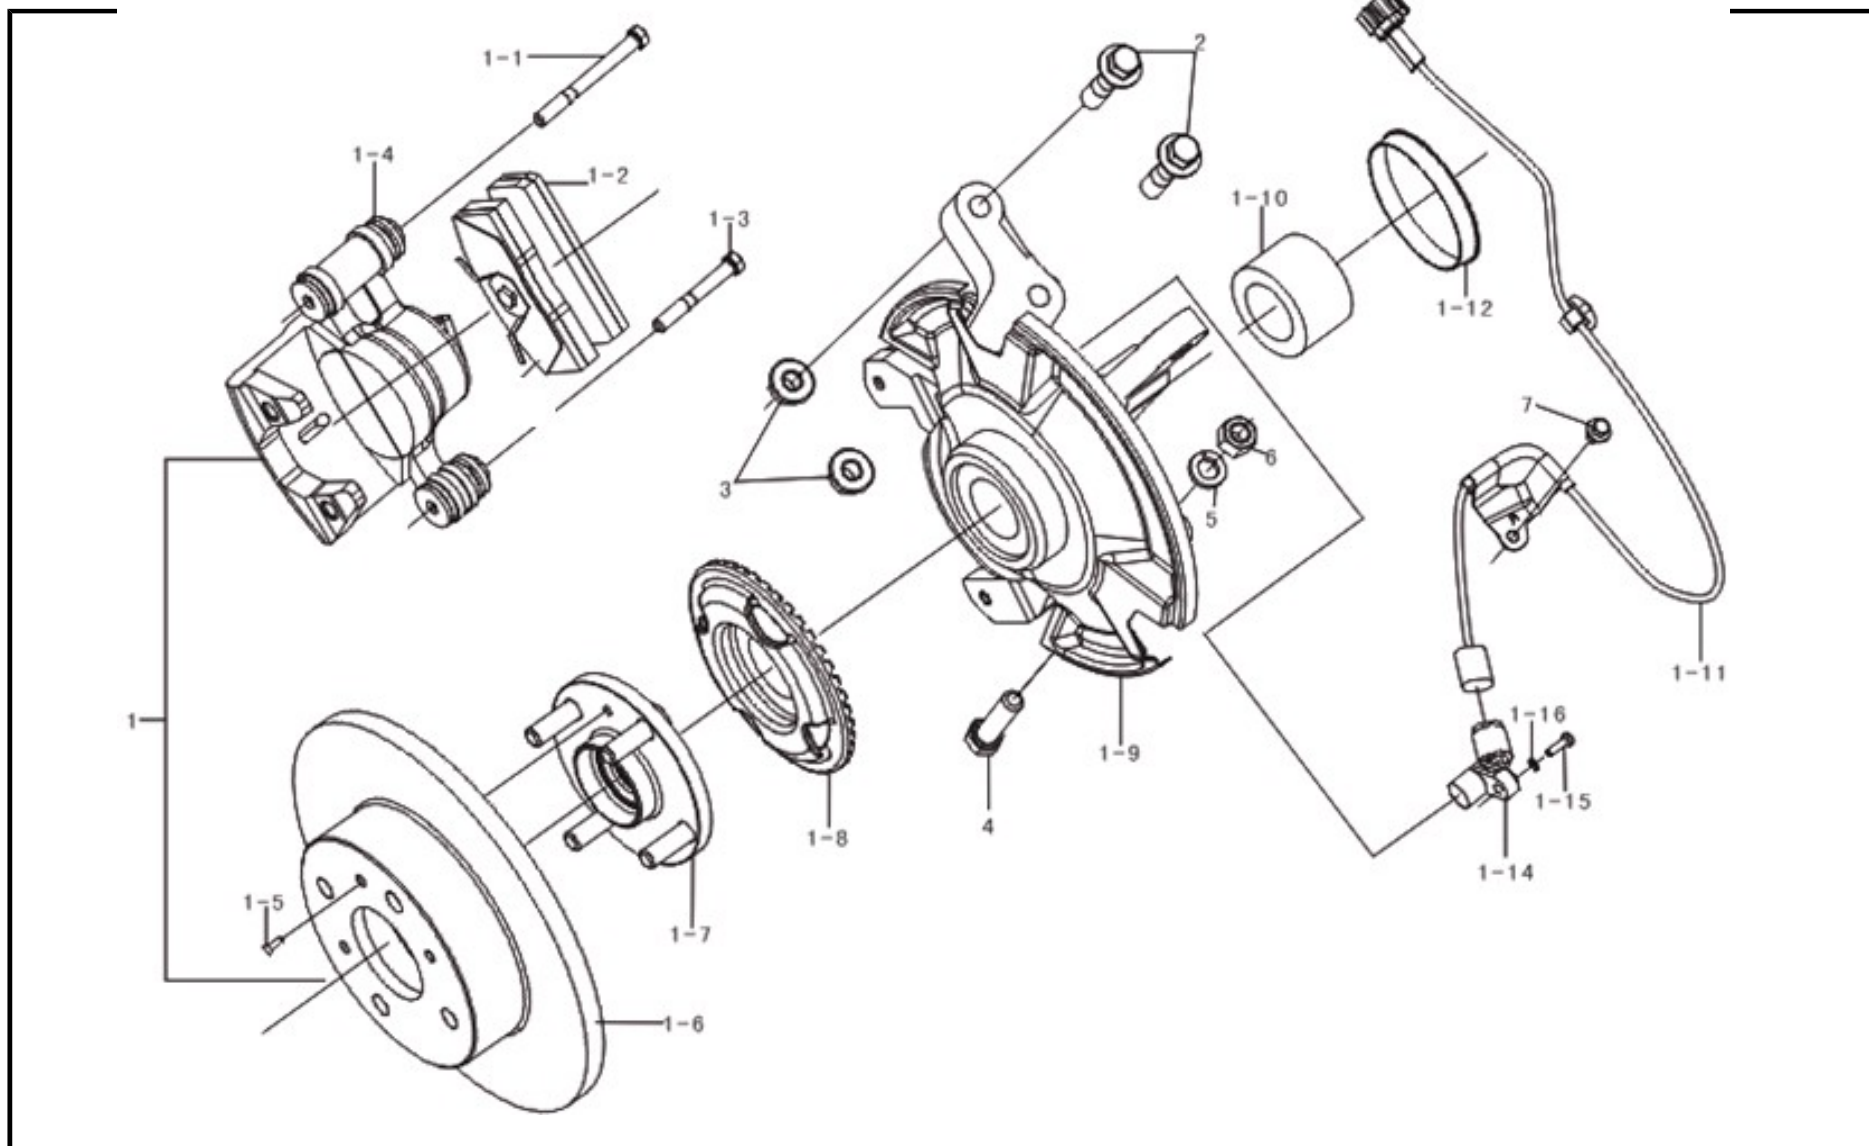

2.16 Front brake(Non-ABS)

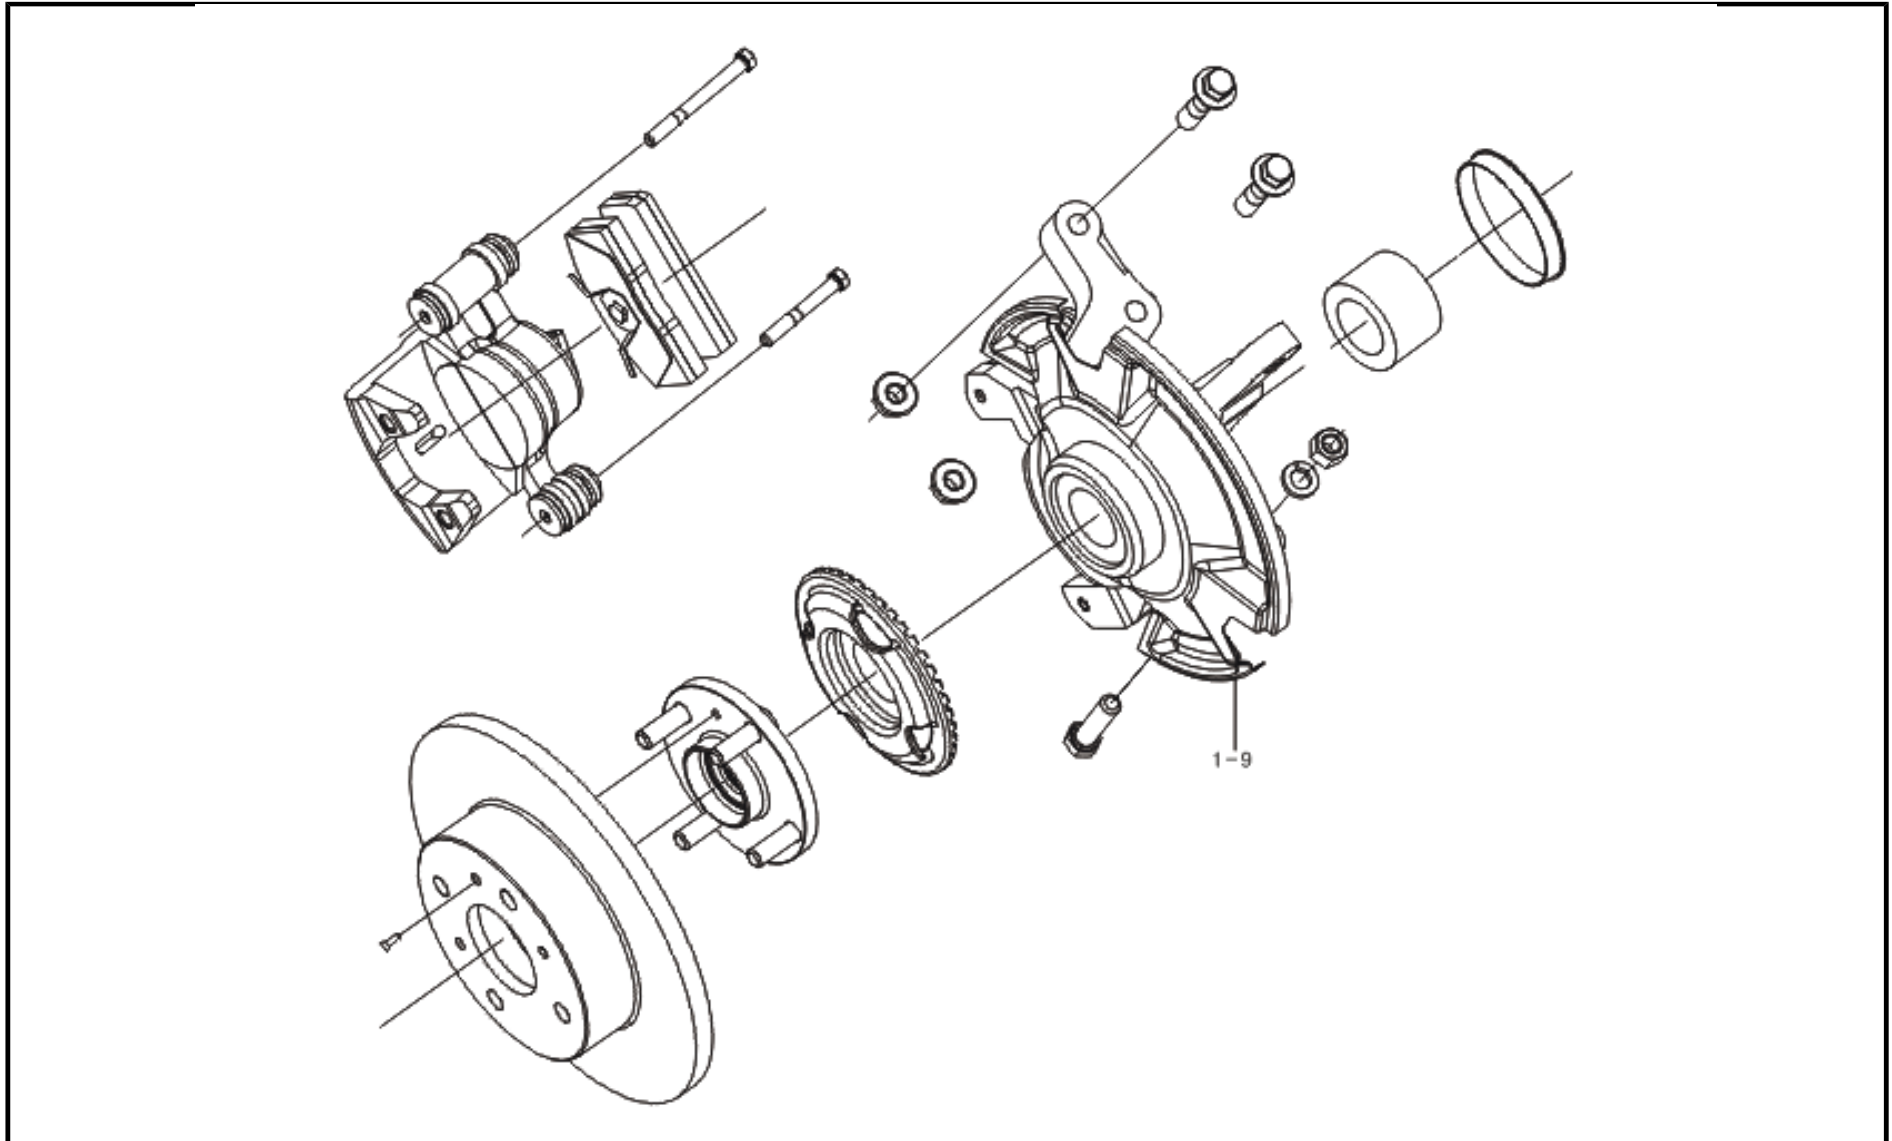

2.16 Front brake

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

1	F3501100	左前制动器总成	Front left brake assy.	1		√
1	F3501600	右前制动器总成	Front right brake assy.	1		√
1-1	Q151C1080TF3	六角头螺栓	Hex bolt	2		√
1-2	SF35001	制动片（1车付）	Brake lining suite（4 pcs）	1		√
1-3	Q151C1050TF3	六角头螺栓	Hex bolt	2		√
1-4	F3501210	左前制动钳体组件	Front left brake caliper	1		√
1-4	F3501710	右前制动钳体组件	Front right brake caliper	1		√
1-5	Q2540610	十字槽沉头螺钉	Philips screw	2		√
1-6	F3501110	前制动盘组件	Front brake disc	2		√
1-7	F3103110	前轮毂组件	Front wheel hub	2		√
1-8	F2203221	速度齿圈	Speedmeter gear	2		√
1-9	F2304110	左前转向节组件	Left steering knuckle	1	ABS	√
1-9	F2304610	右前转向节组件	Right steering knuckle	1	ABS	√
1-9	F2304110E1	左前转向节组件	Left steering knuckle	1	Non-ABS	√
1-9	F2304610E1	右前转向节组件	Right steering knuckle	1	Non-ABS	√
1-10	F2304510	转向节轴承组件	Steering knuckle bearing	2		√
1-11	F4009210	左前轮速传感器线束总成	Wire,front left wheel speed sensor	1	ABS	√
1-11	F4009220	右前轮速传感器线束总成	Wire,ront right wheel speed sensor	1	ABS	√


2.16 Front brake

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1-12	F2304581	防尘罩	Boot	2		√


1-14	F3630300	左前轮速传感器总成	Front left wheel speed sensor	1	ABS	√
1-14	F3630400	右前轮速传感器总成	Front right wheel speed sensor	1	ABS	√
1-15	Q150B0625	六角头螺栓	Hex bolt	2		√
1-16	Q1460625	平垫圈	Flat washer	2		√
2	231B-1250TF3	六角法兰面螺栓	Hex flange bolt	4		√
3	101B-1212T13F3	六角法兰面螺母	Hex flange nut	4		√
4	Q151B1250T1F3	六角法兰面螺栓	Hex flange bolt	2		√
5	Q40312	弹性垫圈	Springness washer	2		√
6	Q341B12	1型六角螺母	Hex nut	2		√
7	Q1840616	六角法兰面螺栓	Hex flange bolt	2	M6	√


2.17 Rear brake



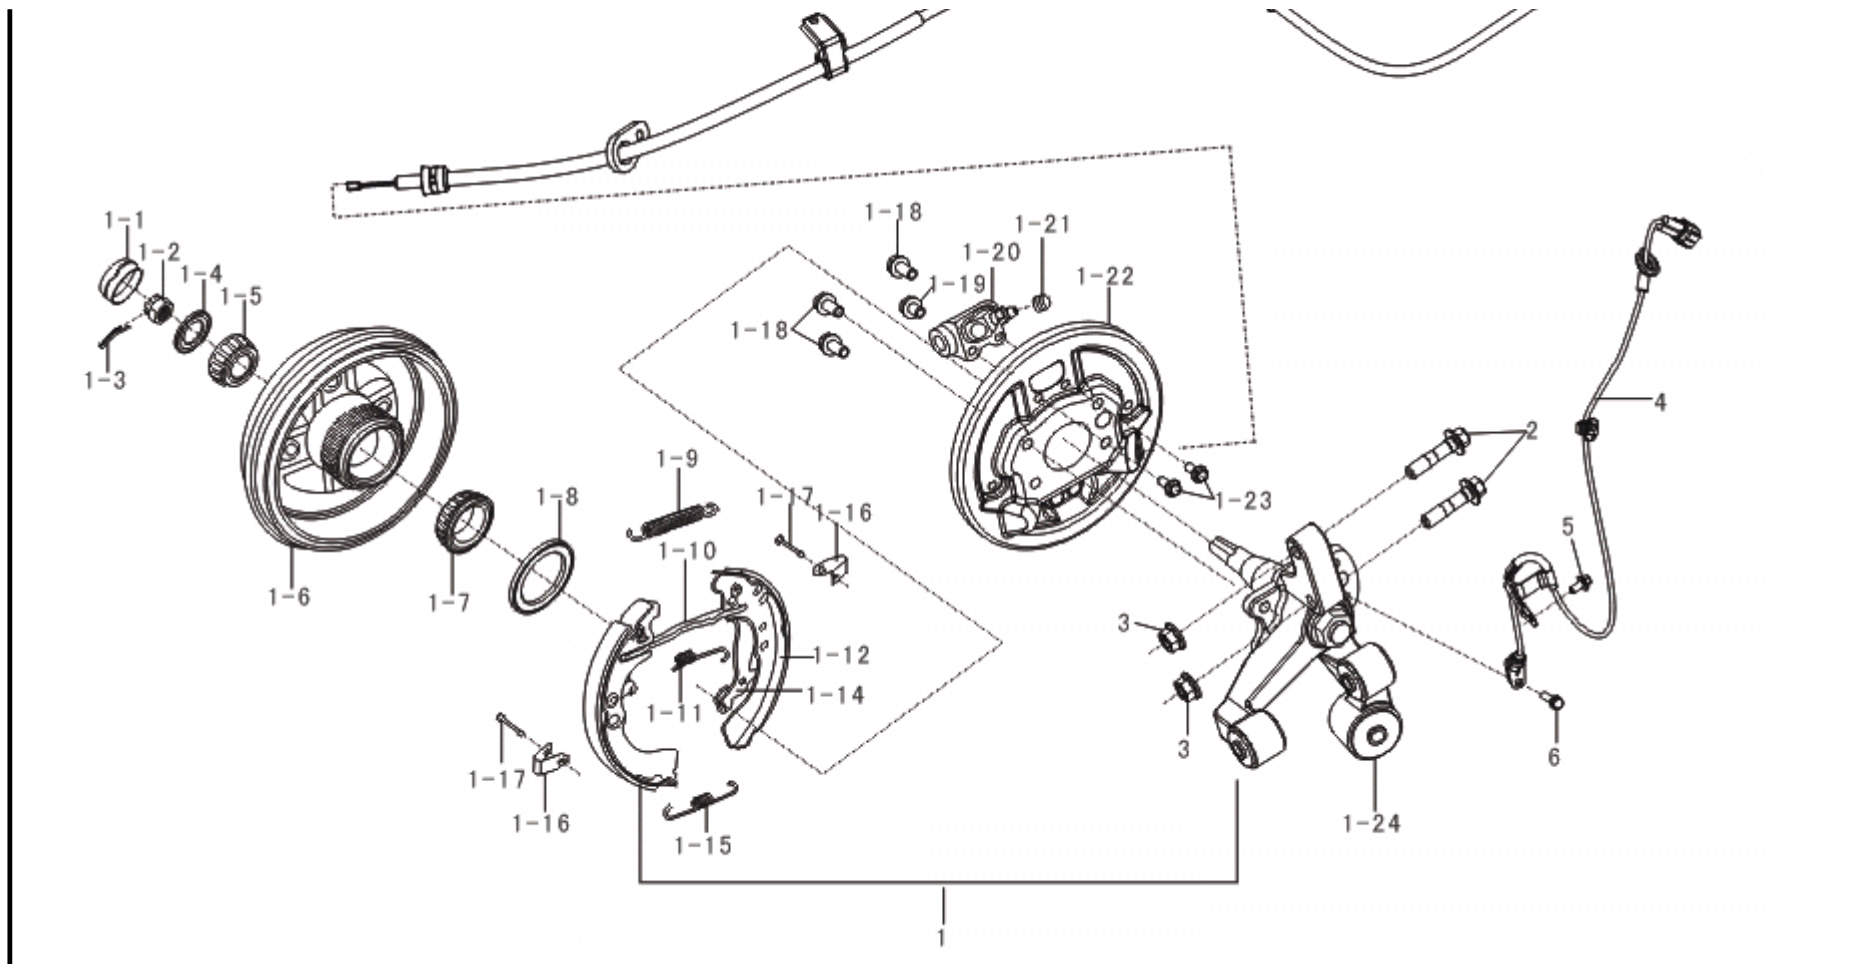

2.17 Rear brake(Non-ABS)

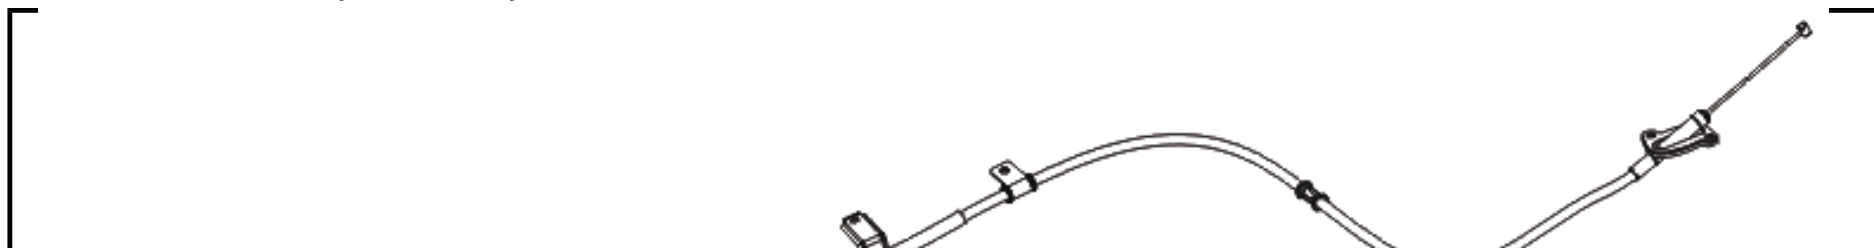

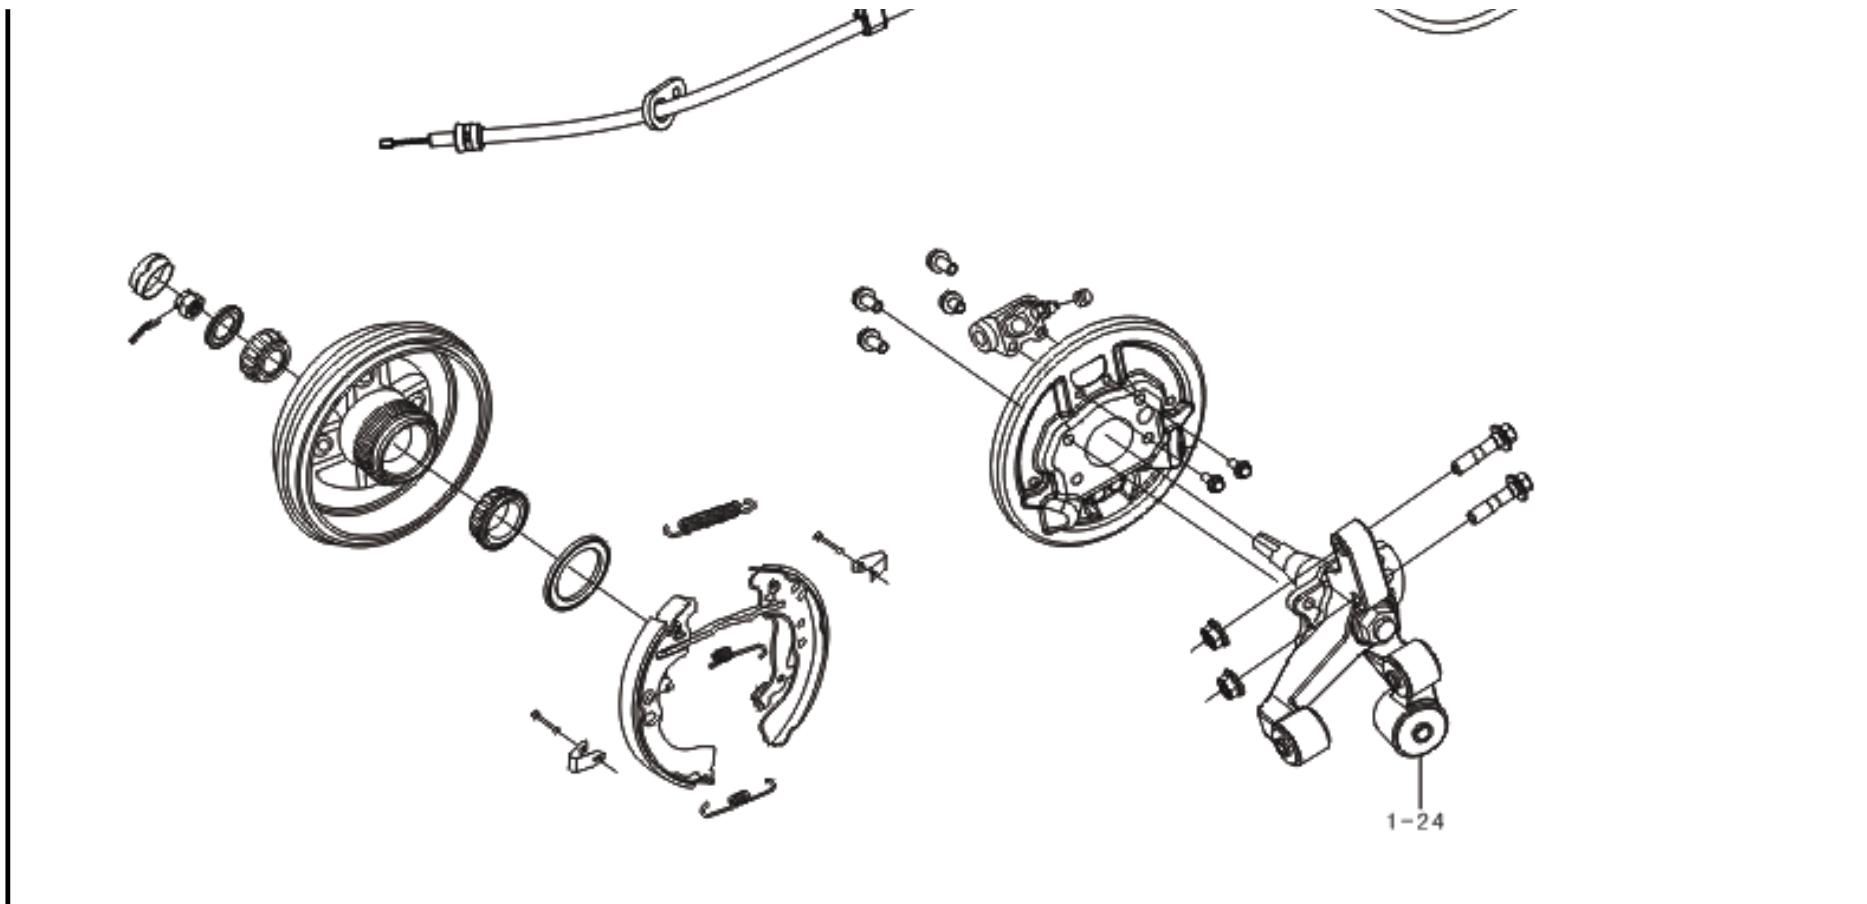

2.17 Rear brake

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3502100	左后制动器总成	Rear left brake assy.	1		√
1	F3502600	右后制动器总成	Rear right brake assy.	1		√
1-1	F2911453	润滑脂盖	Brake drum cap	2		√
1-2	Q38316	2型六角开槽螺母	Hex nut	2	type 2	√

1-3	Q5004045	开口销	Cotter pin	2		√
1-4	F2911451	止推垫圈	Thrust washer	2		√
1-5	F2911480	外轴承	Outer bearing	2		√
1-6	F3502110	后制动鼓组件	Rear brake drum	2		√
1-7	F2911470	内轴承	Inner bearing	2		√
1-8	F2911430	油封组件	Seal	2		√
1-9	F3502591	制动蹄回位弹簧	Return spring	2		√
1-10	F3502580	驻车制动推板组件	Parking brake pushing plate	2		√
1-11	F3502595	制动推板弹簧	Spring,pushing plate	2		√
1-12	SF35002	制动蹄（一车副）	Brake shoe（4pcs）	1		√
1-14	F3502571	驻车制动摇臂	Parking brake swing arm	2		√
1-15	F3502593	制动蹄拉紧弹簧	Stretched spring	2		√
1-16	F3502596	制动蹄固定簧	Fix clip,brake shoe	4		√
1-17	F3502597	制动蹄固定簧销	Pin,fix clip	4		√


2.17 Rear brake

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1-18	201-1020T1F3	六角头螺栓和平垫圈组合	Hex bolt,taper springness washer and flat washer	6		√
1-19	201-1012T1F3	六角头螺栓和平垫圈组合	Hex bolt,taper springness washer and flat washer	2		√
1-20	F3502460	左后制动轮缸组件	Rear left brake Cylinder	1		√
1-20	F3502960	右后制动轮缸组件	Rear right brake Cylinder	1		√
1-21	F3502372	后放气螺钉罩	Rear venting screw cover	2		√

1-22	F3502410	左后制动底板组件	Left rear brake bottom	1		√
1-22	F3502910	右后制动底板组件	Right rear brake bottom	1		√
1-23	231B-1250TF3	六角法兰面螺栓	Hex flange bolt	4		√
1-24	F2911410	左后上摇臂组件	Rear left swing arm	1	ABS	√
1-24	F2911420	右后上摇臂组件	Rear right swing arm	1	ABS	√
1-24	F2911410E1	左后上摇臂组件	Rear left swing arm	1	Non-ABS	√
1-24	F2911420E1	右后上摇臂组件	Rear right swing arm	1	Non-ABS	√
1-25	F3508100	手制动左拉索总成	Parking brake cable,left	1		√
1-25	F3508200	手制动右拉索总成	Parking brake cable,right	1		√
2	231B-1250TF3	六角法兰面螺栓	Hex flange bolt	4		√
3	101B-1212T13F3	六角法兰面螺母	Hex flange nut	4		√
4	F3630500	左后轮速传感器总成	Rear left wheel speed sensor	1	ABS	√
4	F3630600	右后轮速传感器总成	Rear right wheel speed sensor	1	ABS	√

2.17 Rear brake

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
5	Q1840616	六角法兰面螺栓	Hex flange bolt	2	M6	√
6	Q1460620	六角头螺栓和弹性垫圈、平垫圈组合	Hex bolt and washers	2		√

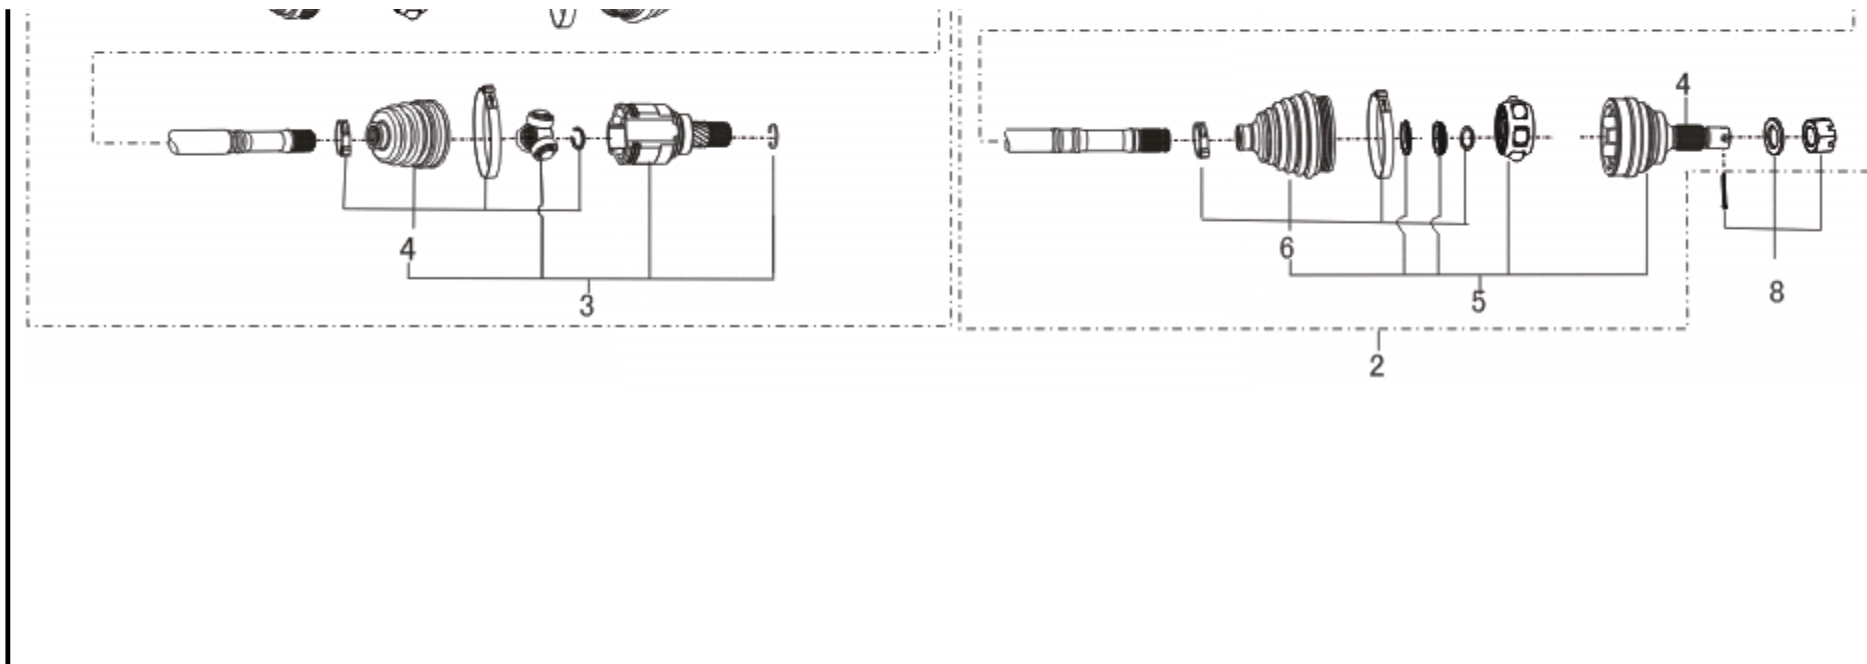


2.18 Propeller shaft

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F2203100C1	左传动轴总成	Left propeller shaft assy.	1		✓
2	F2203600C1	右传动轴总成	Right propeller shaft assy.	1		✓
3	SF22001C1	差速器侧万向节维修包（左）	Joint kit, differential, left	1		✓
4	SF22002C1	差速器侧防护罩维修包	Seal kit, differential	2		✓
5	SF22003C1	车轮侧万向节维修包	Joint kit, wheel	2		✓
6	SF22004C1	车轮侧防护罩维修包	Seal kit, wheel	2		✓
7	SF22005C1	差速器侧万向节维修包(右)	Joint kit, differential, right	1		✓
8	SF22006	螺母组件	Nuts kit	1		✓

2.19 Wheels



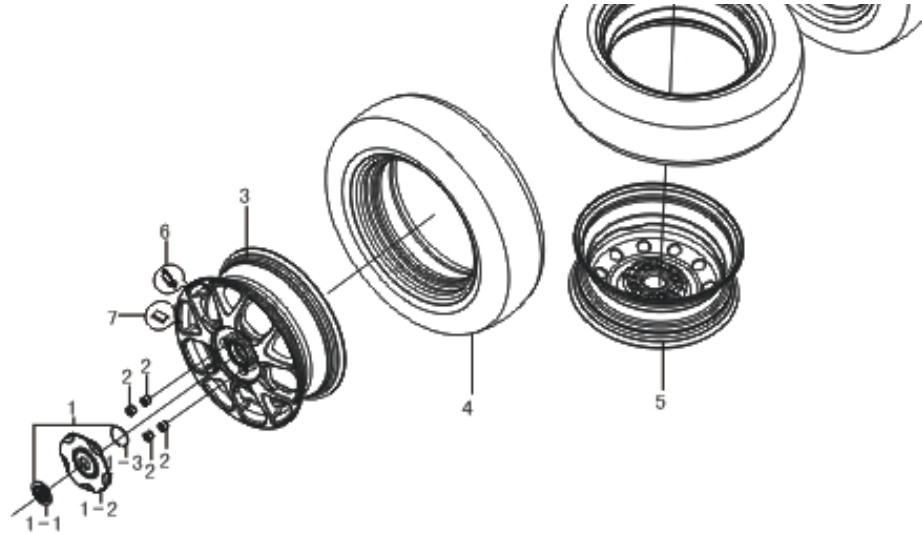

2.19 Wheels


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3102000B1	车轮罩	Wheel cap assy.	4	for Aluminum rim	√
1	F3102000	车轮罩	Wheel cap assy.	4	for Steel rim	√
1-1	F3102260	中心标牌	Wheel LOGO	4		
1-2	F3102111B1	装饰盖	Wheel cap	4	for Aluminum rim	
1-2	F3102111	装饰盖	Wheel cap	4	for Steel rim	
1-3	F3102212	钢丝卡圈	Circlip	4		
2	Q30612T13F3	锥面螺母(铝轮)	Wheel nut	16	for Aluminum rim	√
2	183C-1226T13F6	锥面螺母(钢轮)	Wheel nut	16	for Steel rim	√
3	F3101200	铝合金车轮总成	Aluminum wheel rim	4		√
3	F3101200C1	铝合金车轮总成	Aluminum wheel rim	4	new status	√


3	F3101100	钢制车轮总成	Steel wheel rim	4		√
4	L3106300	轮胎	Tyre	5	165/70R14	√
5	F3101200	铝合金车轮总成	Aluminum wheel rim	1	Spare rim	√
3	F3101200C1	铝合金车轮总成	Aluminum wheel rim	4	new status	√
5	F3101100	钢制车轮总成	Steel wheel rim	1	Spare rim	√
6	F3101510	5g夹式平衡块	Clip balancing weight,5g	demand	for Steel rim	
6	F3101520	10g夹式平衡块	Clip balancing weight,10g	demand	for Steel rim	
6	F3101530	15g夹式平衡块	Clip balancing weight,15g	demand	for Steel rim	

2.19 Wheels

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
6	F3101540	20g夹式平衡块	Clip balancing weight,20g	demand	for Steel rim	
6	F3101550	25g夹式平衡块	Clip balancing weight,25g	demand	for Steel rim	
6	F3101560	30g夹式平衡块	Clip balancing weight,30g	demand	for Steel rim	
6	F3101570	35g夹式平衡块	Clip balancing weight,35g	demand	for Steel rim	
7	F3101410	5g粘式平衡块	Glue balancing weight,5g	demand	for Aluminum rim	
7	F3101420	10g粘式平衡块	Glue balancing weight,10g	demand	for Aluminum rim	
	L3106200	气门嘴总成	Tyre valve assy.	1		√

2.20 Fuel filler tube

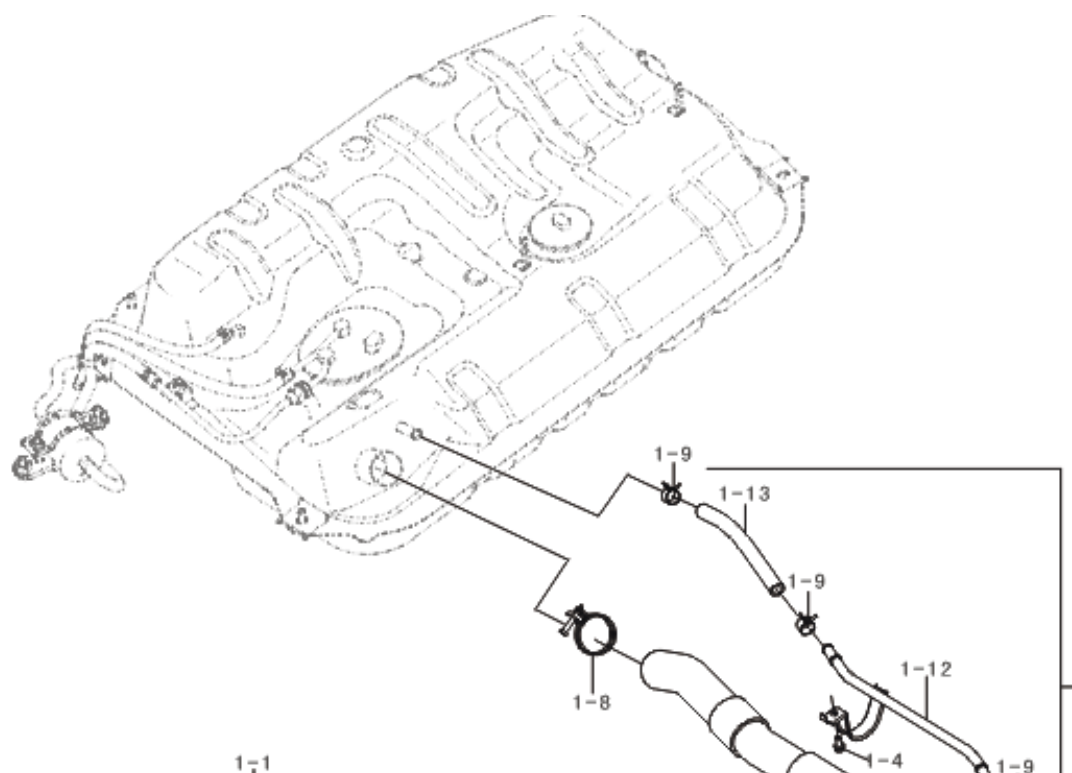

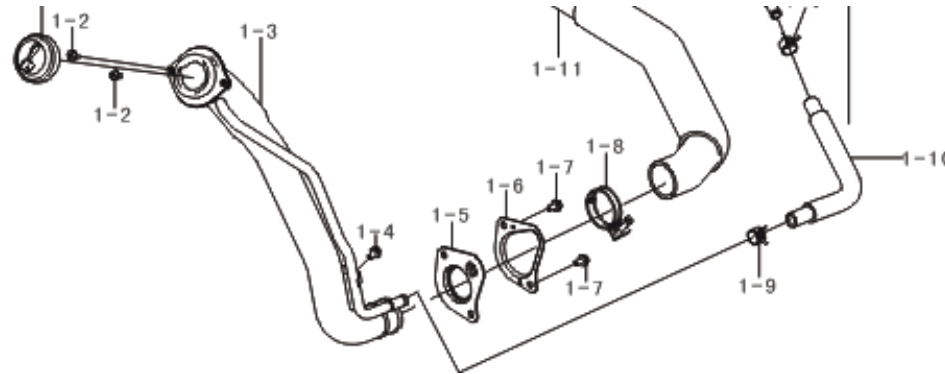



2.20 Fuel filler tube

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F1101400	加注管总成	Fuel filler tube assy.	1		
1-1	B1101210	加油口盖组件	Fuel filler cap	1		√
1-2	Q2140612	十字槽盘头螺钉	Philips screw	2		√
1-3	F1101510B1	加油管上段组件	Fuel filler tube,upper	1		√
1-4	Q1840616	六角法兰面螺栓	Hex flange bolt	2	M6	√
1-5	F1101421	加油口密封垫	Fuel filler gasket	1		√
1-6	F1101423	加油口密封垫压板	Press plate,fuel filler gasket	1		√
1-7	Q1840612T1F30	六角法兰面螺栓	Hex flange bolt	2		√
1-8	Q67560	A型蜗杆传动式软管环箍	Hoop	2		√
1-9	Q67525	A型蜗杆传动式软管环箍	Hoop	4		√
1-10	F1101640	加油回气管组件 II	Fuel tank vent hose II	1		√
1-11	F1101550	加油管下段组件	Fuel filler tube,Lower	1		√
1-12	F1101660	加油回气管组件 III	Fuel tank vent hose III	1		√

1-13	F1101681	加油回气管IV	Fuel tank vent hose I	1		√

2.21 Fuel tank

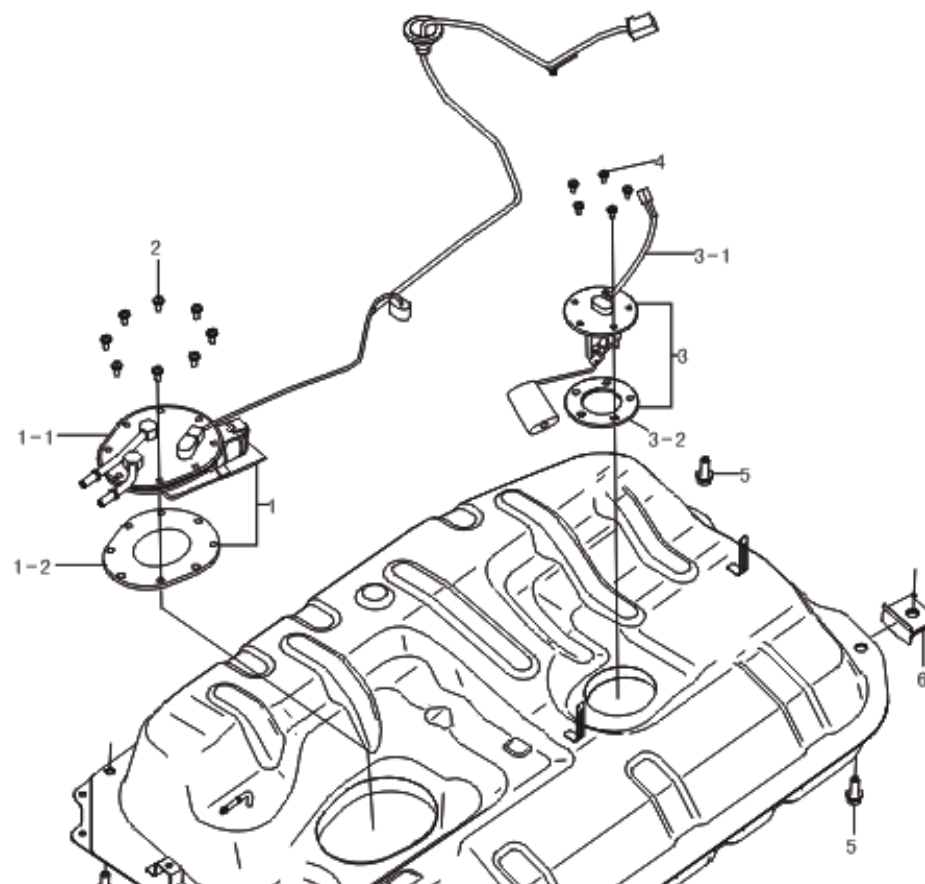


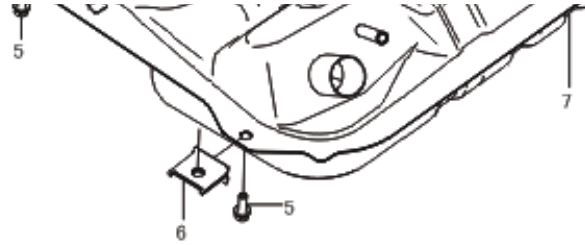

2.21 Fuel tank

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F1106100	燃油泵总成	Fuel pump assy.	1	before 17th Oct 2009	√
1	F1106100B1	燃油泵总成	Fuel pump assy.	1	after 17th Oct 2009	√
1-1	F1106110	燃油泵组件	Fuel pump	1		
1-2	F1106811	燃油泵密封垫	Fuel pump gasket	1		
2	Q230512	十字槽盘头螺钉和平垫圈组合	Philips screw with washer	8		
3	F3614100	燃油位传感器总成	Fuel level sensor assy.	1		√
3-1	F3614110	燃油位传感器	Fuel level sensor	1		
3-2	F3614121	燃油位传感器密封圈	Fuel level sensor gasket	1		
4	Q2300412	十字槽盘头螺钉和平垫圈组合	Philips screw with washer	5		√
5	Q1410825L	六角头螺栓和锥形弹性垫圈组合	Hex bolt and taper springness washer	4		√
6	F1101371	燃油箱安装螺钉垫片	Fuel tank washe	2		√
7	F1101110	燃油箱主体组件	Fuel tank	1	before 17th Oct 2009	√
7	F1101110B1	燃油箱主体组件	Fuel tank	1	after 17th Oct 2009	√

2.22 离合操作机构 Clutch system

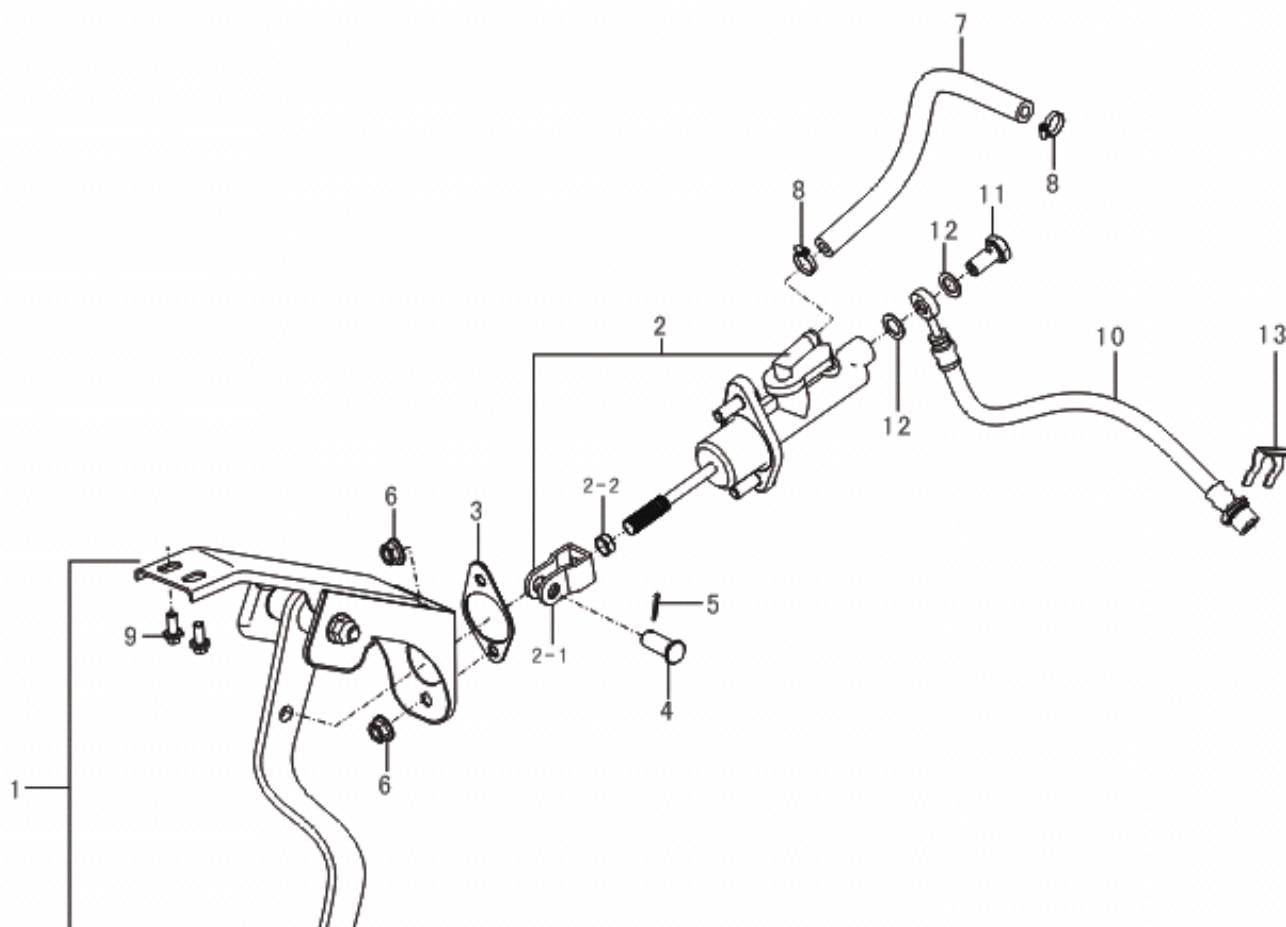





2.22 离合操作机构 Clutch system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	SUPPLY
1	F1602100C1	离合踏板总成	Clutch pedal assy.	1		√
1-1	F1602181	离合踏板胶套	Clutch pedal sleeve	1		
2	L1608000	离合器总泵	Clutch master cylinder	1		√
2-1	L1608016	推杆叉	Push rod fork	1		
2-2	Q340B08	I 型六角螺母	Nut	1		√
3	L1600012	缓冲垫	Damper washer	1		√
4	L1602120	销轴	Axle pin	1		√
5	Q5003230	开口销	Cotter pin	1		√
6	Q32008	六角法兰面螺母	Nut	2		√
7	L1607011	软管	Hose	1		√
8	Q67516	A型蜗杆传动式软管环箍	Hoop	2		√
9	Q1840820	六角法兰面螺栓	Hex flange bolt	2		√
10	LAL1607100	软管总成	Clutch hose assy.	1		√
11	221-1022	带孔螺栓M10x1x22	Eye bolt	1	M10x1x22	√
12	L1600014	垫密圈	Ring seal	2		√
13	L1600013	卡片	Clip	1		√

3.Electrical Equipment

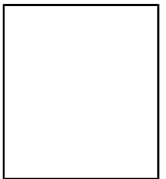

3.01 Battery

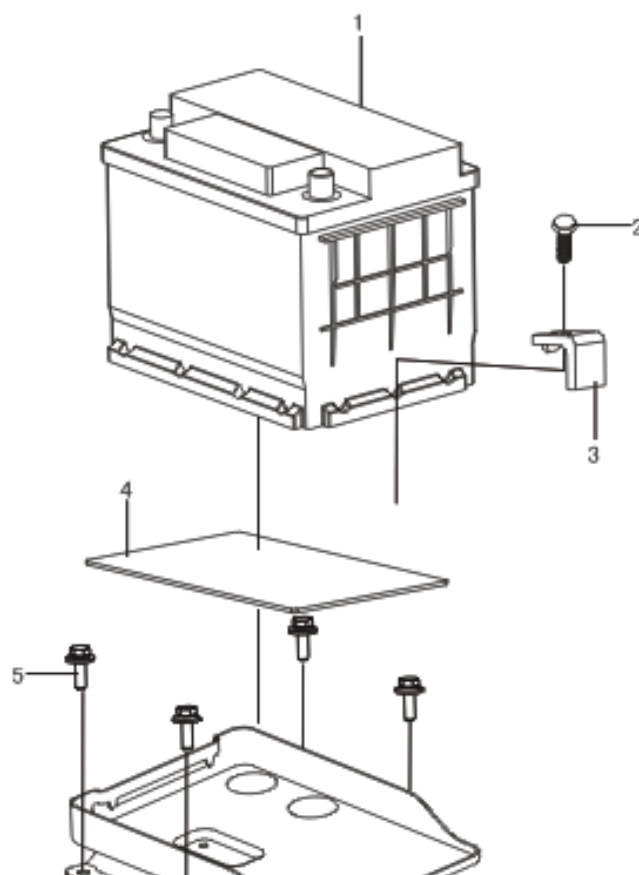




3.01 Battery

[illegible]

--	--	--	--	--	--	--


3.02 Instrument panel

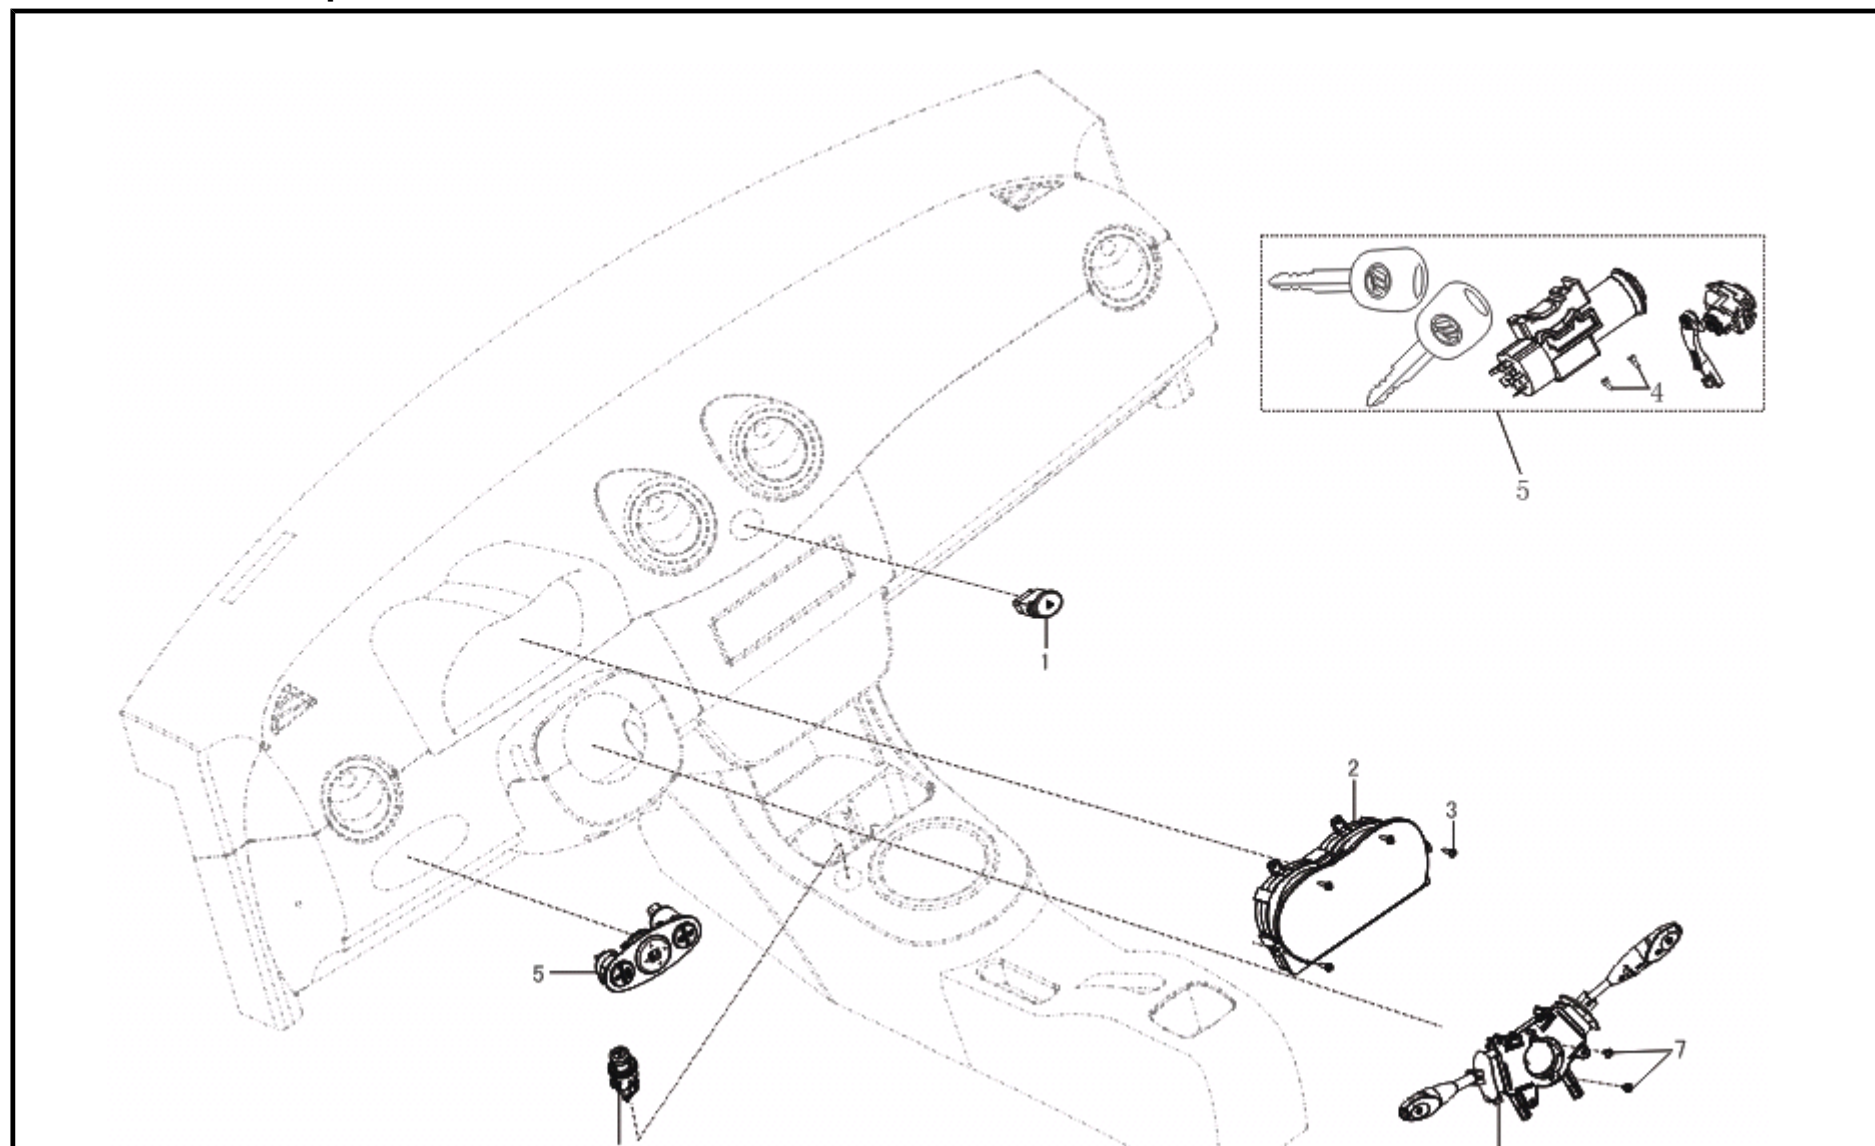

3.02 Instrument panel

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F3710400	危险警告灯开关	Warning switch	1		√
2	F3820000B1	组合仪表总成	Instrument cluster	1		√
2	F3820000C1	组合仪表总成	Instrument cluster	1	120KM warning	√
2	F3820000D1	组合仪表总成	Instrument cluster	1	for reverse radar	√
3	Q2714216	十字槽盘头自攻螺钉-C型	Philips self-tapping screw	4	C-type	√
4	Q218B0612	内六角圆柱头螺钉	Inner hex screw	2		
5	SF37001	钥匙锁芯及点火开关套件	Ignition with keys and cylinders	1		√
6	F3774000	组合开关总成	Combination switch	1	LX, EX	√
6	F3774000B1	组合开关总成	Combination switch	1	DX	√
7	Q2300412	十字槽盘头螺钉和平垫圈组合件	Philips screw with washer	2		√
8	F3725100	点烟器总成	Cigarette lighter	1		√
9	F3750500B15	开关组件总成	Switch cluster	1	EX	√
9	F3750500B1B15	开关组件总成	Switch cluster	1	DX LX	√

3.03 Electric device

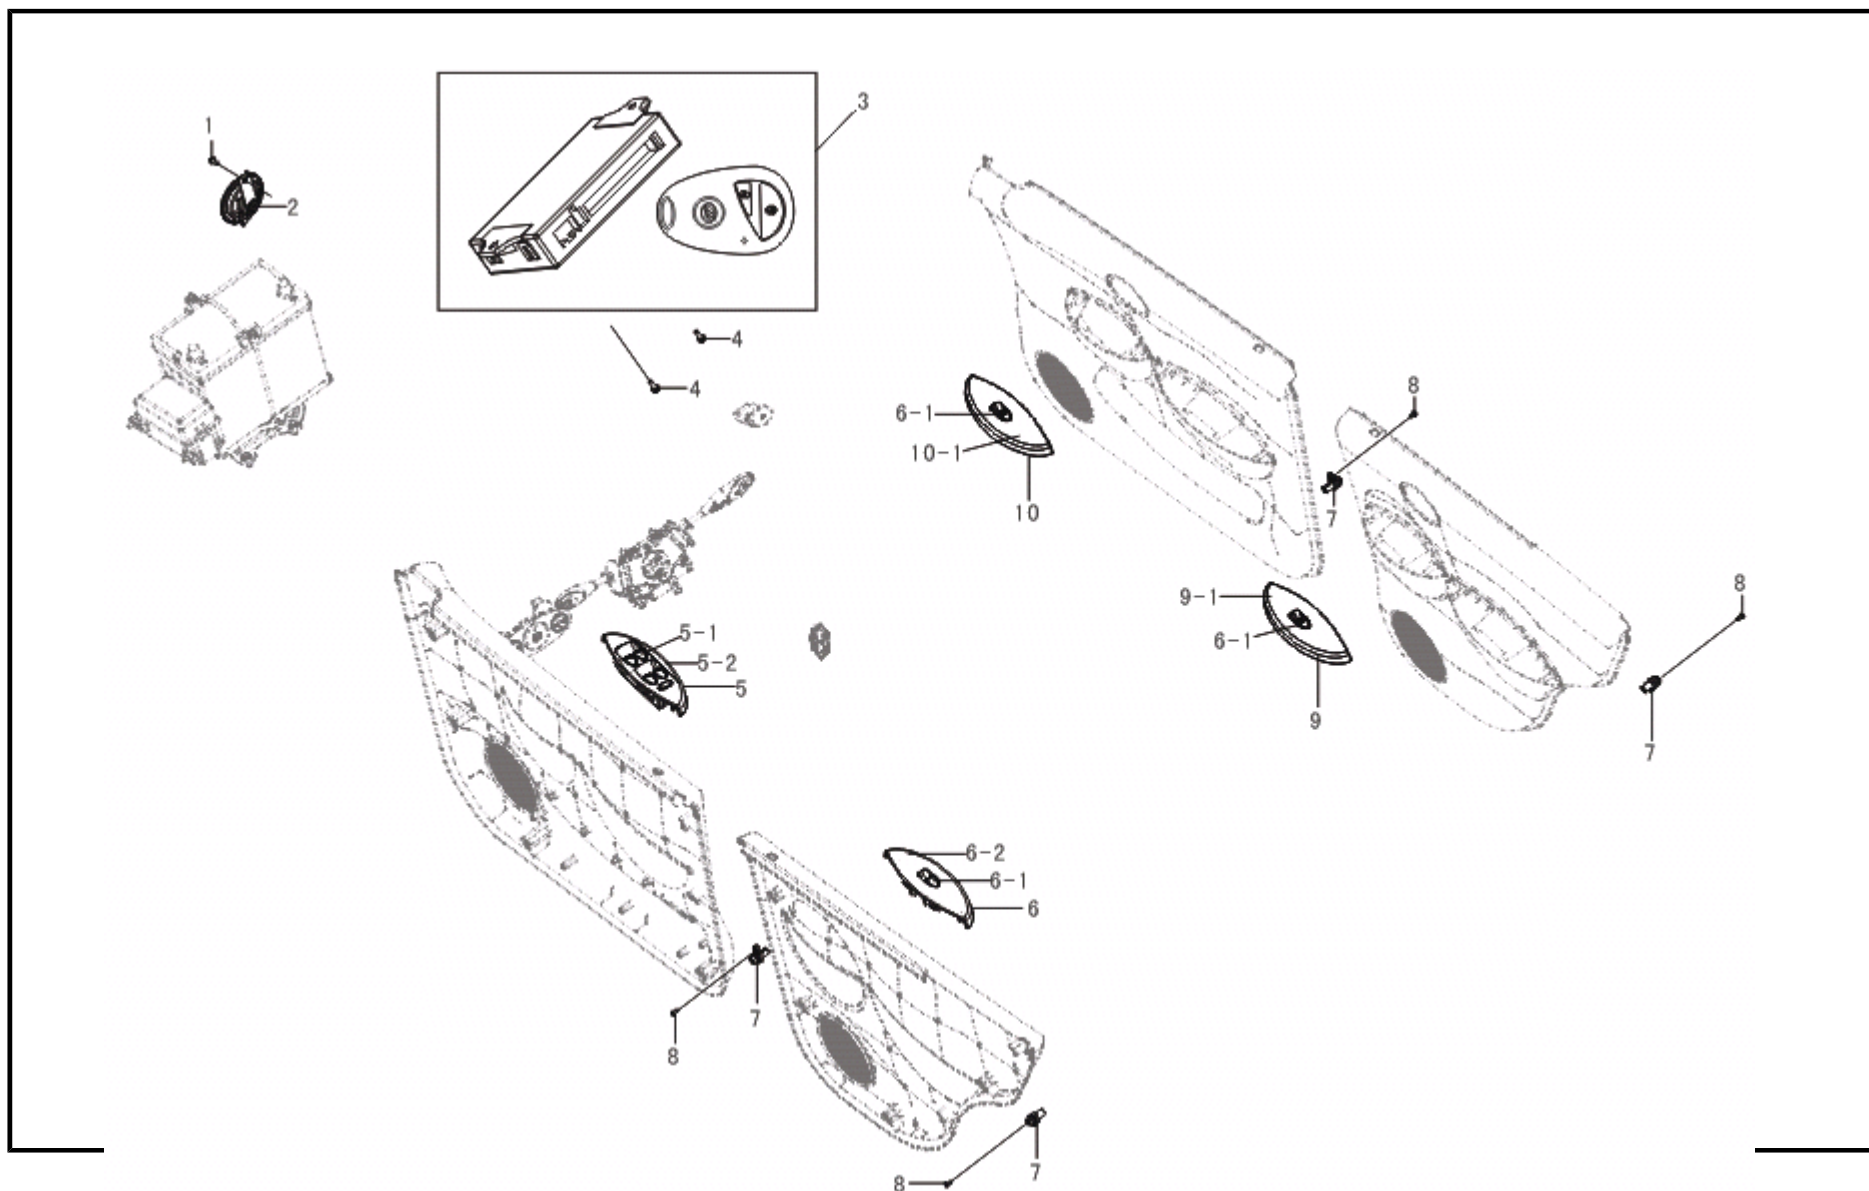

3.03 Electric device

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1400512	六角头螺栓和平垫圈组合件	Hex bolt,taper springness washer and flat washer	1		√
2	F3721100	高音电喇叭总成	Alt horn	1		√
3	SF36001	车身BCM带遥控套件	BCM(Body Control Module)	1	remote+E-Security	√
4	Q1840616	六角头螺栓和平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
5	F3746100B25	左前车门扶手及玻璃升降开关总成	Inner handrail with switches,LF door	1	Argent,EX	√
5	F3746100B1B25	左前车门扶手及玻璃升降开关总成	Inner handrail with switches,LF door	1	Argent,LX DX	√
5-1	F3746110	左前门玻璃升降开关总成	Glass lift switch,LF door	1		√
5-1	F3746110B1	左前门玻璃升降开关总成	Glass lift switch,LF door	1		
5-2	F3746120B25	左前门扶手板	Inner handrail,front left door	1	Argent,EX	√
5-2	F3746120B1B25	左前门扶手板	Inner handrail,front left door	1	Argent,LX DX	√
6	F3746300B25	左后车门扶手及玻璃升降开关总成	Inner handrail with switch,LR/RF door	1	Argent	√
6-1	F3746310	乘客门玻璃升降开关总成	Glass lift switch	3		
6-2	F3746320B25	左后门扶手板	Inner handrail,raer left door	1	Argent	√
7	F3758100	门控开关	Door controlling switch	4		√
8	Q2724295	十字槽盘头自攻螺钉型	Philips self-tapping screw	4		√
9	F3746400B25	右后车门扶手及玻璃升降开关总成	Inner handrail with switch,RR door	1	Argent	√
9-1	F3746420B25	右后门扶手板	Inner handrail,rear right door	1	Argent	√
10	F3746200B25	右前车门扶手及玻璃升降开关总成	Inner handrail with switch,RF door	1	Argent,EX	√


3.03 Electric device

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

10	F3746200B1B25	右前车门扶手及玻璃升降开关总成	Inner handrail with switch,RF door	1	Argent,LX DX	√
10-1	F3746220B25	右前门扶手板	Inner handrail,front right door	1	Argent	√

3.04 Communication and Audio device

--

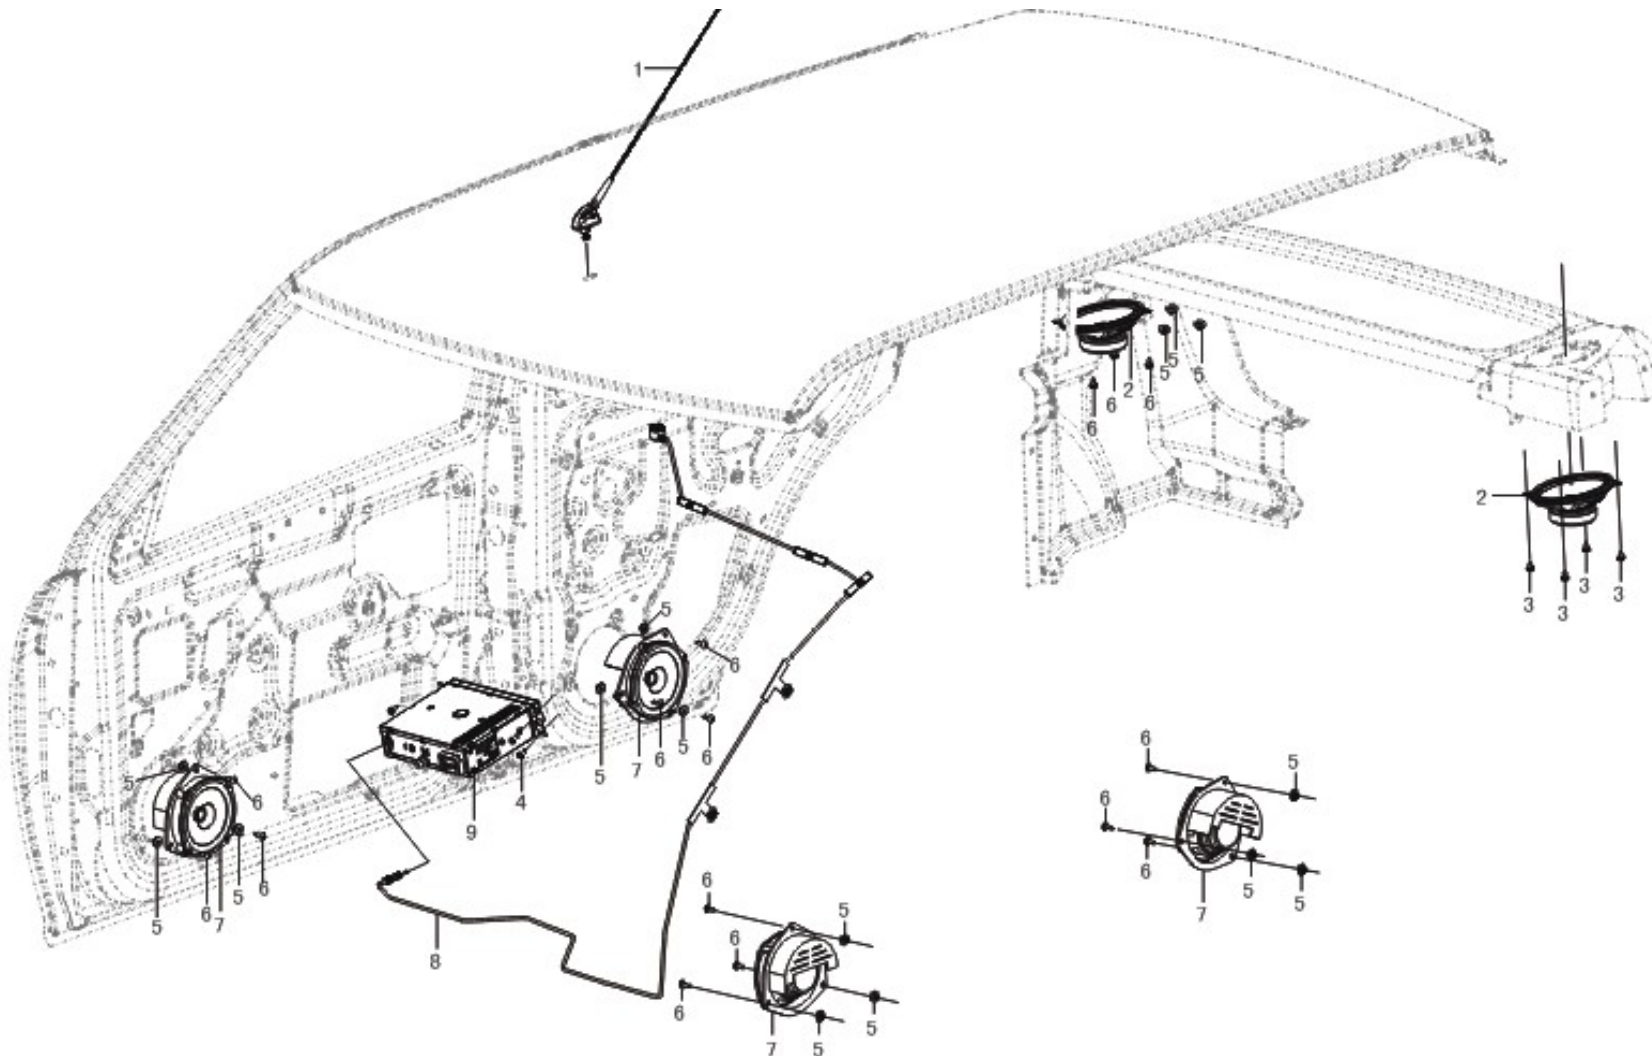


3.04 Communication and Audio device

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F7903110	天线线体总成	Antenna	1		√
2	F7909500	后置扬声器	Raer speaker	2		√



3	Q2205513	十字槽盘头自攻螺钉和平垫圈组合件	Philips screw with washer	8		√
4	Q2714213	十字头盘头自攻螺钉和平垫圈组合件	Philips screw with washer	4		√
5	400-076	塑料卡扣	Plastic clip	6/12	DX/LX 6,EX 12	
6	Q2734819	十字槽大半圆头自攻螺钉	Philips tapping screw	6/12	DX/LX 6,EX 12	√
7	F7909100	前置扬声器	Front speaker	2/4	DX/LX 2,EX 4	√
8	F7903140	收音机天线馈线总成	Antenna wire	1		√
9	F7901300B1	数码播放器总成	MP3 player	1		√
9	F7901500	收音机CD播放器总成	CD player	1		√
9	F7901300C1	数码播放器总成	MP3 player	1	AUX+USB	√


3.05 Vehicle lamps



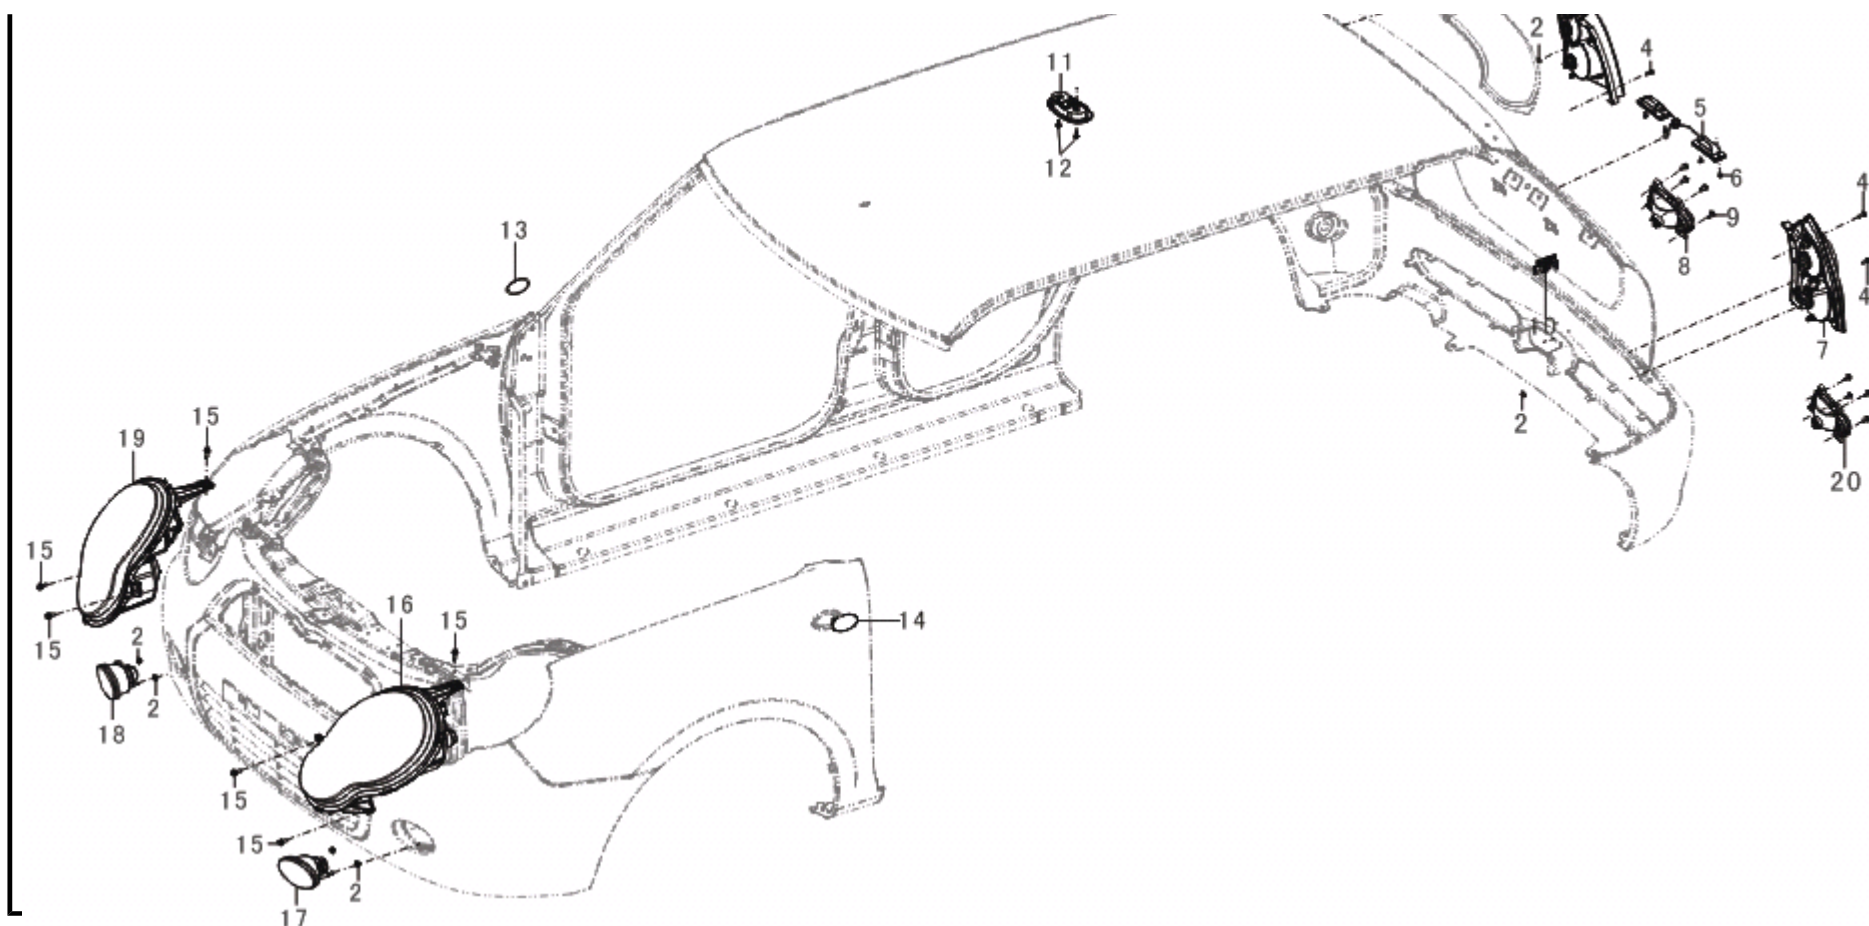

3.05 Vehicle lamps

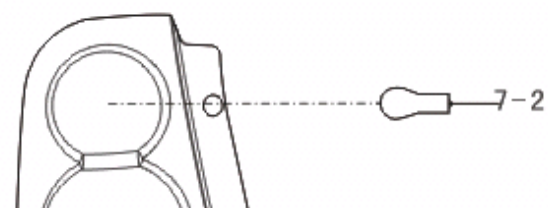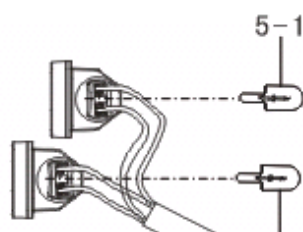

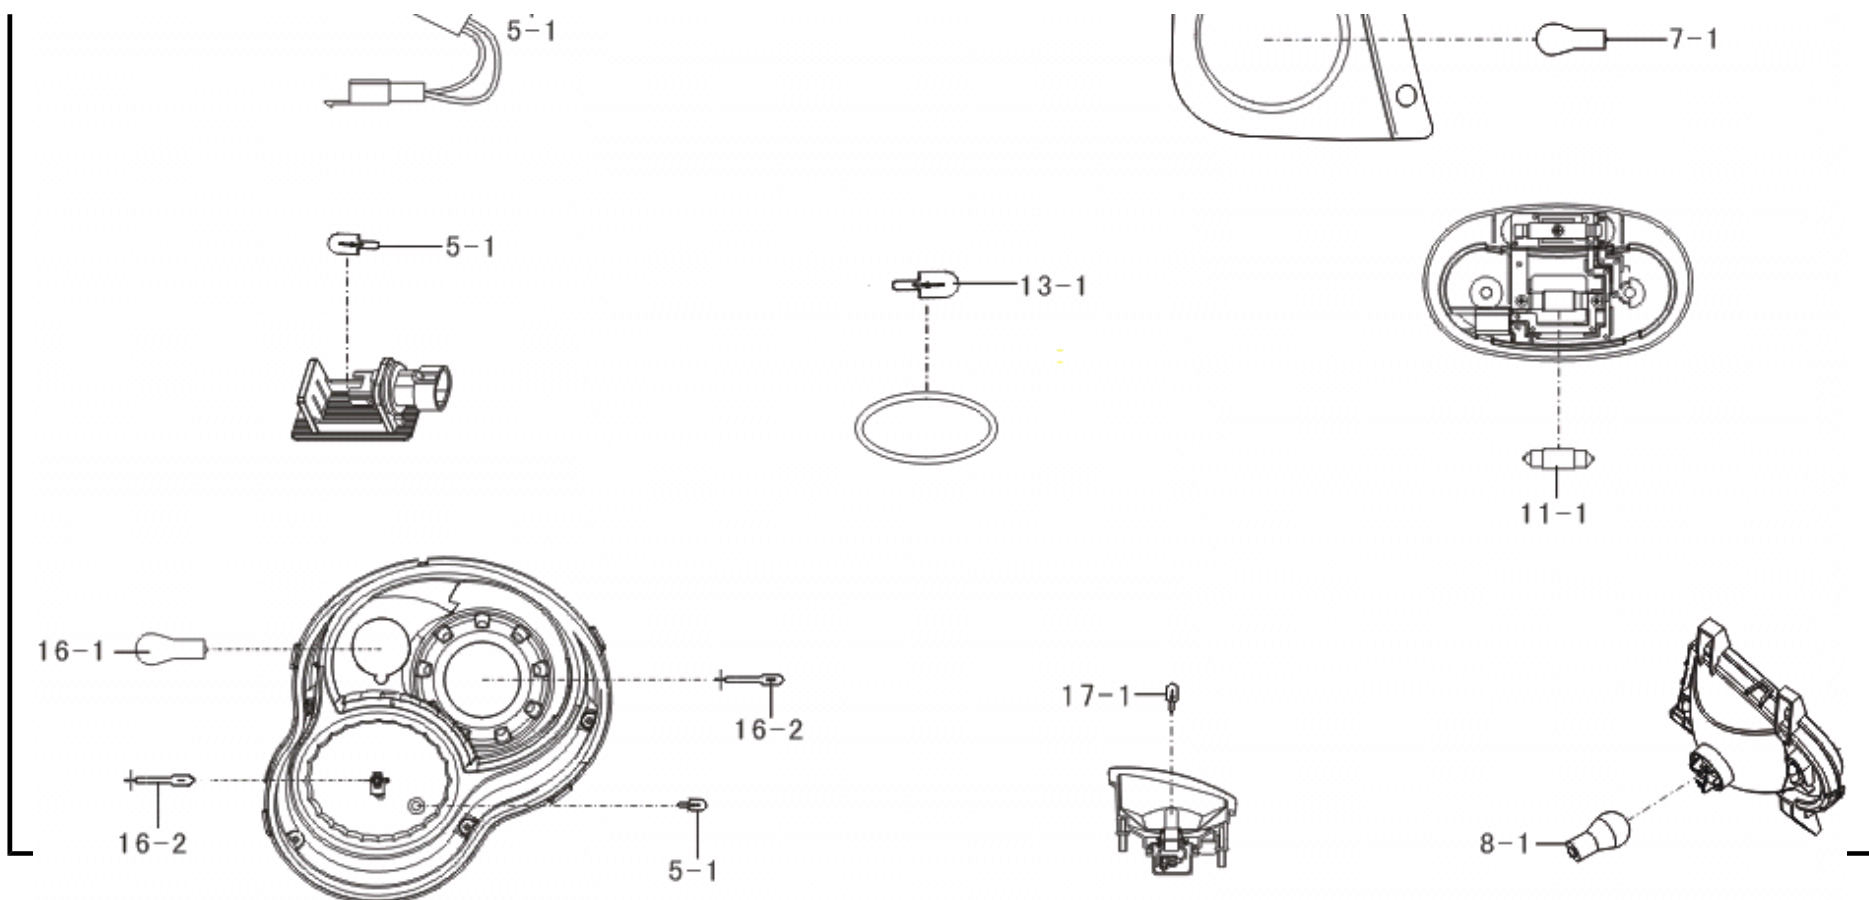

3.05 Vehicle lamps

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F4134300	高位制动灯	Brake light	1	EX	✓
1	F4134300B1	高位制动灯	Brake light	1	DX LX	
2	Q32006	六角法兰面螺母	Hex flange nut	6		✓
3	F4133400B1	右后组合灯	Right tail lamp	1		✓
4	Q2300516	十字槽盘头螺钉和平垫圈组合件	Philips screw with washer	4		✓


5	F4108100	牌照灯总成	License plate lamp	1		√
5-1	W5W 12V/GB 15766.1-2008	灯泡	Bulb	5		
6	Q2203513	十字槽盘头自攻螺钉和平垫圈组合件	Philips screw with washer	4		√
7	F4133300B1	左后组合灯	Left tail lamp	1		√
7-1	P21/5W/GB 15766-2008	灯泡	Bulb	2	reverse bulb	
7-2	PY21W 12V/GB 15766.1-2008	灯泡	Bulb	6	steering bulb	
8	F4116400	右后雾灯	Rear fog lamp, right	1		√
8-1	P21W 12V/GB 15766.1-2008	灯泡	Bulb	2		
9	Q27414813	十字槽盘头自攻螺钉	Philips screw	8		
10	F4127100	行李箱照明灯	Trunk light	1		√
11	F4123100B15	前顶灯	Front ceiling light	1		√
11-1	C10W 12V/GB 15766.1-2008	灯泡	Bulb	1		
12	Q2140512	十字槽盘头螺钉	Philips screw	2		√


3.05 Vehicle lamps

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
13	F4111300	左侧转向灯总成	Steering lamp, left	1		√
13-1	WY5W 12V/GB 15766.1-2008	灯泡	Bulb	2		
14	F4111400	右侧转向灯总成	Steering lamp, right	1		√
15	Q1410616L	六角头螺栓、弹簧垫圈和平垫圈组合件	Hex bolt and taper springness washer	6		√
16	F4121100B1	左前组合灯总成	Left head lamp	1		√
16	F4121100C1	左前组合灯总成	Left head lamp	1	low beam adjustable	

16-1	PY21W 12V/GB 15766.1-2008	灯泡	Bulb	2		
16-2	H1 12V/GB 15766.1-2008	灯泡	Bulb	4		
17	F4116100A2	左前雾灯	Front fog lamp,left	1		√
17-1	H3 12V/GB 15766.1-2008	灯泡	Bulb	2		
18	F4116200A2	右前雾灯	Front fog lamp,right	1		√
19	F4121200B1	右前组合灯总成	Right head lamp	1		√
19	F4121200C1	右前组合灯总成	Right head lamp	1	low beam adjustable	
20	F4116300	左后雾灯	Rear fog lamp, left	1		√

3.06 Instrument panel harness

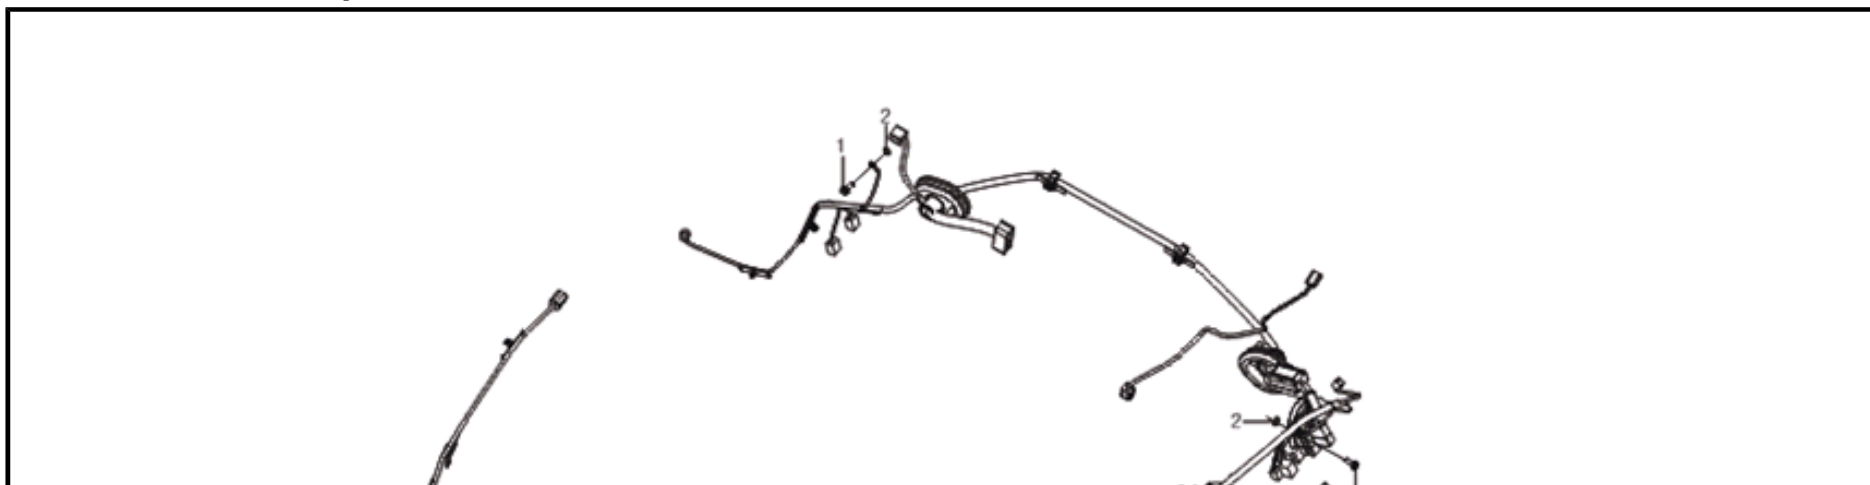

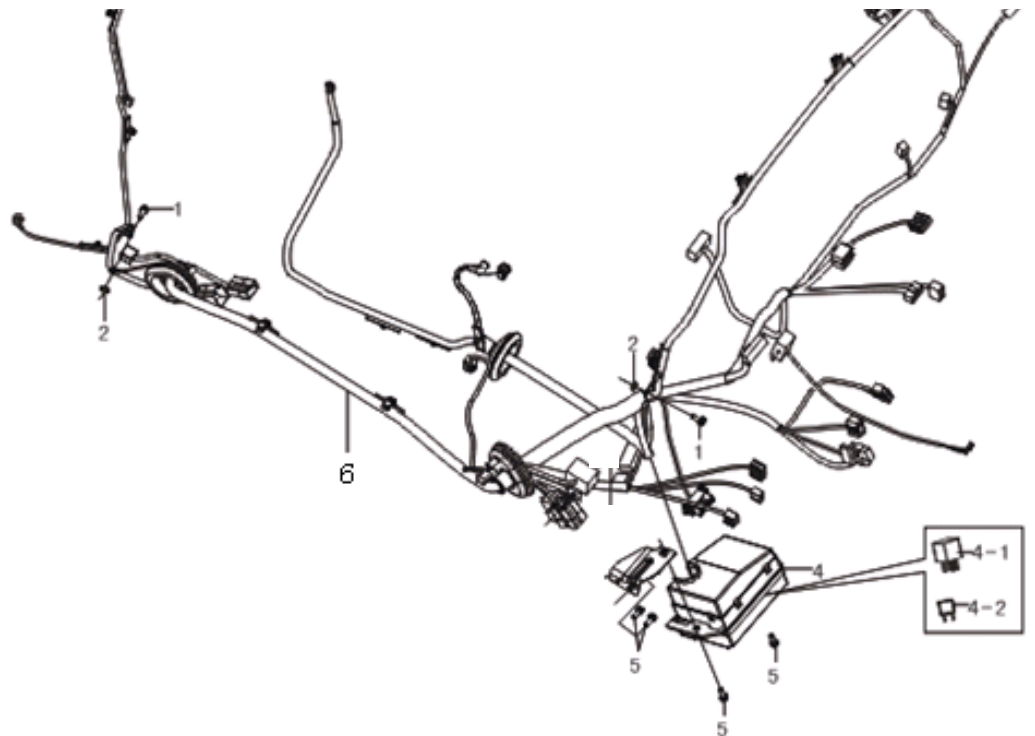

3.06 Instrument panel harness

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840616	六角法兰面螺栓	Hex flange bolt	4		√
2	Q41206	齿形垫圈	Toothed washer	4		√
4	F3722200A2	发动机舱电器中央控制盒总成	Instrument panel control box	1	part of the harness assy.cannot supply separately	√
4-1	JD1927-30A/QC T73	继电器	Relay	1	small lamp	√
4-1	JD1912-40A/QC T73	继电器	Relay	1	low beam	√
4-1	JD1912-40A/QC T73	继电器	Relay	1	high beam	√
4-1	JD1927-30A/QC T73	继电器	Relay	1	defroster	√
4-1	JD1927-30A/QC T73	继电器	Relay	1	front fog lamp	√


4-1	HF3508A	继电器	Relay	1	flash	√
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	ABS	√
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	Instrument cluster	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	SRS	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	Steering and reverse	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	BCM	√
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	Generator	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	Rear wiper	√
4-2	BX2011F-25A/QC T73	保险丝	Fuse	1	Air conditioner	√
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	small lamp	√


3.06 Instrument panel harness

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	Inner light	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	low beam	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	high beam	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	BCM	√
4-2	BX2011F-20A/QC T73	保险丝	Fuse	1	Rear defroster	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	cigar lighter	√
4-2	BX2011F-10A/QC T73	保险丝	Fuse	1	A/V system	√
4-2	BX2011A1-30A/QC T73	保险丝	Fuse	1	windows glass lifter	√
4-2	BX2011A1-30A/QC T73	保险丝	Fuse	2	ABS	√

4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	mp3	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	fog lamp	√
4-2	BX2011F-15A/QC T73	保险丝	Fuse	1	front wiper	√
5	Q1420616	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	4		√
6	F4003100C1	仪表板线束总成	Instrument panel harness	1	BCM, ABS, cable-shift	√
	F4003111	仪表板线束安装支架	Bracket,Instrument panel harness	1		
	F4003120	仪表板线束盒安装支架	Bracket,Instrument panel control box	1		√
	F4003600	仪表板SRS线束总成	Instrument panel SRS harness	1		√

3.07 Battery negative wire

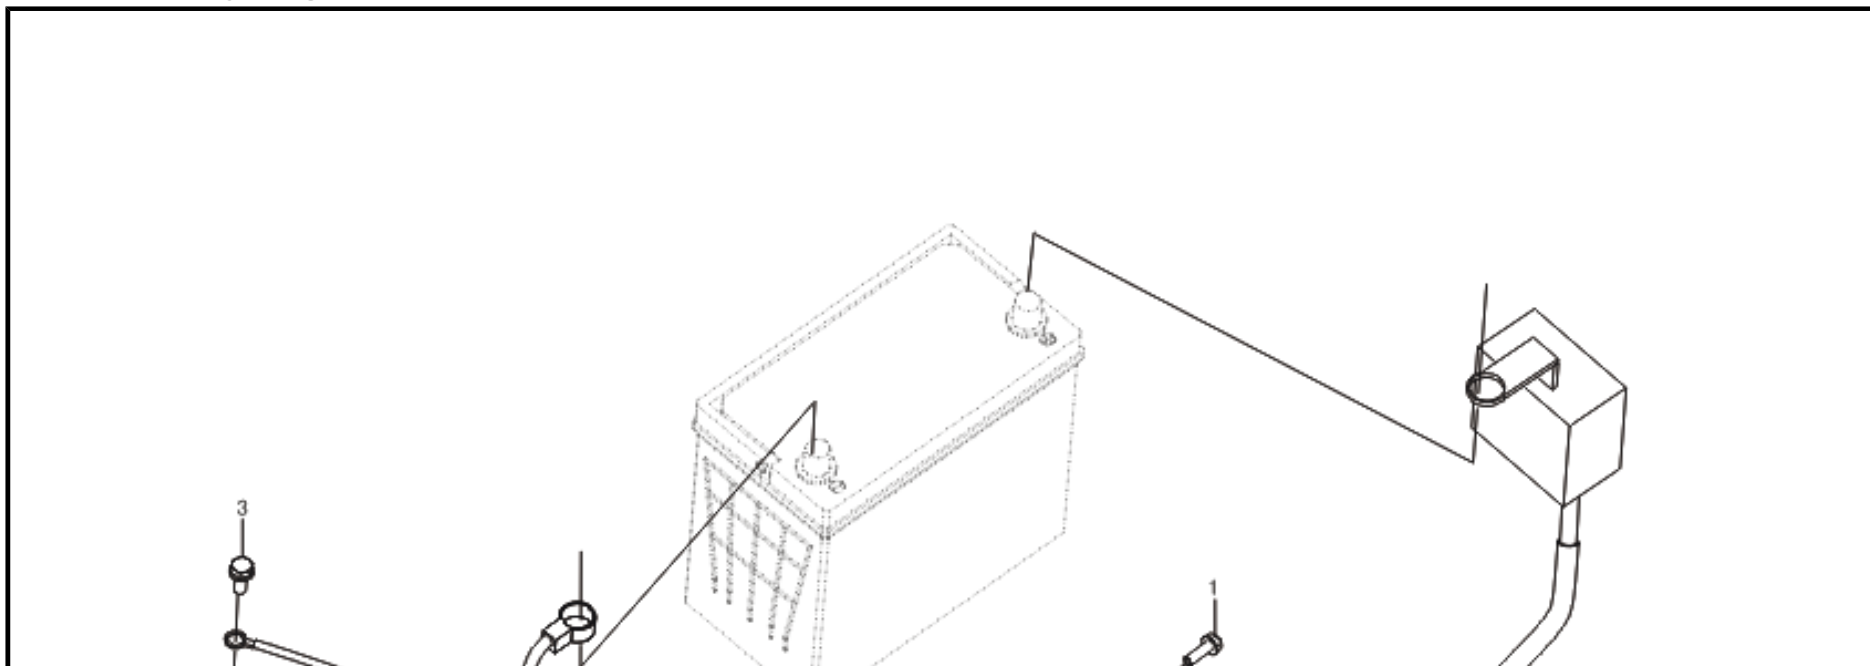

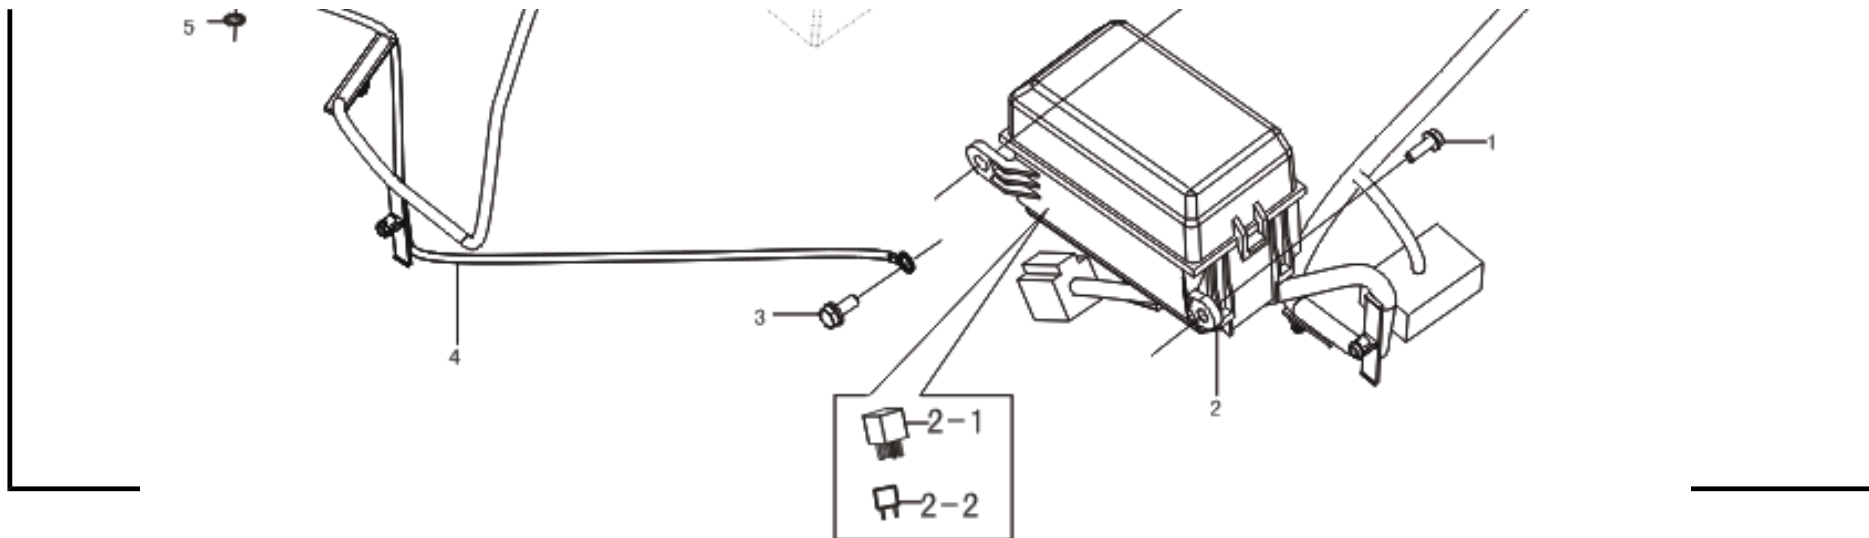


3.07 Battery negative wire


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1840616T1F30	六角头螺栓和平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
2	F3722200A2	发动机舱电器中央控制盒总成	Central control case,engine room	1	part of the harness assy.cannot supply separately	√
2-1	JD1912-40A/QC T73	继电器	Relay	1	condenser fan	√
2-1	JD1912-40A/QC T73	继电器	Relay	1	radiator fan	√
2-1	JD1912-40A/QC T73	继电器	Relay	1	main relay	√
2-1	JD1912-40A/QC T73	继电器	Relay	1	compressor	√
2-1	JD1912-40A/QC T73	继电器	Relay	1	horn	√
2-1	JD1929-40A/QC T73	继电器	Relay	1	Fuel pump	√
2-2	BX2011F-20A/QC T73	保险丝	Fuse	1	horn、 warning	
2-2	BX2011F-15A/QC T73	保险丝	Fuse	1	Fuel pump	
2-2	BX2011F-10A/QC T73	保险丝	Fuse	1	compressor	


2-2	BX2011F-15A/QC T73	保险丝	Fuse	1	condenser fan	
2-2	BX2011F-15A/QC T73	保险丝	Fuse	1	radiator fan	
2-2	BX2011F-20A/QC T73	保险丝	Fuse	1	main relay	
3	Q1840612	六角法兰面螺栓	Hex flange bolt	1		√
4	F4001350	蓄电池负极线束	Battery negative wire	1		√
5	Q41206	齿形垫圈	Toothed washer	1		√

3.08 Body harness

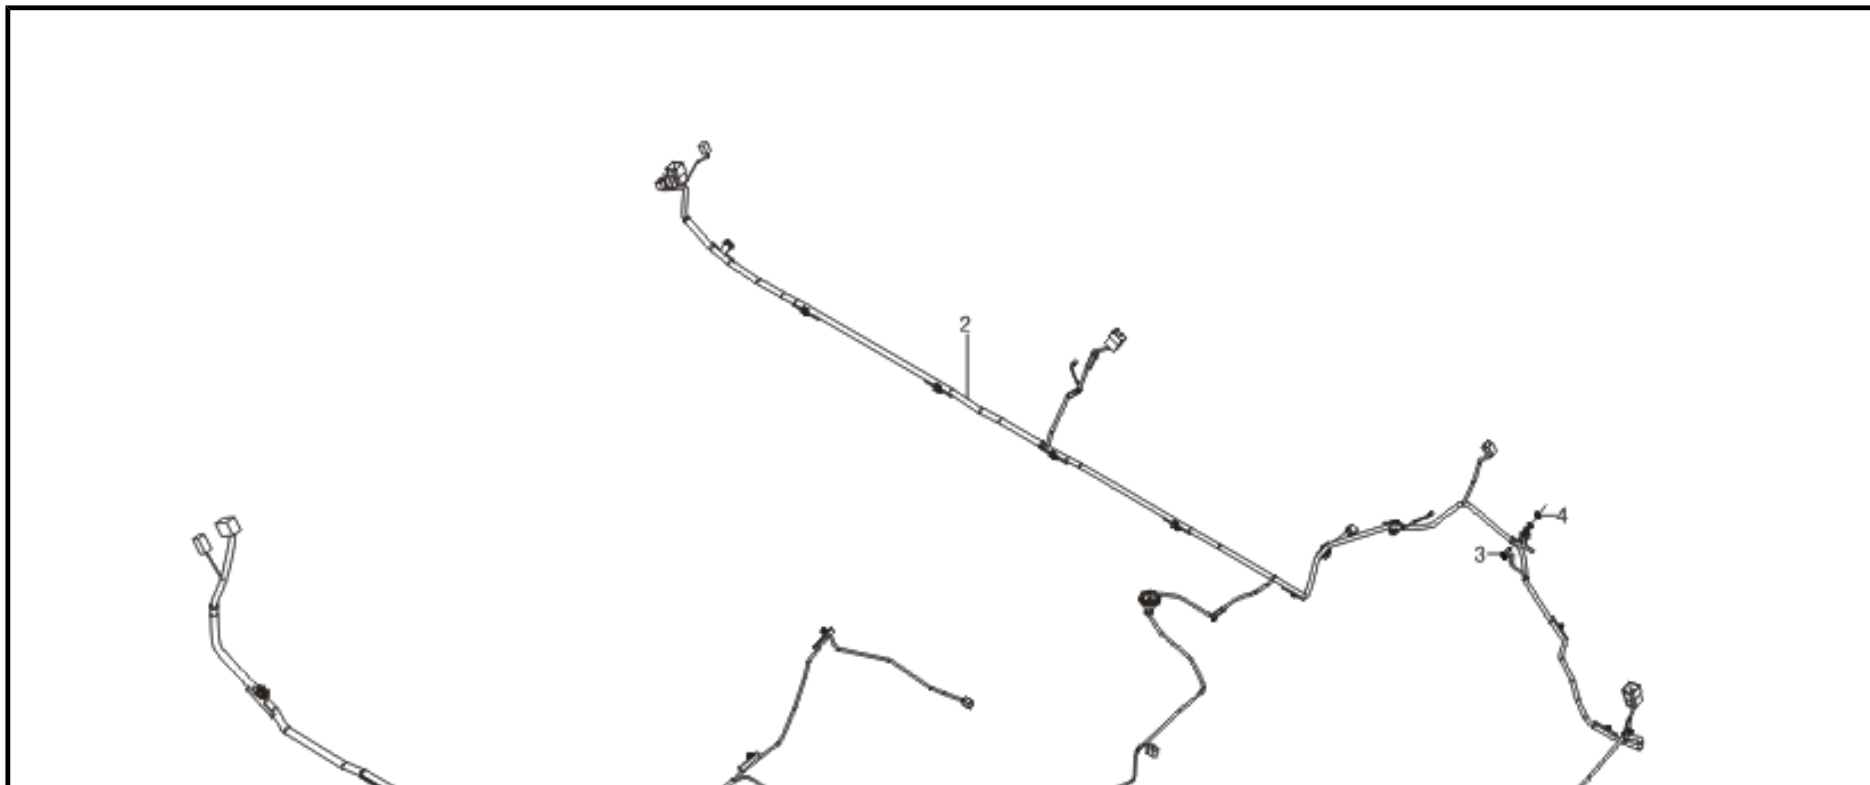

3.09 Door harness

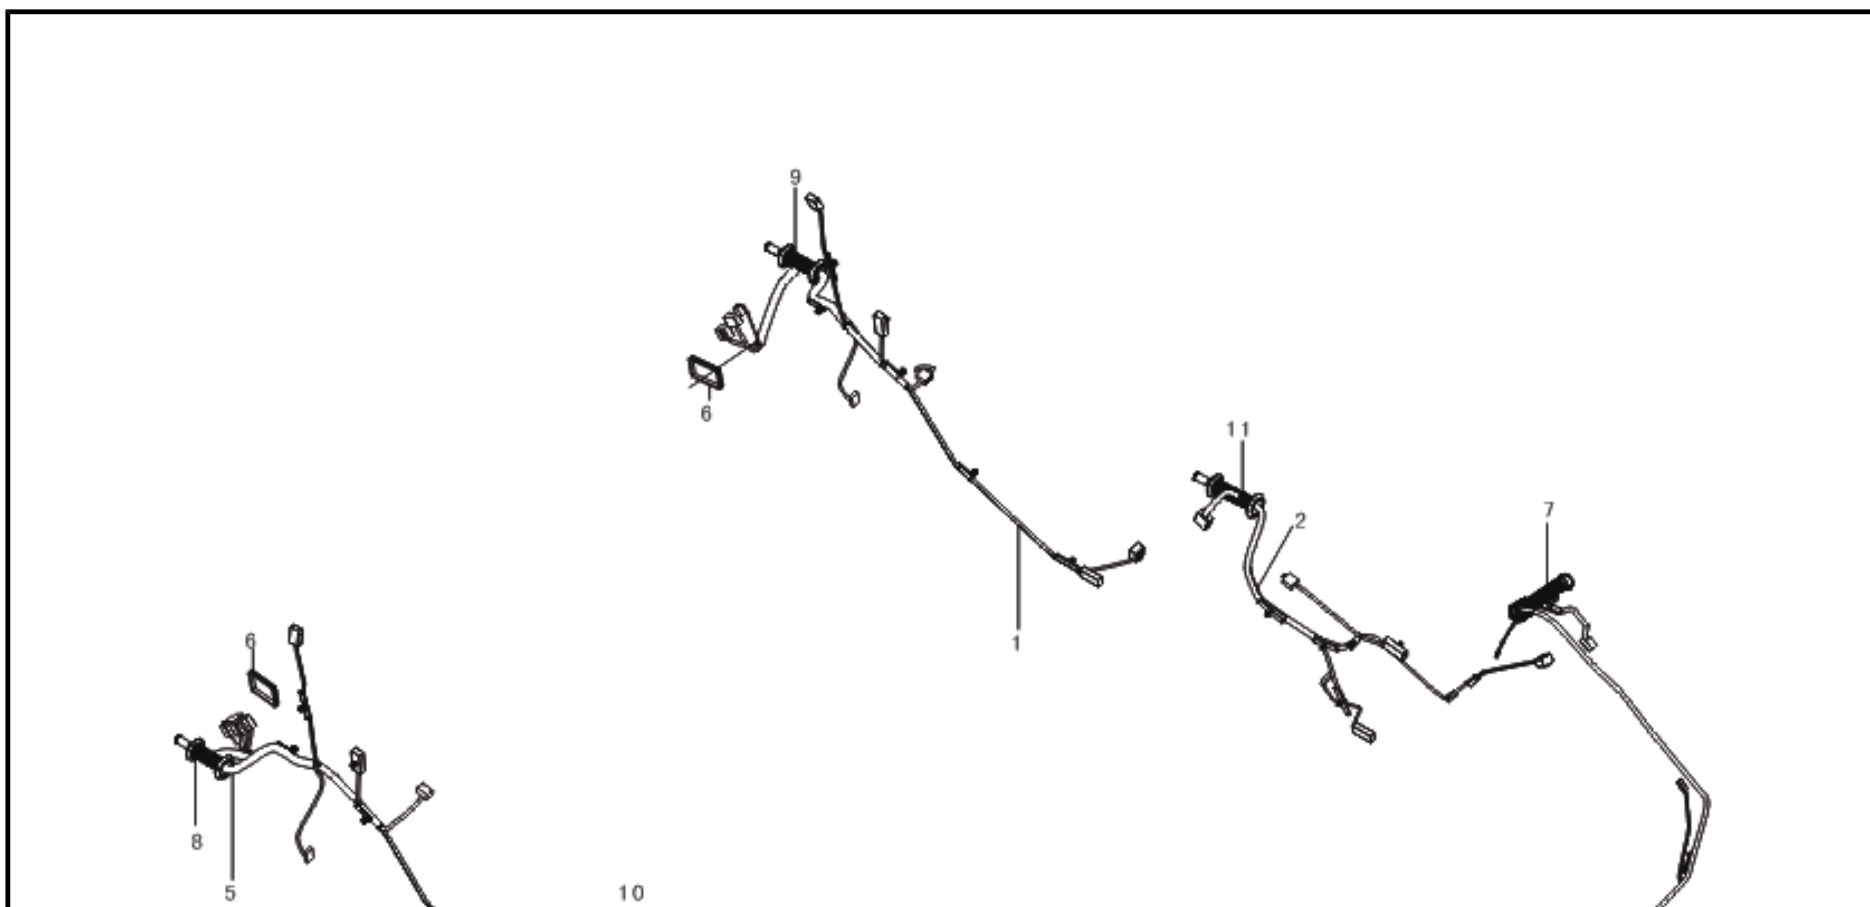

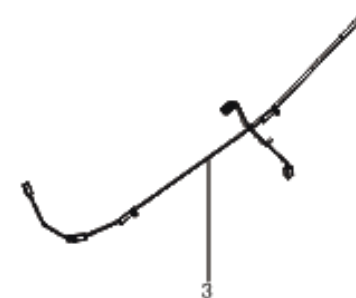

3.09 Door harness

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F4006200	右前门线束总成	Front right door harness	1	EX	√
1	F4006200B1	右前门线束总成	Front right door harness	1	DX LX	√
2	F4006400	右后门线束总成	Rear right door harness	1		√
3	F4006600	后背门线束总成	Back door harness	1	EX	√
3	F4006600B1	后背门线束总成	Back door harness	1	DX LX	√
4	F4006300	左后门线束总成	Rear left door harness	1		√
5	F4006100	左前门线束总成	Front left door harness	1	EX	√
5	F4006100B1	左前门线束总成	Front left door harness	1	DX LX	√
6	F4035111	A柱过线胶套	Harness sleeve,A pillar	2	canceled	
7	F4035415	后背门过线胶套	Back door harness sleeve	1	part of the harness assy.cannot supply separately	
8	F4035411	左前门过线胶套	Front left door harness sleeve	1	part of the harness assy.cannot supply separately	
9	F4035412	右前门过线胶套	Front right door harness sleeve	1	part of the harness assy.cannot supply separately	
10	F4035413	左后门过线胶套	Rear left door harness sleeve	1	part of the harness assy.cannot supply separately	
11	F4035414	右后门过线胶套	Rear right door harness sleeve	1	part of the harness assy.cannot supply separately	

3.10 Headinging harness







3.10 Headinging harness

[illegible]

--	--	--	--	--	--	--

3.11 Engine harness and ECU

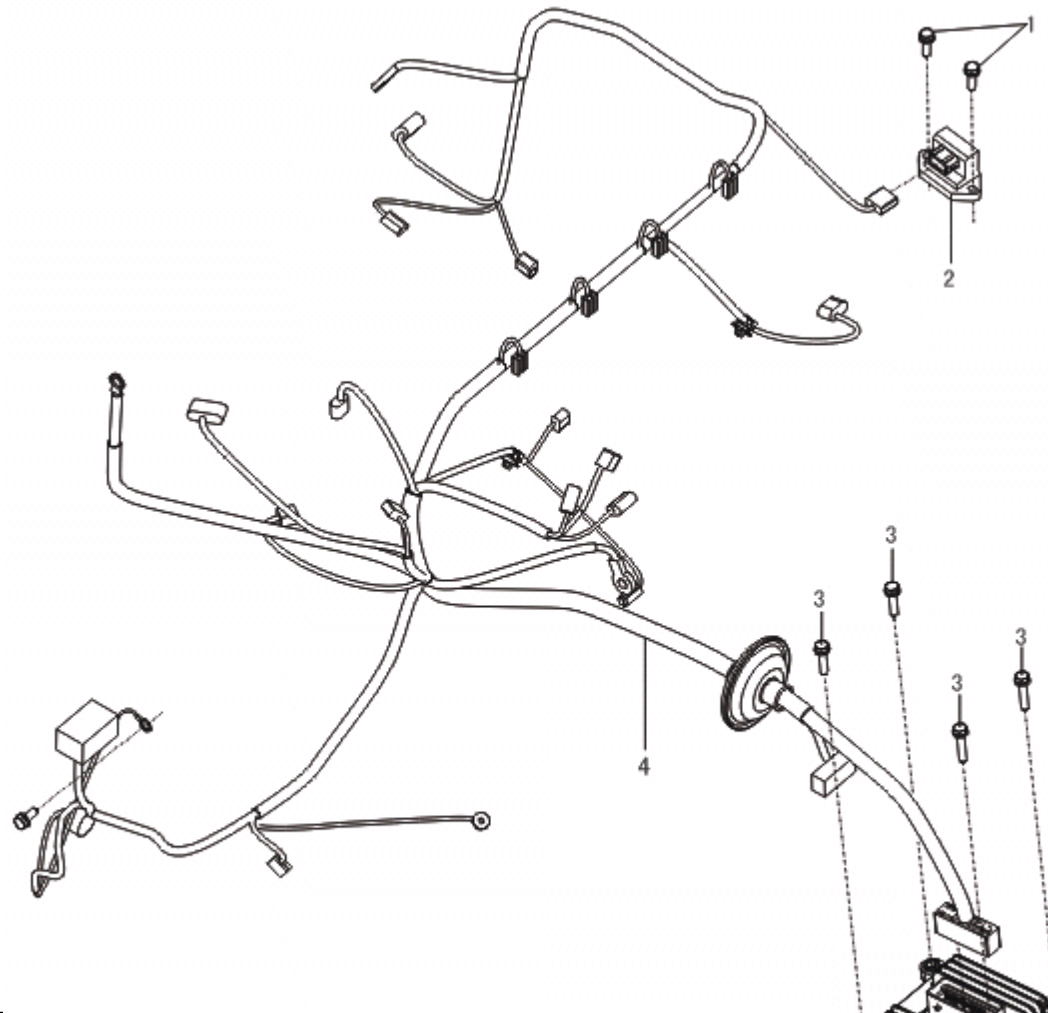





3.11 Engine harness

[illegible]

4. Vehicle body



4.01 Vehicle body assy.


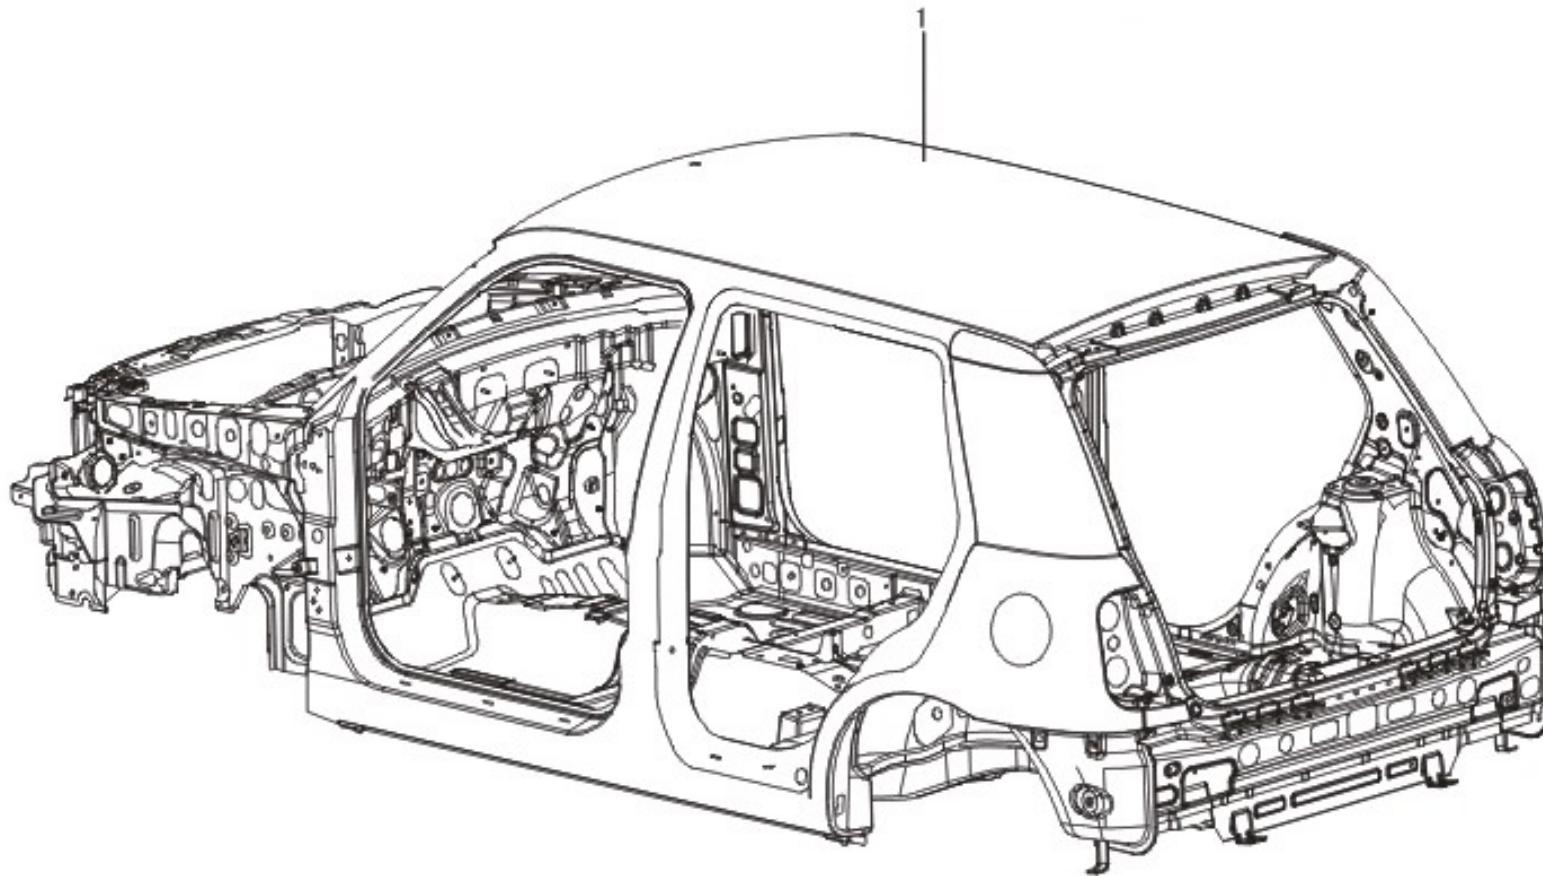


4.01 Vehicle body assy.

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5001000B1	白车身焊接总成	Vehicle body assy.			

4.02 Engine hood

--

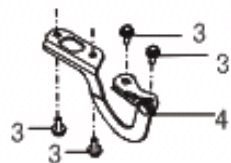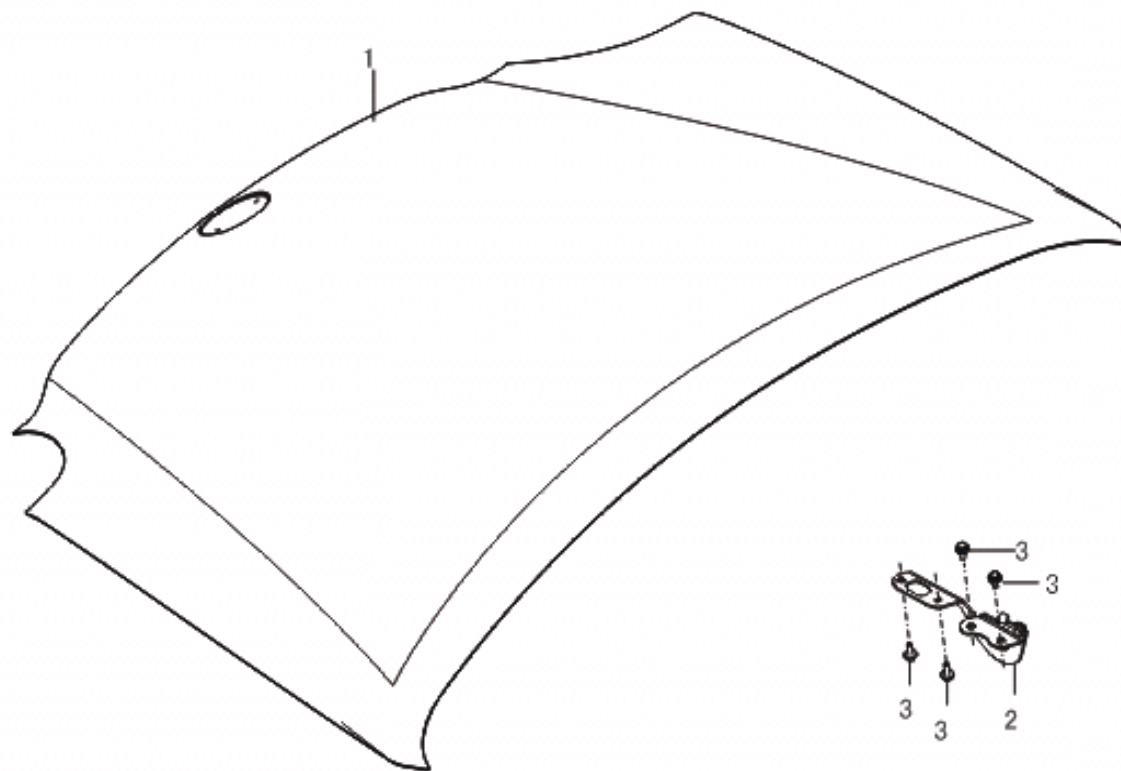


4.02 Engine hood

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F8402000	发动机罩总成	Engine hood	1		√

2	F8402620	发动机罩右铰链总成	Engine hood right hinge	1		√
3	F8402610	发动机罩左铰链总成	Engine hood left hinge	1		√
4	Q1460620	六角头螺栓弹簧垫圈和平垫圈组合件	Hex bolt and taper springness washer	8		√

4.03 Front cowl

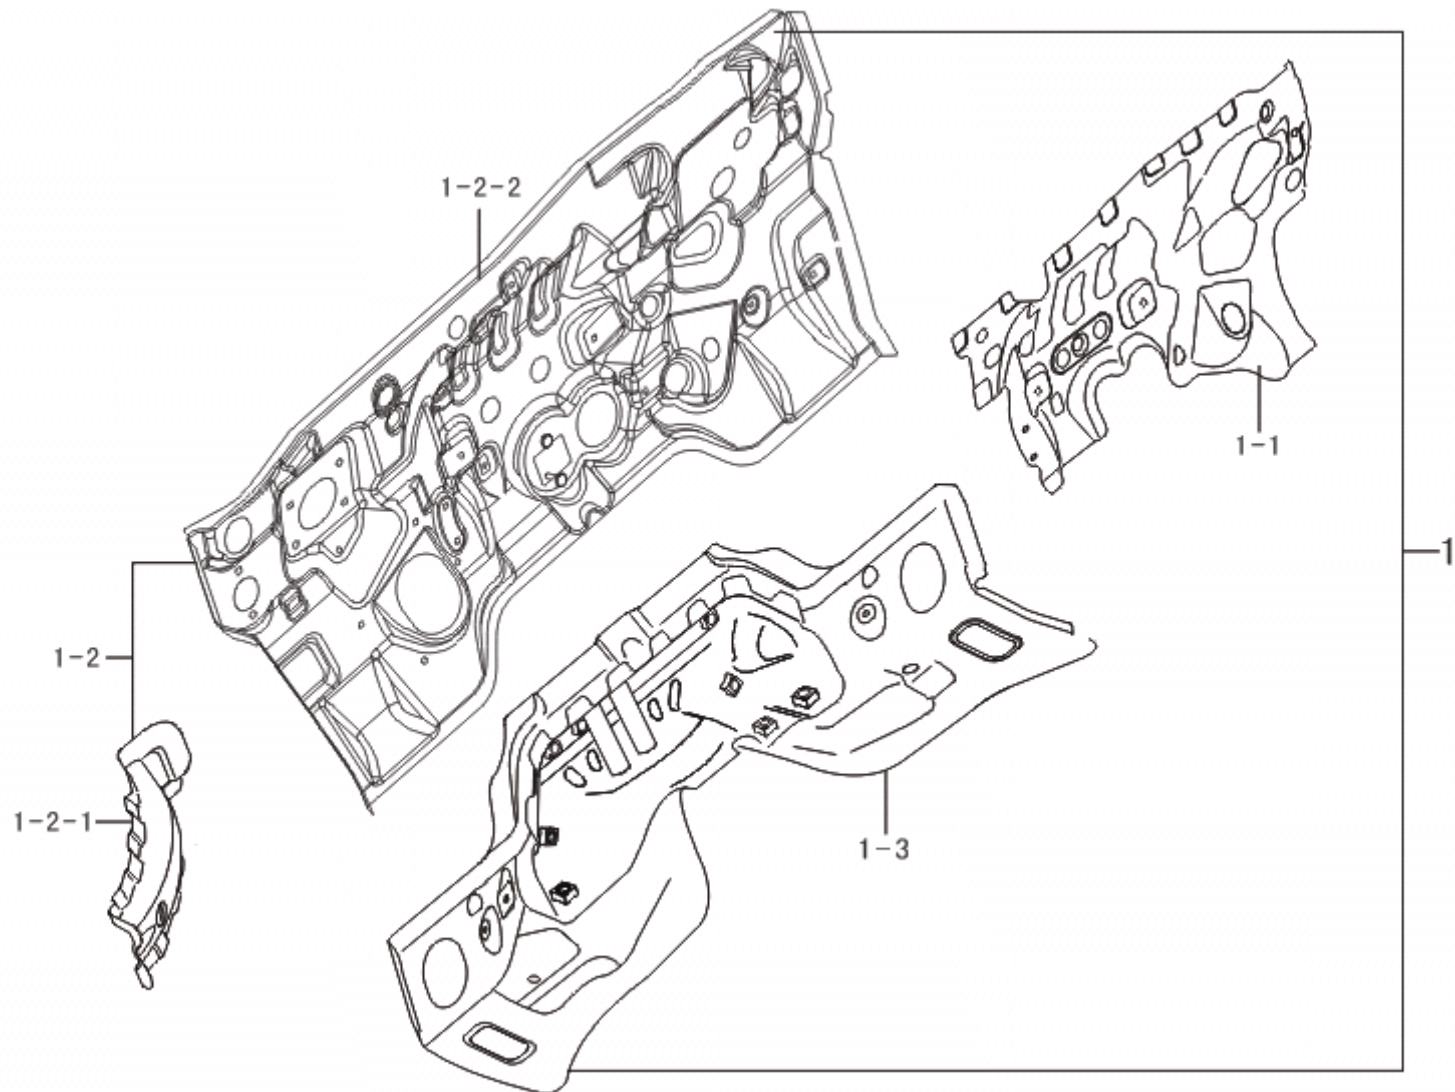


4.03 Front

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	SUPPLY
1	F5301000B1	前围总成	Dash panel assy.	1		√
1-1	F5301111	前围板加强板	Dash panel stiffener	1		√

1-2	F5301100B1	前围板总成	Dash panel	1		
1-2-1	F5301107	前围板左加强横梁	Dash panel stiffening beam	1		√
1-2-2	F5301101B1	前围板	Dash panel body	1		
1-3	F5301200	前围下横梁总成	Dash panel lower beam	1		√

4.04 Roof

--

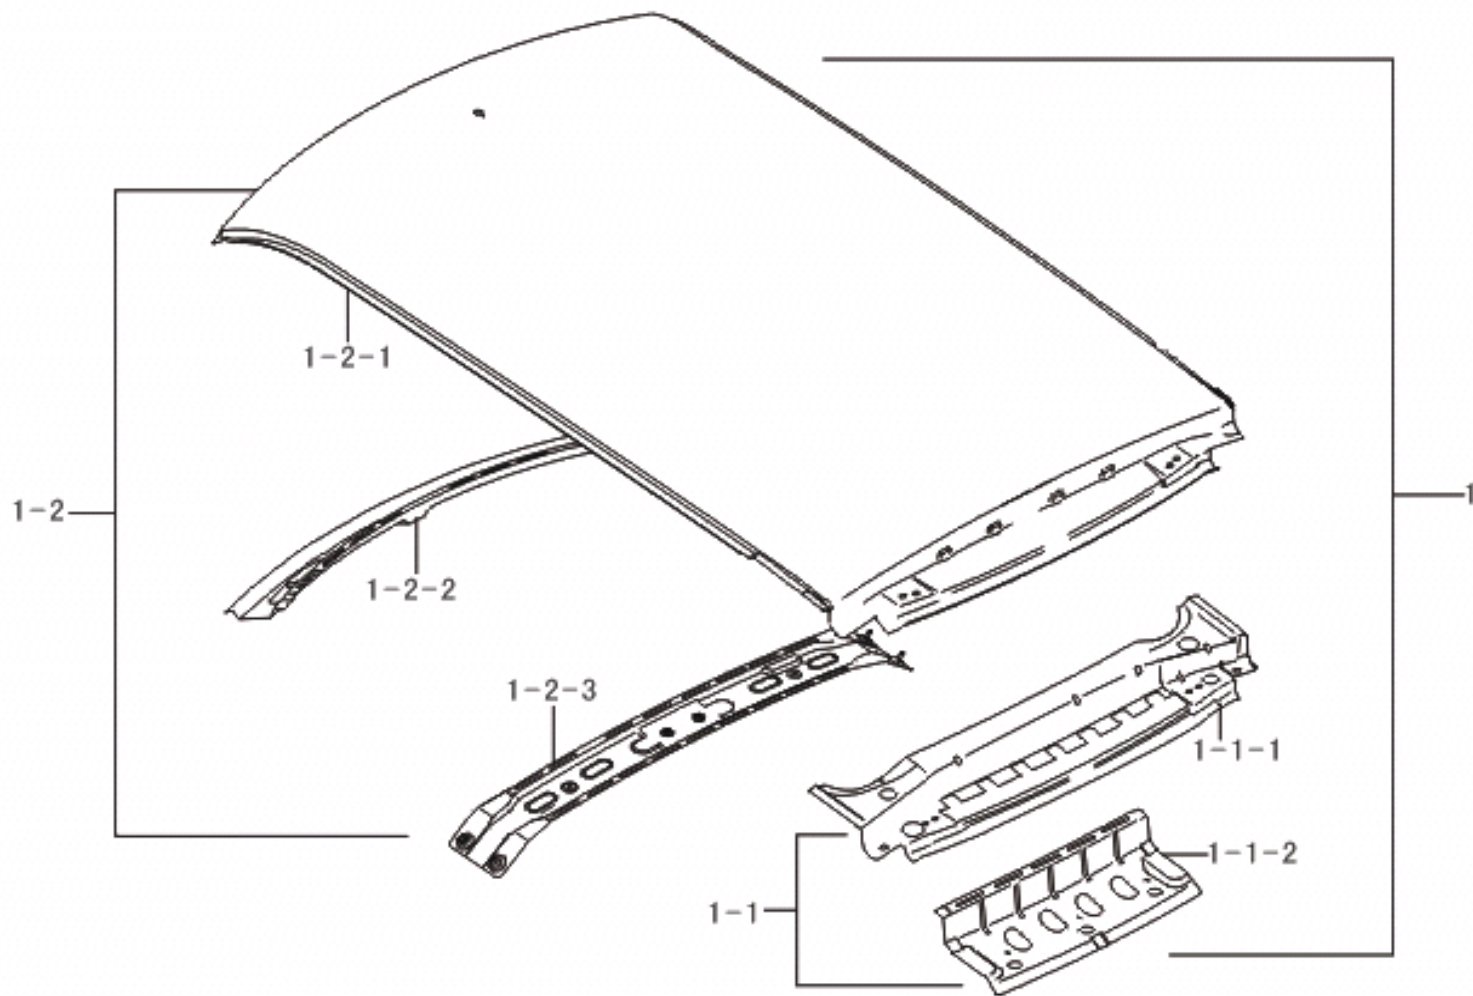


4.04 R

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5701000	顶盖总成	Roof assy.	1		√
1-1	F5701200	顶盖后横梁总成	Roof rear beam assy.	1		√
1-1-1	F5701202	顶盖后横梁加强板	Roof rear beam stiffener	1		√

1-1-2	F5701201	顶盖后横梁	Roof rear beam	1		√
1-2	F5701100	顶盖组件	Roof	1		√
1-2-1	F5701101	顶盖	Roof panel	1		√
1-2-2	F5701111	顶盖前横梁	Roof front beam	1		√
1-2-3	F5701102	顶盖中横梁	Roof middle beam	1		√

4.05 Side body



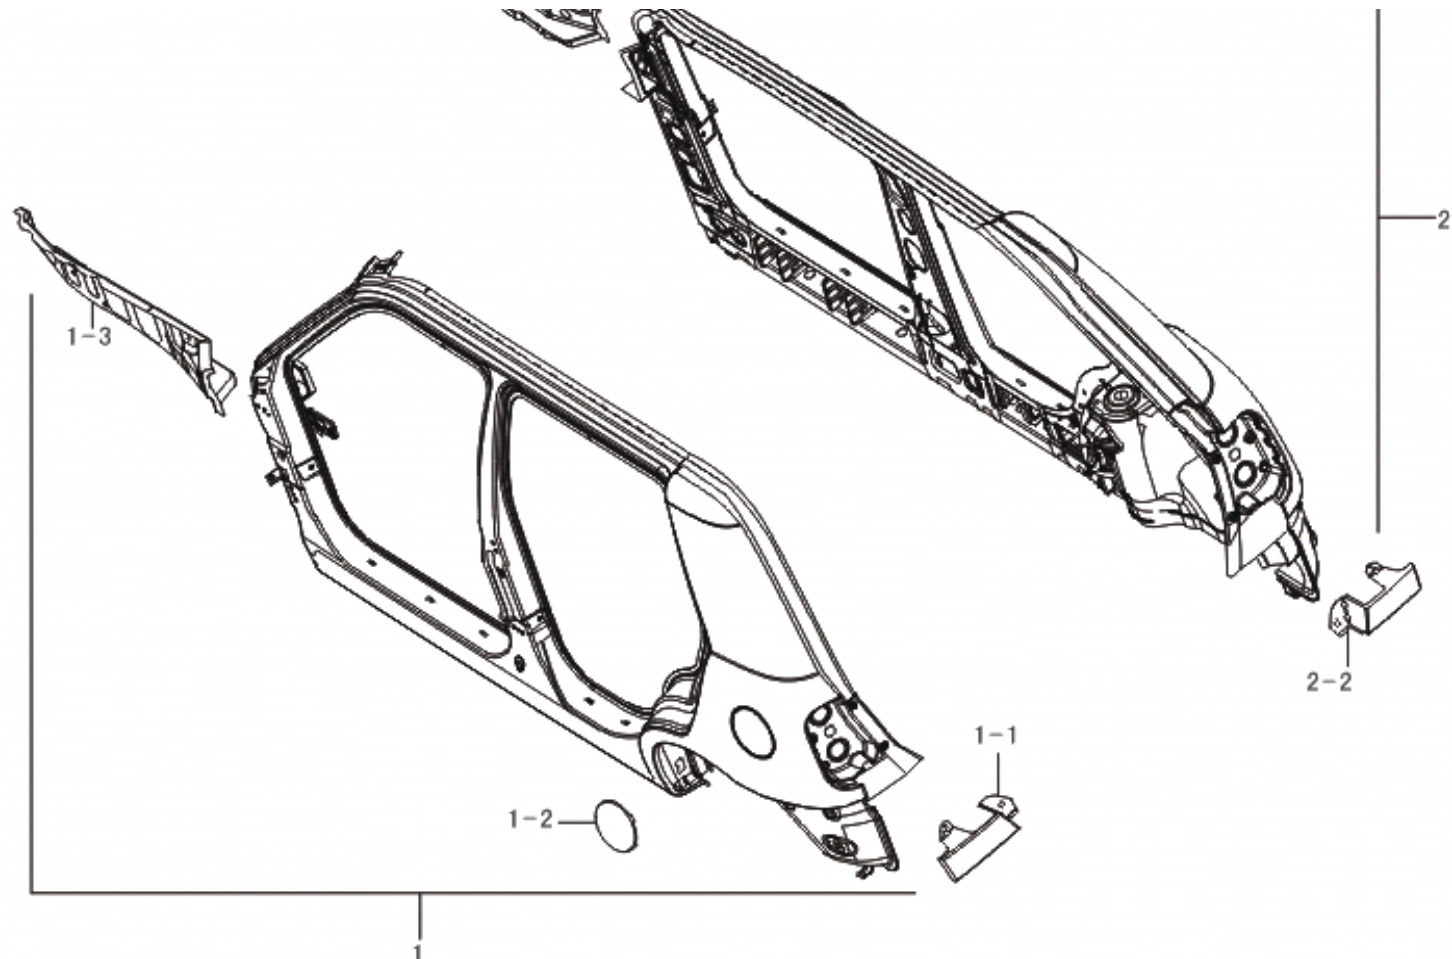



4.05 Side

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5400010	左侧围总成	Left cowl assy.	1		√
1-1	F5401107	左侧围外板后封接板	Left cowl connecting panel, rear	1		√
1-2	F5401360	加油口盖组件	Fuel filler cap	1		√
1-3	F5401501	左侧围前封接板	Left cowl connecting panel, front	1		√
2	F5400020	右侧围总成	Right cowl assy.	1		√

2-1	F5401601	右侧围前封接板	Right cowl connecting panel, front	1		√
2-2	F5401207	右侧围外板后封接板	Right cowl connecting panel, rear	1		√

4.06 Front doors

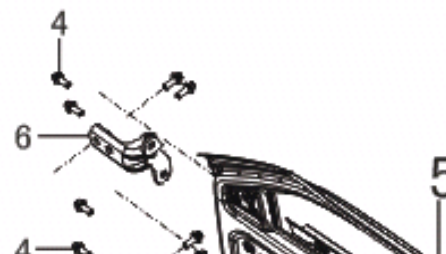



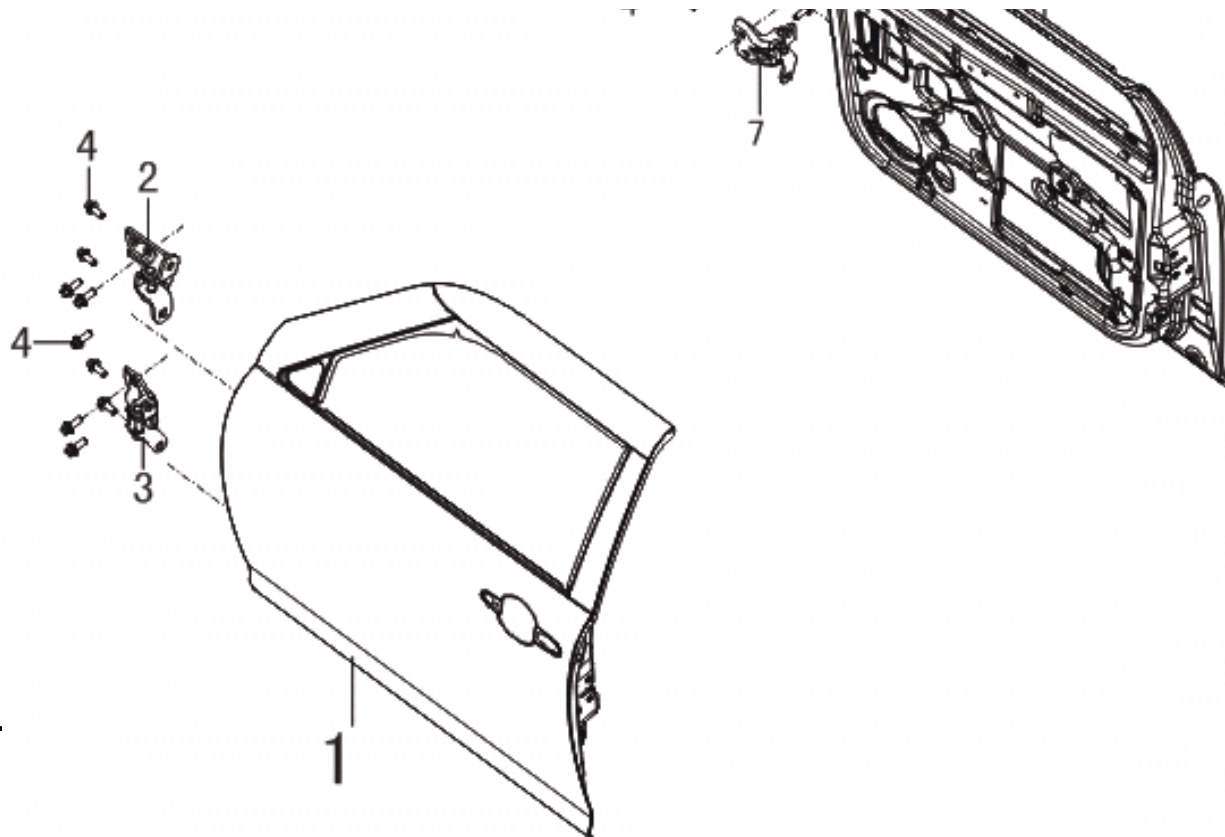


4.06 Front doo

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F6101100	左前侧车门总成	Front left door	1		√
2	F6106110	左前侧车门上铰链总成	Upper hinge,front left door	1		√
3	F6106120	左前侧车门下铰链总成	Lower hinge,front left door	1		√
4	QLS0820M2	六角法兰面螺栓	Hex flange bolt	8		√
5	F6101200	右前侧车门总成	Front right door	1		√
6	F6106210	右前侧车门上铰链总成	Upper hinge,front right door	1		√
7	F6106220	右前侧车门下铰链总成	Lower hinge,front right door	1		√

4.07 Front side fender

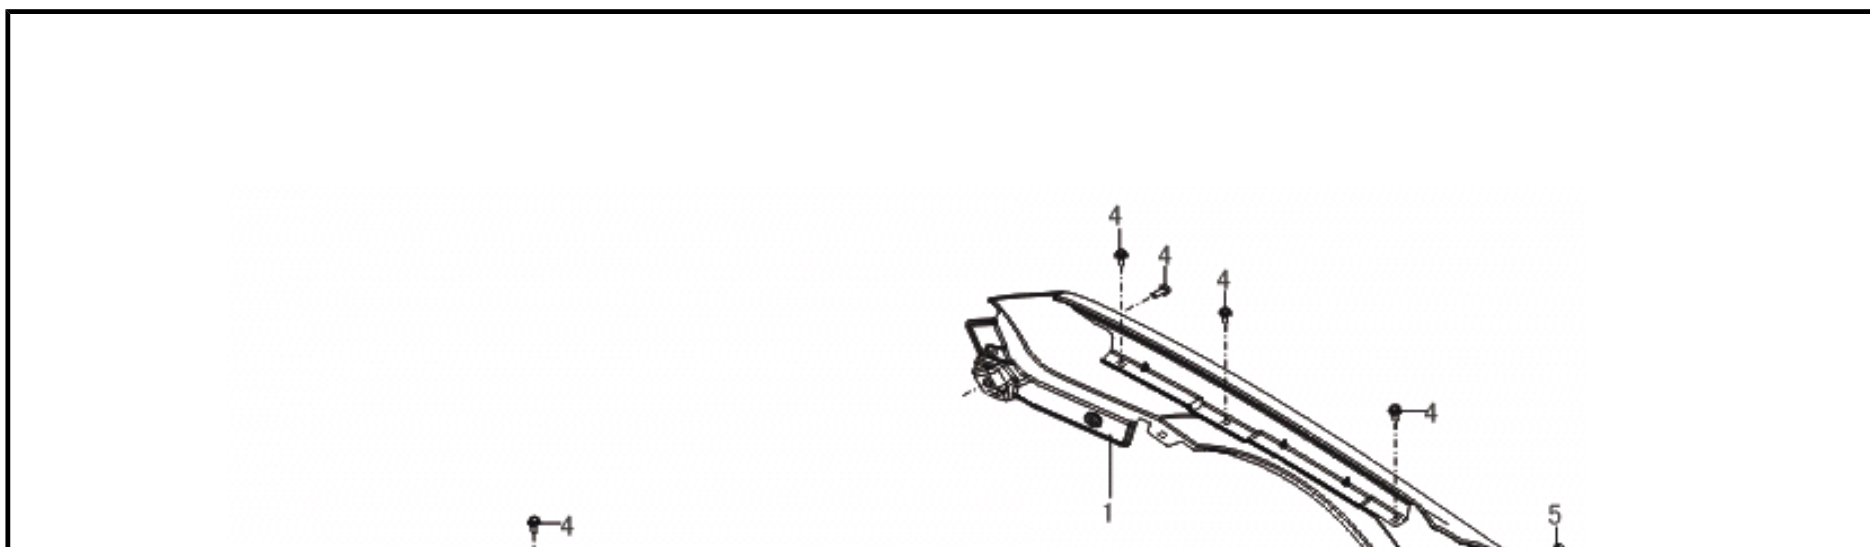


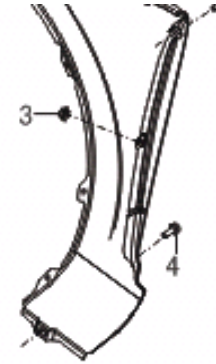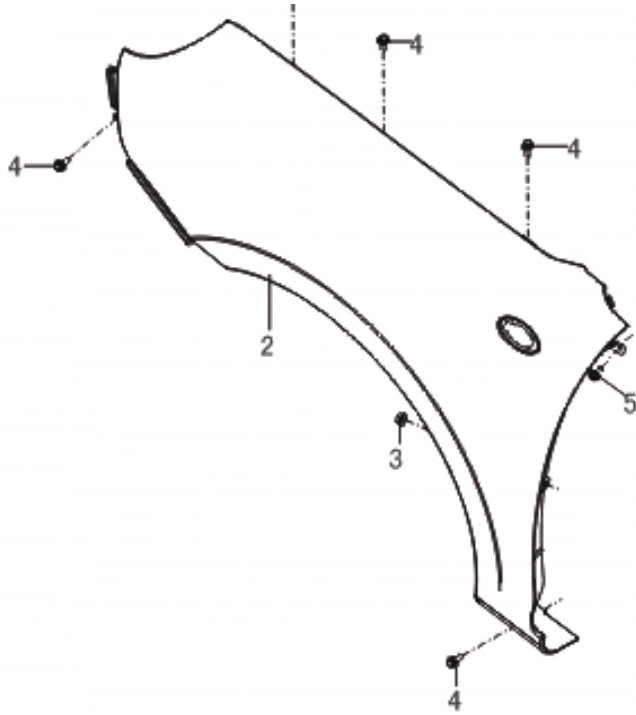


4.07 Front

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F8403211	右前翼子板外板	Front right fender	1		√
2	F8403111	左前翼子板外板	Front left fender	1		√
3	Q32006	法兰面螺母	Hex flange bolt	2		√
4	Q1460620	六角头螺栓平垫圈组合件	Hex bolt and washers	10		√
5	Q2150620	内六角花型盘头螺钉、弹簧垫圈和平垫圈组合件	Bolt	2		√

4.08 Front body assy.

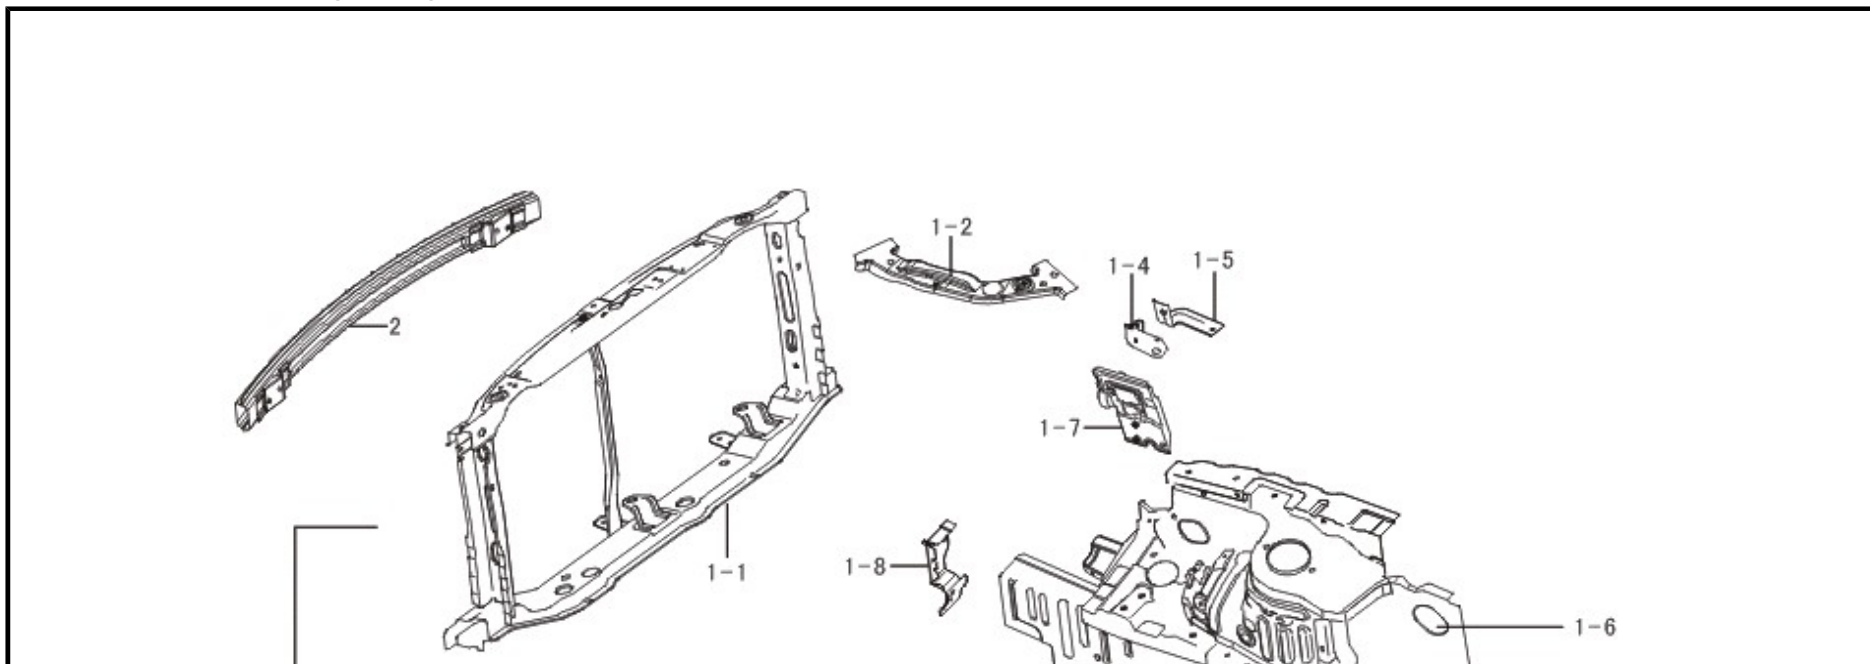

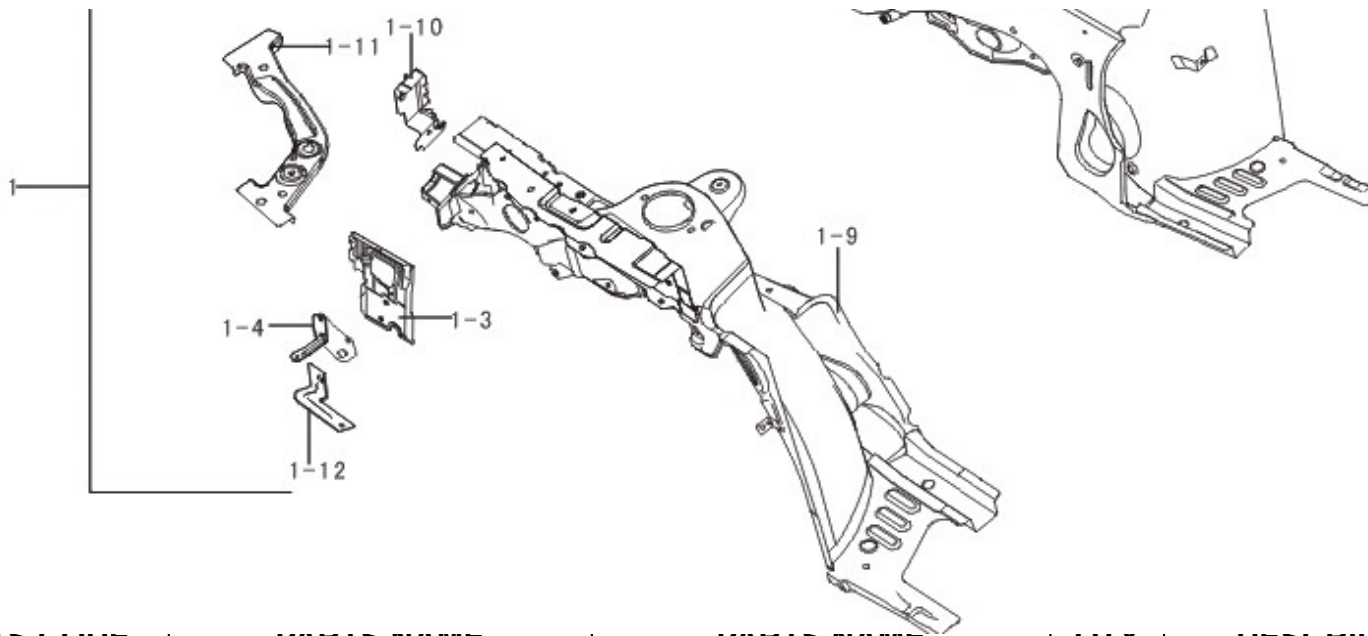



4.08 Frt

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F8400010	车前钣金焊接总成	Front damping assy.	1		√
1-1	F8401000	水箱上下横梁总成	Radiator beam assy.	1		√
1-2	F8401103	前大灯右安装横梁	Head lamp bracket, right	1		√
1-3	F8400131	左前纵梁堵板	Left front longeron side panel	1		√
1-4	F8412000	前拖钩总成	Drag hook	2		√
1-5	F8400217	挡泥板安装支架 II 右支架	Mud guard bracket, right	1		√
1-6	F8400600	右前纵梁轮罩总成	Right front longeron and front wheel cap assy.	1		√
1-7	F8400231	右前纵梁堵板	Right front longeron side panel	1		√
1-8	F8400202	前防撞横梁右安装板	Anti-collision beam bracket, right	1		√
1-9	F8400500	左前纵梁轮罩总成	Left front longeron and front wheel cap assy.	1		√
1-10	F8400102	前防撞横梁左安装板	Anti-collision beam bracket, left	1		√

1-11	F8401102	前大灯左安装横梁	Head lamp bracket, left	1		√
1-12	F8400117	挡泥板安装支架 II 左支架	Mud guard bracket, left	1		√
2	F2803000	防撞横梁总成	Anti-collision beam assy.	1		√

4.09 Vehicle Floor

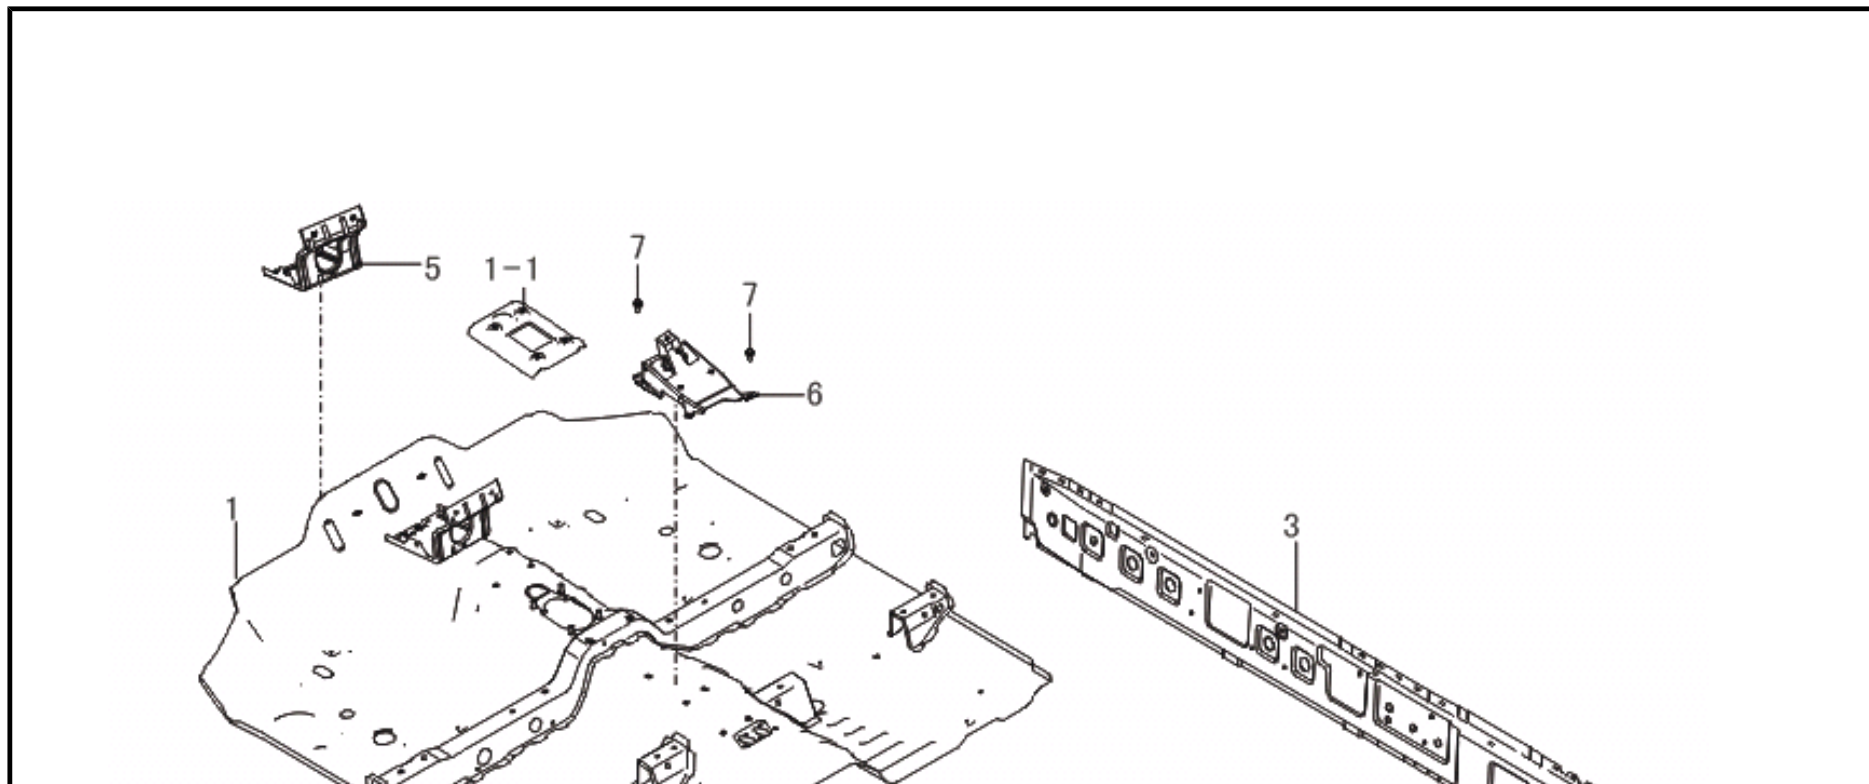


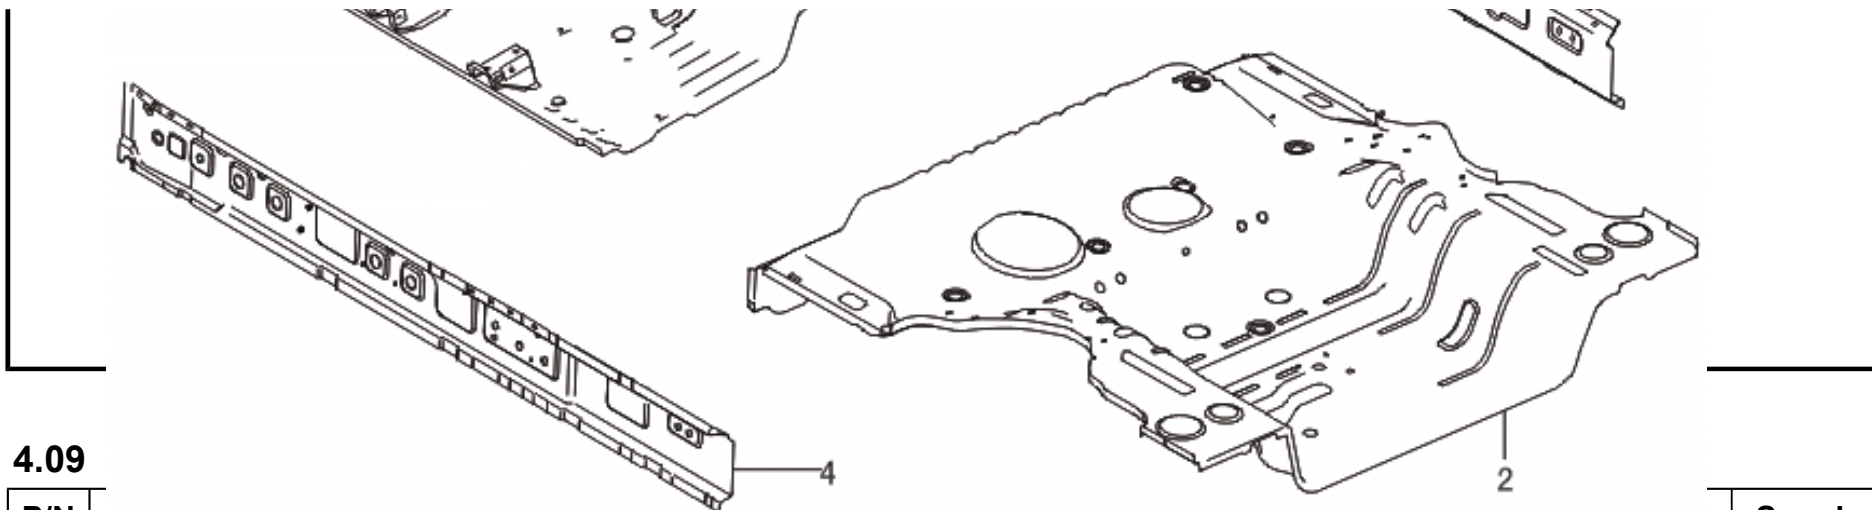


4.09

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5120600B1	前地板焊接总成	Front floor assy.	1		
1-1	F5120660B1	换档支座安装支架总成	Shift system bracket	1		√
2	F5130800	后地板面板总成	Rear floor	1		√
3	F5120640	右门槛内板总成	Right threshold	1		√
4	F5120630	左门槛内板总成	Left threshold	1		√
5	F5120609	仪表台下支架	Dashboard bracket	1		√
6	F5120700	手刹盖板总成	Parking brake panel	1		√
7	Q1460620	六角头螺栓平垫圈组合件	Bolt	2		√

4.10 Rear body assy.

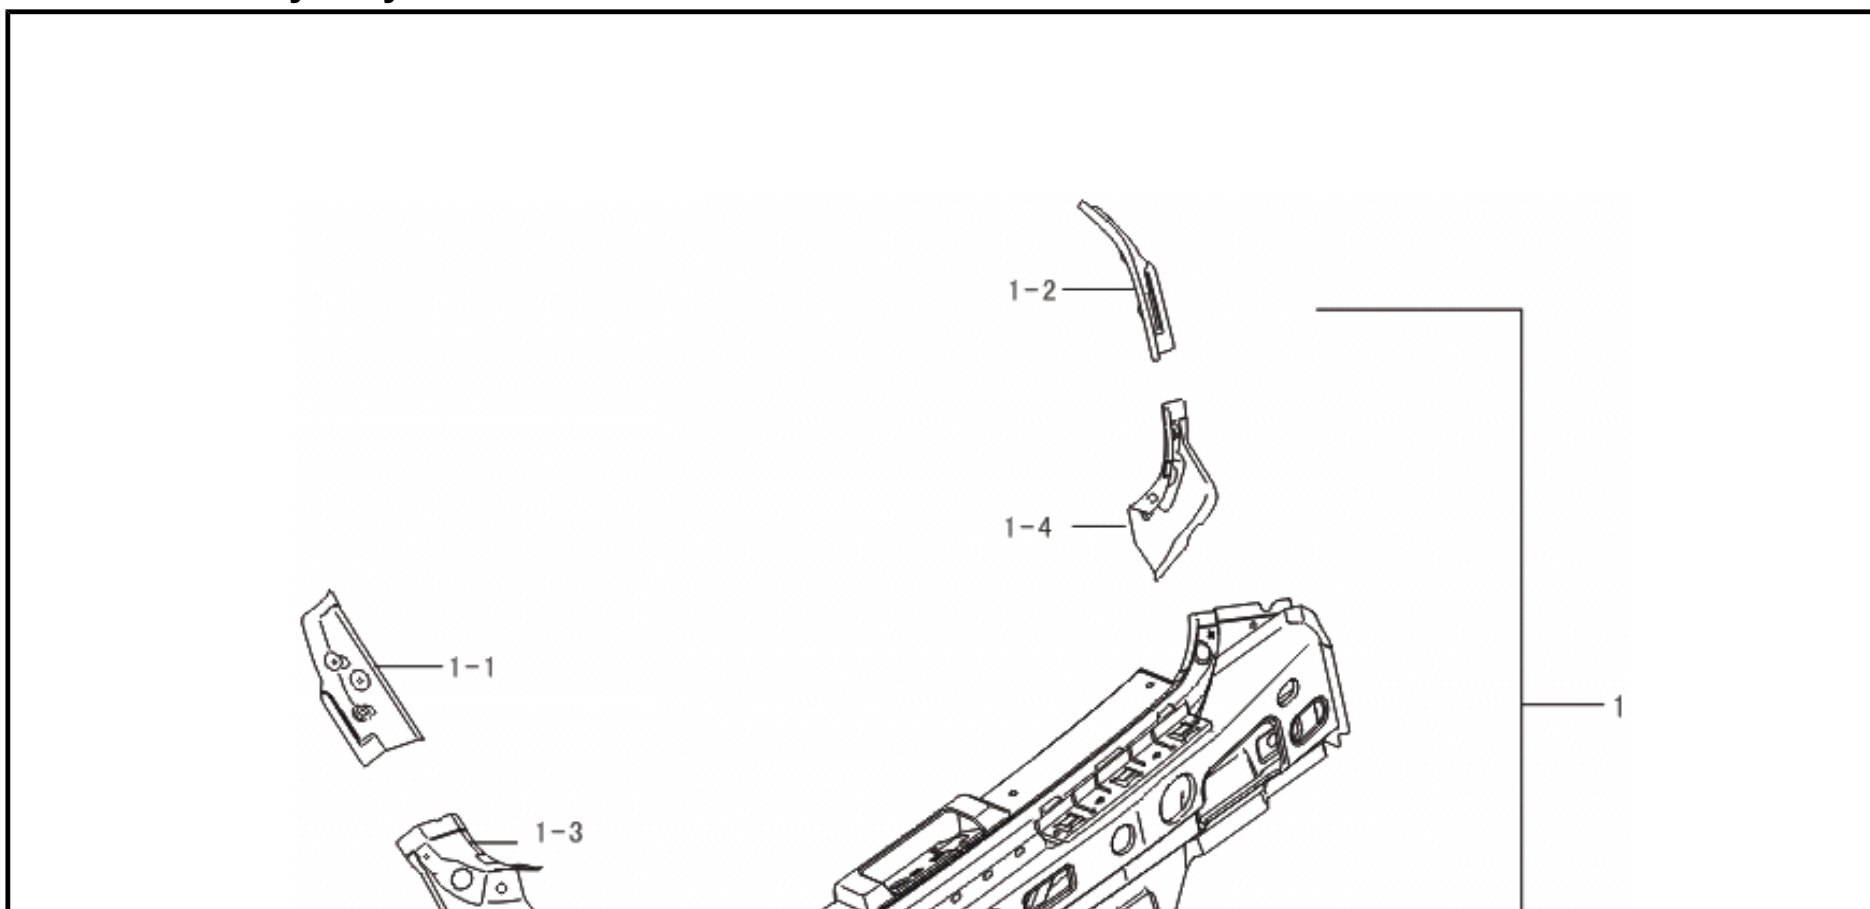


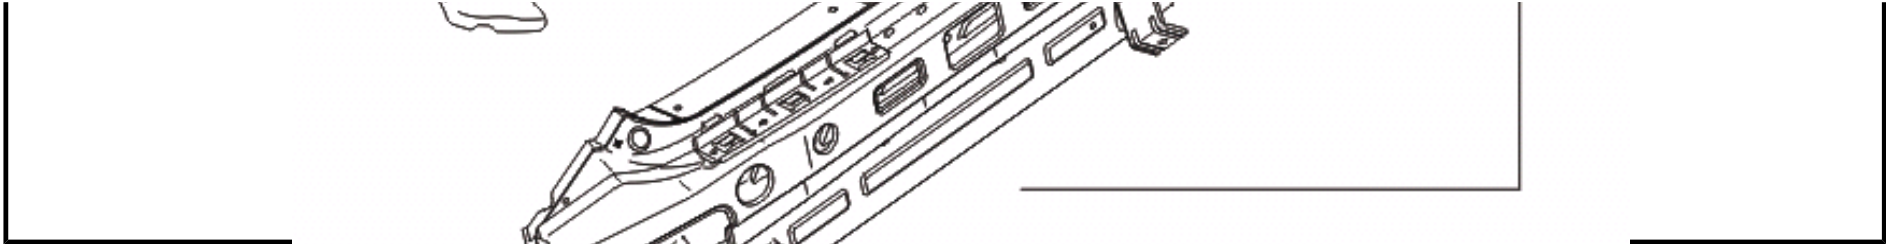

4.10 Rear body

[illegible]

4.11 Rear door

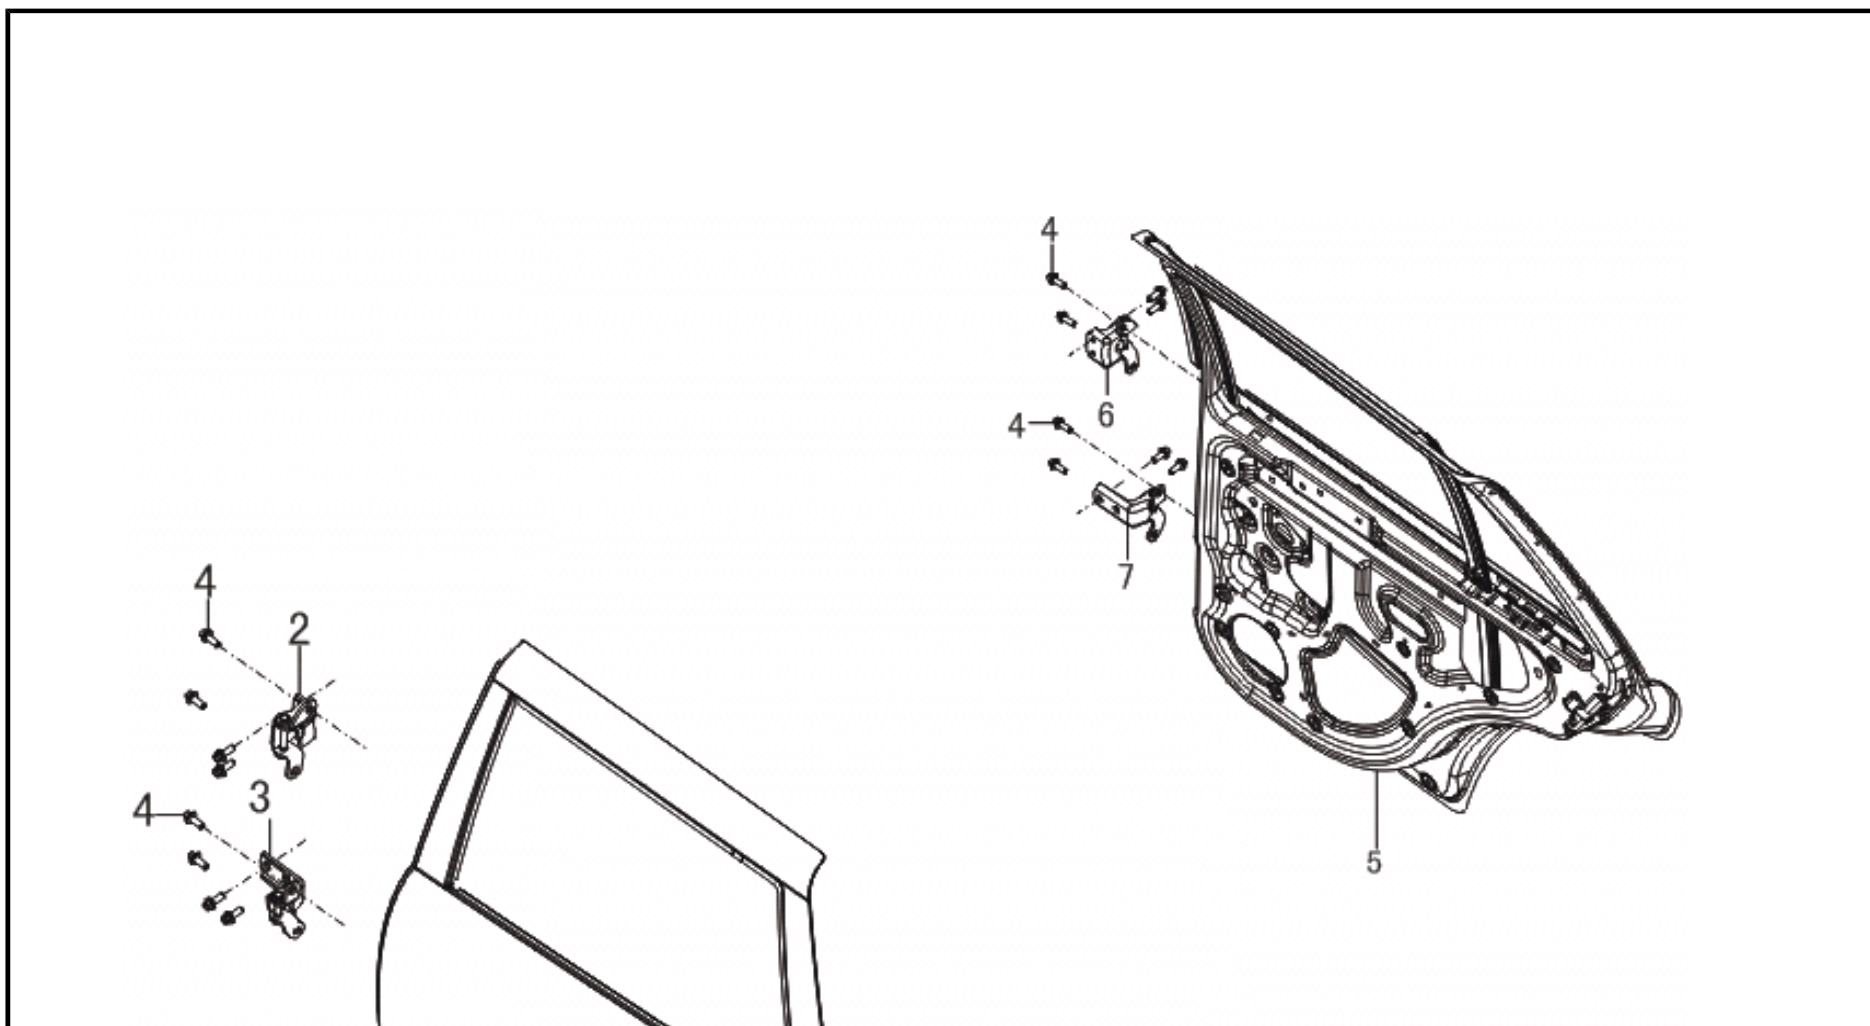




4.11


--	--	--	--	--	--	--

4.12 Back door

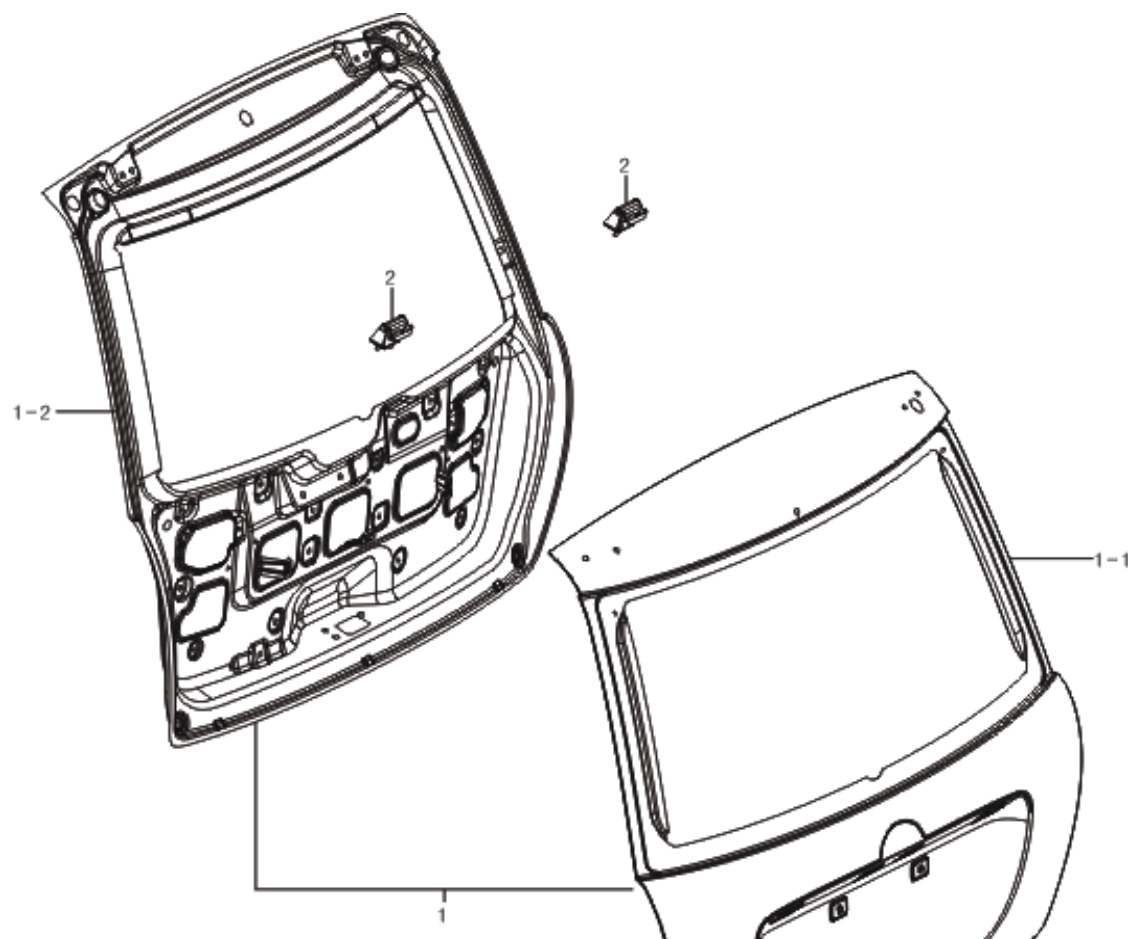


[illegible]

5.Body attachment

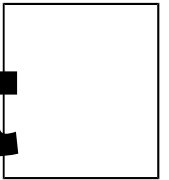

5.01 Engine hood attachment

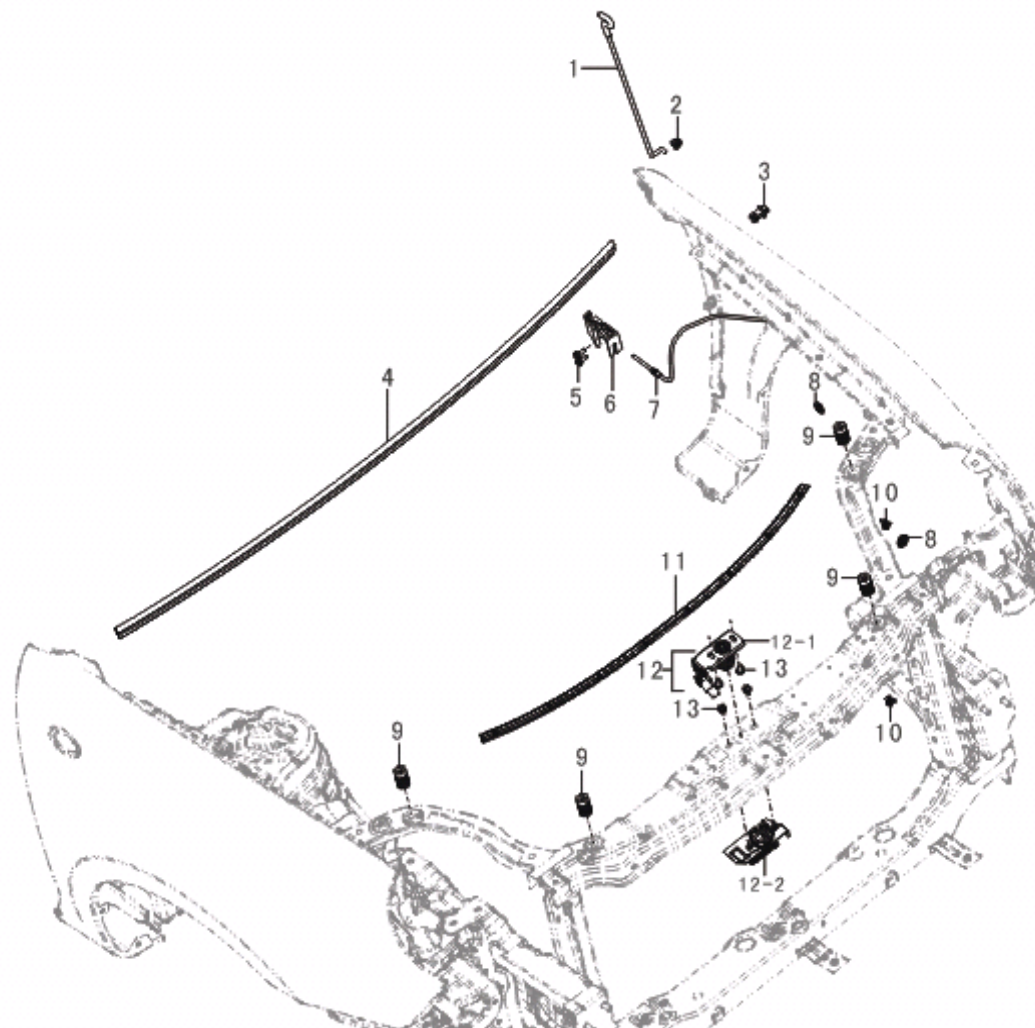


5.01 Engine

P/N	PARTS	DESCRIPTION	Supply
1	F8402311	发动机罩撑杆塑料固定卡扣 I	✓
2	F8402312	发动机罩撑杆塑料固定卡扣 II	✓
3	F8402313	发动机罩撑杆塑料固定卡扣 II	✓
4	F8402815	引擎盖后密封条	✓
5	Q1410616	六角头螺栓锥形弹性垫圈组合	✓
6	F8402410	发动机罩拉索支架总成	✓
7	F8402420	发动机罩拉索总成	✓
8	F8400012	橡胶胶套 (Φ15)	✓
9	F8402812	引擎盖橡胶螺栓	✓
10	F5207317	固定卡夹	✓
11	F8402814	引擎盖前密封条	✓
12	F8402500	发动机罩锁总成	
12-1	F8402510	发动机罩锁钩总成	✓
12-2	F8402520	发动机罩锁体总成	✓
13	Q1410616L	十字槽盘头螺钉弹簧垫圈平垫圈组合件	✓

5.2 Roof attachment

--

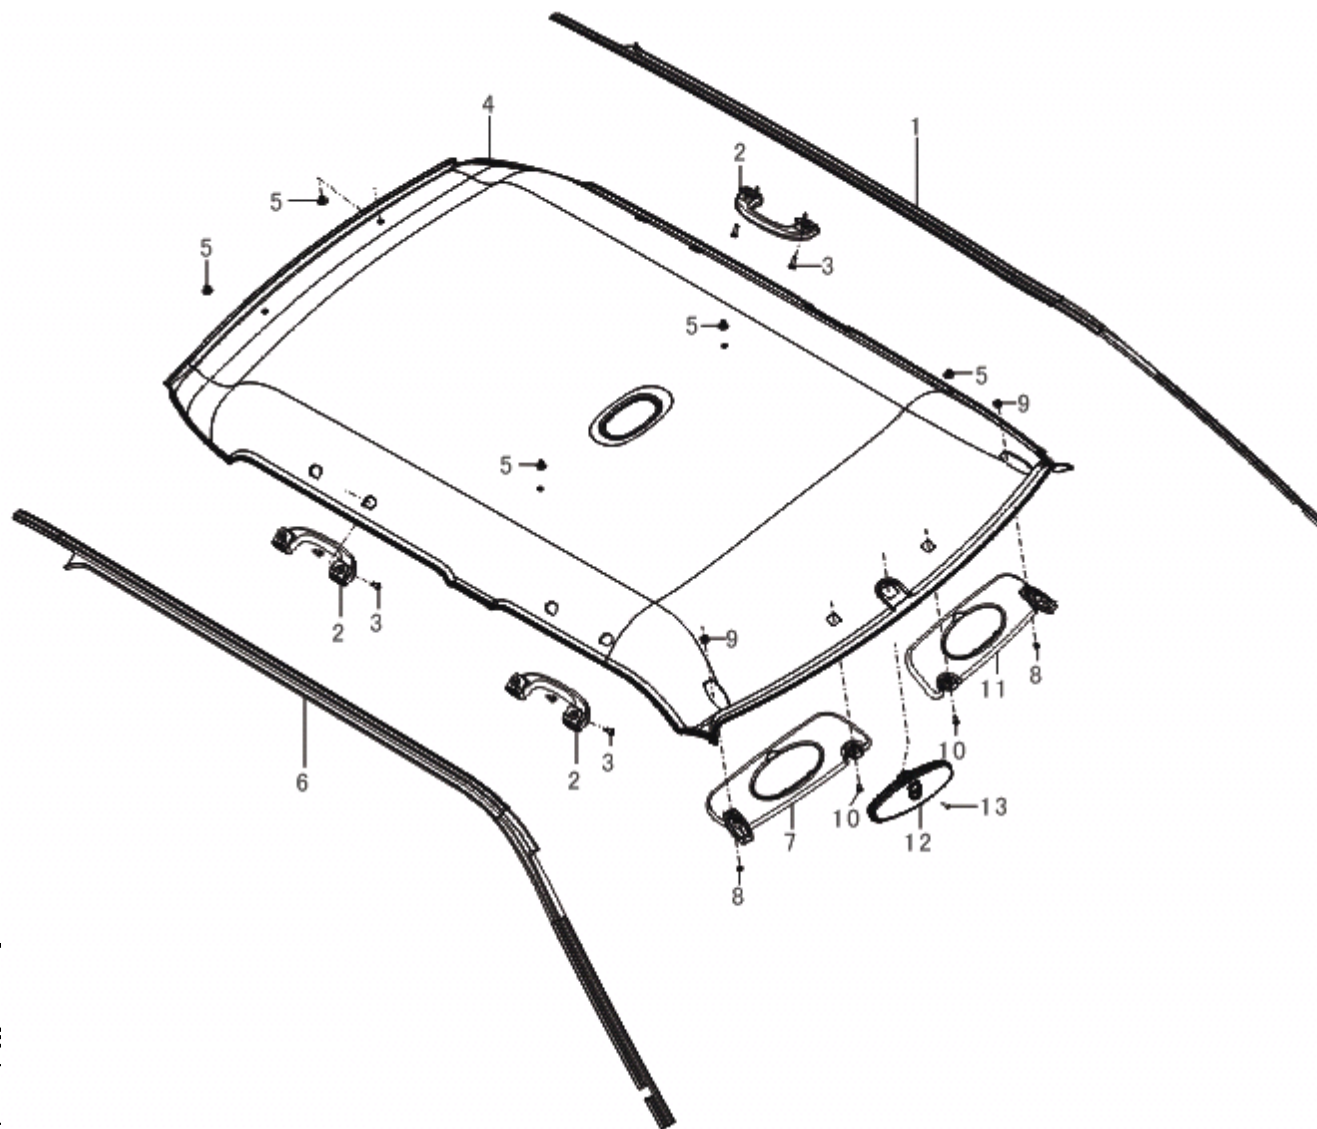


5.2 Roof attachment

P/N	PARTS	DESCRIPTION	QTY	UNIT	Supply
1	F5704110	顶盖左密封装饰条组件	1	个	√

2	F8215110B15	安全拉手	Safety handle	3	pale grey	√
3	Q2140620	十字槽盘头螺钉	Philips screw	6	M6*20	√
4	F5702111B15	顶棚	Roof	1	pale grey	√
5	400-463B15	塑料卡扣	Plastic clip	5		√
6	F5704210	顶盖右密封装饰条组件	Roof seal,right	1		√
7	F8204210B15	右遮阳板组件	Right sunvisor	1	EX	√
7	F8204210B1B15	右遮阳板组件	Right sunvisor	1	DX LX	√
8	Q2714816	十字槽盘头自攻螺钉	Philips self-tapping screw	2		√
9	Q398B03	A型通孔式型塑料卡扣	Plastic eye clip A type	2		√
10	Q2714822	十字槽盘头自攻螺钉	Philips self-tapping screw	2		√
11	F8204110B15	左遮阳板组件	Left sunvisor	1	EX	√
11	F8204110B1B15	左遮阳板组件	Left sunvisor	1	DX LX	√
12	F8201100B16	内后视镜总成	Rearview mirror	1	black	√
13	Q2140616	十字槽盘头螺钉	Philips screw			√

5.3 Left side body interior

--

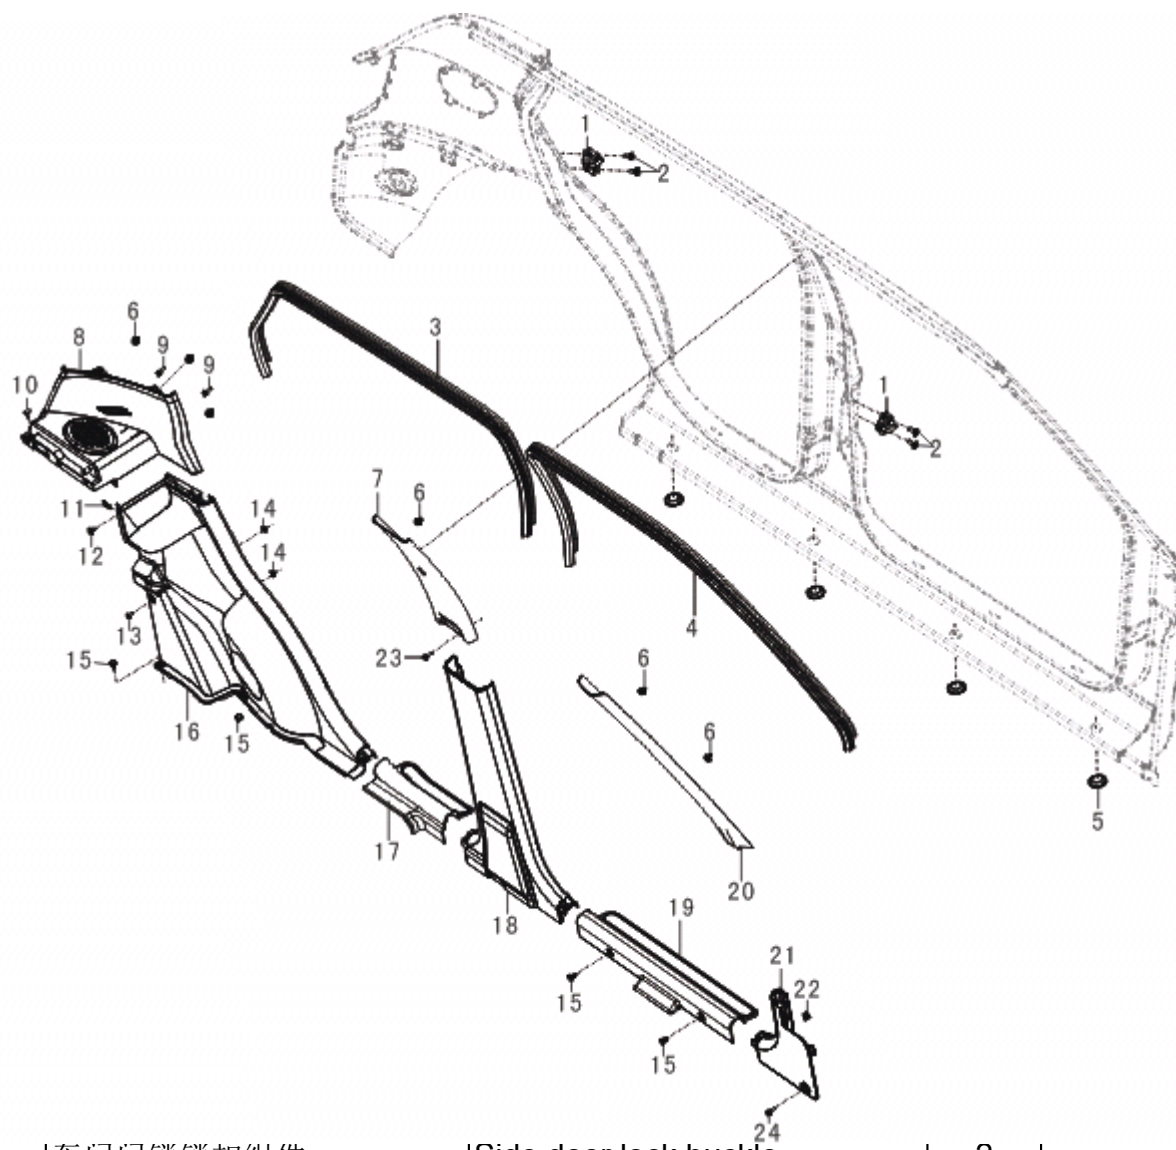

5.3 Left side body

					DESCRIPTION		Supply
P/N	PARTS CODE						
1	F6105140	车门门锁锁扣组件	Side door lock buckle	2			✓
2	Q2400820	十字槽沉头螺钉锥形锁紧垫圈组合件	Philips screw and washer	4			✓


3	F6207116	左后门框内圈密封条	Rear left door frame seal	1		√
4	F6107116	左前门框内圈密封条	Front left door frame seal	1		√
5	F5101015	橡胶堵盖（φ25）	Rubber plug	4	φ25	√
6	400-540	塑料卡扣	Plastic clip	6		√
7	F5402131B15	B柱左上护板	Left upper fender,B pillar	1	pale grey	√
8	F5402150B15	C柱左上护板组件	Left upper fender,C pillar	1	pale grey	√
9	Q14106162	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		
10	F5402153	搁物板减震橡胶块	Shelf damper block	1		
11	Q39748202	A型簧片螺母	Springness nut	1		√
12	Q2214816	十字槽盘头自攻螺钉和大垫圈组合	Philips screw with washer	1		√
13	Q2714813	十字槽盘头自攻螺钉C型	Philips screw	1		√
14	Q398B03	A型通孔式塑料卡扣	Plastic eye clip A type	2		√
15	400-233B21	塑料卡扣	Plastic clip	4		√
16	F5402161B15	C柱左下护板	Left lower fender,C pillar	1		√
17	F5402181B15	左后门槛护板	Rear left doorsill fender	1		√
18	F5402141B15	B柱左下护板	Left lower fender,B pillar	1		√
19	F5402171B15	左前门槛护板	Front left doorsill fender	1		√

5.3 Left side body interior

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
20	F5402111B15	A柱左上护板	Left upper fender,A pillar	1		√
21	F5402120B15	A柱左下护板组件	Left lower fender,A pillar	1		√

22	F5402122	卡簧	Circlip	1		
23	Q1410616	六角法兰面螺栓	Hex flange bolt	1		√
24	Q1840625	六角法兰面螺栓	Hex flange bolt	1		√

5.4 Right side body interior

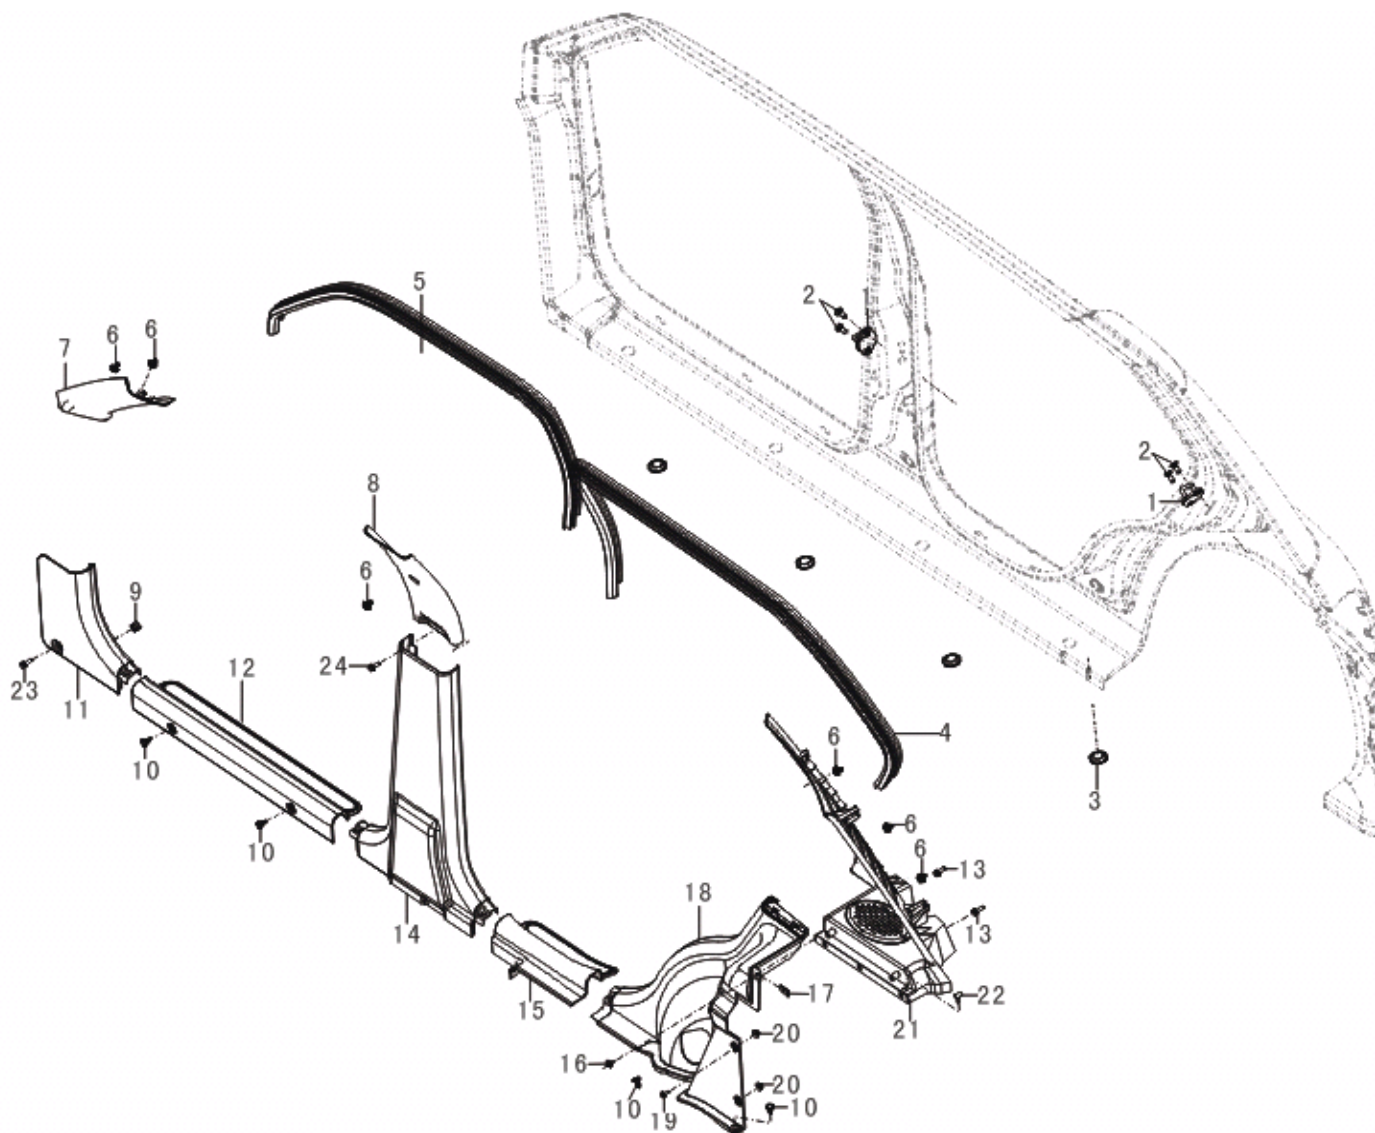

5.4 Right si

P/N	PARTS				QTY	Supply
1	F6105140	车门门锁锁扣组件	Side door lock buckle	2		√
2	Q2400820	十字槽沉头螺钉锥形锁紧垫圈组合件	Philips screw and washer	4		√
3	F5101015	橡胶堵盖 (Φ 25)	Rubber plug	4		√

4	F6207216	右后门框内圈密封条	Rear right door frame seal	1		√
5	F6107216	右前门框内圈密封条	Front right door frame seal	1		√
6	400-540	塑料卡扣	Plastic clip	6		√
7	F5402211B15	A柱右上护板	Right upper fender,A pillar	1	pale grey	√
8	F5402231B15	B柱右上护板	Right upper fender,B pillar	1	pale grey	√
9	F5402122	卡簧	Circlip	1		
10	400-233B21	塑料卡扣	Plastic clip	4		√
11	F5402220B15	A柱右下护板组件	Right lower fender,A pillar	1		√
12	F5402271B15	右前门槛护板	Front right doorsill fender	1		√
13	Q1410616L	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
14	F5402241B15	B柱右下护板	Right lower fender,B pillar	1	pale grey	√
15	F5402281B15	右后门槛护板	Rear right doorsill fender	1	pale grey	√
16	Q2214816	十字槽盘头自攻钉和大垫圈组合件	Philips screw with washer	1		√
17	Q39748202	A型簧片螺母	Springness nut	1		√
18	F5402261B15	C柱右下护板	Right lower fender,C pillar	1	pale grey	√
19	Q2714813	十字槽盘头自攻螺钉C型	Philips screw	2		√


5.4 Right side body interior

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
20	Q398B03	A型通孔式型塑料卡扣	Plastic eye clip A type	2		√
21	F5402250B15	C柱右上护板组件	Right upper fender,C pillar	1	pale grey	√
22	F5402153	搁物板减震橡胶块	Shelf damper block	1		

23	Q1840625	六角法兰面螺栓	Hex flange bolt	1		√
24	Q1410616	六角法兰面螺栓	Hex flange bolt	1		√

5.5 Side body attachment outer



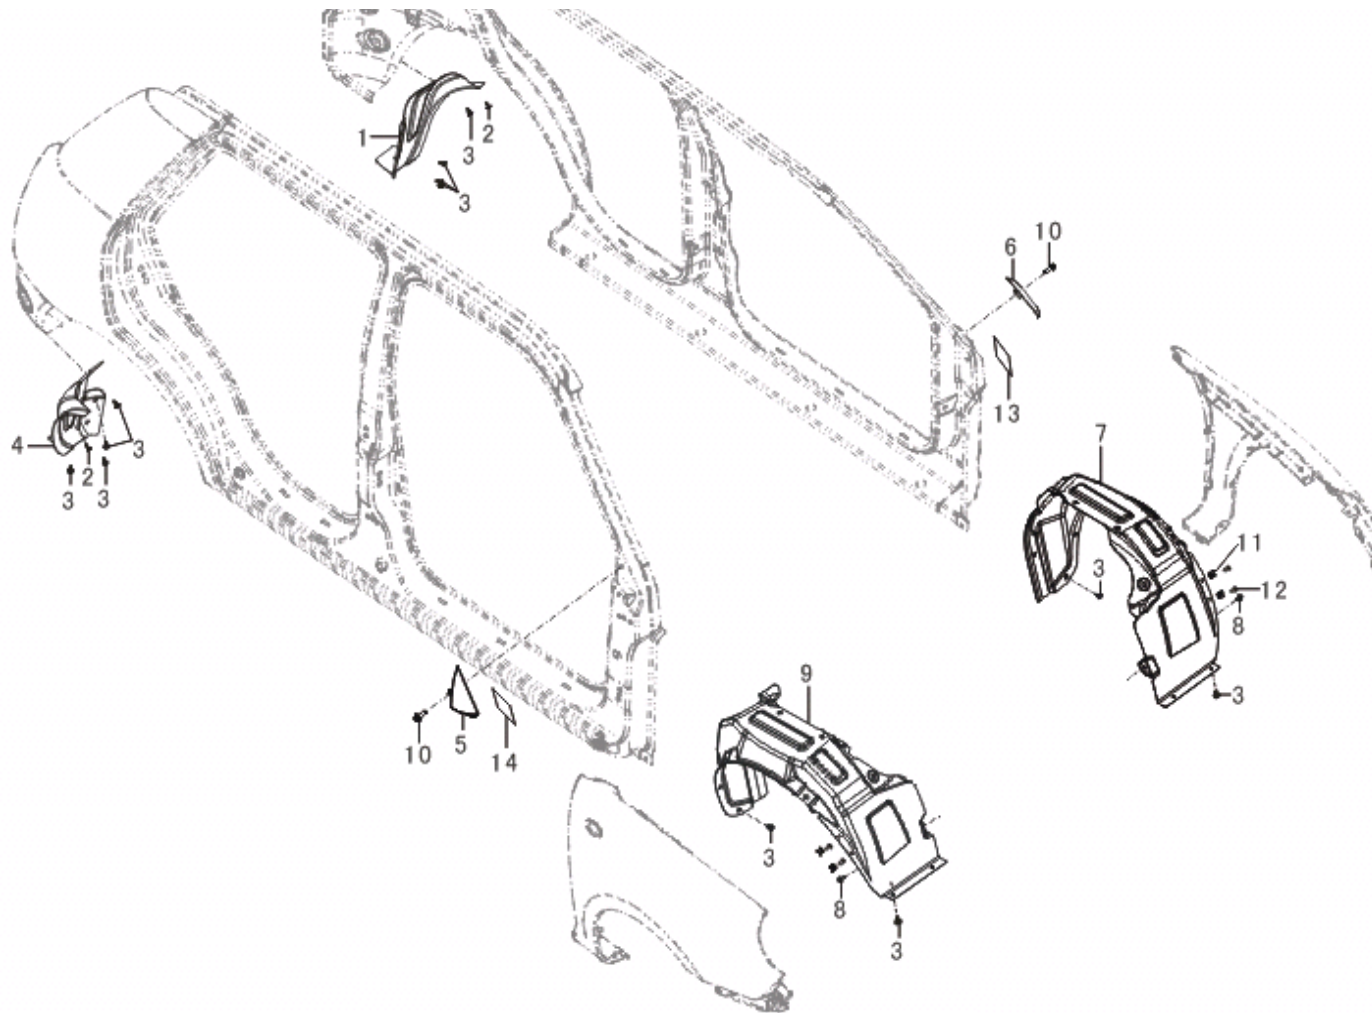


5.5 Side br

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5400331	左后轮挡泥板	Rear left mudguard	1		√
2	400-231	塑料卡扣	Plastic clip	2		√
3	400-233B16	塑料卡扣	Plastic clip	8		√
4	F5400341	右后轮挡泥板	Rear right mudguard	1		√

5	F5416211A10	A柱左三角装饰板	Left triangular decoration,A pillar	1	black	√
6	F5416221A10	A柱右三角装饰板	Right triangular decoration,A pillar	1	black	√
7	F5400311	左前轮挡泥板	Front left mudguard	1		√
8	Q1410612L	六角头螺栓和锥形弹性垫圈组合	Hex bolt and taper springness washer	2		
9	F5400321	右前轮挡泥板	Front right mudguard	1		√
10	Q1840612T1F30	六角法兰面螺栓	Hex flange bolt	2		√
11	Q39748202	A型簧片螺母	Springness nut	4		√
12	Q2214816	十字槽盘头自攻螺钉和大垫圈组合	Philips screw with washer	4		√
13	F5500531	A柱左三角PVC贴膜	PVC paster, left	1		√
14	F5500532	A柱右三角PVC贴膜	PVC paster, right	1		√

5.6 Front body attachment



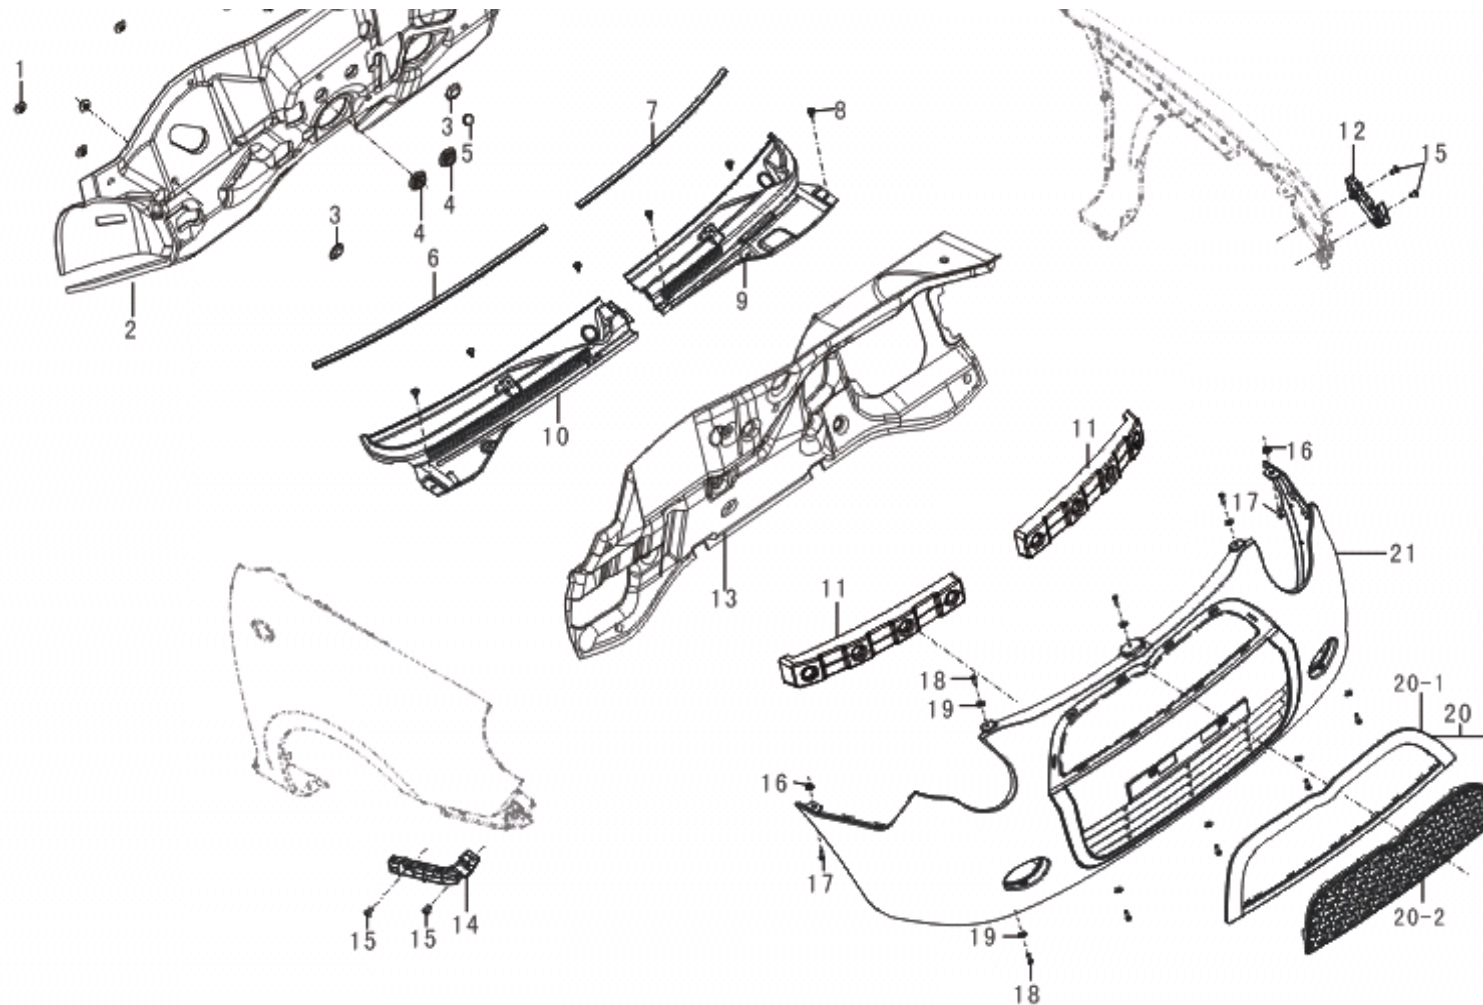

5.6 Froi


P/N	P/					Supply
1	400-0245	塑料卡扣	Plastic clip	9		√
2	F5310111B1	前围隔热垫	Front cowl heat insulator	1		√
3	F5101015	橡胶堵盖	Rubber plug	2	φ25	√
4	F5308111	空调水管胶套	Pipe sleeve,air conditioner	2		√
5	F5308112	橡胶堵盖	Rubber plug	1	φ14	√


6	F5302141	上横梁右护板密封条	Right seal,upper beam fender	1		√
7	F5302131	上横梁左护板密封条	Left seal,upper beam fender	1		√
8	400-233B16	塑料卡扣	Plastic clip	6		√
9	F5302110	上横梁左护板组件	Left upper beam fender	1		√
10	F5302120	上横梁右护板组件	Right upper beam fender	1		√
11	F2803121	前保险杠缓冲块	Front bumper damper	2		√
12	F2803131	前保险杠左连接支架	Left bracket,front bumper	1		√
13	F5310112B1	前舱隔音垫	Noise insulator, engine room	1		√
14	F2803132	前保险杠右连接支架	Right bracket,front bumper	1		√
15	Q2214822	十字槽大半圆自攻螺钉	Philips tapping screw	4		√
16	Q39748202	A型簧片螺母	Springness nut	2		√
17	Q2215522	十字槽盘头自攻螺钉和大垫圈组合件	Philips screw with washer	2		√
18	Q150B0620T1F30	六角头螺栓	Hex bolt	8		√

5.6 Front body attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
19	Q40206	大垫圈	Big washer	8		√
20	F2803150A2E01	前格栅总成	Front grille	1	9 grade chromium	√
20-1	F2803151	前格栅框	Front grille frame	1		
20-2	F2803152	前格栅板	Front grille plate	1		
21	F2803111	前保险杠	Front bumper	1		√

5.7 Front windsheild attachment

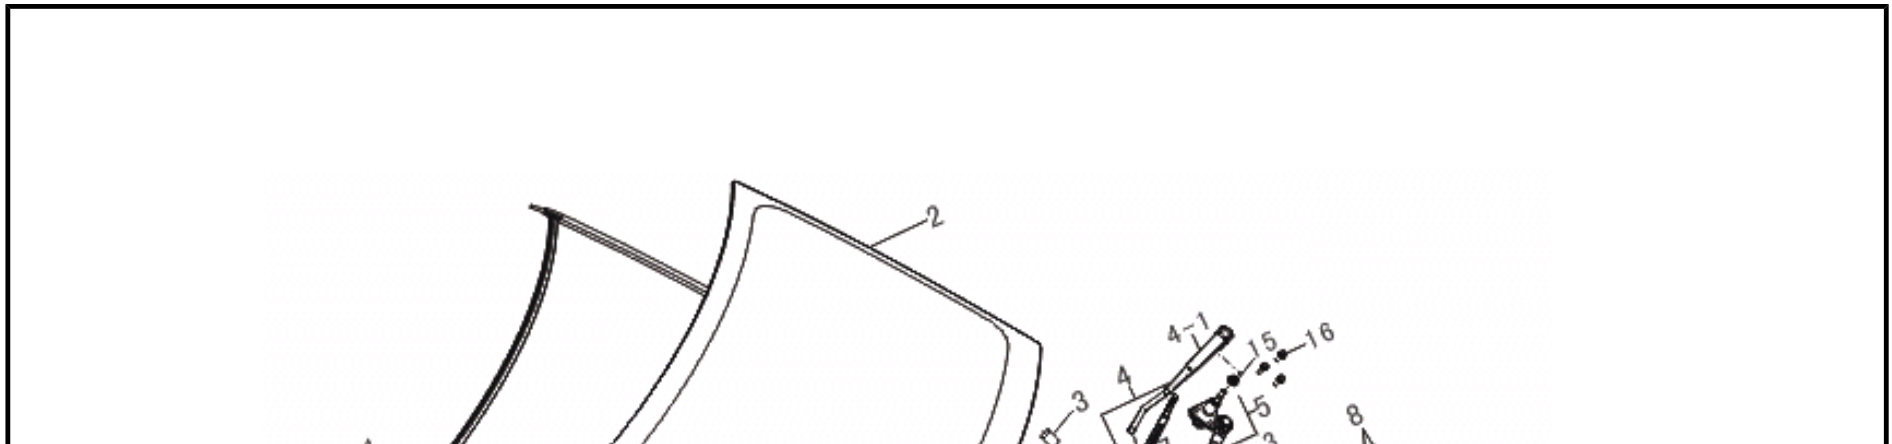

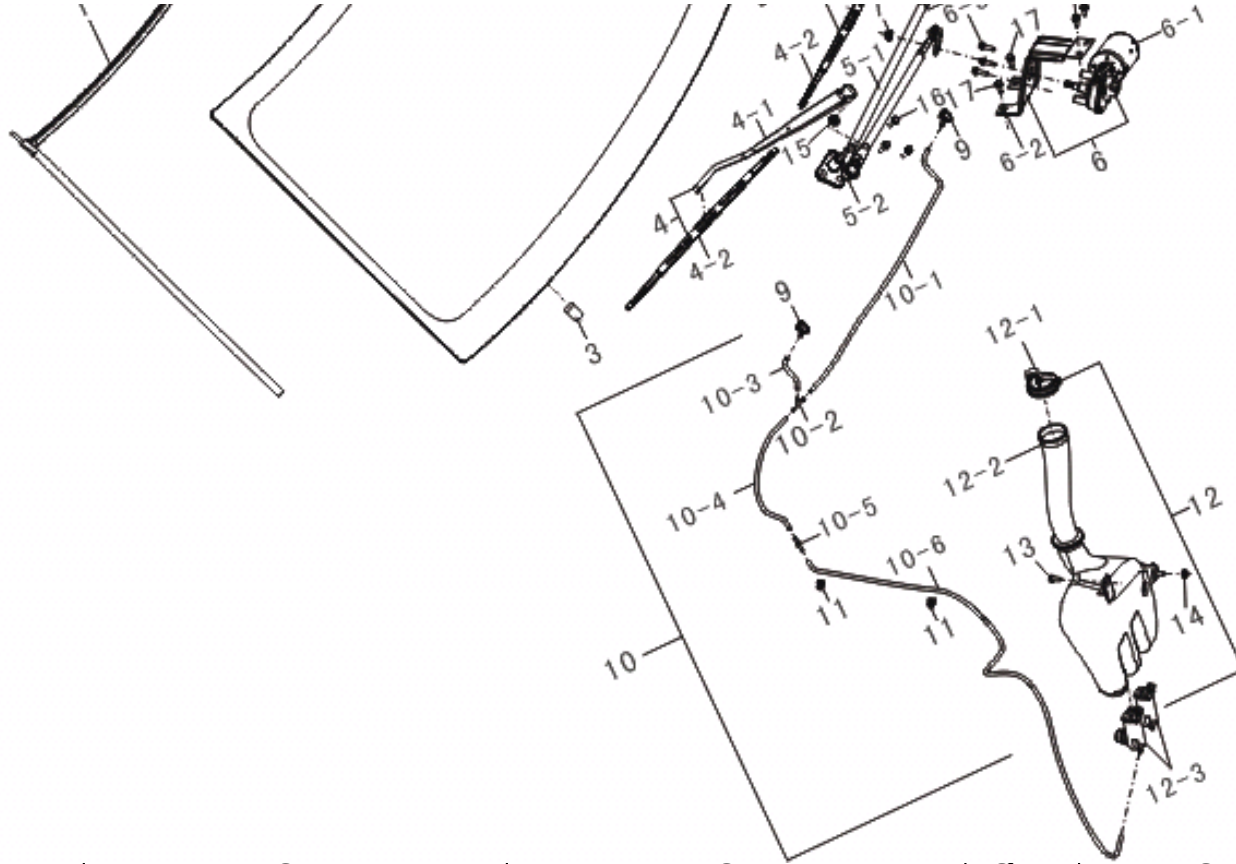

5.7 Front wind

P/N	PARTS C				OPTION	Supply
1	F5206021	前风窗玻璃密封条	Seal,front windshield	1		√
2	F5206011	前风窗玻璃	Front windshield	1		√
3	F5308113	挡风玻璃限位柱	Stopper,front windshield	2		√
4	F5205100	前风窗雨刮组件	Front windshield wiper assy.	2		√
4-1	F5205110	前风窗雨刮摆臂总成	Front windshield wiper arm	2		√
4-2	F5205130	前风窗雨刮刷总成	Front windshield wiper brush	2		√
5	F5205200	雨刮器连杆机构组件	Wiper con-rod assy.	1		√


5-1	F5205210	雨刮器连杆机构	Wiper con-rod	1		
5-2	F5205220	前雨刮连接轴组件	Wiper con-rod shaft	1		
6	F3741100	前雨刮电机总成	Front wiper motor assy.	1		√
6-1	F3741120	前雨刮电机	Front wiper motor	1		
6-2	F3741110	前雨刮电机支架组件	Front wiper motor bracket	1		
6-3	Q1840620	六角法兰面螺栓	Hex flange bolt	3		√
7	Q32008	六角法兰面螺母	Hex flange nut	1		√
8	Q1460616	六角头螺栓弹簧垫圈平垫圈组合件	Hex bolt and washers	2	M6*20	
9	F5207320	前洗涤器喷头组件	Front wiper nozzle	2		√
10	F5207310	前洗涤器软管组件	Front wiper pipe	1		√
10-1	F5207311	洗涤器软管A	Front wiper hose A	1		√
10-2	F5207315	软管连接三通头	T-valve	1		√


5.7 Front windsheild attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
10-3	F5207312	洗涤器软管B	Front wiper hose B	1		√
10-4	F5207313	洗涤器软管C	Front wiper hose C	1		√
10-5	F5207316	软管连接两通头	Two-way valve	1		√
10-6	F5207314	洗涤器软管D	Front wiper hose D	1		√
11	F5207317	固定卡夹	Clip	2		√
12	F5207100	洗涤壶总成	Washer can assy.	1	EX LX	√
12	F5207100B1	洗涤壶总成	Washer can assy.	1	DX	√

12-1	F5207112	洗涤壶环箍	Washer can hoop	1		√
12-2	F5207111	洗涤壶本体	Washer can	1		√
12-3	F5207210	洗涤泵	Washer pump	2	EX	√
12-3	F5207210	洗涤泵	Washer pump	1	DX LX	√
13	Q14106162	六角头螺栓弹性垫圈垫圈组合件	Hex bolt and taper springness washer	2	M6*16	
14	Q32006	六角法兰面螺母	Hex flange nut	1		√
15	Q32008	六角法兰面螺母	Hex flange nut	2		√
16	Q1460620	六角头螺栓弹簧垫圈和平垫圈组合件	Hex bolt and washers	6		√
17	Q1410625L	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and washers	2		√

5.8 Rear body attachment upper

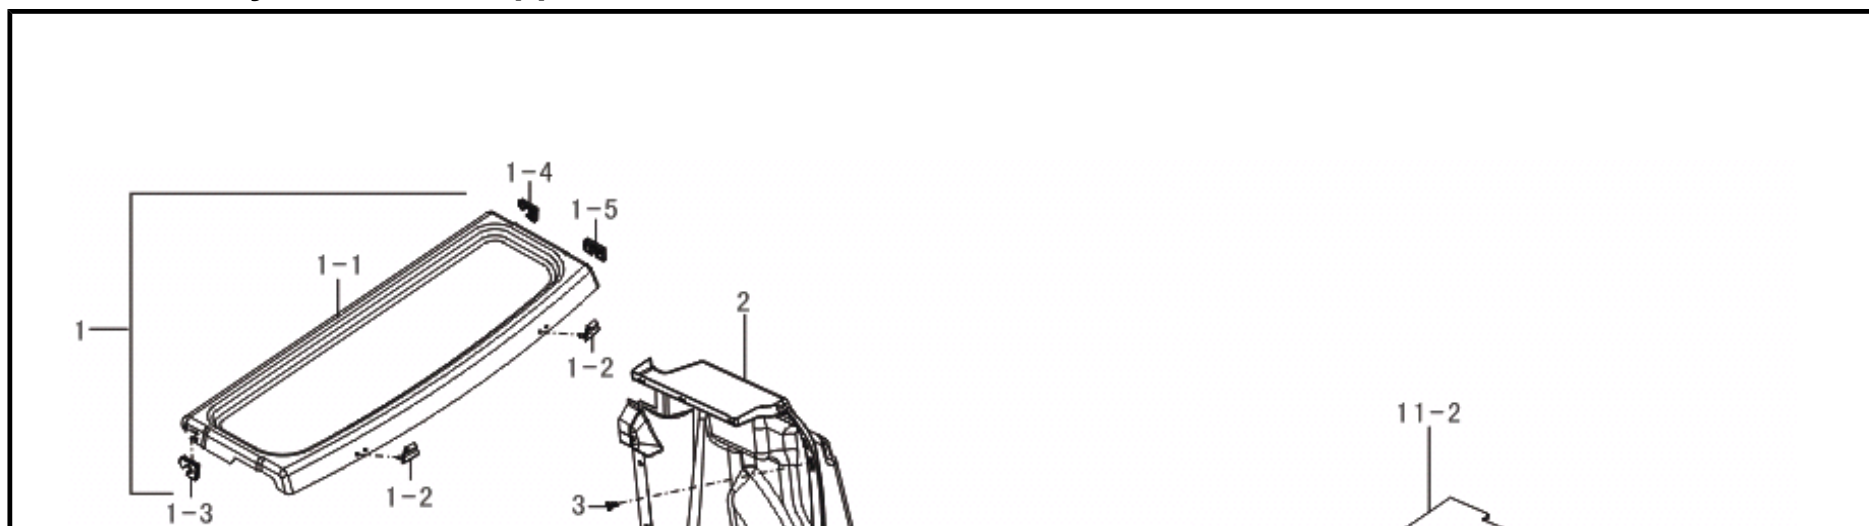


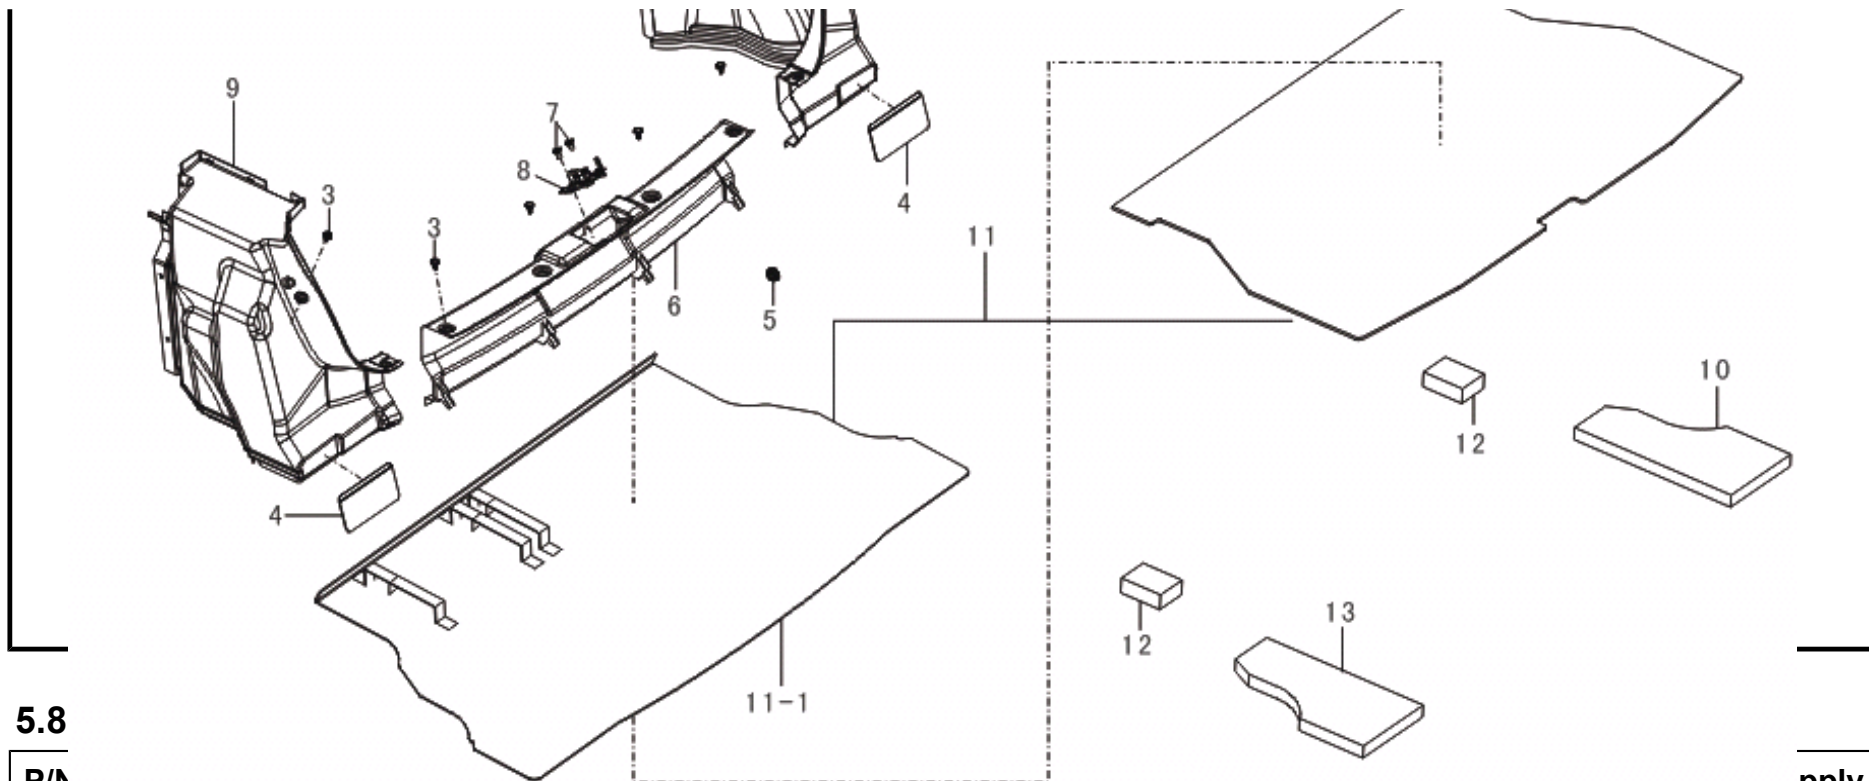


5.8

P/N						pply
1	F5608400B15	搁物板护面板组件	Shelf panel assy.	1	pale grey	√
1-1	F5608411	搁物板	Shelf panel	1		
1-2	F5608412	橡胶限位块	Rubber block	2		
1-3	F5608413	搁物板左前安装卡座	Left clip,shelf panel	1		
1-4	F5608414	搁物板右前安装卡座	Right clip,shelf panel	1		
1-5	F5608415	搁物板后固定座	Rear clip,shelf panel	1		
2	F5608211B21	行李箱右护面	Trunk right fender	1	deep grey	√
3	400-233B21	塑料卡扣	Plastic clip	6		√

5.9 Rear body attachment lower

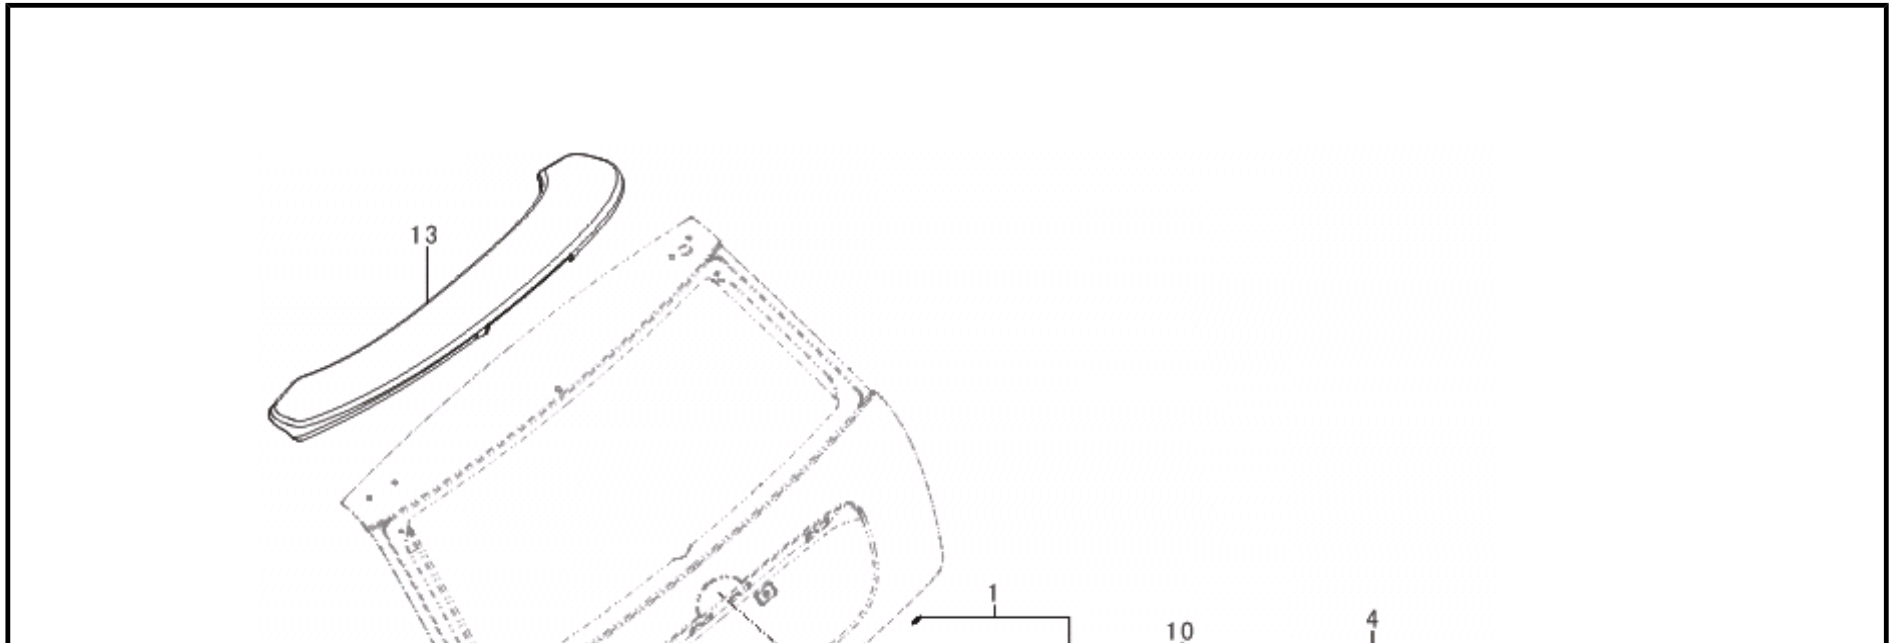


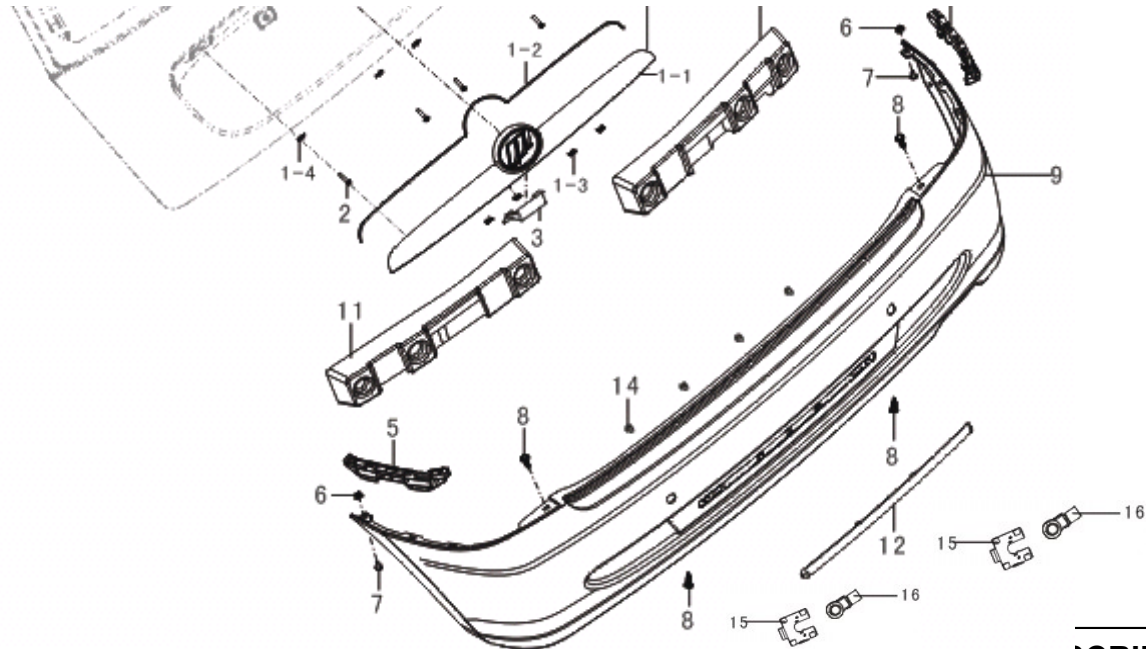


5.9 Rear body

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5506110A2E01	后车门牌照亮饰条组件	License plate trim assy.	1	9 grade chromium	√
1-1	F5506111	后车门牌照亮饰条	License plate trim	1		
1-2	F5506013	后车门牌照亮饰条缓冲条	Strip,License plate trim	1		
1-3	Q39739161	A型簧片螺母	Springness nut	4		√
1-4	F5506112	后车门牌照亮饰条缓冲垫	Washer,License plate trim	4		
2	Q2140620	十字盘头螺钉	Philips screw	4		√
3	F5506121	后背门扣手	Back door handrail	1		√
4	F2804132	后保险杠右连接支架	Rear bumper right bracket	1		√
5	F2804131	后保险杠左连接支架	Rear bumper left bracket	1		√
6	400-1733	塑料卡扣	Plastic clip	2		√

5.10 Back door attachment

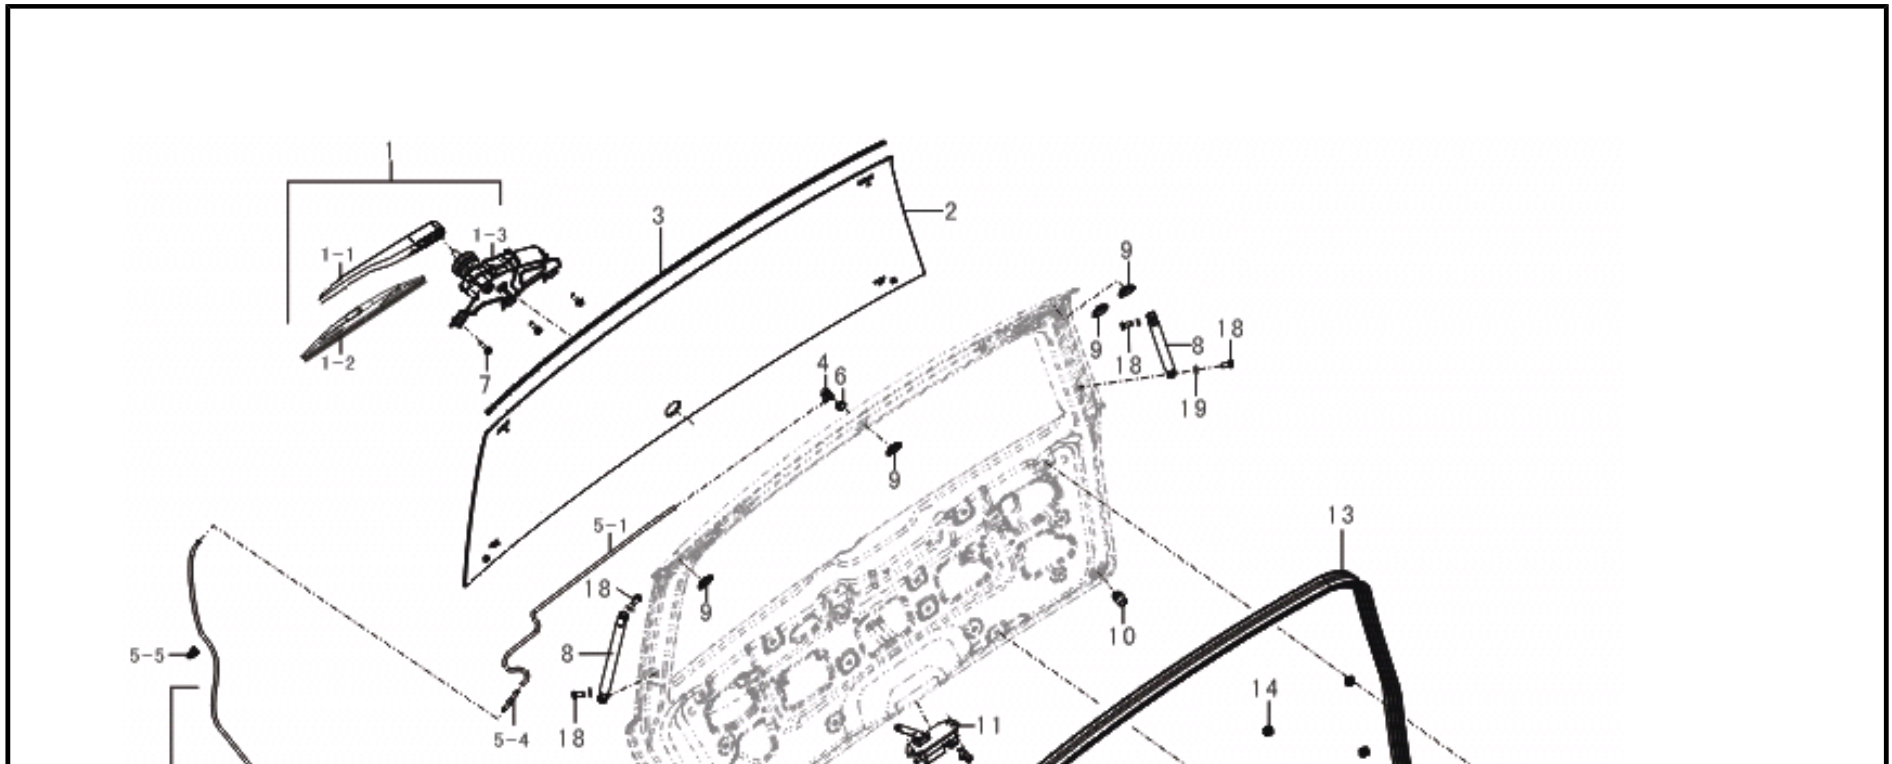

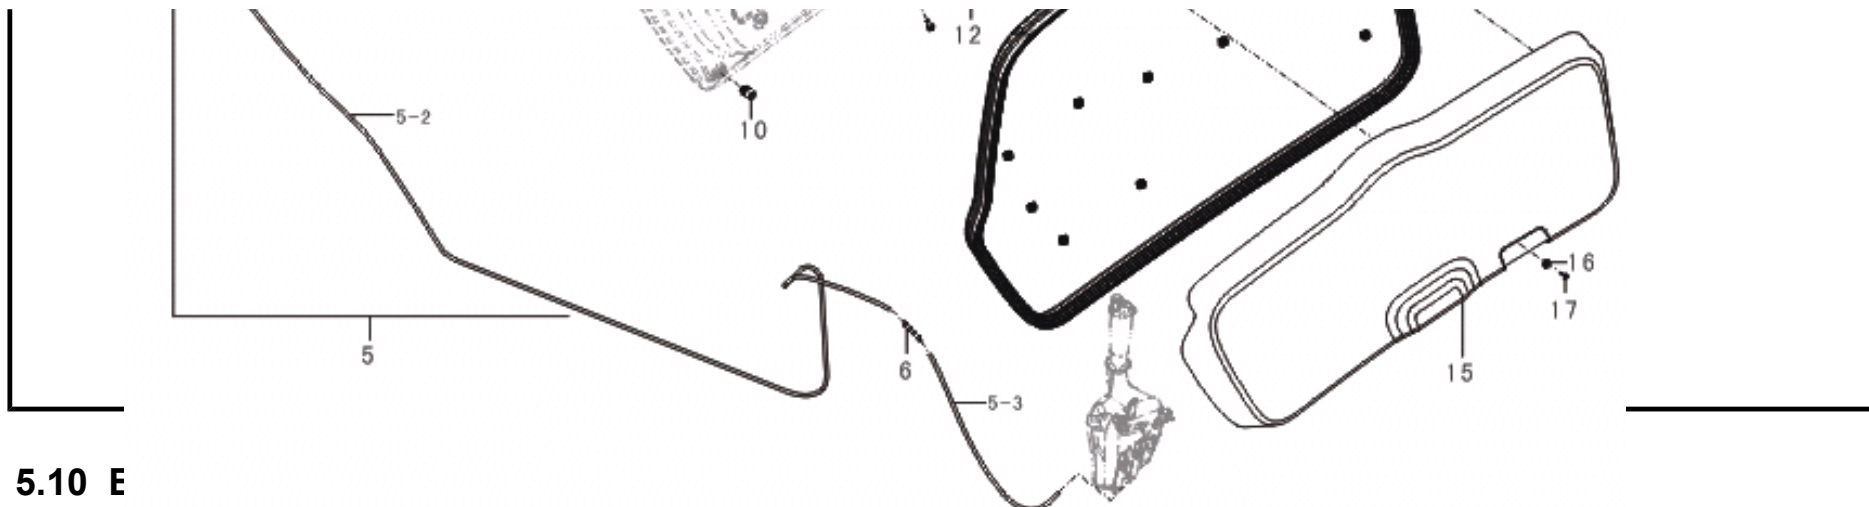

5.10 E


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F6310100	后风窗雨刮器组件	Rear windshield wiper assy.	1		√
1-1	F6310110	后风窗雨刮摆臂总成	Rear windshield wiper arm	1		√
1-2	F6310120	后风窗雨刮刷总成	Rear windshield wiper brush	1		√
1-3	F3741400	后雨刮电机总成	Rear wiper motor assy.	1		√
2	F6303010	后背门风窗玻璃总成	Rear windshield	1	EX	√
2	F6303010B1	后背门风窗玻璃总成	Rear windshield	1	DX LX	√
3	L5206011	挡风玻璃上密封条	Rear windshield seal	1		√
4	F6311320	后洗涤器喷头组件	Rear wiper nozzle	1		√
5	F6311310	后洗涤器软管组件	Rear wiper hose group	1		√
5-1	F6311313	后洗涤器软管C	Rear wiper hose C	1		√
5-2	F6311312	后洗涤器软管B	Rear wiper hose B	1		√
5-3	F6311311	后洗涤器软管A	Rear wiper hose A	1		√


5-4	F5207316	软管连接两通头	Two-way valve	2		√
5-5	F5207317	固定卡夹	Clip	1		√
6	F6300014	橡胶堵盖	Rubber plug	1	φ 25	√
7	Q1840620	六角法兰面螺栓	Hex flange bolt	3		√
8	F6309110	后背门气动撑杆组件	Back door pneumatic rod	2		√
9	F6300013	后背门堵盖(φ25)	Back door plug	4	φ 25	√
10	F6300012	后背门缓冲柱	Back door damper	2		√

5.10 Back door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
11	F6305100	后背门锁体总成	Back door lock	1		√
12	Q2360616	十字槽盘头螺钉弹簧垫圈平垫圈组合件	Philips screw with washer	3		√
13	F6307011	后背门密封条	Back door seal	1		√
14	400-540	塑料卡扣	Plastic clip	11		√
15	F6302111B21	后车门内护板	Back door interior	1		√
16	Q398B03	A型通孔式塑料卡扣	Plastic eye clip A type	1		√
17	Q2734816	十字槽大半圆头自攻螺钉	Tapping screw	1		√
18	F6309121	气动撑杆安装螺栓	Bolt,pneumatic rod	4		√
19	F6309122	密封垫	Washer	4		√

5.11 Floor attachment

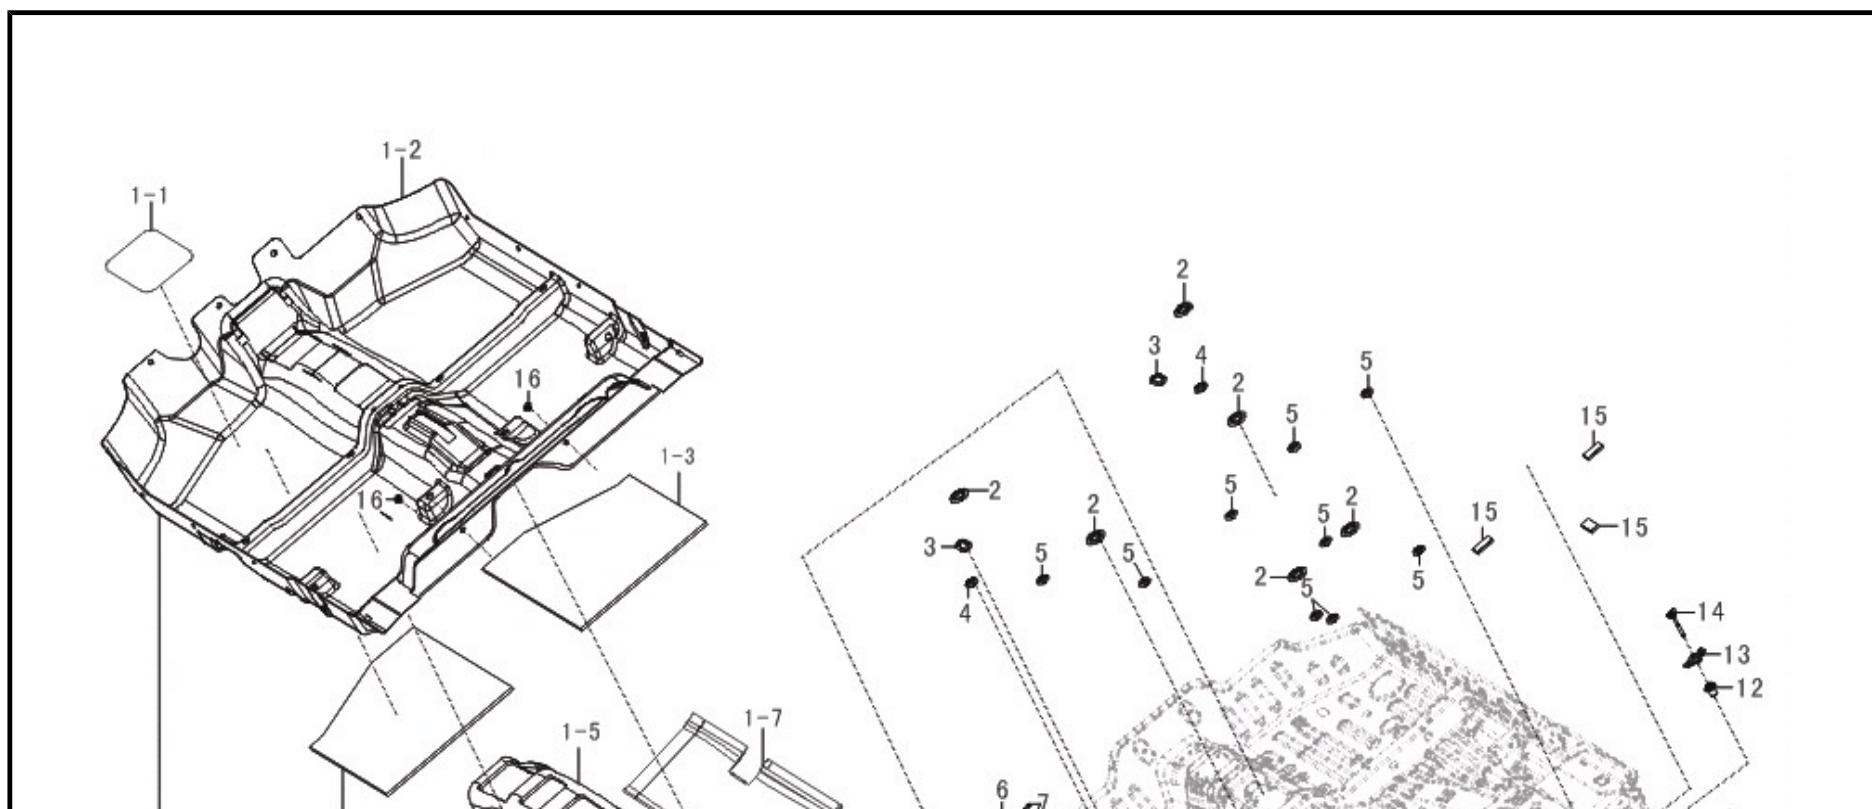

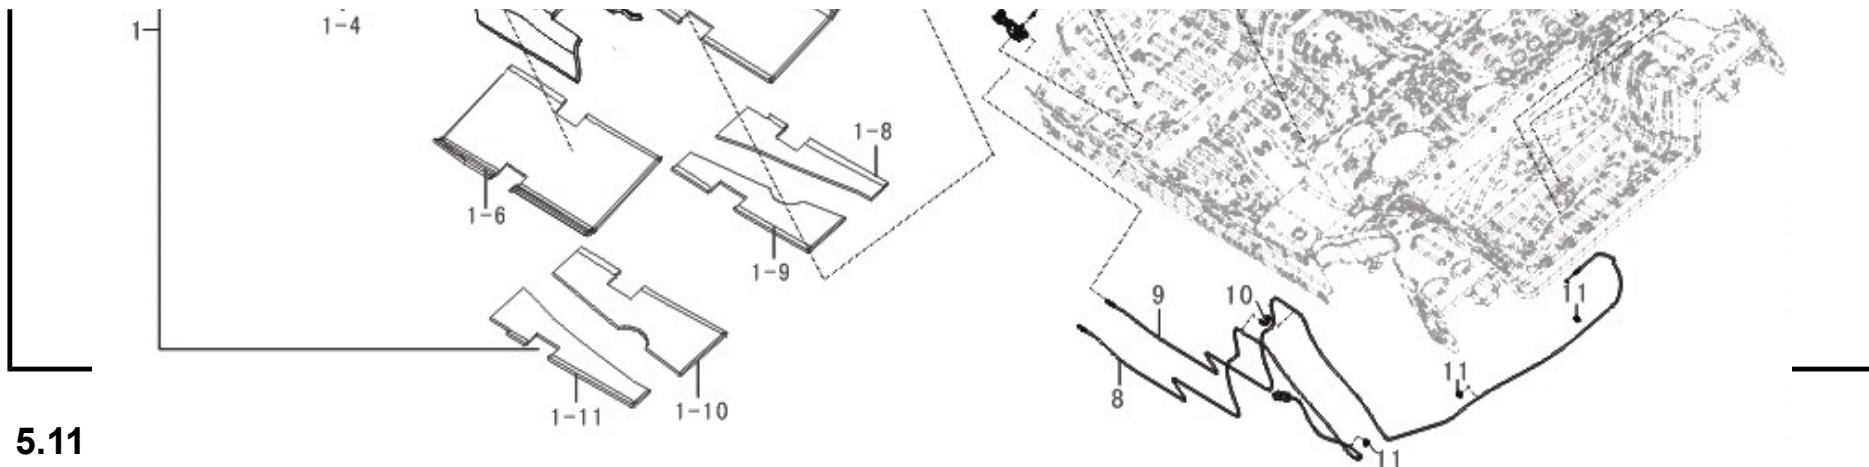

5.11


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5109100B15	主地毯组件	Carpet assy.	1	pale grey	
1-1	F5109112	驾驶员下垫皮	Foot rest	1		
1-2	F5109111	地毯本体	Carpet	1		
1-3	F5110121	地毯右前毡垫	Carpet front right felt	1		√
1-4	F5110111	地毯左前毡垫	Carpet front left felt	1		√
1-5	F5110151	前地板中央通道毡垫	Middle felt	1		√
1-6	F5110131	地毯左后毡垫I	Carpet rear left felt I	1		√
1-7	F5110141	地毯右后毡垫 I	Carpet rear right felt I	1		√
1-8	F5110142	地毯右后毡垫II	Carpet rear right felt II	1		√
1-9	F5110143	地毯右后毡垫III	Carpet rear right felt III	1		√
1-10	F5110133	地毯左后毡垫III	Carpet rear left felt III	1		√
1-11	F5110132	地毯左后毡垫II	Carpet rear left felt II	1		√
2	F5101016	橡胶堵盖 (φ 45)	Rubber plug	6	φ45	√

3	F5101021	腰形堵盖 (R12. 5*50)	Rubber plug	2	R12.5*50	√
4	F5101019	橡胶堵盖 (φ 28)	Rubber plug	2	φ28	√
5	F5101015	橡胶堵盖 (φ 25)	Rubber plug	9	φ25	√
6	F5101310B16	油箱拉索支架总成	Fuel tank cable bracket	1	black	√
7	Q1410516	六角头螺栓和锥形弹性垫圈组合	Hex bolt and taper springness washer	2		√

5.11 Floor attachment


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
8	F5101320	油箱拉索总成	Fuel tank cable	1		√
9	F5101330B16	行李箱锁拉索总成	Trunk cable	1	black	√
10	400-1928	塑料卡扣	Plastic clip	1		√
11	F5207317	固定卡夹	Clip	3		√
12	F5101213	锁紧螺栓防锈柱塞	Bolt anti-rust plug	1		√
13	F3105011	备胎压板	Spare tyre cover	1		√
14	F3105110	备胎固定支架组件	Spare tyre fixing bracket	1		√
15	F5101212	后备胎缓冲垫	Spare tyre damper	3		√
16	400-463B21	塑料卡扣	Plastic clip	2		√

5.12 Driver's seat

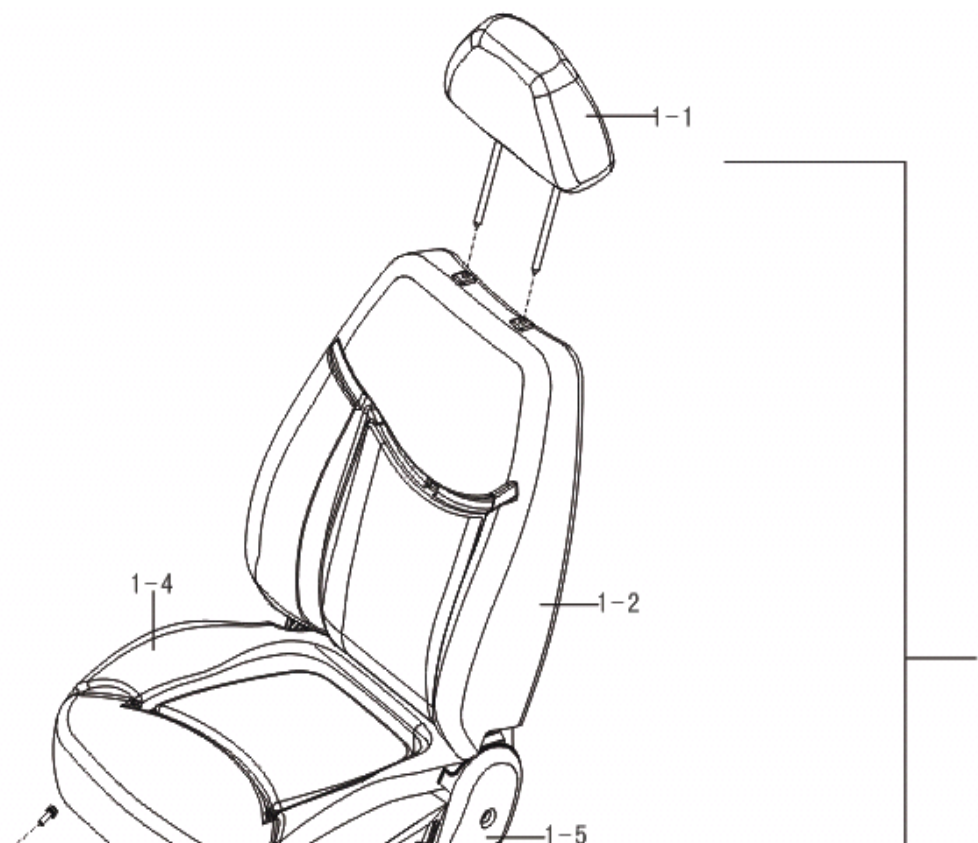


[illegible]

5.13 Front passenger's seat

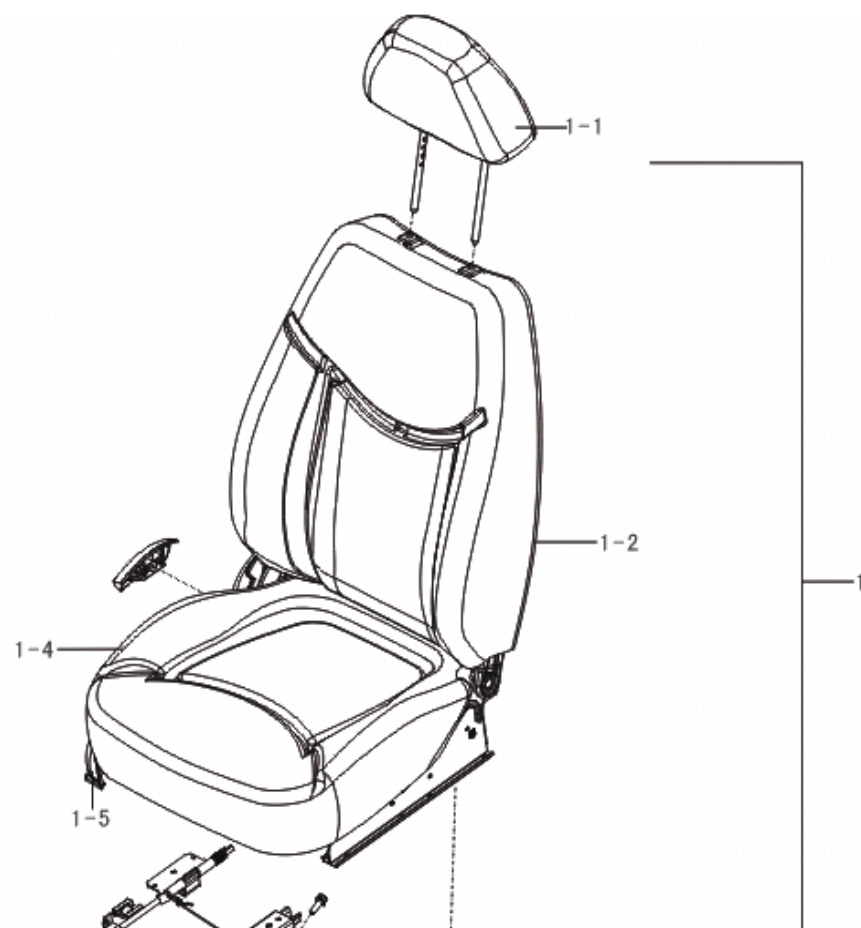

--	--	--	--	--	--	--

5.14 Rear seat

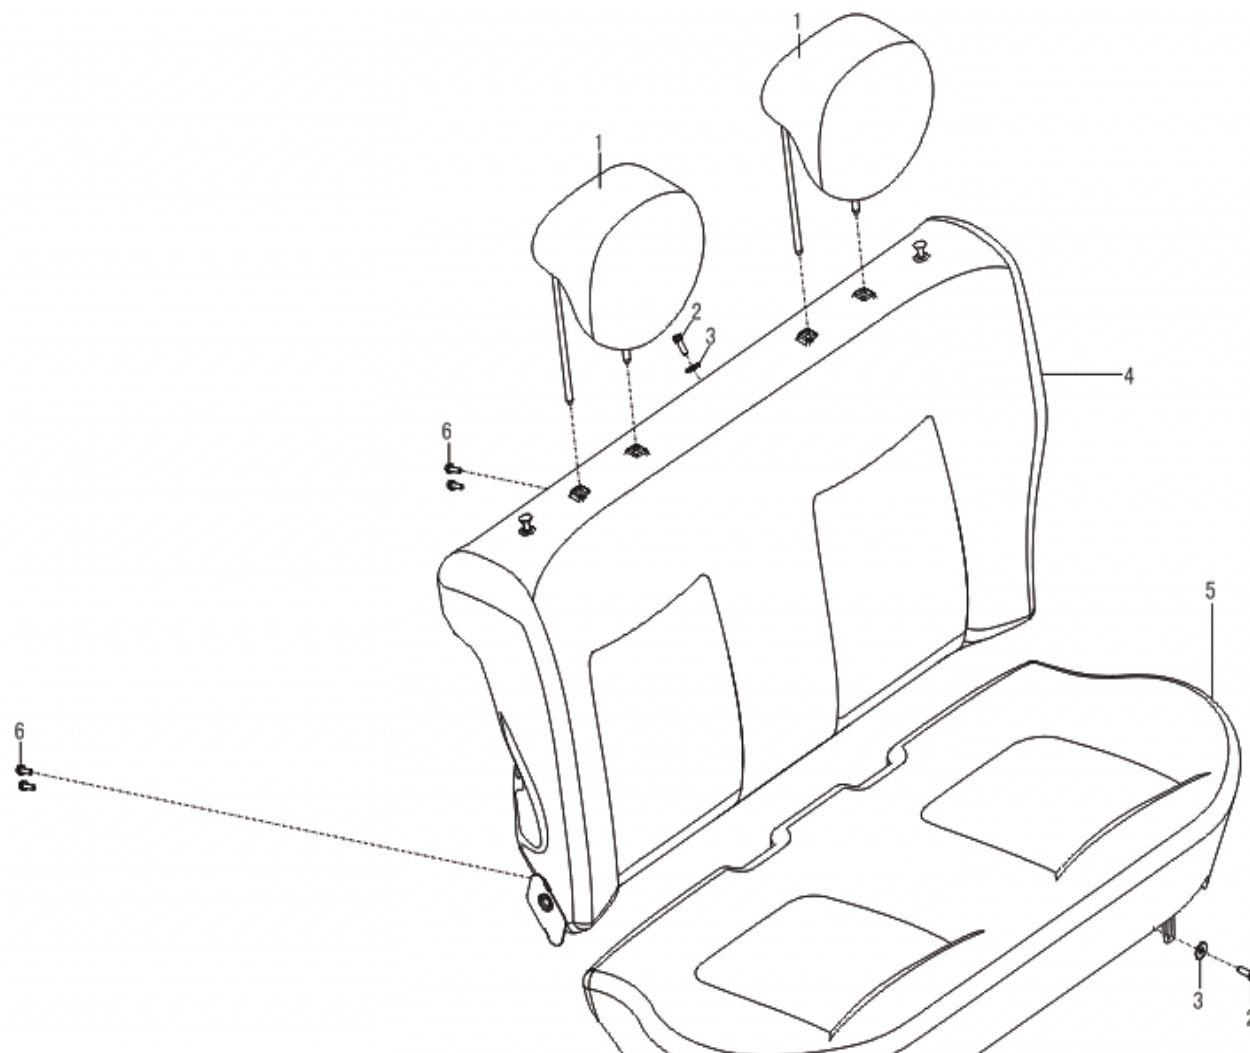

[illegible][illegible]

5.15 Logos



LIFAN 320 LF7132

2

3

4


1.3L 力帆

5

6

[illegible]


5.16 Safety device

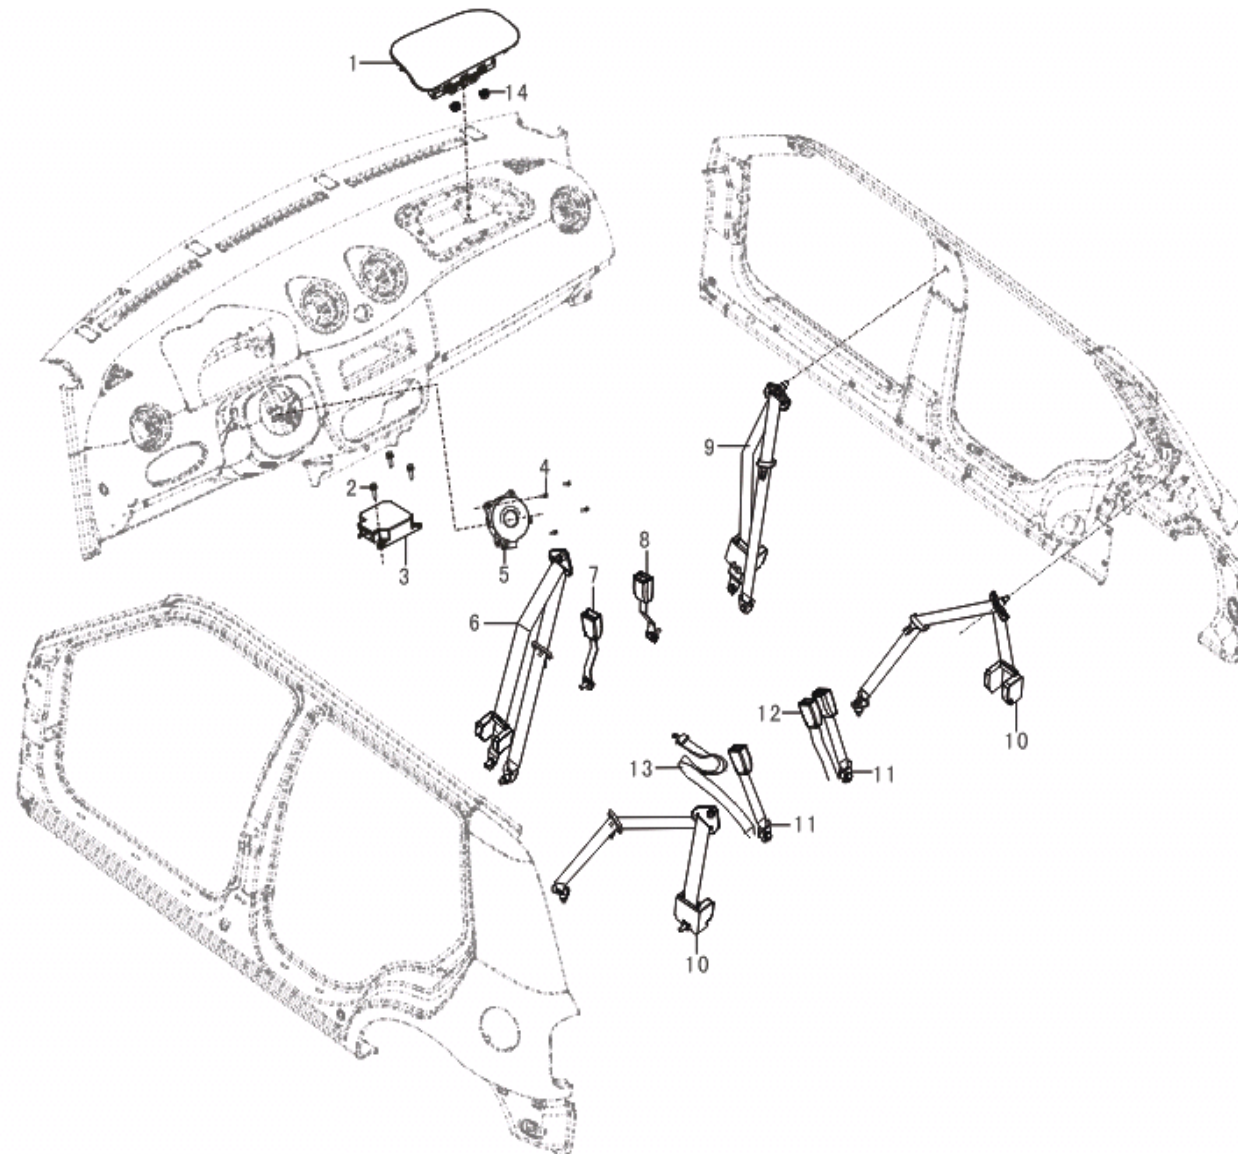

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5824200B24	副驾驶员气囊模块	Passengers airbag	1		√
2	Q1840625	六角法兰面螺栓	Hex bolt and washers	3		√
3	F3658100	安全气囊ECU	Airbag ECU	1		√
4	Q2714213	十字槽盘头自攻螺钉C型	Philips self-tapping screw	4		√
5	F3658300	螺旋线圈	Coil winding	1		√
6	F5811150B15	左前安全带卷收器总成	Front left safety belt retractor assy.	1	Pale grey	√
7	F5811110B15	左前安全带锁扣	Front left safety belt buckle	1	Pale grey	√
8	F5811210B15	右前安全带锁扣	Front right safety belt buckle	1	Pale grey	√
9	F5811250B15	右前安全带卷收器总成	Front right safety belt retractor assy.	1	Pale grey	√
10	F5812150B15	左后安全带卷收器总成	Rear left safety belt retractor assy.	1	Pale grey	√
11	F5812300B15	后排中间安全带	Middle safety belt buckle	1	Pale grey	√
12	F5812110B15	后安全带锁扣	Rear safety belt buckle	1	Pale grey	√
13	F5812250B15	右后安全带卷收器总成	Rear right safety belt retractor assy.	1	Pale grey	√
14	Q32006	六角法兰面螺母	Hex flange nut	2		√

5.17 Instrument panel

--

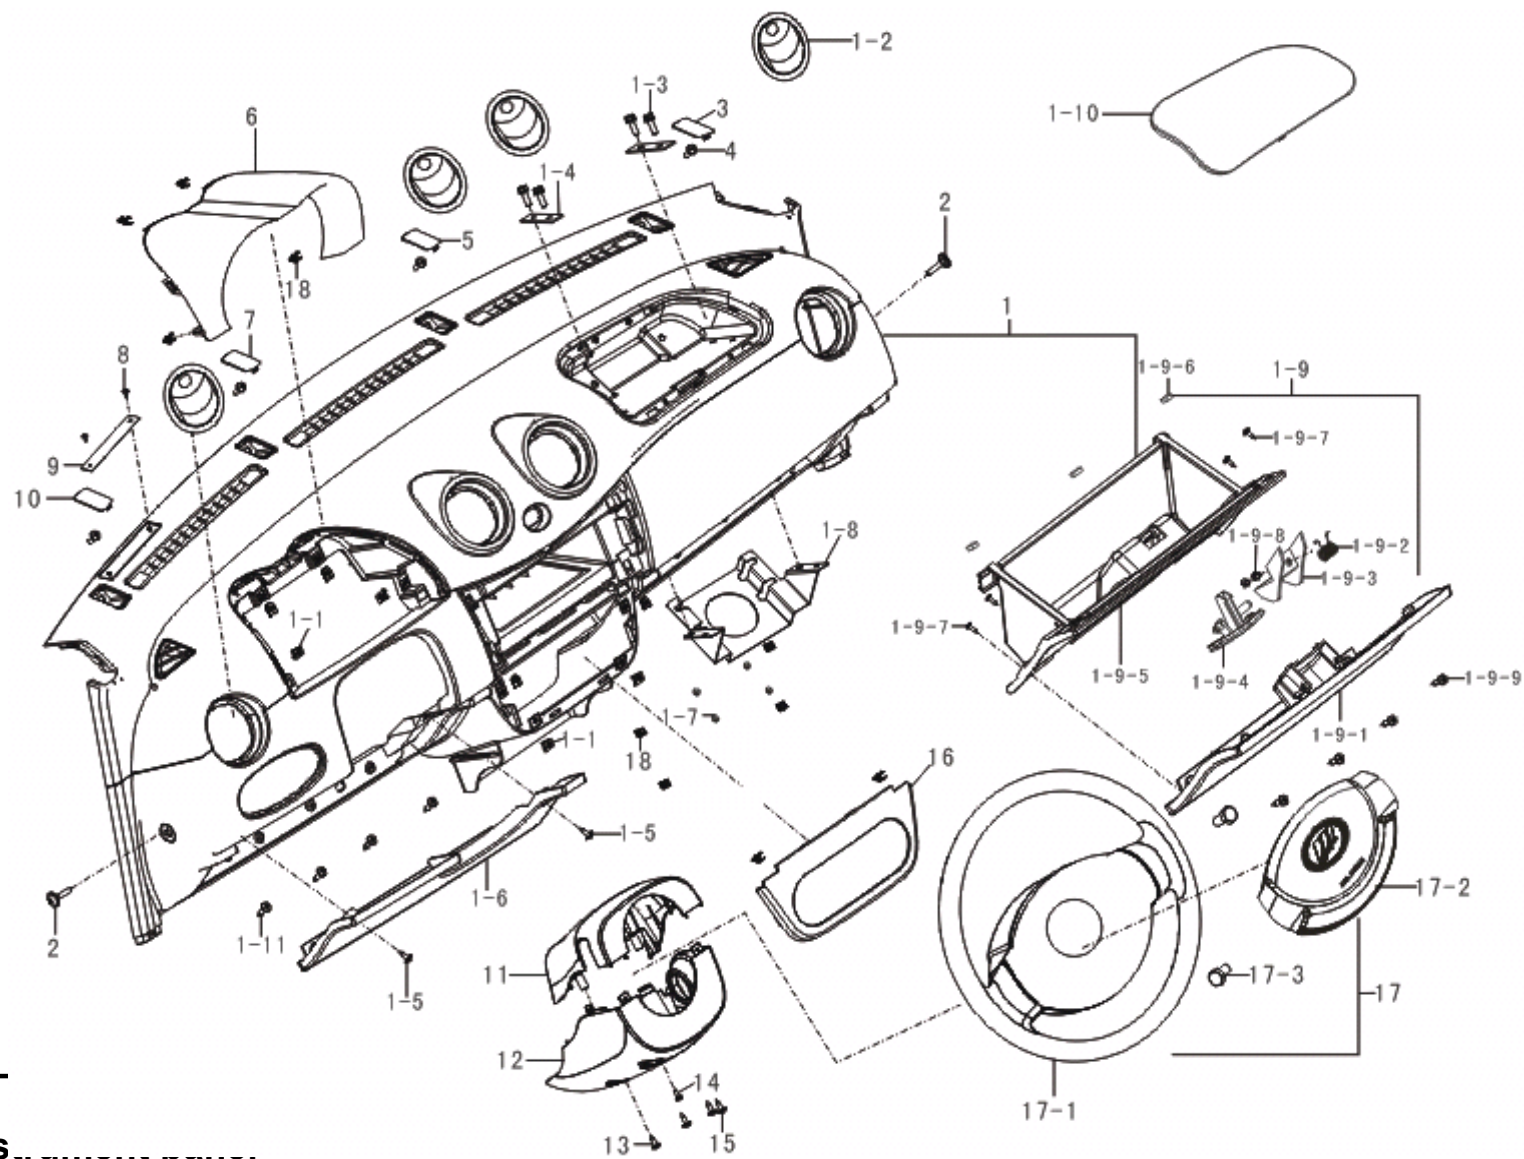

5.17 Ins _____

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

1	F5306100B92	仪表板本体组件	Instrument panel assy.	1	upper black, lower grey, for config with airbag	√
1	F5306100B1B92	仪表板本体组件	Instrument panel assy.	1	upper black, lower grey, for config without airbag	√
1-1	Q397428202	簧片螺母	Springness screw	8		
1-2	F5306310B25	空调风口组件	A/C ventilation nozzle	4		√
1-3	Q150B0620	六角头螺栓	Hex bolt	4	for config with airbag,M6*20	√
1-4	F5306117	副安全气囊连接压板	Passengers airbag panel	2	for config with airbag	
1-5	Q2214216	自攻螺钉	Clip	2		√
1-6	F5306114	仪表板下护板	Lower panel,instrument panel	1		√
1-7	Q32006	螺母 M6	Nut	4	for config with airbag	√
1-8	F5306116	副安全气囊安装支架	Passengers airbag bracket	1		
1-9	F5303200B15	杂物箱组件	Glovebox assy.	1		√
1-9-1	F5303211	杂物箱盖板	Glovebox cap	1		
1-9-2	F5303214	回位弹簧	Return spring	1		
1-9-3	F5303216	锁钩	Lock buckle	1		
1-9-4	F5303213	把手	Handle	1		
1-9-5	F5303212	杂物箱本体	Glovebox	1		
1-9-6	F5303215	减振块	Damper	3		
1-9-7	305-4216	内六角花型盘头自攻螺钉	Inner hex screw	4		

5.17 Instrument panel

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1-9-8	Q2714816	盘头自攻螺钉	Tapping screw	2		√

1-9-9	Q2714232	十字槽盘头自攻螺钉	Philips self-tapping screw	4		
1-10	F5303111B24	副安全气囊盖板	Passengers airbag panel	1	for config without airbag	√
1-11	Q2714216	自攻螺钉	Tapping screw	4		√
2	305C-0616T1F30	内六角花形大盘头螺钉	Inner hex screw	2		√
3	F5306216B24	堵盖IV	Plug IV	1	black	√
4	Q2140616	十字槽盘头螺钉	Philips screw	4		√
5	F5306215B24	堵盖III	Plug III	1	black	√
6	F5306211B24	组合仪表罩	Instrument cluster shield	1	black	√
7	F5306214B24	堵盖II	Plug II	1	black	√
8	Q4400307	开口型扁圆头抽芯铆钉	Rivet	2		√
9	L3904012	VIN标牌	VIN plate	1		
10	F5306213B24	堵盖I	Plug I	1	black	√
11	F5306711B24	转向柱上护罩	Steering pillar shield upper	1	black	√
12	F5306721B24	转向柱下护罩	Steering pillar shield lower	1	black	√
13	Q2734816	十字槽大半圆头自攻螺钉	Philips tapping screw	2		√
14	Q2140412	十字槽盘头螺钉	Philips screw	1		
15	Q2734216	十字槽大半圆头自攻螺钉	Philips tapping screw	2		√


5.17 Instrument panel

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
16	F5306612B24	空调开关盖板	A/C controller panel	1		√
17	F3402100B1B24	方向盘总成	Steering wheel assy.	1	for config without airbag, black	√

17	F3402100B24	方向盘总成	Steering wheel assy.	1	for config with airbag, black	√
17-1	F3402110	方向盘本体组件	Steering wheel	1		
17-2	F5824100B24	驾驶员安全气囊模块	Driver's airbag	1		√
17-3	Q150B0614	六角头螺栓	Hex bolt	2		
18	F5306212	金属卡扣	Metal clip	10		

5.18 Sub-instrument panel



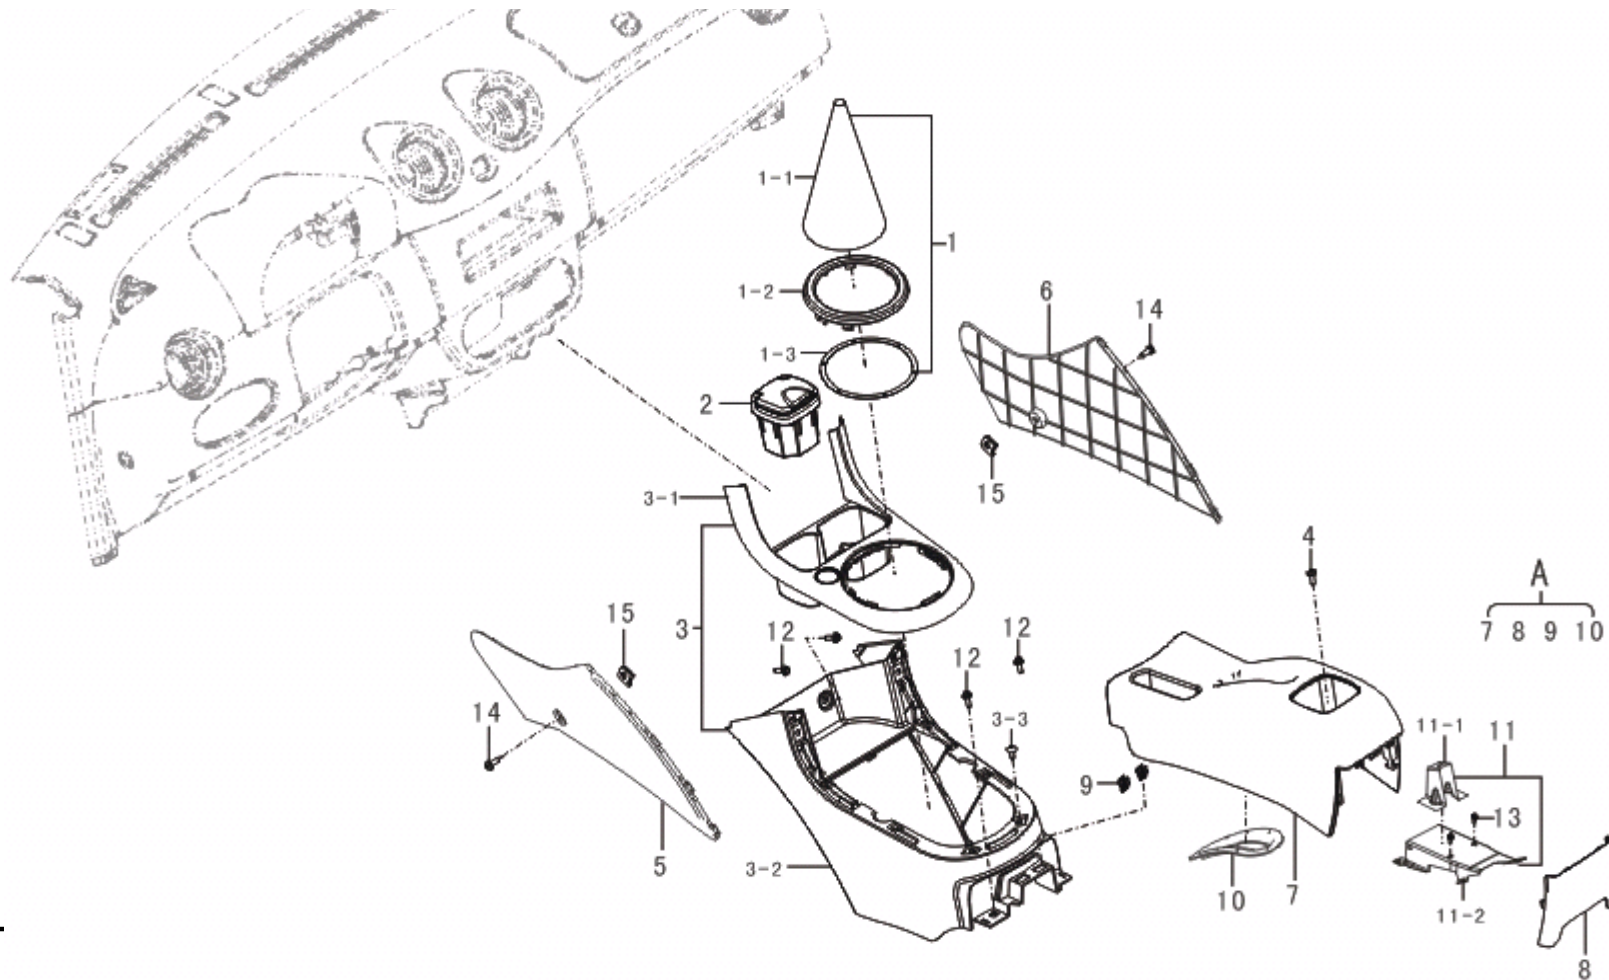

5.18 Sub-instrument panel

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F5305120B25	换挡皮套组件	Shift lever cover assy.	1		√
1-1	F5305123	换挡皮套	Shift lever cover	1		
1-2	F5305121	换挡皮套盖板	Circlip,shift lever cover	1		
1-3	F5305122	换挡皮套压板	Press circle,shift lever cover	1		


2	F5305300B16	烟灰盒总成	Ashtray assy.	*	EX 2, DX LX 1	√
3	F5305100	副仪表板前本体总成	Sub-instrument panel front body assy.	1		
3-1	F5305112B24	副仪表板前本体盖板	Cover,sub-instrument panel front body	1		√
3-2	F5305111B15	副仪表板前本体	Sub-instrument panel front body	1		√
3-3	Q2734216	十字槽半圆头自攻螺钉	Philips tapping screw	8		√
4	Q2140616	十字槽盘头螺钉	Philips screw	1		√
5	F5305113B15	副仪表板前本体左侧板	Left cover,sub-instrument panel front body	1		√
6	F5305114B15	副仪表板前本体右侧板	Right cover,sub-instrument panel front body	1		√
A	F5305200B15	副仪表板后本体总成	Sub-instrument panel rear body assy.	1		√
7	F5305211	副仪表板后本体	Sub-instrument panel rear body	1		
8	F5305212	副仪表板后盖板	Cover,sub-instrument panel rear body	1		
9	F5306212	金属卡扣	Metal clip	2		
10	F5305213	副仪表板后本体挡垫	Sub-instrument panel rear body damper	1		
11	F5120700	手刹盖板总成	Parking brake panel assy.	1		√


5.18 Sub-instrument panel

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
11-1	F5120608	副仪表板安装支架	Sub-instrument panel bracket	1		√
11-2	F5120607	手刹盖板	Parking brake panel	1		√
12	Q1840816	六角法兰面螺栓	Hex flange bolt	4		√
13	Q1410616	六角头螺栓和锥形弹性垫圈组合件	Hex bolt and washers	2		√
14	Q2214816	十字槽盘头自攻螺钉和大垫圈组合件	Philips screw and washer	2		√

15	Q39748202	A型簧片螺母	Springness nut	2		√

5.19 Front door attachment

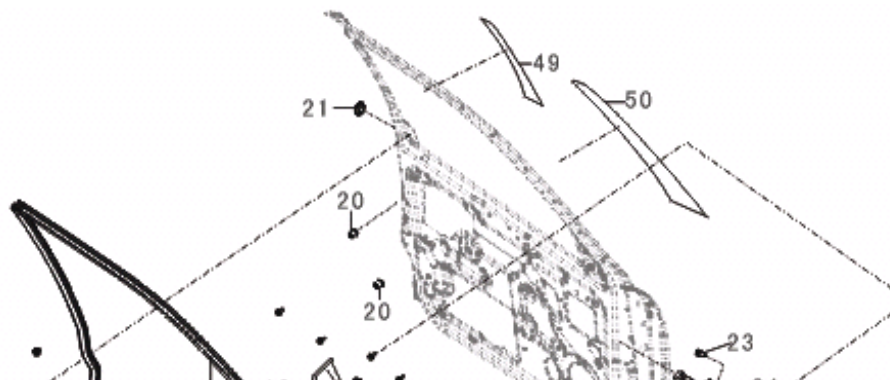

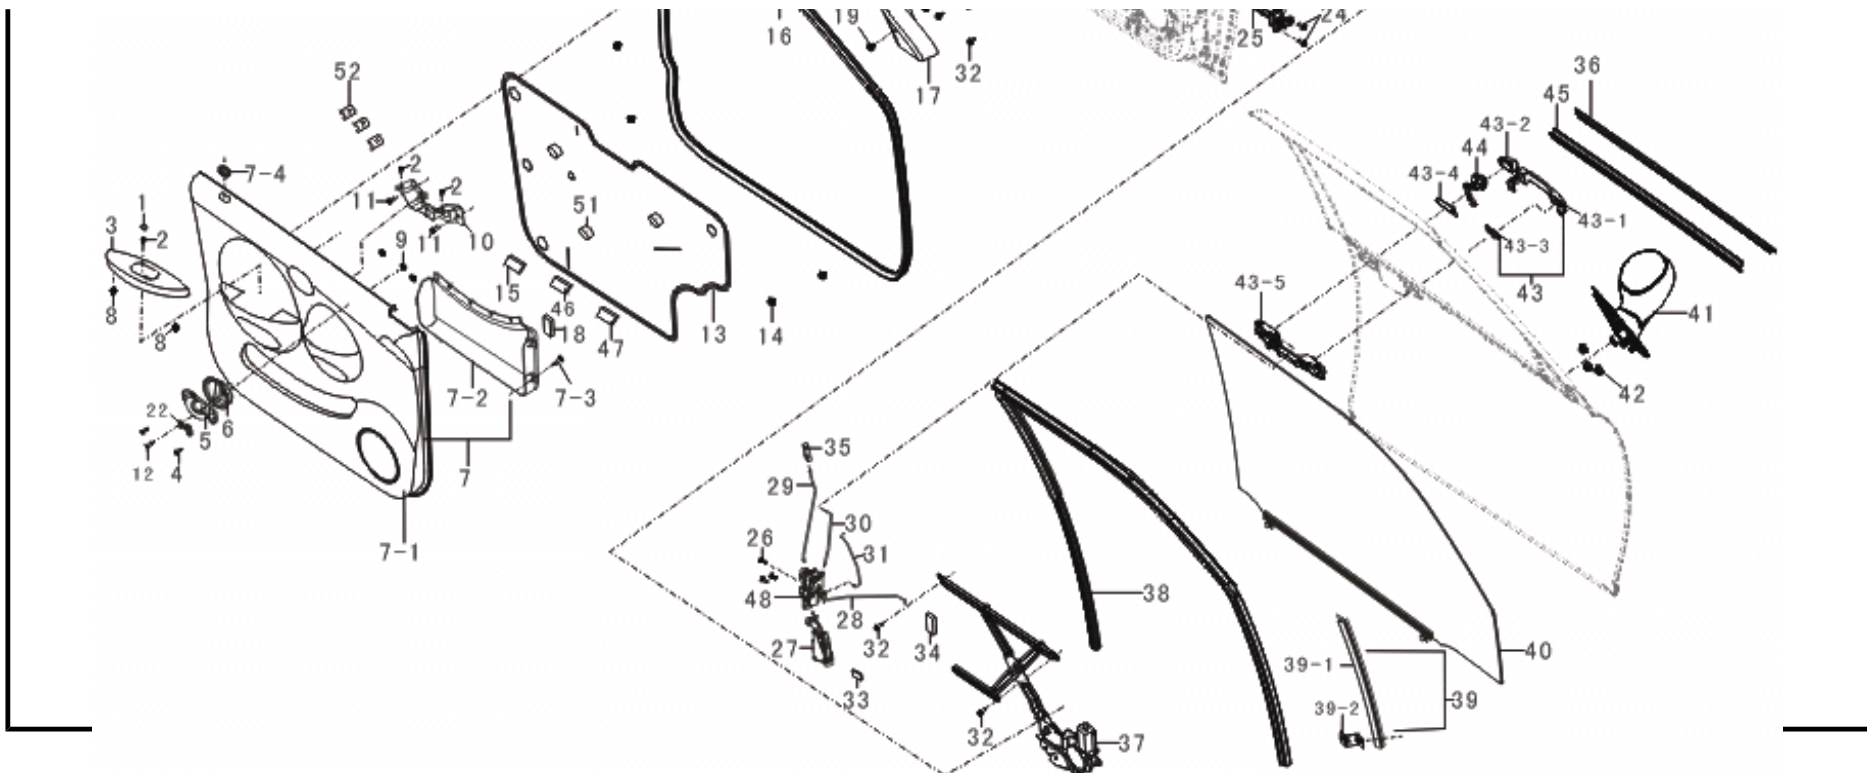

5.19 Front door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F6102122B25	堵盖	Plug	2	argent	✓
2	Q2714819	十字槽盘头自攻螺钉C型	Philips screw	6		✓
3	F6102121B25	左前车门护板扶手板	Inner handrail,front left door	1	argent	✓
3	F6102221B25	右前车门护板扶手板	Inner handrail,front right door	1	argent	✓
4	Q2734819	十字槽大半圆头自攻螺钉	Philips tapping screw	4		✓
5	F6105510B21	左内扣手及支座组件	Inner handle,left door	1	black	✓
5	F6105610B21	右内扣手及支座组件	Inner handle,right door	1	black	✓

6	F6105521B24	左前内扣手盖	Inner handle cap,left door	1	black	√
6	F6105621B24	右前内扣手盖	Inner handle cap,right door	1	black	√
7	F6102110B92	左前车门护板总成(电动)	Front left door interior assy.	1	EX, upper black, lower grey	√
7	F6102210B92	右前车门护板总成(电动)	Front right door interior assy.	1	EX, upper black, lower grey	√
7-1	F6102111	左前车门内护板	Front left door interior	1		
7-1	F6102211	右前车门内护板	Front right door interior	1		
7-2	F6102112	左前车门内护板杂物盒	Glovebox,front left door	1		
7-2	F6102212	右前车门内护板杂物盒	Glovebox,front right door	1		
7-3	Q2734213	十字槽半圆头自攻螺钉	Philips tapping screw	10		
7-4	F6102113	提钮座	Door lock seat	2		
8	F5306113	金属卡扣	Metal clip	4		

5.19 Front door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
9	Q398B03	A型通孔式塑料卡扣	Plastic eye clip A type	6		√
10	F6101127	左前门扶手支架	Handrail bracket,front left door	1		√
10	F6101227	右前门扶手支架	Handrail bracket,front right door	1		√
11	Q2140612	十字槽盘头螺钉	Philips screw	4		√
12	Q2744819	十字槽沉头自攻螺钉	Philips tapping screw	2		√
13	F6102021	左前门防雨帘	Rain shield,front left door	1		√
13	F6102022	右前门防雨帘	Rain shield,front right door	1		√
14	400-540	塑料卡扣	Plastic clip	14		√

15	F6102114	前车门海绵垫I	Foam blcok I,front door	2		
16	F6107111	左前车门门框外圈密封条	Front left door frame seal	1		√
16	F6107211	右前车门门框外圈密封条	Front right door frame seal	1		√
17	F6102123B24	左前门三角盖板	Front left door triangle cap	1	black	√
17	F6102223B24	右前门三角盖板	Front right door triangle cap	1	black	√
18	F6102117	前车门海绵垫IV	Foam blcok IV,front door	2		
19	400-540	塑料卡扣	Plastic clip	2		√
20	F6109112	侧车门缓冲块	Door damper	4		√
21	F5101015	橡胶堵盖 (Φ 25)	Rubber plug	2		√
22	400-0309B21	塑料卡扣	Plastic clip	2		√

5.19 Front door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
23	Q1840816	六角法兰面螺栓	Bolt	2		√
24	Q1840616	六角法兰面螺栓	Hex flange bolt	4	M6*16	√
25	B6109100	前侧车门限位器总成	Front door stopper	2		√
26	Q2560616	半沉头十字螺钉	Philips screw	3	M6*16	
27	F3787200	左前门锁执行器	Lock controller,front left door	1		√
27	F3787300	右前门锁执行器	Lock controller,front right door	1		√
28	F6105154	左前门锁芯拉杆	Lock cylinder rod,front left door	1		√
29	F6105153	左前车门保险手柄拉杆	Safety handle,front left door	1		√
29	F6105253	右前车门保险手柄拉杆	Safety handle,front right door	1		√

30	F6105152	左前外扣手拉杆	Outer handle rod,front left door	1		√
30	F6105252	右前外扣手拉杆	Outer handle rod,front right door	1		√
31	F6105151	左前内扣手拉杆	Inner handle rod,front left door	1		√
31	F6105251	右前内扣手拉杆	Inner handle rod,front right door	1		√
32	Q1840610	六角法兰面螺栓	Bolt	5		√
33	F6105159	闭锁器减震海绵垫	Lock controller foam damper	2		
34	F5101212	后备胎海面垫	Spare tyre damper	2		√
35	F6105158	车门内开保险手柄帽	Door lock component	2		√
36	F6107113	左前车门玻璃外刮水条	Outer weather Strip,front left door	1		√

5.19 Front door attachment


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
36	F6107213	右前车门玻璃外刮水条	Outer weather Strip,front right door	1		√
37	F6104100	左前车门电动玻璃升降器总成	Window glass lifter,front left door	1	AT	√
37	F6104200	右前车门电动玻璃升降器总成	Window glass lifter,front left door	1	AT	√
38	F6107112	左前车门玻璃密封条	Glass seal,front left door	1		√
38	F6107212	右前车门玻璃密封条	Glass seal,front right door	1		√
39	F6101130	左前侧车门玻璃后导槽下段组件	Glass rail assy,front left door	1		√
39	F6101230	右前侧车门玻璃后导槽下段组件	Glass rail assy,front right door	1		√
40	F6103100	左前车门玻璃组件	Front left window glass	1		√
40	F6103200	右前车门玻璃组件	Front right window glass	1		√
41	F8202100	左电动后视镜总成	Left wing mirror	1	black	√


41	F8202200	右电动后视镜总成	Right wing mirror	1	black	√
41	F8202100A2	左电动后视镜总成	Left wing mirror	1	chromium	√
41	F8202200A2	右电动后视镜总成	Right wing mirror	1	chromium	√
42	Q32006	六角法兰面螺栓	Hex flange bolt	6		√
43	F6105300E05	左前车门外扣手总成	Out handle,front left door	1	chromium	√
43	F6105400E05	右前车门外扣手总成	Out handle,front right door	1	chromium	√
43-1	F6105310	车门外扣手柄总成	Out handle plate	2		√
43-2	F6105331	左前车门外扣手柄帽	Out handle cap,front door	1		√

5.19 Front door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
43-2	F6105431	右前侧门外扣手柄帽	Out handle cap,front right door	1		√
43-3	F6105332	车门外扣手柄塑料垫片	Out handle washer	2		√
43-4	F6105333	车门外扣手柄帽塑料垫片	Out handle cap washer	2		√
43-5	F6105320	左前车门外扣手柄座总成	Out handle seat,front left door	1		√
43-5	F6105420	右前车门外扣手柄座总成	Out handle seat,front right door	1		√
45	F6107114	左前车门玻璃内刮水条	Inner weather Strip,front left door	1		√
45	F6107214	右前车门玻璃内刮水条	Inner weather Strip,front right door	1		√
46	F6102115	前车门海绵垫II	Foam blkok II,front door	2		
47	F6102116	前车门海绵垫III	Foam blkok III,front door	2		
48	F6105110	左前门锁体总成	Front left door lock assy.	1	EX	√
48	F6105110B1	左前门锁体总成	Front left door lock assy.	1	DX LX	√

5.20 Rear door attachment

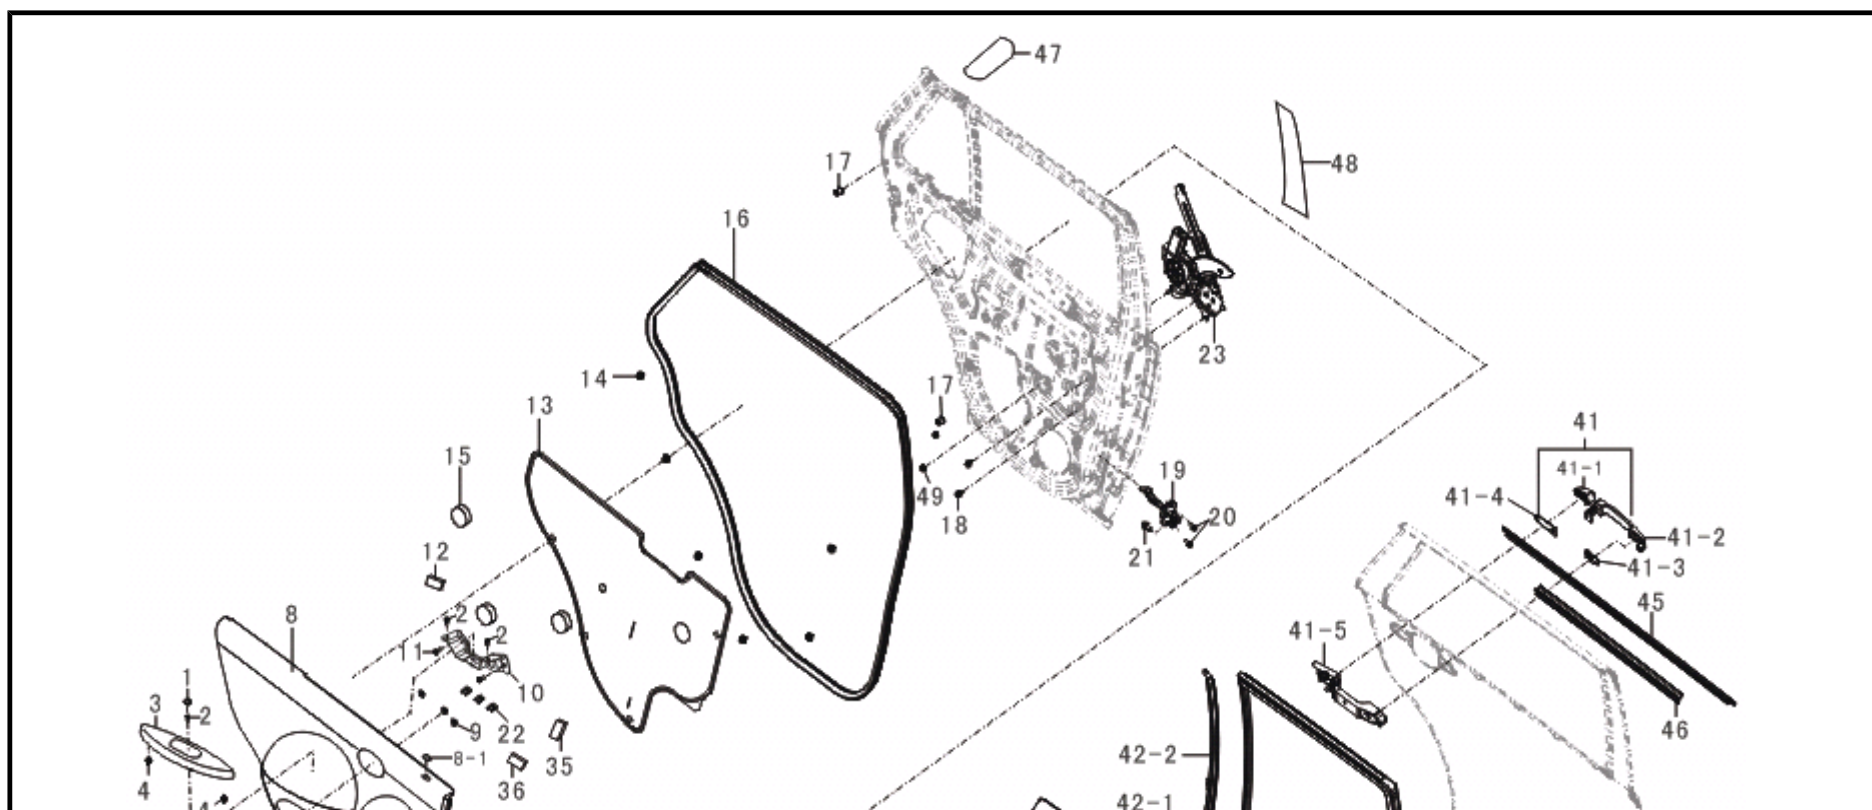

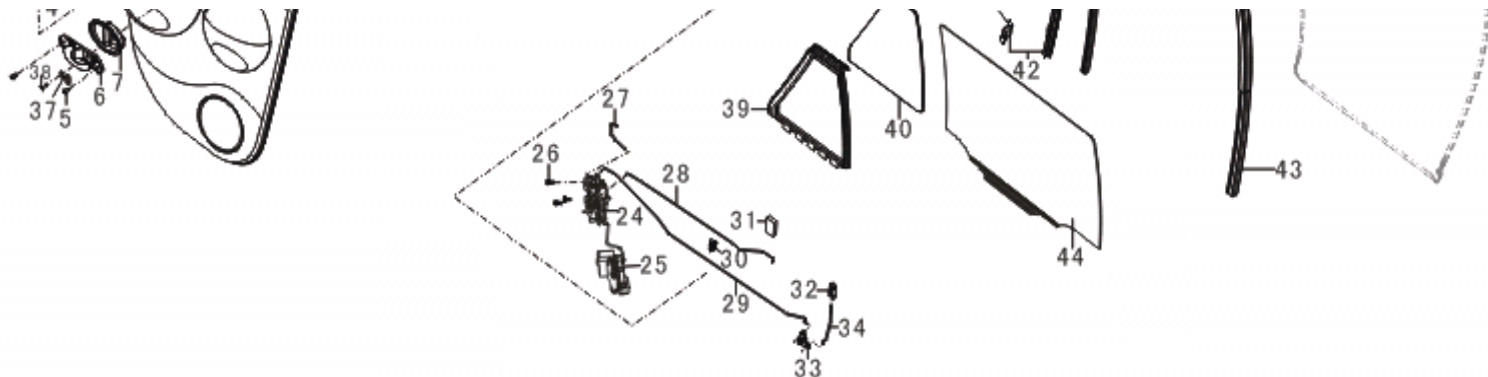

5.20 Rear door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F6102122B25	堵盖	Plug	2	argent	✓
2	Q2714819	十字槽盘头自攻螺钉-C型	Philips tapping screw	6		✓
3	F6202112B25	左后车门护板扶手板	Inner handrail,rear left door	1	argent	✓
3	F6202212B25	右后车门护板扶手板	Inner handrail,rear right door	1	argent	✓
4	F5306113	金属卡扣	Metal clip	4		
5	Q2734819	十字槽大半圆头自攻螺钉	Philips tapping screw	4		✓
6	F6105510B21	左内扣手及支座组件	Inner handle,left door	1	black	✓
6	F6105610B21	右内扣手及支座组件	Inner handle,right door	1	black	✓
7	F6105521B24	左前内扣手盖	Inner handle cap,left door	1	black	✓
7	F6105621B24	右前内扣手盖	Inner handle cap,right door	1	black	✓
8	F6202110B92	左后车门内护板总成(电动)	Rear left door interior assy.	1	EX, upper black, lower grey	✓
8	F6202210B92	右后车门内护板总成(电动)	Rear right door interior assy.	1	EX, upper black, lower grey	✓
8-1	F6102113	提钮座	Foam blcok I,front door	2		

9	Q398B03	A型通孔式塑料卡扣	Plastic eye clip A type	6		√
10	F6201127	左后门扶手支架	Handrail bracket,rear left door	1		√
10	F6201227	右后门扶手支架	Handrail bracket,rear right door	1		√
11	Q2140612	十字槽盘头螺钉	Philips screw	4		√
12	F6202113	后车门海绵垫I	Foam blcok I,rear door	2		

5.20 Rear door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
13	F6202021	左后门防雨帘	Rain shield,rear left door	1		√
13	F6202022	右后门防雨帘	Rain shield,rear right door	1		√
14	400-540	塑料卡扣	Plastic clip	12		√
15	F6100115	车门海绵垫	Sponge damper	6		√
16	F6207111	左后车门门框外圈密封条	Rear left door frame seal	1		√
16	F6207211	右后车门门框外圈密封条	Rear right door frame seal	1		√
17	F6109112	侧车门缓冲块	Door damper	4		√
18	Q1840610	六角法兰面螺栓	Bolt	4		√
19	B6209100	后车门限位器总成	Rear door stopper	2		√
20	Q1840616	六角法兰面螺栓	Hex flange bolt	4		√
21	Q1840816	六角法兰面螺栓	Bolt	2		√
22	Q39748202	A型簧片螺母	Springness nut	6		√
23	F6204100	左后车门电动玻璃升降器总成	Window glass lifter,rear left door	1	AT	√
23	F6204200	右后车门电动玻璃升降器总成	Window glass lifter,rear right door	1	AT	√

24	F6205110	左后门锁体总成	Rear left door lock assy.	1	EX	√
24	F6205110B1	左后门锁体总成	Rear left door lock assy.	1	DX LX	√
24	F6205210	右后门锁体总成	Rear right door lock assy.	1	EX	√
24	F6205210B1	右后门锁体总成	Rear right door lock assy.	1	DX LX	√

5.20 Rear door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
25	F3787400	左后门锁执行器	Lock controller,rear left door	1		√
25	F3787500	右后门锁执行器	Lock controller,rear right door	1		√
26	Q2560616	半沉头十字螺钉	Philips screw	3		
27	F6205152	左后外扣手拉杆	Outer handle rod,rear left door	1		√
27	F6205252	右后外扣手拉杆	Outer handle rod,rear right door	1		√
28	F6205151	左后内扣手拉杆	Inner handle rod,rear left door	1		√
28	F6205251	右后内扣手拉杆	Inner handle rod,rear right door	1		√
29	F6205154	左后车门保险横拉杆	Safety handle,rear left door	1		√
29	F6205254	右后车门保险横拉杆	Safety handle,rear right door	1		√
30	F6205156	扣手拉杆支撑卡扣	Handle rod clip	2		√
31	F5101212	后备胎海绵垫	Spare tyre damper	2		√
32	F6105158	车门内开保险手柄帽	Door lock component	2		√
33	F6205155	后车门保险手柄拉杆连接块	Safety handle con-rod,rear door	2		√
34	F6205153	左后车门保险手柄拉杆	Safety handle,rear left door	1		√
34	F6205253	右后车门保险手柄拉杆	Safety handle,rear right door	1		√

35	F6202114	后车门海绵垫II	Foam blcok II,rear door	2		
36	F6202115	后车门海绵垫III	Foam blcok III,rear door	2		
37	400-0309B21	塑料卡扣	Plastic clip	2		√

5.20 Rear door attachment


P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
38	Q2744819	十字槽沉头自攻螺钉	Philips tapping screw	2		√
39	F6207113	左后三角窗玻璃密封条	Rear left triangular window glass seal	1		√
39	F6207213	右后三角窗玻璃密封条	Rear right triangular window glass seal	1		√
40	F6203311	左后三角窗玻璃	Rear left triangular window glass	1		√
40	F6203411	右后三角窗玻璃	Rear right triangular window glass	1		√
41	F6205300E05	左后车门外扣手总成	Out handle,rear left door	1		√
41	F6205400E05	右后车门外扣手总成	Out handle,rear left door	1		√
41-1	F6205331	后车门外扣手柄帽	Out handle cap,rear door	2		√
41-2	F6105310	车门外扣手柄总成	Out handle plate	2		√
41-3	F6105332	后车门外扣手柄塑料垫片	Out handle washer	2		√
41-4	F6105333	车门外扣手柄帽塑料垫片	Out handle cap washer	2		√
41-5	F6205320	左后车门外扣手柄座总成	Out handle seat,rear left door	2		√
42	F6201180	左后侧车门玻璃活动导槽组件	Glass rail assy,rear left door	1		√
42	F6201280	右后侧车门玻璃活动导槽组件	Glass rail assy,rear right door	1		√
42-1	F6201191	左后侧车门玻璃导槽后段下支架	Glass rail bracket,rear left door	1		
42-1	F6201291	右后侧车门玻璃导槽后段下支架	Glass rail bracket,raer right door	1		

42-2	F6201181	左后侧车门玻璃活动导槽后段	Glass rear rail,rear left door	1		
42-2	F6201281	右后侧车门玻璃活动导槽后段	Glass rear rail,raer right door	1		

5.20 Rear door attachment

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
43	F6207112	左后车门玻璃密封条	Glass seal,rear left door	1		√
43	F6207212	右后车门玻璃密封条	Glass seal,rear right door	1		√
44	F6203100	左后车门玻璃组件	Rear left window glass	1		√
44	F6203200	右后车门玻璃组件	Rear right window glass	1		√
45	F6207114	左后车门玻璃外刮水条	Outer weather Strip,rear left door	1		√
45	F6207214	右后车门玻璃外刮水条	Outer weather Strip,rear right door	1		√
46	F6207115	左后车门玻璃内刮水条	Inner weather Strip,rear left door	1		√
46	F6207215	右后车门玻璃内刮水条	Inner weather Strip,rear right door	1		√
47	F5500514	左后门PVC贴膜 II	PVC paster 2, rear left door	1		√
47	F5500524	右后门PVC贴膜 II	PVC paster 2, rear right door	1		√
48	F5500513	左后门PVC贴膜 I	PVC paster 1, rear left door	1		√
48	F5500523	右后门PVC贴膜 I	PVC paster 1, rear right door	1		√
49	Q32006	六角法兰面螺母	Hex flange bolt	4		√
	F6205420	右后车门外扣手柄座总成				√

5.21 Rear door attachment(manual)

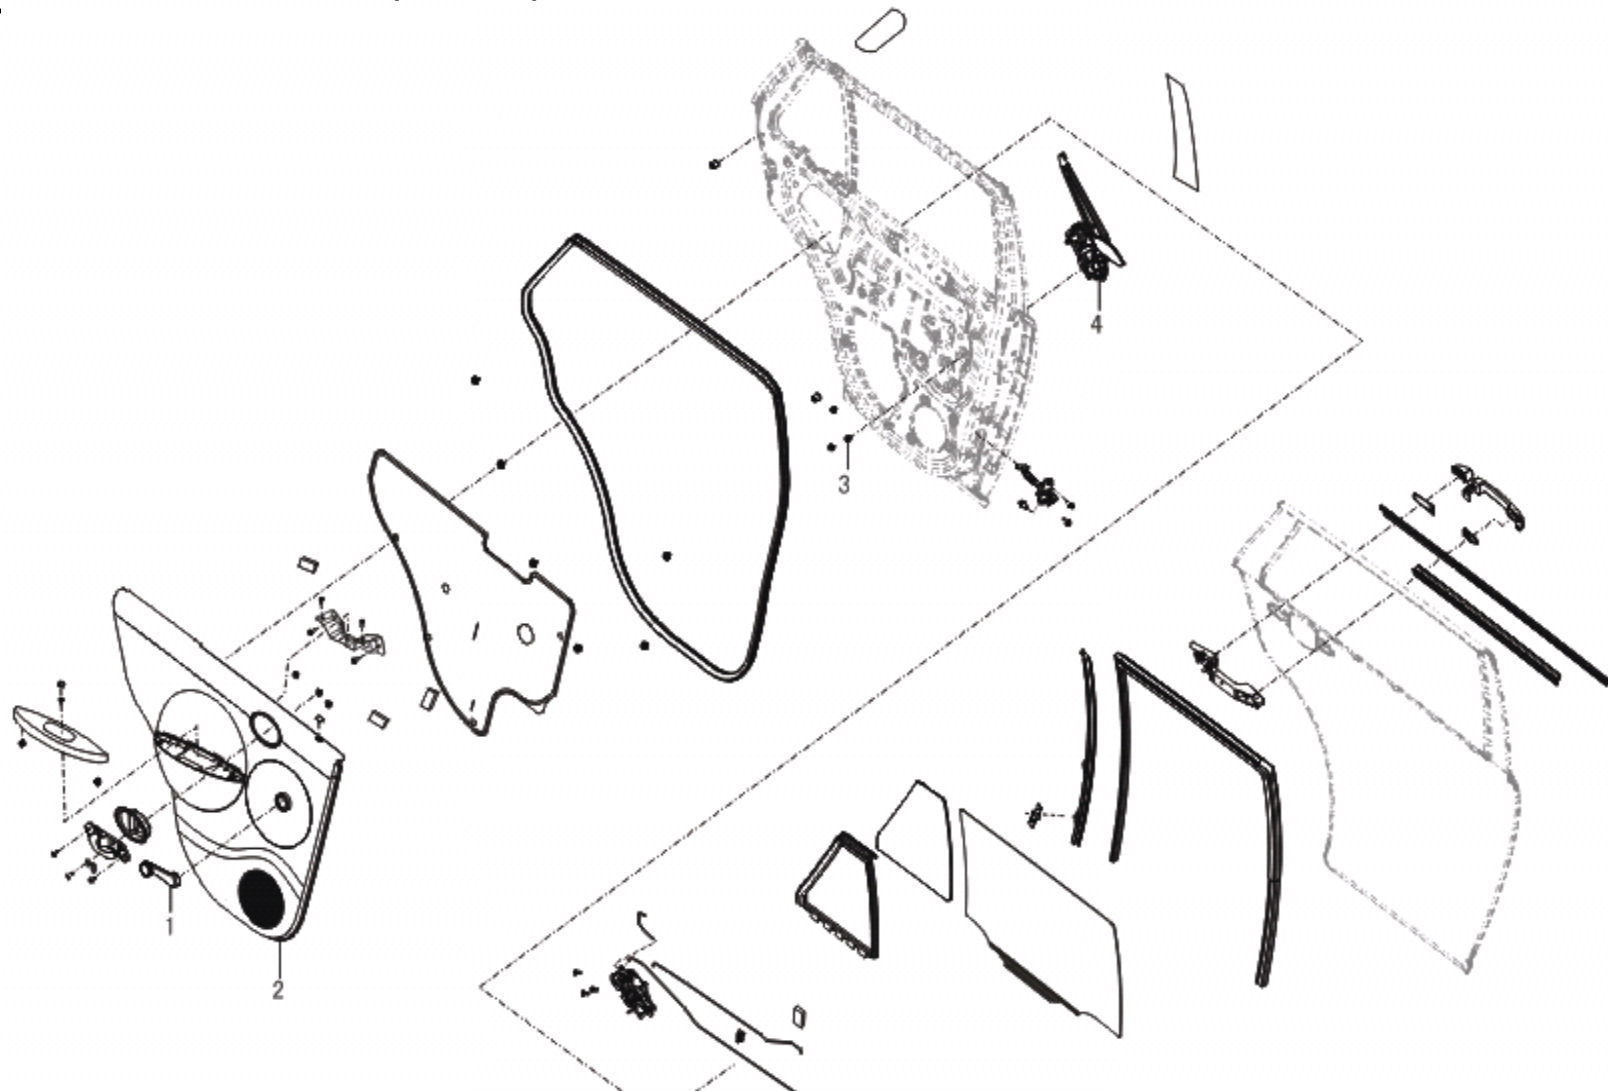


5.21 Rear door attachment(manual)

[illegible]

6. Air conditioner

6.01 Air conditioner system

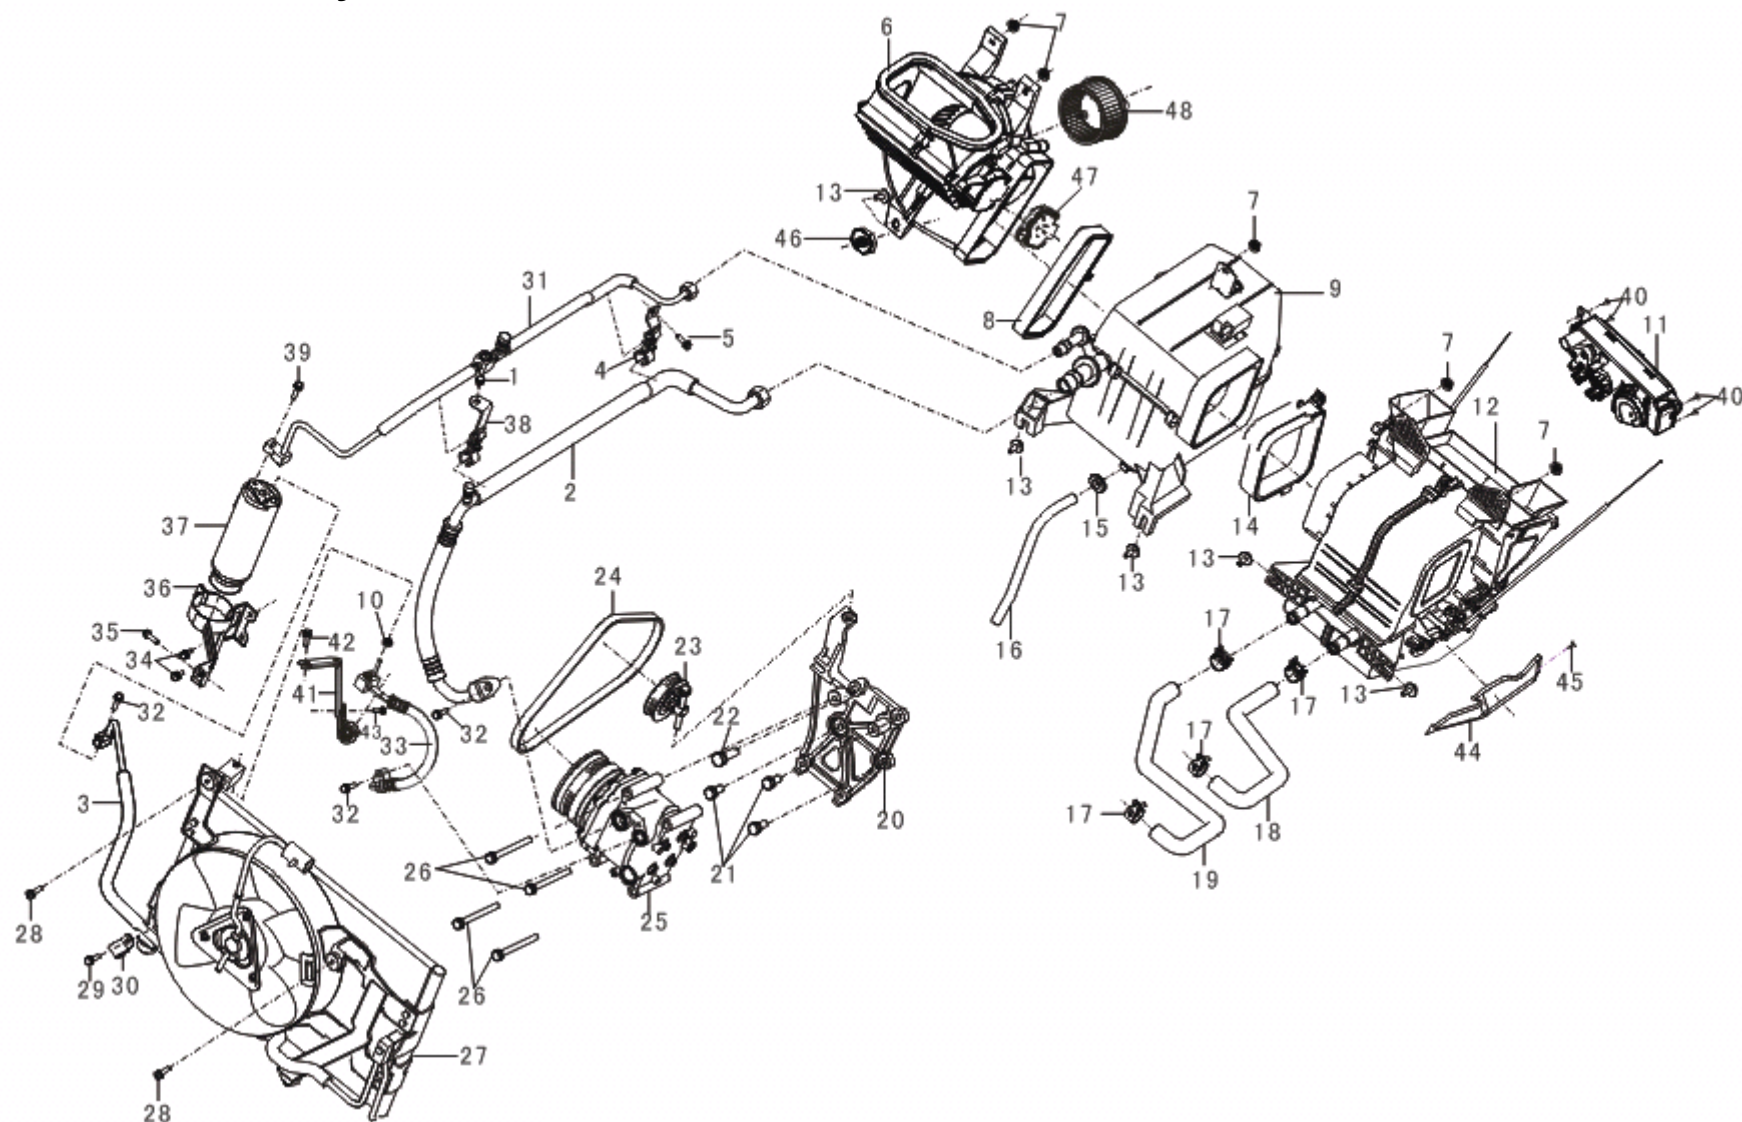

6.01 Air conditioner system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	Q1460616	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	1		√
2	F8108150	空调低压管组件	Low-pressure hose	1		√
3	F8108120B1	空调高压硬管组件B	High-pressure tube B	1		√
4	F8108170	空调管路抱箍支架组件A	A/C pipe bracket A	1		√
5	Q1840616T1F30	六角头螺栓和平垫组合件	Hex bolt and flat washer	1		√
6	F8104100	鼓风机总成	Blower assy.	1		√
7	Q32206	六角头螺母和锥形弹性垫圈组合件	Hex bolt,taper springness washer	5		√
8	F8111140	卡带组件A	Clip belt B	1		√
9	F8107100	蒸发器总成	Evaporator	1		√
10	Q32006	六角法兰面螺母	Hex flange bolt	1		√
11	F8112100B16	空调控制面板总成	Air conditioner control panel	1		√
12	F8101100	暖风机总成	Heater	1		√
13	Q1410620L	六角头螺栓和弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	5		√
14	F8111150	卡带组件B	Clip belt B	1		√
15	F8108016	空调排水管胶套	Sleeve,A/C outtake pipe	1		√
16	F8108017	空调排水管	A/C outtake pipe	1		√
17	Q673B38	钢带弹性环箍	Hoop	4		
18	F8108210	暖风机进水管	Heater intake pipe	1		√

6.01 Air conditioner system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
19	F8108220	暖风机出水管	Heater outtake pipe	1		√
20	LBA8103101B1	压缩机支架	Compressor bracket	1		√
21	Q151C1025	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	3		√
22	207-1035TF3	六角头螺栓和弹簧垫圈组合件	Hex bolt and washer	1		
23	LBA8103120	压缩机皮带张紧轮	Tensioner	1		√
24	LBA8103109	压缩机皮带	Compressor belt	1		√
25	LBA8103100B1	压缩机总成	Compressor	1		√
26	Q18408105	六角头螺栓和平垫组合件	Hex bolt,taper springness washer and flat washer	4		√
27	F8105100B1	冷凝器总成	Condensor	1		√
28	Q2360625	十字槽盘头螺钉, 弹簧垫圈, 平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
29	Q1410620	六角头螺栓和锥形弹性垫圈组合件	Hex bolt,taper springness washer	1		√
30	F8108012	高压管管夹组件	High-pressure tube clip	1		√
31	F8108110	高压管压硬管组件A	High-pressure tube A	1		√
32	Q32006	六角法兰面螺母	Hex flange bolt	3		√
33	F8108130	空调高压软管组件	High-pressure hose	1		√
34	Q1460616	六角头螺栓和弹簧垫圈,平垫圈组合件	Hex bolt,taper springness washer and flat washer	2		√
35	Q1840616T1F30	六角头螺栓和平垫组合件	Hex bolt and flat washer	1		√
36	F8109120	干燥器支架	Desiccator bracket	1		√


6.01 Air conditioner system

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
-----	------------	------------	------------	-----	-------------	--------

37	F8109110	干燥器	Desiccator	1		√
38	F8108180	空调管路抱箍支架组件B	A/C pipe bracket B	1		√
39	Q1410625T1F30	六角头螺栓和平垫组合件	Hex bolt and flat washer	1		√
40	Q2204213	十字槽盘头自攻螺钉和平垫圈组合件	Philips screw with washer	4		√
41	F8111220	压缩机排气管托架组件	Exhaust	1		
42	Q1840820	六角头法兰面螺栓	Hex flange bolt	1		√
43	Q1840616	六角头法兰面螺栓	Hex flange bolt	1		√
44	F8101157	风门机构护板	Air blower shield	1		√
45	Q2734816	盘头自攻螺钉	Philips tapping screw	1		√
46	F3745180	空调鼓风机电机调速模块	Blower adjuster	1		√
47	F3745200	内外循环风门执行器	Ventilation vavle operator	1		
48	F3745100	空调鼓风机电机	Blower motor	1		√
	F8107150B1	蒸发器膨胀阀	Expansion Valve, evaporator	1		√

6.02 Air conditioner ventilation pipeline



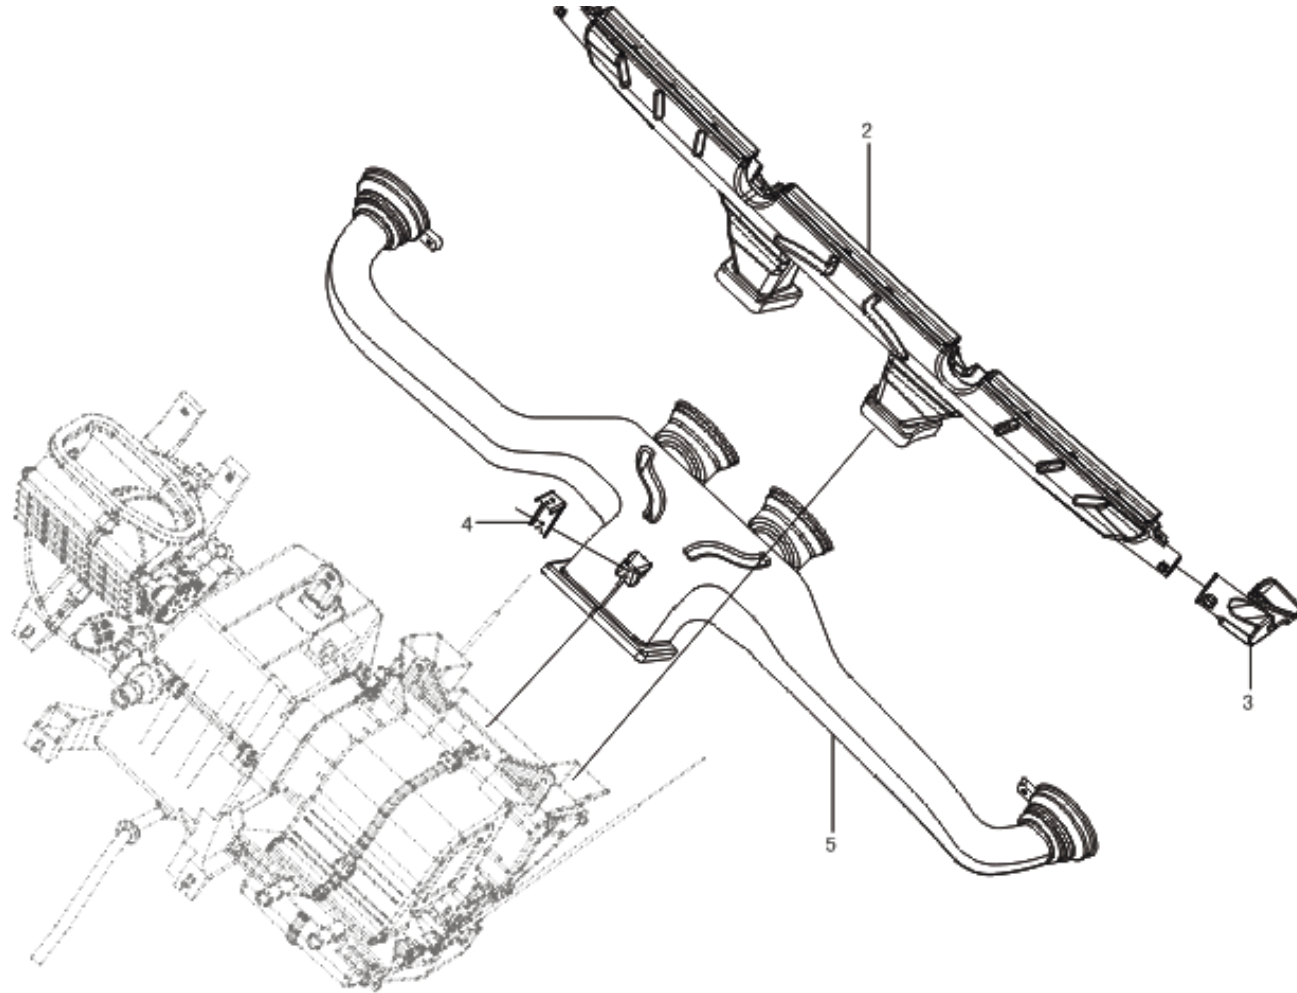

6.02 Air conditioner ventilation pipeline

P/N	PARTS CODE	PARTS NAME	PARTS NAME	QTY	DESCRIPTION	Supply
1	F8117113	前右除霜风道	Right defroster ventilation	1		
2	F8117111	前除霜风道	Front defroster ventilation	1		

[illegible]