


12 V sockets

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

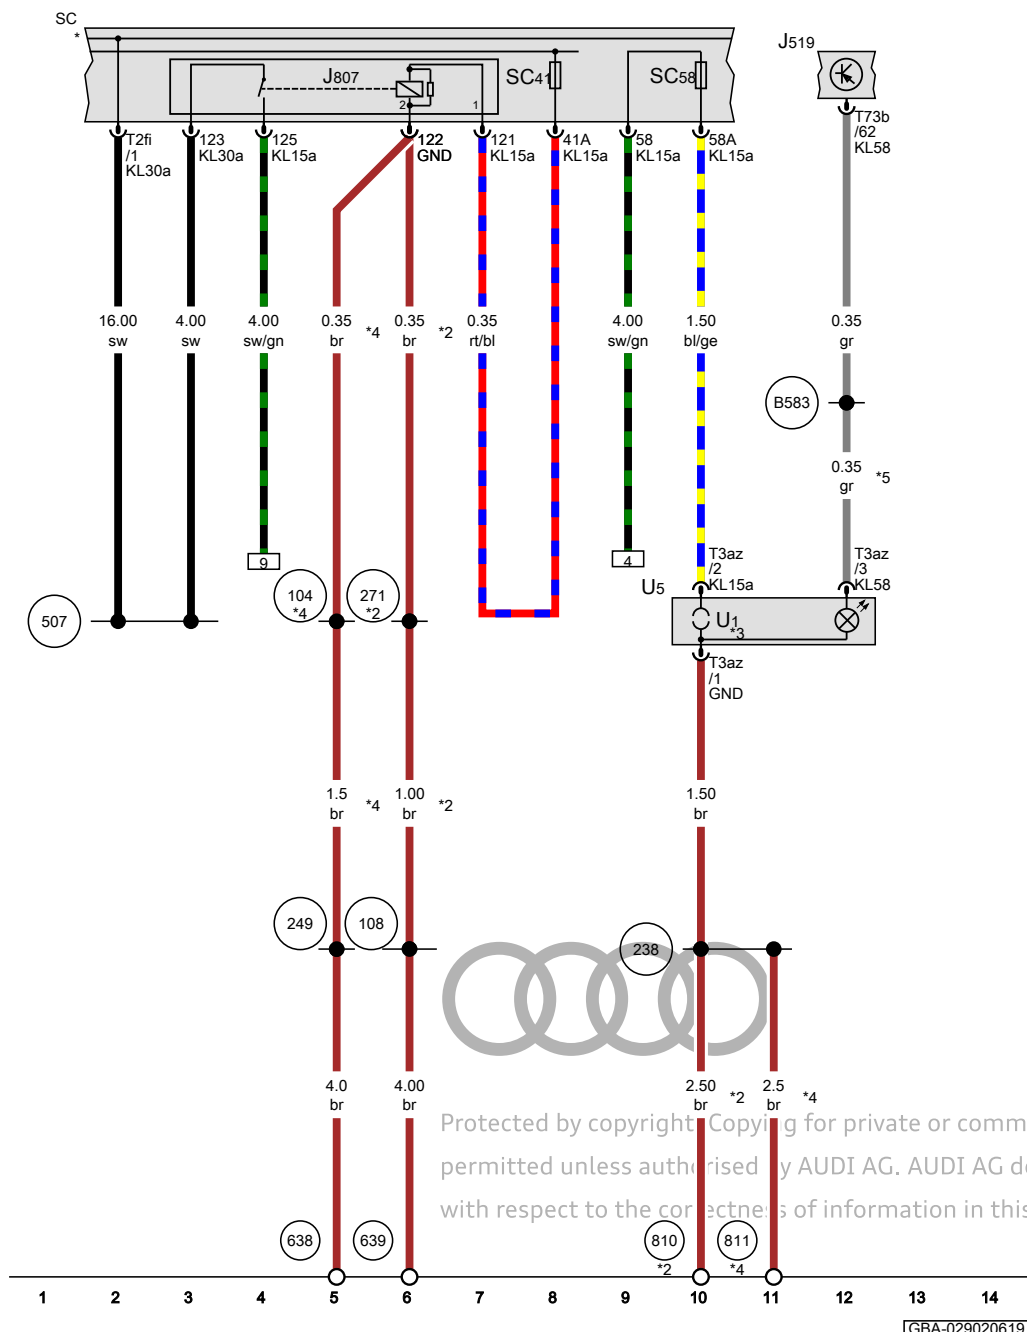

Onboard supply control unit, Relay for power sockets, Fuse holder C, 12 V socket

- J519 Onboard supply control unit
- J807 Relay for power sockets
- SC Fuse holder C
- SC41 Fuse 41 on fuse holder C
- SC58 Fuse 58 on fuse holder C
- T2fi 2-pin connector, black
- T3az 3-pin connector, black
- T73b 73-pin connector, black
- U1 Cigarette lighter
- U5 12 V socket

- 104 Earth connection in front right wiring harness - sensor earth -
- 108 Earth connection 2, in front left wiring harness
- 238 Earth connection 1, in interior wiring harness
- 249 Earth connection 2, in interior wiring harness
- 271 Earth connection 3, in front wiring harness
- 507 Threaded connection (30), on battery fuse holder
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B583 Positive connection (58), in interior wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 For left-hand drive models
- *3 For smoker version models
- *4 For right-hand drive models
- *5 Up to July 2019