FRONT ISU

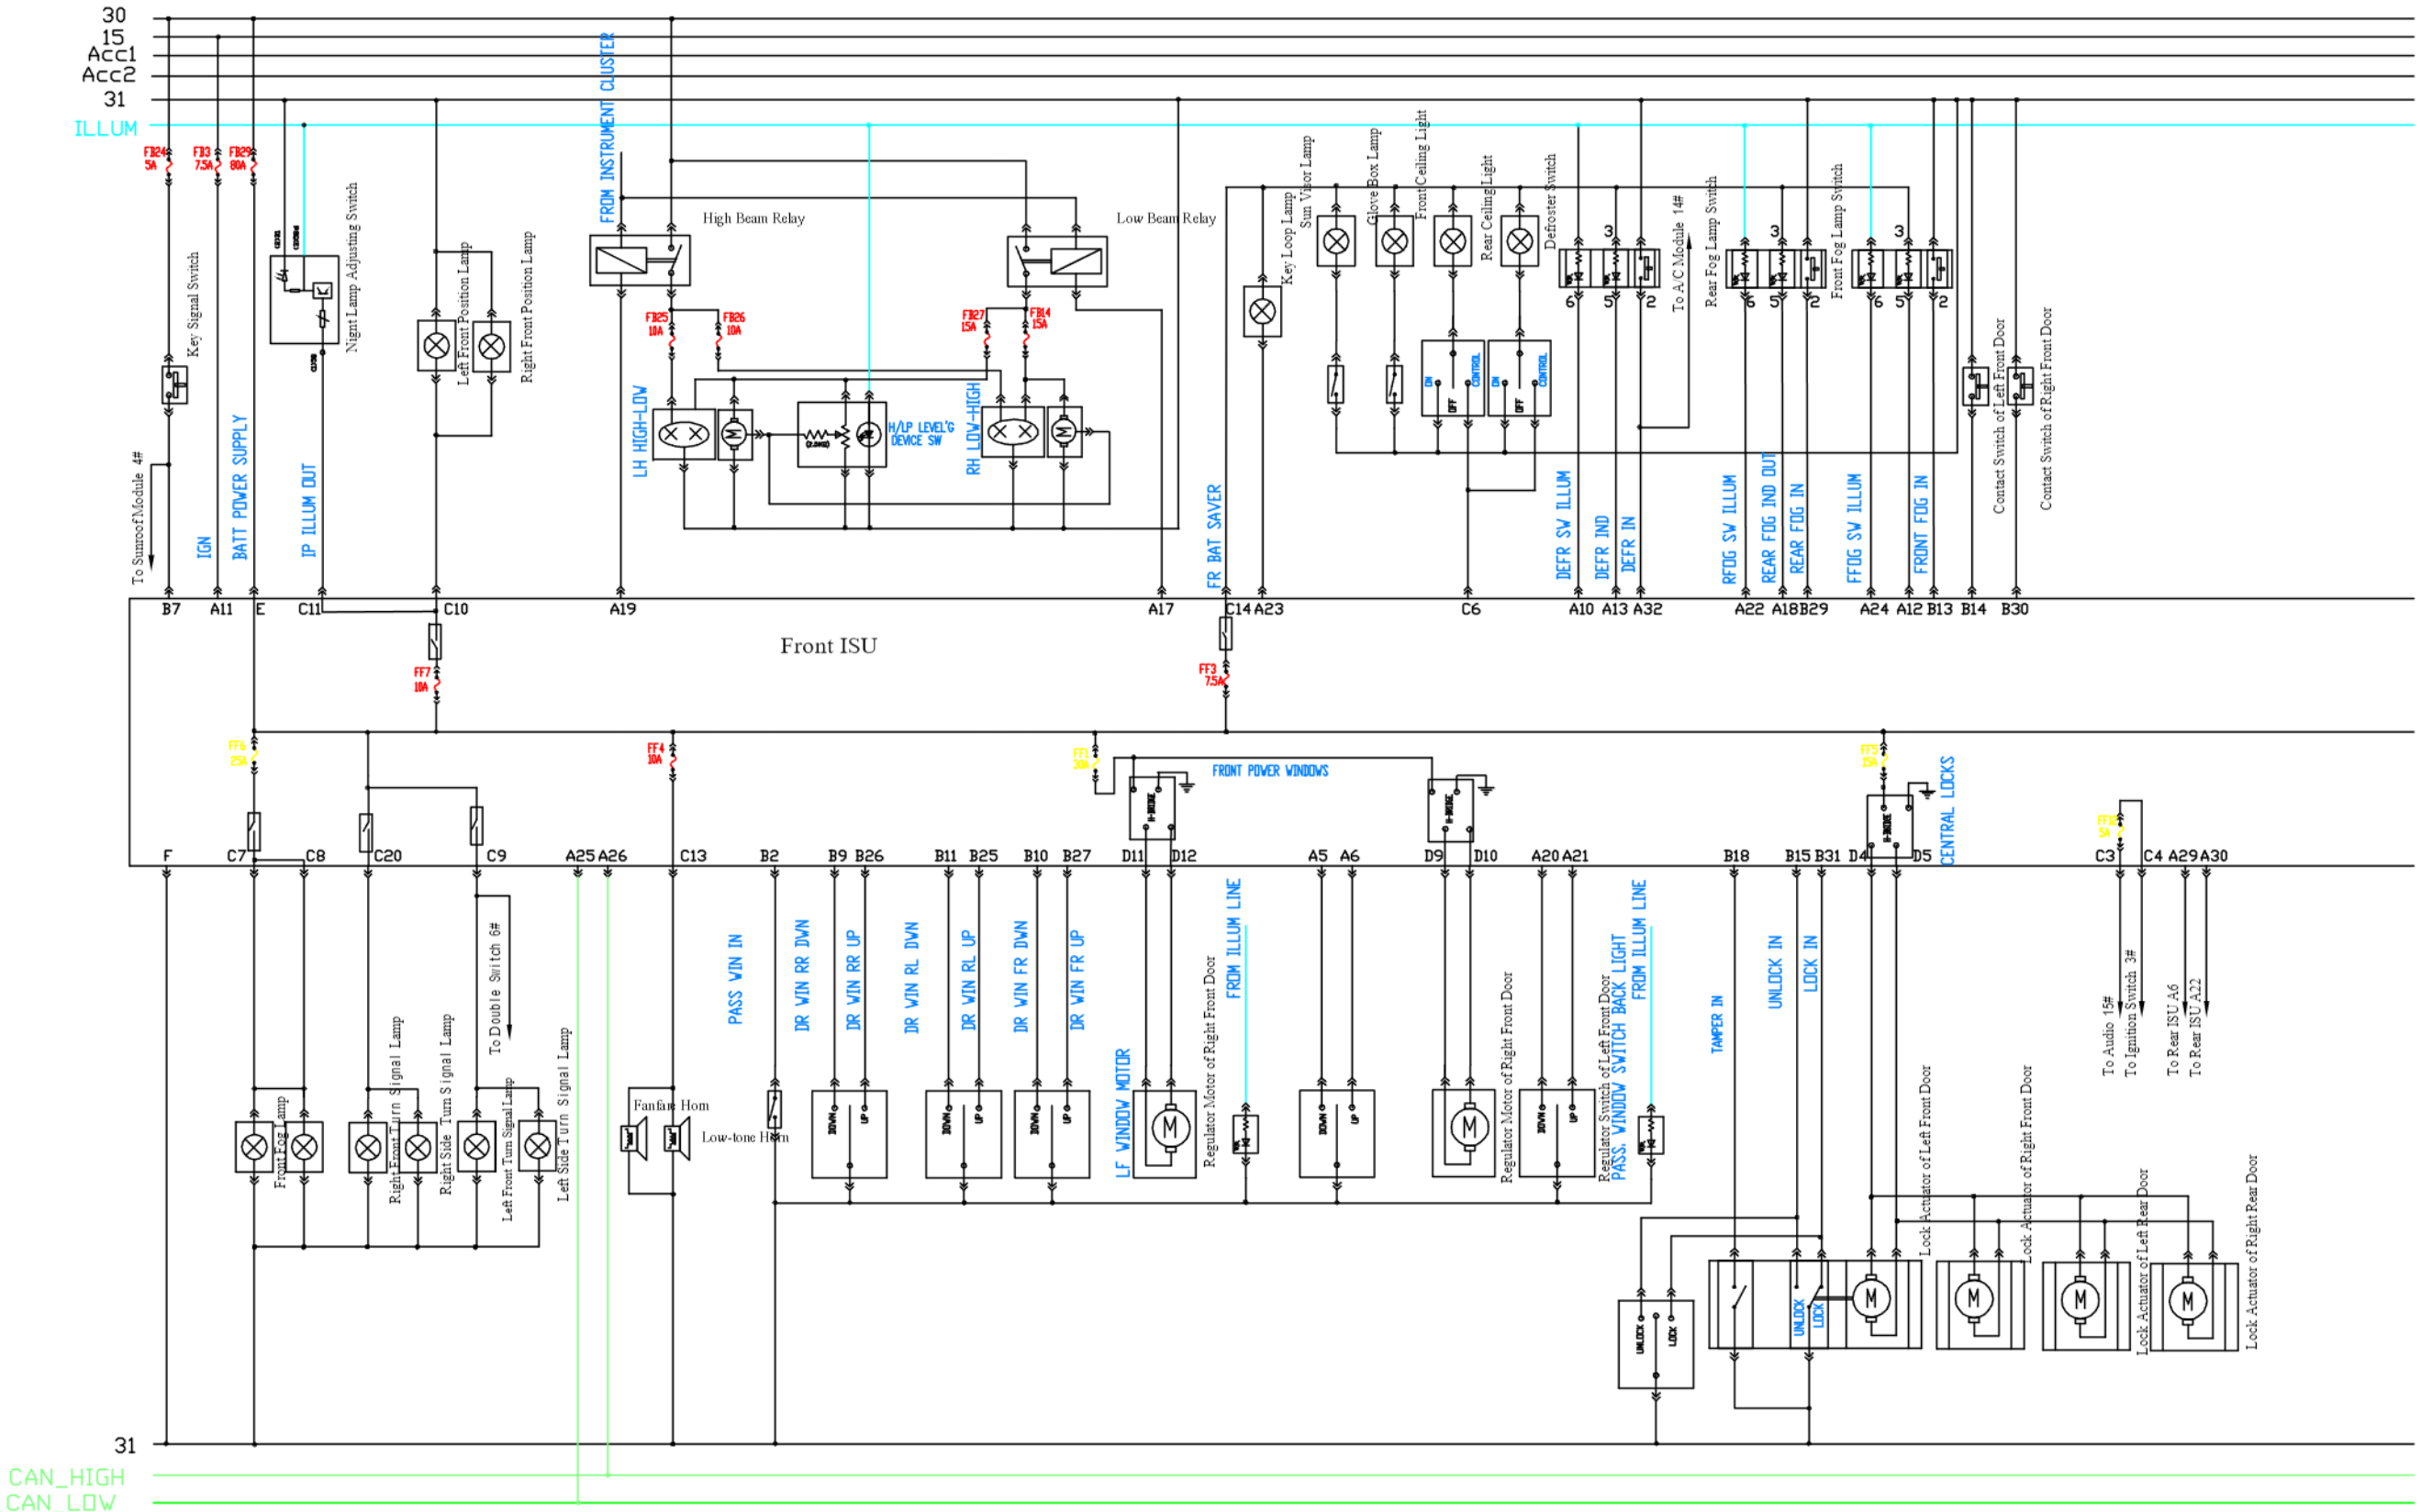
30
15
Acc1
Acc2
31
ILLUM
FB24 5A
FB3 7.5A
FB29 80A
Key Signal Switch
Night Lamp Adjusting Switch
Left Front Position Lamp
Right Front Position Lamp
FROM INSTRUMENT CLUSTER
High Beam Relay
Low Beam Relay
FB25 10A
FB26 10A
FB27 15A
FB14 15A
LH HIGH-LOW
H/LP LEVEL'G DEVICE SW
RH LOW-HIGH
Key Loop Lamp
Sun Visor Lamp
Glove Box Lamp
Front Ceiling Light
Rear Ceiling Light
Defroster Switch
To A/C Module 14#
Rear Fog Lamp Switch
Front Fog Lamp Switch
Contact Switch of Left Front Door
Contact Switch of Right Front Door
To Sunroof Module 4#
IGN
BATT POWER SUPPLY
IP ILLUM OUT
FR BAT SAVER
DEFR SW ILLUM
DEFR IND
DEFR IN
RFOG SW ILLUM
REAR FOG IND OUT
REAR FOG IN
FFOG SW ILLUM
FRONT FOG IN
B7 A11 E C11 C10 A19 A17 C14 A23 C6 A10 A13 A32 A22 A18 B29 A24 A12 B13 B14 B30
Front ISU
FF7 10A
FF3 7.5A
FF6 25A
FF4 10A
FF1 30A
FRONT POWER WINDOWS
FF2 15A
CENTRAL LOCKS
FF5 5A
F C7 C8 C20 C9 A25 A26 C13 B2 B9 B26 B11 B25 B10 B27 D11 D12 A5 A6 D9 D10 A20 A21 B18 B15 B31 D4 D5 C3 C4 A29 A30
To Double Switch 6#
PASS WIN IN
DR WIN RR DWN
DR WIN RR UP
DR WIN RL DWN
DR WIN RL UP
DR WIN FR DWN
DR WIN FR UP
LF WINDOW MOTOR
Regulator Motor of Right Front Door
FROM ILLUM LINE
Regulator Switch of Left Front Door
PASS. WINDOW SWITCH BACK LIGHT
TAMPER IN
UNLOCK IN
LOCK IN
To Audio 15#
To Ignition Switch 3#
To Rear ISU A6
To Rear ISU A22
Front Fog Lamp
Right Front Turn Signal Lamp
Right Side Turn Signal Lamp
Left Front Turn Signal Lamp
Left Side Turn Signal Lamp
Fanfare Horn
Low-tone Horn
Lock Actuator of Left Front Door
Lock Actuator of Right Front Door
Lock Actuator of Left Rear Door
Lock Actuator of Right Rear Door
UNLOCK
LOCK
31
CAN_HIGH
CAN_LOW