



2011 Audi R8 Spyder

Owner's Manual



Introduction

Thank you for choosing an Audi R8 Spyder - we value your trust in us.

Your new Audi R8 Spyder incorporates the newest technology as well as numerous features designed for your comfort, convenience and safety. We recommend you read your Owner's Manual thoroughly so that you can quickly become acquainted with your Audi.

In addition to explaining how the different features work, we also give you many useful tips and information concerning your safety and that of your passengers, how to care for your vehicle and maintain your vehicle's value.

We hope you enjoy driving your Audi R8 Spyder and we wish you safe and pleasant motoring.

AUDI AG

Vehicle literature	5	Cup holder	68
About this Owner's Manual ...	6	Ashtray	69
Controls and equipment	8	Cigarette lighter/socket	69
Cockpit	8	Storage	70
General illustration	8	Warm and cold	72
Instruments and warning/ indicator lights	10	Climate controls	72
Instruments	10	Rear window defogger	76
Warning/indicator lights	14	Heated seats	76
Driver information system ...	20	On the road	77
Introduction	20	Steering	77
Service interval display	21	Ignition lock and ignition switch	77
On-Board Diagnostic system (OBD) ...	21	Starting the engine	78
Trip computer	22	Stopping the engine	79
Menu display	24	Parking brake	79
Lap timer	26	Cruise control	81
Speed warning system	28	Audi magnetic ride	82
Warnings and symbols	30	Manual transmission	84
Opening and closing	37	Launch Control Program	84
Keys	37	Automated manual transmission	85
Power locking system	39	Description	85
Front lid	42	Manual operation	86
Anti-theft alarm system	43	Automatic operation	87
Power windows	44	Kick-down	87
Convertible top	46	Launch Control Program	87
Convertible top	46	Steering wheel with shift paddles	87
Wind deflector	48	Parking system	89
Rear window	48	Parking system advanced	89
Convertible top emergency operation .	49	HomeLink®	95
Clear vision	55	Universal remote control	95
Lights	55	Safety first	99
Interior lights	58	Driving Safely	99
Vision	59	General notes	99
Wiper and washer system	59	Proper occupant seating positions ...	100
Mirrors	62	Driver and passenger side footwell ...	103
Digital compass	64	Stowing luggage	104
Seats and storage	66	Reporting Safety Defects	105
General recommendations	66	Active rollover protection system	107
Power seats	67		
Head restraints	68		

Safety belts	109	Fuel supply and filling your fuel tank	170
General notes	109	Gasoline	170
Why safety belts?	110	Fuel tank	171
Illustrating the principle of an accident	111	Checking and filling	175
How are safety belts worn correctly? ..	112	Engine compartment lid	175
Safety belt pretensioners	115	Engine oil	178
Airbag system	117	Engine cooling system	181
Important things to know	117	Brake fluid	184
Front airbags	121	Battery	184
Monitoring the Advanced Airbag System	128	Replacing the battery	187
Knee airbags	132	Windshield washer container	188
Side airbags	135	Tires and wheels	189
Child Safety	138	Tires	189
Important things to know	138	Tire pressure monitoring system	206
Child safety seats	143	Consumer Information	209
Installing a child safety seat	146	Warranty coverages	209
Additional Information	149	Operating your vehicle outside the U.S.A. or Canada	209
Vehicle operation	150	Audi Service Repair Manuals and Literature	209
Intelligent technology	150	Maintenance	209
Notice about data recorded by vehicle control modules	150	Additional accessories, modifications and parts replacement	211
Electronic Stabilization Program (ESP) ..	150	Declaration of Compliance, Telecommunication or Electronic Systems	212
Rear spoiler	152	Do-it-yourself service	213
Braking	153	What do I do now?	213
Power steering	154	Trunk escape handle	213
Driving with your quattro®	155	Breakdown kit	213
Energy management	155	Tire repair	213
Dry sump lubrication	157	What should I be aware of when changing a tire?	216
Driving and environment	158	Jump-starting	219
Break-in period	158	Emergency towing with commercial tow truck	222
Driving through water on roads	158	Fuses and bulbs	223
Catalytic converter	158	Electrical fuses	223
Sporty driving	159	Bulbs	224
Operation and maintenance	159		
Trailer towing	160		
Vehicle care	161		
Cleaning and protection	161		
General information	161		
Care of exterior	161		
Care of interior	165		

Technical data 226

General information 226

 Explanation of technical data 226

 Vehicle identification 226

 Weights 226

Data 228

 R8 Spyder 4.2 quattro 228

 R8 Spyder 5.2 quattro 228

 Dimensions 229

 Capacities (approx.) 229

Index 230

In addition to this Owner's Manual, your Audi comes with a Warranty & Maintenance booklet.

Moreover, depending on the model and the equipment, there may be additional instruction booklets delivered with your vehicle (for example, Operating Instructions for your Sound System, Navigation System etc.).

If you are missing one of these publications, or if you believe that the information is not complete, contact your authorized Audi dealer for assistance.

The Warranty & Maintenance booklet

explains how you can keep your Audi in top driving condition by having it serviced regularly and contains detailed information about the warranties covering your Audi. Always have the booklet with you when you take your vehicle to an authorized Audi dealer for service. Your Audi Service Adviser will record each scheduled service and can answer any questions you may have regarding how to maintain your vehicle.

In Canada,

the vehicle literature is also available in French. To obtain a copy, contact your dealer or write to:

Au Canada, on peut se procurer un exemplaire en français de ce document auprès du concessionnaire ou de:

Volkswagen Canada, Inc.
Client Assistance
Assistance à la Clientèle
777 Bayly Street, West,
Ajax, Ontario L1S 7G7

If you sell your Audi

all literature should be left in the vehicle to make the Warranty terms as well as all operating, safety and maintenance information available to the next owner.

If you change your address or if you bought this Audi used

be sure to send in a "Notice of Address Change" / "Notice of Used Car Purchase" post card. This card can be found in the Warranty & Maintenance booklet or obtained from your authorized Audi dealer.

It is in your own interest that we are able to contact you should the need arise.

This owner's manual contains important information, tips, suggestions, and warnings for the use of your vehicle.

Make sure that this owner's manual is always located in the vehicle. This is especially important if you allow other people to drive the vehicle, or if you sell it.

This owner's manual describes the **equipment range** specified for this model at the editorial deadline date. Some of the equipment described here will only be available at a later date, or only in specific markets.

Some sections in this owner's manual do not apply to all vehicles. In that case, the **range of applicability** is given at the beginning of the section, e. g. "Applies to vehicles: with R tronic". In addition, optional equipment is indicated by an asterisk "*".

The details in the **illustrations** may be different from those in your vehicle, and are intended to be viewed as a basic guide.

Please note that the **pictures** in this manual show the European Audi R8 model. It may show features not available in North America.

You will find a **table of contents** at the beginning of this book, which displays all topics described in this manual in order of appearance. You will find an alphabetical **index** at the end of this book.

All **directions**, such as "left", "right", "front", "back", are relative to the direction of travel.

- * optional equipment
- This section continues on the next page.
- ® Registered trademarks are identified with a ®. If this symbol is missing, it is no guarantee that the terms can be used freely.

⇒ ⚠ Cross-reference to a "WARNING!" within a section. For indication with a page number, the corresponding "WARNING!" can be found outside of the section.



WARNING

Text with this symbol contains important information on safety and how to reduce the risk of personal injury or death.



Note

Text with this symbol draws your attention to potential sources of damage to your vehicle.



For the sake of the environment

Text with this symbol contains information about the environment and how you can help protect it.



Tips

Text with this symbol contains special tips and other information about getting the most out of your vehicle and its features.

Cockpit

General illustration

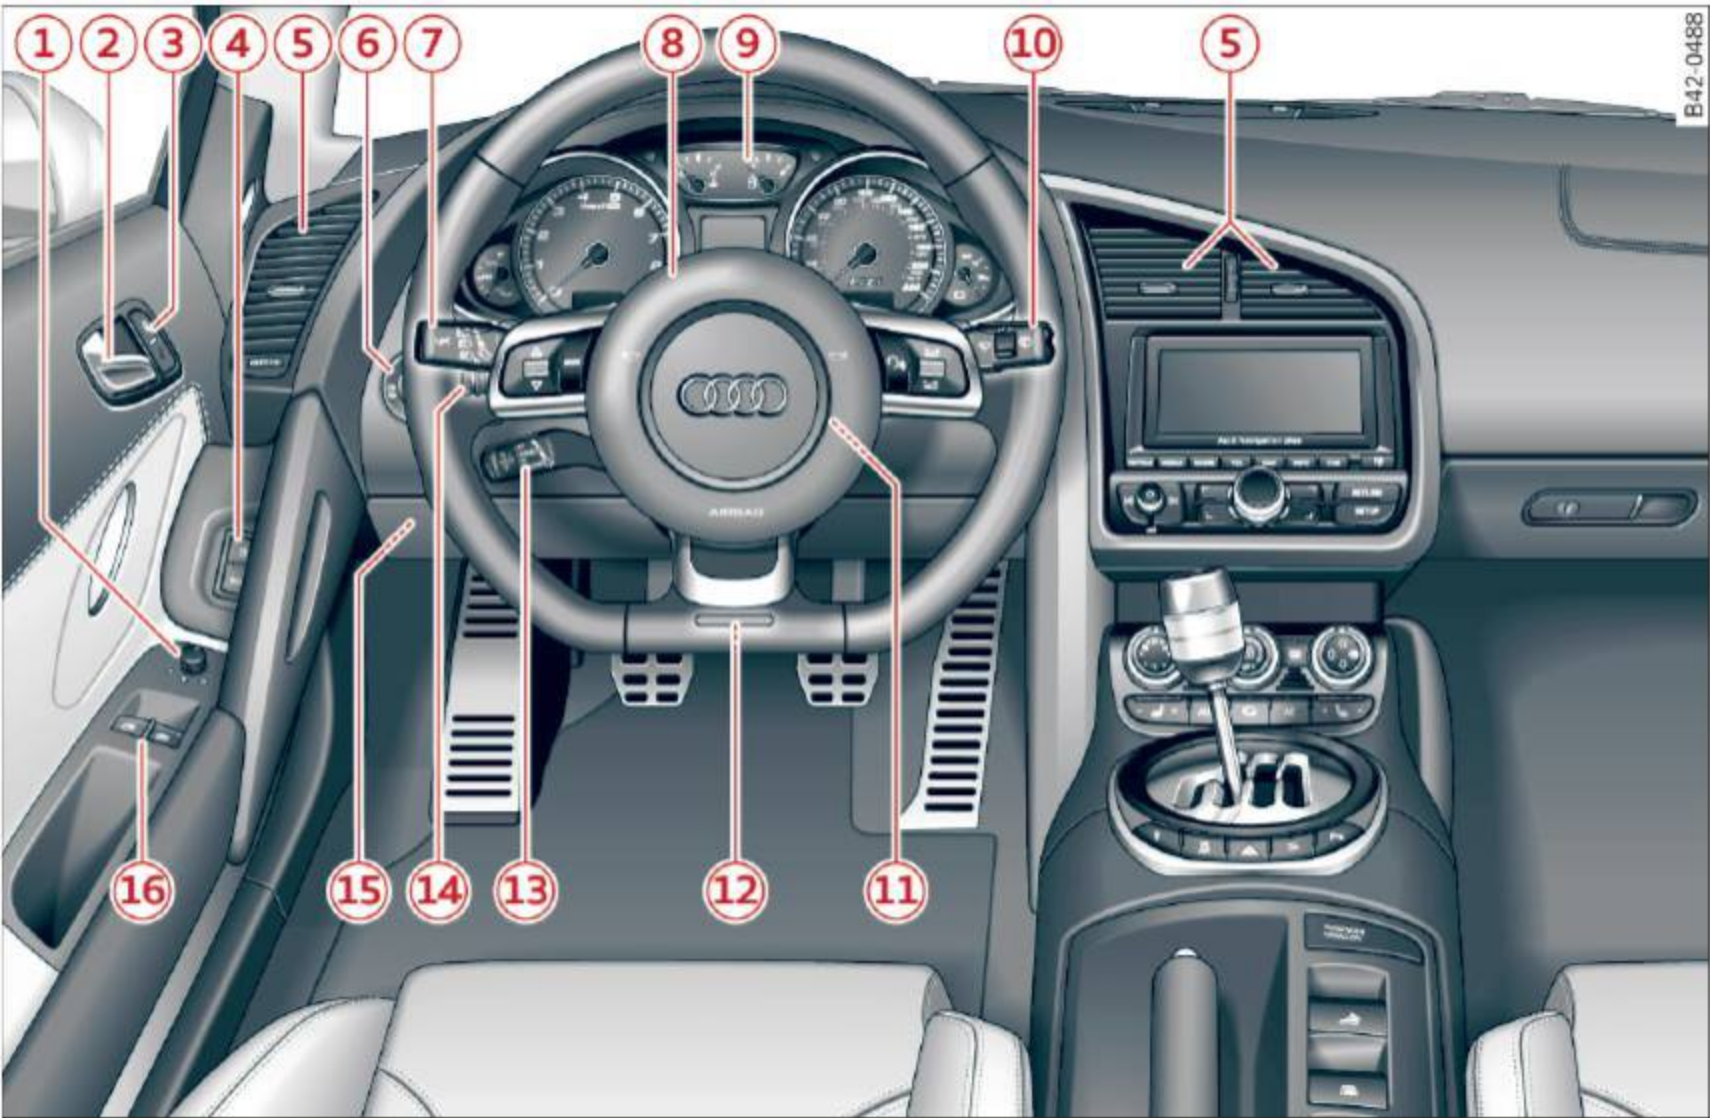


Fig. 1 Cockpit: left section

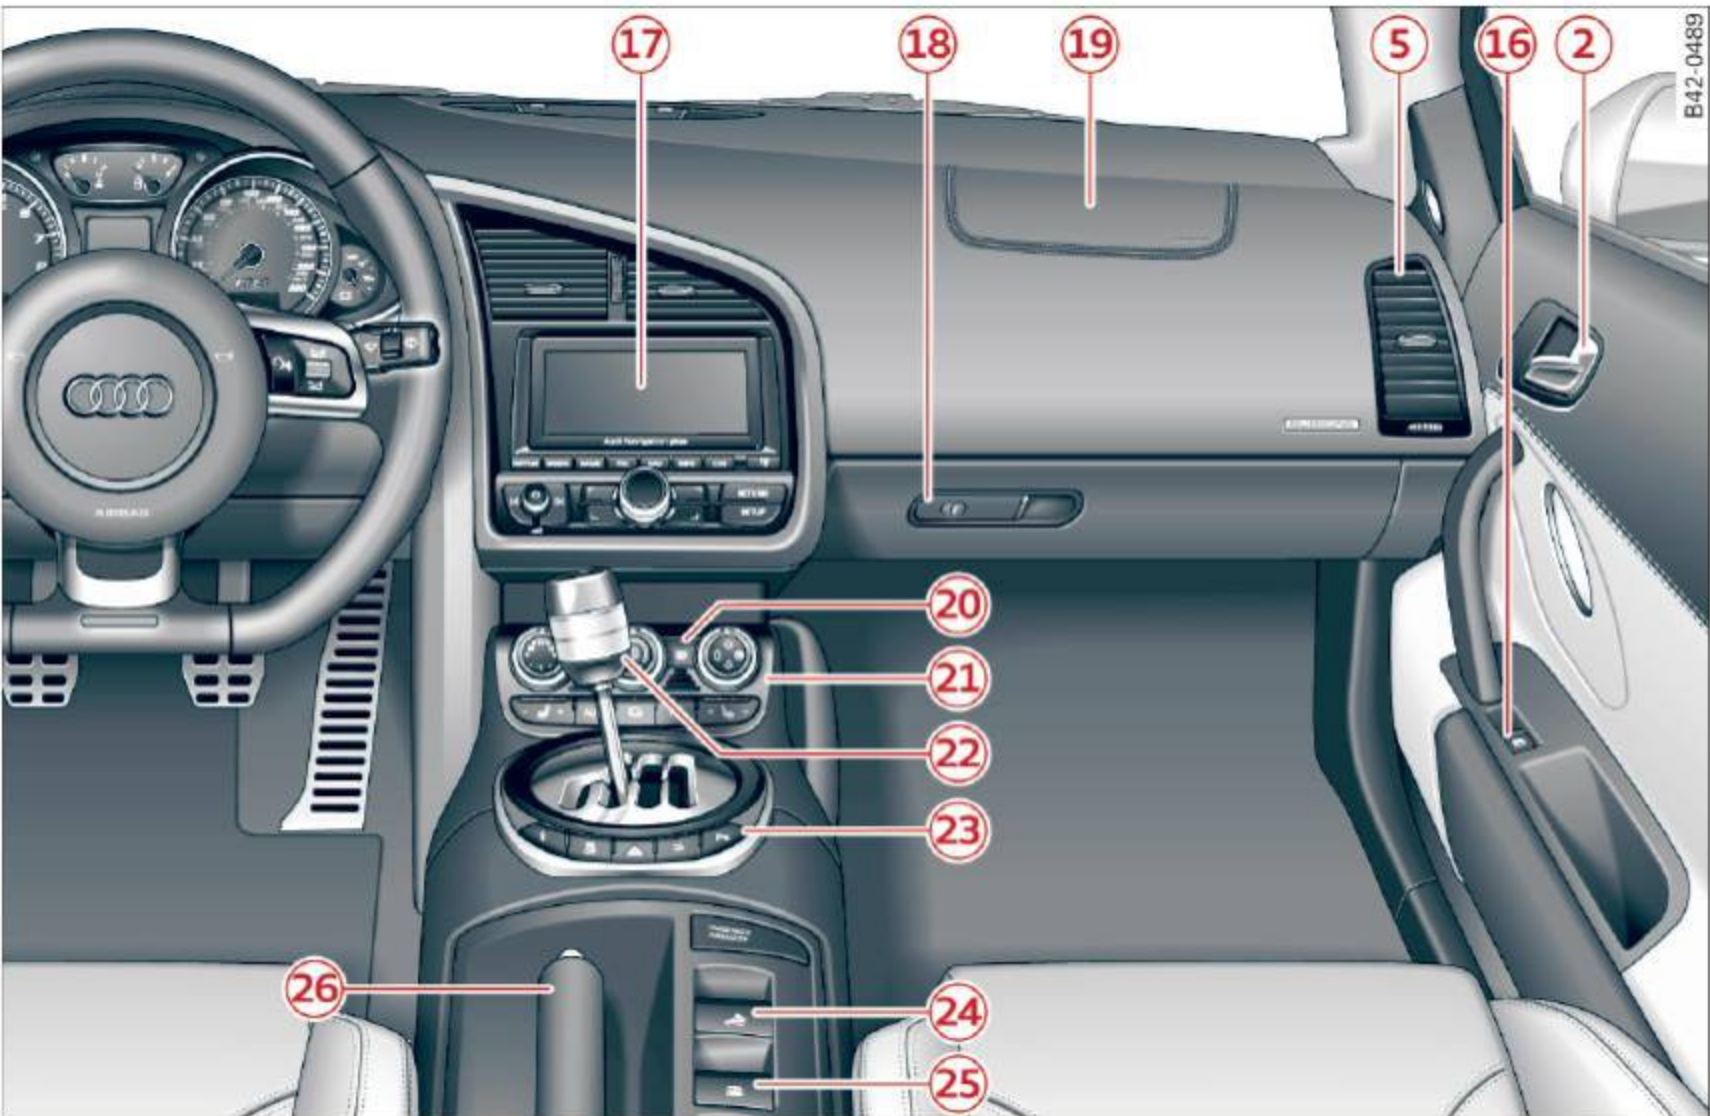


Fig. 2 Cockpit: right section

① Adjuster control for outside mirrors	63	– Audi magnetic ride	82
② Door handle		– Electronic Stabilization Program (ESP)	150
③ Power locking switch	41	– Emergency flasher	57
④ Switches for:		– Retractable rear spoiler	152
– Front lid release	42	– Audi parking system	89
– Fuel filler flap release	172	②④ Convertible top switch	46
⑤ Air outlets	74	②⑤ Rear window switch	48
⑥ Light switch	55	②⑥ Parking brake lever	79
⑦ Turn signal and high beam	58		
⑧ Multifunction steering wheel with:			
– Horn			
– Driver's airbag	121		
– Audio, telephone and voice control system operating buttons			
– Shift buttons for manual operation (R tronic)	87		
⑨ Instrument cluster	10		
⑩ Switches for:			
– Windshield wiper/washer	59		
– Trip computer	22		
– Menu display	24		
– Lap Timer	26		
– Speed warning system	28		
⑪ Steering lock/ignition/starter switch (in the steering wheel column)	77		
⑫ Adjustable steering column	77		
⑬ Cruise control	81		
⑭ Instrument lighting	56		
⑮ Data Link Connector (DLC) for On Board Diagnostics (OBD II)	21		
⑯ Power window switches	44		
⑰ Navigation system			
⑱ Glove compartment (lockable)	70		
⑲ Front passenger's airbag	121		
⑳ Rear window defogger switch	76		
㉑ Climate controls	72		
㉒ Gear shift lever or selector lever (R tronic):			
– Manual transmission			
– R tronic	85		
㉓ Switches for:			

Tips

- Some of the equipment or features shown in the general illustration may be standard equipment on your vehicle or may be optional equipment depending on your model.
- A separate brochure is provided for your factory-installed Audi Navigation System.

Instruments and warning/indicator lights

Instruments

Instrument cluster and controls

The instrument cluster is your central source of information.

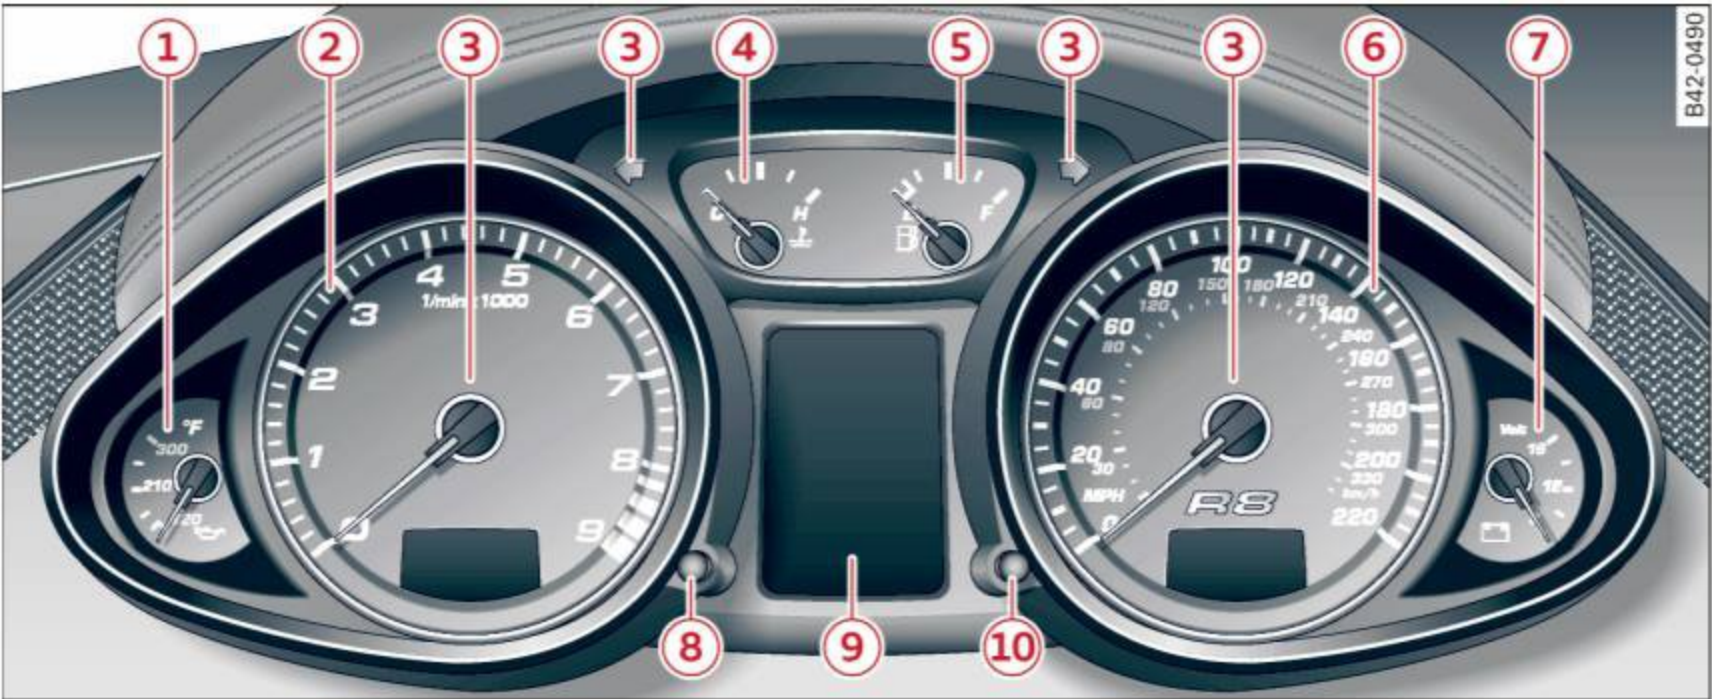


Fig. 3 Overview of the instrument cluster

- | | |
|---|--------|
| ① Engine oil temperature | 10 |
| ② Tachometer with time and date display | 11, 11 |
| ③ Warning/indicator lights | 14 |
| ④ Coolant temperature gauge | 11 |
| ⑤ Fuel gauge | 12 |
| ⑥ Speedometer with odometer | 12 |
| ⑦ Voltmeter | 13 |
| ⑧ Set/Check button , | 11, 31 |
| ⑨ Driver information display | 20 |
| ⑩ RESET button for trip odometer | 12 |

The illumination for the instrument cluster lights up whenever you switch on the ignition with the **vehicle headlights off**. The gauges are also illuminated when the lights are turned on.

Engine oil temperature display

The engine oil temperature display ⇒ *page 10, fig. 3* only operates with the ignition on. To prevent engine damage, please observe the following important points concerning the temperature ranges.

Cold range

If the needle is at the bottom of the gauge, the engine oil has not reached operating temperature yet. Avoid high engine speeds, full throttle applications and heavy engine loads.

Normal range

The engine has reached operating temperature when the needle moves into the center of the gauge under normal driving conditions. The needle may move higher on the gauge with heavier engine load at high outside temperatures. This is not a cause for concern as long as the  indicator light in the display does not flash.

Warning light

If the symbol  in the display flashes, either the engine oil temperature is too high or the engine oil level is too low ⇒ *page 180*.

If the needle is well in the upper area of the gauge, the engine oil temperature is too high. **Stop the vehicle, switch the engine off and allow it to cool.** If the warning light comes on again after driving a short distance, contact an authorized Audi dealer.

Tachometer (engine rev counter)

The tachometer indicates the engine RPM (revolutions per minutes).

You should shift to the next lowest gear when the speed is below 1500 RPM. The beginning of the red zone in the tachometer indicates the maximum permissible engine speed for all gears once the engine has been broken in and when it is warm. You should shift to the next higher gear, switch the R tronic sport mode off or remove your foot from the accelerator pedal before reaching this area in the gauge.

! Note

The needle in the tachometer ⇒ *page 10, fig. 3 ②* may only be in the red area of the gauge for a short time or the engine could be damaged. The location where the red zone begins varies depending on the engine.

Digital clock with date display

Your vehicle is equipped with a quartz controlled digital clock.



Fig. 4 Instrument cluster with the digital clock

Date and time are set using the knob ⇒ *fig. 4*.

To set the hour

- Pull the knob (hour display flashes) and turn it to the left or right.

To set the minutes

- Pull the knob as many times as necessary until the minute display flashes.
- Turn the knob to the left or right.

To set the date

- Pull the knob as many times as necessary until the day, month or year display flashes.
- Turn the knob to the left or right.

To hide or display the date

- Pull the knob as many times as necessary until the date display flashes.
- Turn the knob to the left or right.

When the date display stops blinking, this means the time and date have been successfully stored.

With the ignition off, pushing or pulling the Set/Check button ⇒ *page 10, fig. 3 ⑧* can turn on the display field lighting for a few seconds.

Engine coolant temperature gauge

The engine coolant gauge ⇒ *page 10, fig. 3 ④* only works when the ignition is on. To prevent damage to your engine, please note the following important points.

Engine cold

As long as the needle remains at the left end of the gauge, the engine still has not reached its operating temperature. Avoid high engine speeds, heavy engine loads and heavy throttle.

Normal temperature

When the engine has reached its operating temperature, the needle will move into the middle of the gauge and remain there. If the engine is working hard at high outside temperatures, the needle may turn further to the right. This is no cause for concern as long as the  warning light in the instrument cluster does not illuminate.

Warning light

When the warning light  starts to flash, this can mean one of two things: either the coolant *temperature* is too high, or the coolant *level* is too low ⇒ *page 32*.

If the needle is well on the right side of the gauge, the coolant temperature is too high. **Stop the vehicle, switch the engine off and allow it to cool.** If the warning light comes on again after driving a short distance, contact an authorized Audi dealer.

WARNING

- Always observe the warning in *⇒ page 175, Working in the engine compartment* before opening the engine compartment lid and checking the engine coolant level.
- Never open the engine compartment lid if you see or hear steam, or if you see engine coolant dripping from the engine compartment. You could burn yourself. Let the engine cool off first so that you cannot hear or see any steam or engine coolant.

Note

- Mounting additional lights or accessories in front of the air inlets reduces the cooling effect of the radiator. At high outside temperatures or high engine load, the engine could overheat.
- The front spoiler has been designed to properly distribute the cooling air when the vehicle is moving. If the spoiler is damaged, this could reduce the cooling effect and the engine could then overheat. Ask your authorized Audi dealer for assistance.

Fuel gauge

The fuel gauge works only when the ignition is on. When the needle reaches the red area, the warning light in the instrument cluster will illuminate *⇒ page 33* . This means you have approximately 2.6 gallons (10 liters) of fuel left in the tank. **Time to refuel!**

The total tank capacity of your vehicle is listed in **Technical data** *⇒ page 228*.

Note

Never run the tank completely dry! An irregular supply of fuel can cause engine misfiring and fuel could enter into the exhaust system. The catalytic converter could then overheat and be damaged.

Speedometer with odometer

The speedometer shows you the vehicle speed, and the odometer shows you how many miles (kilometers) you have driven.



Fig. 5 Speedometer close-up: odometer display

The distance driven is shown in miles (USA models) or in kilometers (Canada models).

Lower odometer

The lower odometer shows the total number of miles (kilometers) driven.

Upper odometer (trip odometer)

The upper odometer shows the total number of miles (kilometers) driven since you last reset the odometer back to zero. You can use this odometer when you want to keep track of how many miles (kilometers) you have driven for a single trip or errand. The last digit indicates 1/10 of a mile (100 meters). You can set the trip odometer back to zero by pressing the **RESET** button *⇒ fig. 5*.

With the ignition off, pushing of the Set/Check button *⇒ page 10, fig. 3*  can turn on the display field lighting for a few seconds.

Malfunction message

If there is a malfunction somewhere in the instrument cluster, **dEF** will appear in the trip 

odometer and will stay on. Contact your authorized Audi dealer to have the problem corrected.

Immobilizer

When the ignition is switched on, the data on the ignition key are scanned automatically.

If an unauthorized key was used, **SAFE** is displayed continuously in the odometer display field. The vehicle cannot be operated
⇒ *page 38*.

Voltmeter display

The voltmeter shows the voltage in the vehicle electrical system. If the reading drops below 12 volts with the engine running, you should have the power supply (battery and generator) inspected by an authorized Audi dealer.



Tips

Voltage can drop below 8 volts when you start the engine.

Warning/indicator lights

Overview

The warning/indicator lights indicate different functions or a possible malfunction.



Fig. 6 Instrument cluster with warning/indicator lights

- ① Warning/indicator lights in the tachometer
- ② Turn signals ⇒ page 16
- ③ Warning/indicator lights in the Driver Information System ⇒ page 30
- ④ Warning/indicator lights in the speedometer

① Warning/indicator lights in the tachometer

	Audi magnetic ride ⇒ page 15
	Tire pressure too low ⇒ page 15, ⇒ page 207
	Electronic power control ⇒ page 15
	Convertible top operation ⇒ page 16
	Electronic Stabilization Program (ESP) ⇒ page 16
	USA models: Malfunction Indicator Lamp (MIL) ⇒ page 22

	Canada models: Malfunction Indicator Lamp (MIL) ⇒ page 22
	High beam ⇒ page 16
	Rear spoiler ⇒ page 16

④ Warning/indicator lights in the speedometer

	Electronic Stabilization Program (ESP) ⇒ page 16
	USA models: Cruise control activated ⇒ page 17
	Canada models: Cruise control activated ⇒ page 17
	USA models: Safety systems ⇒ page 17

	Canada models: Safety systems ⇒ page 17
	Generator ⇒ page 17
	Safety belt ⇒ page 17
	USA models: Brake system, parking brake set ⇒ page 17
	Canada models: Brake system, parking brake set ⇒ page 17
	USA models: Anti-Lock Brake System (ABS) defective ⇒ page 18
	Canada models: Anti-Lock Brake System (ABS) defective ⇒ page 18

WARNING

- Failure to heed warning lights and other important vehicle information may result in serious personal injury or vehicle damage.
- Whenever stalled or stopped for repair, move the vehicle a safe distance off the road, stop the engine, and turn on the emergency flasher ⇒ page 57.
- The engine compartment of any motor vehicle is a potentially hazardous area. Before you check anything in the engine compartment, stop the engine and let it cool down. Always exercise extreme caution when working under the engine compartment lid ⇒ page 175, *Working in the engine compartment*.

Tips

- When a yellow warning symbol appears, *one* warning tone sounds. Check the function displayed as soon as possible.
- When a red symbol appears, *three* warning tones sound in a row. The symbol

continues to flash until the fault has been corrected.

Audi magnetic ride

The indicator light monitors vehicle damping.

The indicator light  illuminates when the ignition is switched on as a function check.

Tips

If the indicator lamp illuminates while you are driving, there is a malfunction in the vehicle damping. The chassis should be inspected immediately by an authorized Audi dealer.

Tire pressure monitoring system

Applies to vehicles: with tire pressure monitoring system

Tire pressure that is too low must be corrected as soon as possible.

The warning/indicator light  illuminates for a few seconds after the ignition is turned on as a function check. If the  warning light comes on, pressure in at least one tire is too low.

- Stop driving as soon as possible without endangering yourself and other drivers on the road.
- Inspect all tires.
- Correct the tire pressure ⇒ page 195.

Additional information about the **tire pressure monitoring system** can be found ⇒ page 207.

EPC Electronic power control

This warning/indicator light monitors the electronic power control.

The warning/indicator light (Electronic Power Control)  illuminates when you switch on the ignition as a function check. ►

i Tips

If this warning/indicator light illuminates while you are driving, then there is a malfunction in the engine electronics. Have the malfunction corrected as soon as possible by your authorized Audi dealer or qualified workshop.

Convertible top operation

The indicator light turns on 

- When the convertible top opens or closes or
- If the convertible top did not open or close completely.

The indicator light blinks if the convertible top cannot open or close ⇒ *page 47*.

ESP / Off Electronic stabilization program (ESP)

If the indicator lamp  blinks while driving, the ESP or ASR (Anti-Slip Regulation) is actively regulating.

If the indicator lamp  illuminates, the system has switched the ESP off. In this case, you can switch the ignition off and then on to switch the ESP on again. The system is functioning completely when the indicator lamp switches off.

If the indicator lamp  illuminates, the ESP was switched off with the  button.

ESP and ABS: fault ! See owner's manual

If the indicator lamp  and the ABS indicator lamp  illuminate and the driver message appears, the ABS or electronic differential lock is malfunctioning. This also interrupts the ESP. The brakes still function with their normal power, but ABS is not active.

Drive to your authorized Audi R8 dealer immediately to have the malfunction corrected.

For more information about the ESP ⇒ *page 150*.

High beam

The  warning/indicator light illuminates when the high beams are on or when you use the headlight flasher.

For more information ⇒ *page 58*.

Rear spoiler

The warning/indicator light monitors the electrically retractable rear spoiler.

The warning/indicator light  has the following functions:

- It comes on for about 3 seconds as a function check when the ignition is switched on.
- It comes on if there is a malfunction in the electrically retractable rear spoiler.

Additional information about the electrically retractable rear spoiler ⇒ *page 152*.

**WARNING**

Driving at higher speeds without the rear spoiler deployed can impair handling characteristics, making the vehicle harder to control.

- If the rear spoiler warning/indicator light in the instrument cluster comes on, the rear spoiler may not have deployed. Never drive at speeds higher than 87 mph (140 km/h) if the spoiler is not deployed. Have the spoiler inspected as soon as possible by an authorized Audi dealer or qualified workshop.

Turn signals

Whenever you use the left  or the right  turn signal, the indicator light blinks. When you use the emergency flasher, both indicator lights flash.

If one of the turn signal light bulbs burn out, the turn signal will blink twice as fast as normal.

Additional information on the turn signals ⇒ *page 58*.

CRUISE / Cruise control

The warning/indicator light **CRUISE** (USA models) /  (Canada models) illuminates when the cruise control is activated.

AIR BAG / Safety systems

This warning/indicator light monitors the air-bag and the pretensioner systems.

The warning light  (USA models) /  (Canada models) illuminates for a few seconds each time you switch on the ignition.

If the  (USA models) /  (Canada models) warning light does not go out, or if it illuminates while you are driving, or if it starts to blink, then there is a malfunction somewhere in the system. If the light does not illuminate when you switch on the ignition, this also means there is a malfunction.

** WARNING**

If you have a malfunction in the airbag system, contact your authorized Audi dealer immediately. Otherwise the airbag or the belt pretensioner may not work properly in an accident.

** Generator**

This warning/indicator light detects a malfunction in the generator or in the vehicle's electrical system.

The  warning/indicator light illuminates when you switch on the ignition and must go out after the engine has started.

If the  warning/indicator light illuminates while you are driving, you should contact your authorized Audi dealer. Since the vehicle battery is discharging, you should switch off any unnecessary electrical consumers (for example, the air conditioner).

** Note**

If the  warning/indicator light (malfunction in the engine cooling system) in the instrument cluster should illuminate

⇒ page 32, stop the vehicle and turn off the engine. The coolant pump is not working - this can cause engine damage!

** Safety belt warning light**

The warning light is a reminder to fasten safety belts.

The warning light  comes on for a few seconds after the ignition is switched on as a reminder to fasten your safety belt. Additionally, an acoustic warning (gong) will also sound.

Additional information on safety belts
⇒ page 109.

BRAKE / Brake system

This warning/indicator light flashes when the brake fluid level is too low or when there is a malfunction in the ABS.

If the warning/indicator light flashes **BRAKE** /  (with the parking brake released), stop the vehicle and obtain qualified help ⇒ .

If the ABS fails, the ABS warning/indicator light **ABS** /  illuminates along with the brake system warning/indicator light **BRAKE** /  ⇒ .

(USA models): If the warning light **BRAKE** and the warning light  illuminate together, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads inspected ⇒ page 33.

When the light comes on, an audible warning signal is also given.

Parking brake set

The **BRAKE** /  warning/indicator light illuminates when the parking brake is set ⇒ . The following message appears in the display: **Handbrake is applied**. If you inadvertently drive off with the parking brake applied, a buzzer (warning tone) sounds.

! WARNING

- *USA models:* If both, the **BRAKE** warning light and the **ABS** warning light come on at the same time, the rear wheels could lock up first under hard braking. Lock-up of the rear wheel brakes can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake application.
- *Canada models:* If both, the brake warning light  and the ABS warning light  come on at the same time, the rear wheels could lock up first under hard braking. Lock-up of the rear wheel brakes can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake application.
- If the brake warning/indicator light does not go out after a few seconds and the parking brake released, or lights up while you are driving, the fluid level in the brake fluid reservoir is too low. If you believe that it is safe to do so, proceed immediately at low speed to the nearest authorized Audi dealer or qualified workshop and have the brake system inspected.
- Please be very careful and always keep in mind that after several brake applications, you will need greater pressure on the brake pedal to stop your vehicle. Consequently, you must allow for increased braking distances. Trying to brake as quickly as usual could lead to an accident.

ABS/ Anti-Lock Brake System

This warning/indicator light monitors the ABS and the electronic differential lock (EDL).

The **ABS** light will come on for a few seconds when the ignition is switched on. The light

will go out after an automatic check sequence is completed.

There is a malfunction in the ABS when:

- The warning/indicator light does not illuminate when you switch on the ignition.
- The warning/indicator light does not go out after a few seconds.
- The warning/indicator light illuminates while driving.

The brake system will still respond even without the assistance of the ABS system. See your authorized Audi dealer as soon as possible to restore full braking performance. For more information regarding the ABS ⇒ *page 150*.

The ABS warning light and the brake warning light come on together. The ABS will not work and you will notice a change in braking response and performance.

Malfunction in the brake system

USA models: If both, the **BRAKE** warning light and the **ABS** warning light come on ⇒ *page 32* when the parking brake is released, there may be a malfunction in the ABS, and there may also be a malfunction in the brake system itself ⇒ .

Canada models: If both, the brake warning light  and the ABS warning light  come on ⇒ *page 32* when the parking brake is released, there may be a malfunction in the ABS, and there may also be a malfunction in the brake system itself ⇒ .

Malfunction in the electronic differential lock (EDL)

The two systems EDL and ABS work together. The **ABS** warning light will come on if there is a malfunction in the EDL system ⇒ *page 150*. See your authorized Audi dealer as soon as possible.

! WARNING

- If the **ABS** warning light does not go out, or if it comes on while driving, the ABS system is not working properly. The

vehicle can then be stopped only with the brakes operating without ABS support. You will not have the protection ABS provides. Contact your authorized Audi dealer as soon as possible.

- *USA models:* If both, the **BRAKE** warning light and the **ABS** warning light come on at the same time, the rear wheels could lock up first under hard braking. Lock-up of the rear wheel brakes can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake application.
- *Canada models:* If both, the brake warning light  and the ABS warning light  come on at the same time, the rear wheels could lock up first under hard braking. Lock-up of the rear wheel brakes can cause loss of vehicle control and an accident. Have your vehicle repaired immediately by your authorized Audi dealer or a qualified workshop. Drive slowly and avoid sudden, hard brake application.

Driver information system

Introduction

The Driver information display inside the instrument cluster provides you, the driver, with important information.



Fig. 7 Instrument cluster: center display



Fig. 8 Wiper lever: controls for the menu display

Center display

With the ignition on, the display in the Driver Information System shows the following information:

- CD inserted or Radio station set
- Outside temperature: At temperatures below 41 °F (+5 °C), a snowflake symbol appears in front of the temperature display ⇒ ⚠.
- Warning when a door, the engine compartment lid or the trunk lid is not closed.

Additional functions

You can open the following functions in the Driver Information System display by pressing the **RESET** button ⇒ fig. 8 one or more times:

Trip computer	⇒ page 22
Digital speedometer	

Lap timer	⇒ page 26
Menu display	⇒ page 24

The speed warning system is also displayed in the Driver Information System. You can read how to set it in ⇒ page 28.

Auto Check Control

Some functions and vehicle components are scanned for their operating status when you switch the ignition on and while you are driving. Malfunctions or required service procedures are signaled audibly and indicated by red and yellow illuminated symbols and reminders in the display ⇒ page 30.

**WARNING**

- Never rely exclusively on the outside temperature display to determine if a road surface is icy or not. Keep in mind that road surfaces, especially bridges and overpasses, could be ice covered and slippery even at an outside temperature above 41 °F (+5 °C).
- Always remember, even if the “snowflake” symbol (ice warning) does not appear in the display, black ice could be on the road.
- Always reduce your speed and drive with special care in cold weather conditions when the chance of encountering icy road surfaces increases.

**Tips**

- On vehicles with R tronic*, the reminders do not appear in the display until you select a gear.
- On vehicles with Audi Navigation system, the displays may differ from their normal appearance during navigation.

Service interval display

The service interval display reminds you when your next service is due.



Fig. 9 Section of instrument cluster: Service interval display

The schedule for the next oil change or inspection is calculated automatically and displayed accordingly. The display works in two stages:

Service reminder

30 days before the next service is due, a service reminder appears in the display when you turn on the ignition.

After about 5 seconds the display switches back to normal. The distance and time remaining are updated each time the ignition is turned on until the date due for service is reached.

Service due

When the due date for service is reached, the message **Service due!** appears in the instrument cluster immediately after you turn on the ignition. Additionally, a warning tone sounds. After about 5 seconds the display switches back to normal.

Calling up the service schedules

If or when an oil change or inspection is due, can be shown in the instrument cluster by selecting the service interval display. Select **Check > Service > Oil change** or **Service** by using the **RESET** button and the rocker switch ⇒ page 24, fig. 13.

Resetting the service interval display

Your authorized Audi dealer will reset the corresponding service schedule after performing

the appropriate service on your vehicle. You also have the possibility to reset the oil change schedule after having performed an oil change according to Audi specifications.

- Switch the ignition on.
- Pull the knob ⇒ fig. 9. The message **Service due!** appears.
- Pull the knob until the display **Oil change in ----- mi (km)--- days** appears. If the **RESET** button is not pulled within 5 seconds, the display reset mode closes.

Note

If you disconnect the battery terminals, no calculations can be made for the service interval display during this time and no service reminder will appear. Remember that observing the proper service intervals is vitally important to extending the life of your vehicle, particularly the engine, and maintaining its value. Even if the mileage driven is low, the maximum period of one year from one service to the next must not be exceeded.

Tips

- Do not reset the display between oil changes, otherwise the display will be incorrect.
- The information in the Service Reminder remains stored even when the vehicle battery is disconnected.

On-Board Diagnostic system (OBD)

On-Board Diagnostics



Fig. 10 Location of Data Link Connector (DLC)

On-Board Diagnostics monitors the components of your emission control system. Each monitored component in your engine system has been assigned a code. In case of a malfunction, the component will be identified and the fault stored as a code in the control module memory.

In order to make an accurate diagnosis, the stored data can only be displayed using special diagnostic equipment (generic scan tool for OBD).

In order to connect the special diagnostic equipment, push the plug into the Data Link Connector (DLC). The DLC is located to the right of the engine compartment lid release ⇒ *fig. 10*.

Your authorized Audi dealer or a qualified service station can interpret the code and perform the necessary repair.



Malfunction Indicator Lamp (MIL)

The Malfunction Indicator Lamp (MIL)  is part of the On-Board Diagnostic (OBD II) system.

The warning light illuminates when there is a malfunction in the engine electronic system. A malfunction may have various causes:

- The fuel filler cap may be improperly closed ⇒ *page 172*.
- There is a leak in the fuel vapor recovery system.
- The engine control receives faulty vehicle roadspeed signals.

Contact your nearest authorized Audi dealer for assistance.

If the light illuminates, the catalytic converter could be damaged. Continue driving **with reduced power** (avoiding sustained high speeds and/or rapid accelerations) and have the condition corrected.

An improperly closed fuel filler cap may also cause the MIL light to illuminate ⇒ *page 172*.

Trip computer

Introduction

The trip computer gives you information on current and average fuel mileage, average speed, fuel range and driving time.

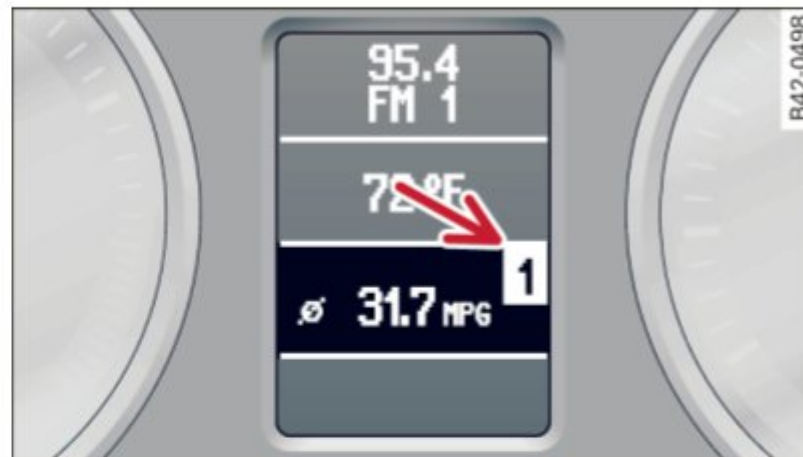


Fig. 11 Trip computer 1

You can switch between the trip computer 1 and 2 by pressing the **RESET** button  ⇒ *page 23, fig. 12*.

You can tell which memory level is currently active by the number in the display ⇒ *fig. 11*. The data from the single-trip memory (memory level 1) is being displayed if a **1** appears in the display. If a **2** is shown, then the data from the total-trip memory is being displayed (memory level 2).

Single-trip memory (Trip computer 1)

The single-trip memory stores the trip information from the time the ignition is turned on until it is turned off. If the trip is continued **within 2 hours** from the time the ignition was turned off, the new data will be included in the calculation of the current trip information. If the trip is interrupted for **more than 2 hours** the memory is reset automatically.

Total-trip memory (Trip computer 2)

Unlike the single-trip memory, the total-trip memory is not reset automatically. This permits you to evaluate your driving data for the entire period between manual resets.

Fuel range

The estimated cruising range in miles (km) appears in the display. The display changes in increments of 6 miles (10 km).

Average fuel mileage

The average fuel economy in MPG (l/100 km) since you last cleared the memory appears in this display.

Current fuel mileage

The instantaneous fuel consumption in miles per gallon (l/100 km) is shown in this display. When the vehicle is stationary, the most recent fuel consumption is displayed.

Average speed

The average speed in mph (km/h) since the last time the display was reset appears in the display.

Elapsed time

The length of time that you have been driving since you last reset the memory appears in this display. The maximum time period that can be recorded is 999 hours and 59 minutes.

Distance

The elapsed distance since the last time the memory was cleared appears in the display. The maximum distance that can be recorded is 9,999.9 miles (9,999.9 kilometers).

Tips

All stored values will be lost if the vehicle battery is disconnected.

Operation

The trip computer is controlled by two switches on the windshield wiper lever.



Fig. 12 Wiper arm/wiper lever: controls for the trip computer

Selecting the trip computer

- ▶ Tap the **RESET** button **B** until the trip computer (memory level 1 or 2) appears in the display ⇒ *page 22, fig. 11*.

Selecting the functions

- ▶ Push in the upper (lower) protrusion on the function selector switch **A** ⇒ *fig. 12*. The functions for the trip computer are displayed in succession on the respective memory levels.

Resetting the function to zero

- ▶ Push the **RESET** button **B** for at least two seconds.

You can reset the following values to zero:

- driving time
- distance
- average fuel mileage
- average speed

The trip computer only operates when the ignition is on. When you turn on the ignition, the function that was in use when you last turned the ignition off will be displayed.

Tips

- You can also set the values for the functions to zero in the menu display (**Reset**) ⇒ *page 24*.
- All stored values will be lost if the vehicle battery is disconnected.

Menu display

Introduction

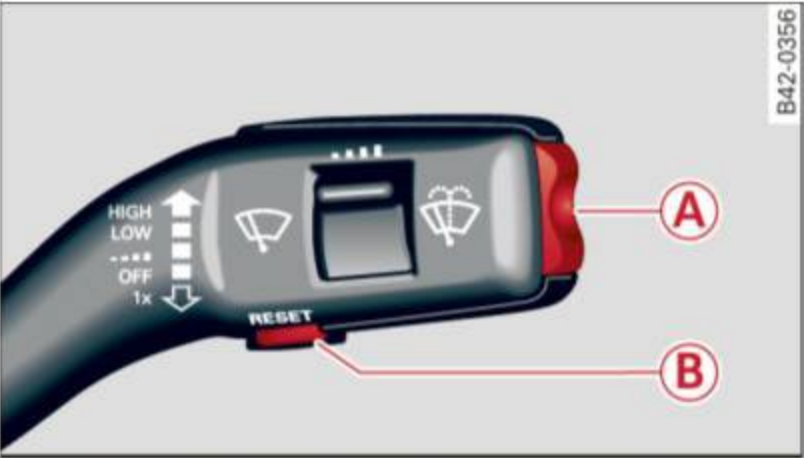


Fig. 13 Wiper lever: Controls for the menu display

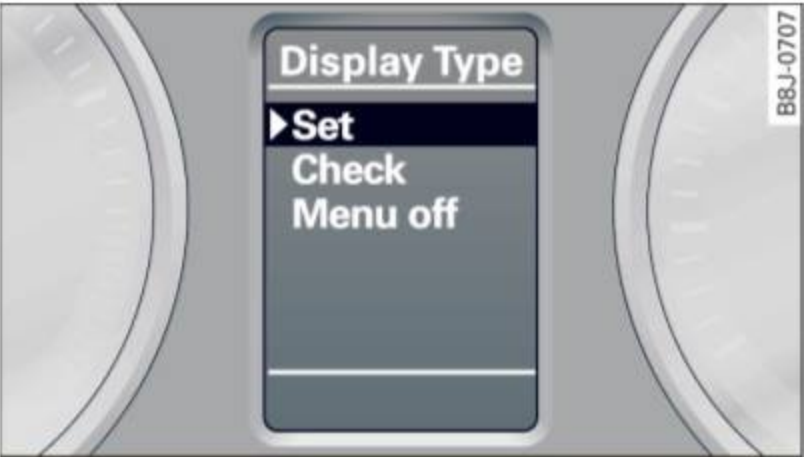


Fig. 14 Display: Start menu

Some functions in your vehicle can be set, activated, and controlled by **Menus** (e.g. Acoustic park assist*). With these menus you can also select the information shown in the Driver Information System, which operates only with the ignition switched on. Operation is controlled by the **RESET** button and the rocker switch on the wiper lever ⇒ *fig. 13*.

The **Start menu** shows you the different display types:

Set

Check

Menu off

Each display type in the Start menu contains a submenu with additional options.

Set	Clock ⇒ <i>page 25</i>
	Computer ⇒ <i>page 25</i>
	Speed warning ⇒ <i>page 29</i>
	Language ⇒ <i>page 25</i>
	Units (distance, fuel consumption, temperature) ⇒ <i>page 25</i>
	Displays
	Lights ⇒ <i>page 55</i>
	Wipers (service position) ⇒ <i>page 61</i>
	Doors (unlocking and locking mode) ⇒ <i>page 39</i>
	Parking aid* ⇒ <i>page 89</i>
Check	Service
	Chassis number ⇒ <i>page 226</i>
	Keys
Menu off	The menu display is hidden and the lap timer appears.

Navigating the menu

Use the rocker switch on the windshield wiper lever and the **RESET** button to operate the menu and carry out inquiries and selections.



Fig. 15 Wiper lever: Controls for the menu display



Fig. 16 Display: Start menu

RESET button (B) and rocker switch (A)
⇒ fig. 15 functions:

To open the menu

- Press the **RESET** button (B) until the menu display ⇒ fig. 16 appears.

Selections and settings

- Press the rocker switch (A) to reach a menu display. The switch is operated the same as the display (up/down).

Entering and confirming

- Press the **RESET** button (B).

Returning to the Start menu

- Press the **RESET** button longer than 2 seconds to return from any menu level to the Start menu.

Using the rocker switch, you can select the menus in the display or change settings. A

cursor appears on the left in front of the selected values.

By pressing the **RESET** button, you activate the selection you made or confirm the values you set. **Selected** functions are identified with a check mark or are carried out directly.

Meanings of the symbols in the display:

Selection bar	Selected function	Meaning
>	Cursor	Current Selection
✓	Check mark	Selected or Function active
□	Box	Not selected
▲	Triangle pointing up	Previous page
▼	Triangle pointing down	Next page

Selecting settings

The Driver Information System settings are menu-guided.



Fig. 17 Display: Menu Settings, computer selected (page 1)

- Press the **RESET** button. The Start menu appears ⇒ page 24, fig. 14.
- Press the rocker switch until **Set** is displayed.
- Press the **RESET** button. All the menus appear.
- Press the rocker switch until the desired line is highlighted (cursor) ⇒ fig. 17.
- Press the **RESET** button.

- If necessary, scroll by selecting and activating the symbol for “Next page” or “Previous page”.

When you have selected the Computer menu and activated it by pressing the **RESET** button, two computer levels appear (computer 1 and computer 2). Now you have to select the level you want using the rocker switch and activate it with the **RESET** button.

Lap timer

Introduction

The lap timer allows you to record and evaluate lap times.

The instrument cluster display shows the time in minutes, seconds and tenths of a second. For lap times longer than one hour, the hour is also shown automatically. The maximum recordable time for a single measurement is 99 hours, 59 minutes and 59 and 9/10 seconds. If the lap timer reaches this value, the timing stops on its own or it switches to pause mode via ➔ [page 27](#).

 WARNING

Please devote your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.

 Tips

All of the trip computer functions are available as usual when the lap timer stopwatch is running.

Selecting the lap timer



Fig. 18 Controls



Fig. 19 Display: Lap timer

- With the ignition on, press the **RESET** button **B** ➔ [fig. 18](#) until the lap timer ➔ [fig. 19](#) appears.

Starting the timer



Fig. 20 Display: Lap 1

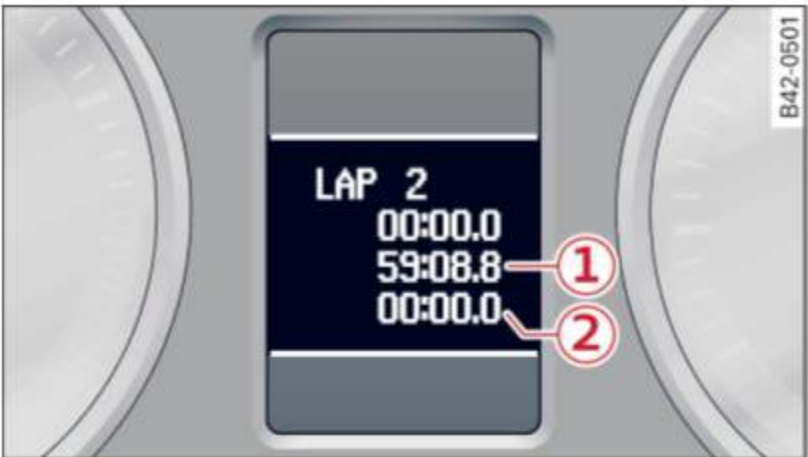


Fig. 21 Display: Lap 1 is saved, Lap 2 is started

The top row shows the current lap number: e. g. **LAP 2** (= second lap).

Starting lap time

- Press the upper section of the rocker switch. Row **(A)** ⇒ *fig. 20* displays the current lap time.

Saving lap time

- Press the upper section of the rocker switch again. This simultaneously starts the measurement for the next lap.

After being saved, the first recorded lap time moves from the lowest to the next highest line in the display **(1)** ⇒ *fig. 21*. The lower line **(2)** identifies the newly started lap time.

Recording additional lap times

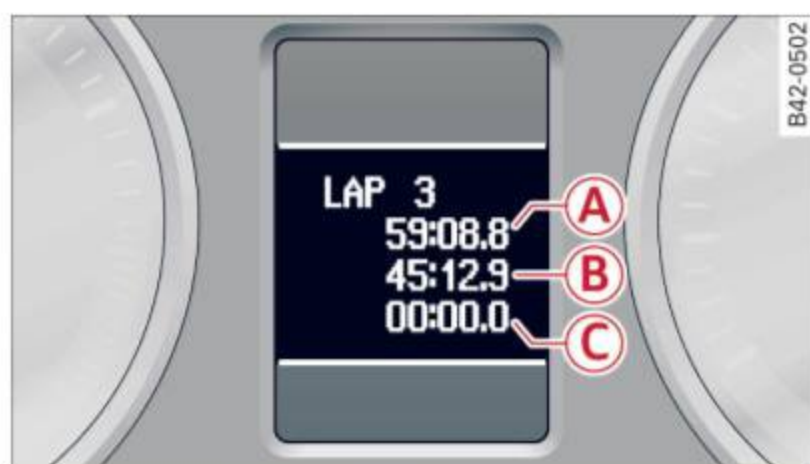


Fig. 22 Display: Lap 2 is saved

After starting the lap timer, a timed lap is completed and stored and timing begins for the next lap every time the upper section of the rocker switch is pressed. Continue as described above to measure additional lap times.

The current lap time is displayed in the bottom line of the display **(C)** ⇒ *fig. 22*.

After being saved, the last recorded lap time moves from the lower to the next higher line on the display **(B)** ⇒ *fig. 22*. The lap time before the last one also moves up one line **(A)**. The lowest line **(C)** identifies the newly started lap time.

Displaying split time or inserting a pause

Split time is indicated by a star.

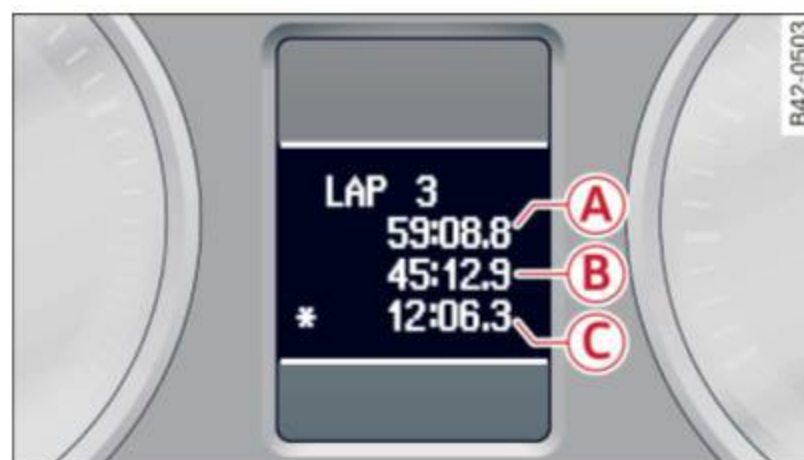


Fig. 23 Display: Showing a split time

It is possible to recall split times for specific stretches. If you would like to insert a pause during a lap, you can stop the time recording.

Displaying split time or inserting a pause

- Press on the lower section of the rocker switch to **display** the **split time** **(C)**. While the split time marked with a star is being displayed, the time recording continues to run in the background.
- Press the lower section of the rocker switch again to **insert a pause**. Timing is interrupted, the star in the last row disappears.

Resuming timing

- Press the upper section of the rocker switch to resume timing from the split time or pause display.

Switching the display between the lap timer and trip computer

You can retrieve information from the trip computer while the lap timer stopwatch is running.

Selecting the trip computer

- Press the **[RESET]** button briefly to display the trip computer. You can now operate the trip computer as usual.

Selecting the lap timer

- Press the **[RESET]** button until the lap timer ⇒ *page 26, fig. 19* appears.

Evaluating times, ending or resetting timing



Fig. 24 Display: Fastest and slowest lap time and average time

After evaluating the lap times, you can reset the lap timer data or continue recording additional laps ⇒ *page 28*.

Ending timing

- ▶ To end the last lap, press the upper section of the rocker switch as you finish the lap. The new lap time will not be included in the final evaluation.

Evaluating times

- ▶ Press the **RESET** button for approximately two seconds. The most important lap results appear in the display.

Resetting timing

- ▶ Press the **RESET** button in the total results display ⇒ *fig. 24* for at least two seconds to reset all the lap timer data to zero.

Total lap time results

The following information appears in the display ⇒ *fig. 24*:

- + the fastest lap time
- the slowest lap time
- Ø the average lap time



Tips

- Saved lap times cannot be individually deleted from the total results.
- In addition to the total results ⇒ *fig. 24*, only the last two lap times ⇒ *page 27*, *fig. 22* can be displayed in the lap timer.

- The saved lap timer values will not be lost after turning the ignition off.
- Lap timer recording can be continued at a later point in time ⇒ *page 28*.
- All values in the lap timer are deleted only when reset is deliberately selected.

Resuming timing at a later time

After evaluating the lap times, there is the option to resume and continue timing at a later time.

- ▶ Press the **RESET** button until the lap timer ⇒ *page 28*, *fig. 24* appears.
- ▶ Press the upper section of the rocker switch to record the new lap time.
- ▶ Repeat the procedure for recording additional laps as described above ⇒ *page 27*, *Recording additional lap times*. Evaluating the total results ⇒ *page 28*, *Evaluating times, ending or resetting timing*.

Speed warning system

Speed warning system

The speed warning system helps you to keep your driving speed below a set speed limit.



Fig. 25 Display: Speed warning

The speed warning system warns the driver if he exceeds a previously stored maximum speed. A warning tone will sound as soon as the vehicle speed exceeds the set speed by about 3 mph (3 km/h). At the same time, a warning symbol appears in the display ⇒ *fig. 25*.

The speed warning system has **two warning thresholds** that function independently of

each other and that have somewhat different purposes:

Speed warning 1 (Canada models)

You can use speed warning 1 to set the maximum speed while you are driving. This setting will remain in effect until you turn off the ignition, assuming that you have not changed or reset the setting.

The speed warning symbol  (Canada models) in the warning 1 display appears when you exceed the maximum speed. It goes out when the speed falls below the stored maximum speed.

The speed warning symbol will also go out if the speed exceeds the stored maximum speed by more than about 25 mph (40 km/h) for at least 10 seconds. The stored maximum speed is deleted.

Setting speed warning 1 ⇒ page 29.

Speed warning 2 (Canada models)

Storing warning 2 is recommended if you *always* want to be reminded of a certain speed, for example when you are traveling in a country that has a general maximum speed limit, or if you do not want to exceed a specified speed for winter tires.

The speed warning 2 symbol,  (Canada models) appears in the display when you exceed the stored speed limit. Unlike warning 1, it will not go out until the vehicle speed drops below the stored speed limit.

Setting speed warning 2 ⇒ page 29.

Tips

Even though your vehicle is equipped with a speed warning system, you should still watch the speedometer to make sure you are not driving faster than the speed limit.

Speed warning 1: setting a speed limit

Warning threshold 1 is set by the button.



Fig. 26 Section of instrument cluster: Set/Check button

Storing the maximum speed

- ▶ Drive at the desired maximum speed.
- ▶ Press the knob button ⇒ fig. 26 until the symbol ⇒ page 28, fig. 25 appears.

Resetting the maximum speed

- ▶ Drive the vehicle at a speed of at least 3 mph (5 km/h)
- ▶ Press the knob for more than 2 seconds.

The speed warning symbol  (USA models)/ (Canada models) will appear briefly in the display when you release the button to indicate that the maximum speed has been stored successfully. The maximum speed remains stored until it is changed by pressing the button again briefly or until it is deleted by a lengthy push on the button.

Speed warning 2: setting a speed limit

Switches in the wiper arm are used to operate warning threshold 2.



Fig. 27 Controls

To store maximum speed

- ▶ Turn off the ignition.
- ▶ Briefly press the button in the instrument cluster ⇒ *page 29, fig. 26*. The odometer and the digital clock are now illuminated.
- ▶ Press the button for at least 2 seconds. The currently stored maximum speed appears in the display **or** the crossed out symbol for warning threshold 2, if no maximum speed was set previously.
- ▶ Press the function selector switch in the wiper lever **(A)** ⇒ *fig. 27* up or down to change the set value. Values run up or down in steps of 6 mph (10 km/h).

To delete maximum speed

- ▶ Turn off the ignition.
- ▶ Briefly press the button in the instrument cluster ⇒ *page 29, fig. 26*. The odometer and the digital clock are now illuminated.
- ▶ Press the button for at least 2 seconds. The currently stored maximum speed appears in the display.
- ▶ Press the **RESET** button in the wiper lever **(B)** ⇒ *fig. 27* until the crossed out speed warning symbol for warning threshold 2 appears in the display.

A few seconds after the adjustment is completed, the illumination for the odometer and the digital clock will go out.

 **Tips**

This warning threshold can also be controlled through the trip computer
⇒ *page 25, Navigating the menu.*

Warnings and symbols

Red symbols

A red symbol means DANGER.

- ▶ Pull off the road and stop the vehicle.
- ▶ Turn off the engine.
- ▶ Check the malfunctioning system. Contact your authorized Audi dealer or a qualified workshop for assistance.

 BRAKE	USA models: Malfunction in the brake system ⇒ <i>page 32</i>
 BRAKE	Canada models: Malfunction in the brake system ⇒ <i>page 32</i>
 COOLANT	Engine coolant level too low/ engine coolant temperature too high ⇒ <i>page 32</i>
 OIL PRES-SURE	Engine oil pressure too low ⇒ <i>page 33</i>


When a red symbol appears, a warning tone will sound *three* times in succession. The symbol continues to flash until the malfunction has been repaired. If there is *more than one* malfunction, the symbols appear one after the other for about two seconds.

 **Tips**

- The message for a malfunction can be shown by pressing on the left knob.
- During route guidance on vehicles with a navigation system, the warning symbol is shown in the field above.

Yellow symbols

A yellow symbol means WARNING.

 FUEL	Low fuel level ⇒ <i>page 33</i>
 MIN	Check engine oil level ⇒ <i>page 33</i>
 SENSOR	Engine oil sensor malfunction ⇒ <i>page 33</i>
 WORN	Worn brake pads ⇒ <i>page 33</i>
 1 MPH	USA models: Speed warning 1 ⇒ <i>page 34</i>

	Canada models: Speed warning 1 ⇒ page 34
	USA models: Speed warning 2 ⇒ page 34
	Canada models: Speed warning 2 ⇒ page 34
	Significant loss of air pressure ⇒ page 34
TPMS	Tire pressure monitoring system malfunction ⇒ page 34
	Windshield washer fluid level low ⇒ page 34
	Battery voltage too high or too low ⇒ page 34
	Defective light bulb ⇒ page 35
BRAKE LIGHT	USA models: Defective brake light ⇒ page 35
	Canada models: Defective brake light ⇒ page 35
	Light/rain sensor (automatic headlights) defective ⇒ page 35
	Selector lever defective* No reverse gear* ⇒ page 35
	Clutch is overheating* ⇒ page 36
	Gearbox malfunction* ⇒ page 36
	Engine speed limitation ⇒ page 36

When a yellow symbol appears, a warning tone will sound *once*. Check the displayed function as soon as possible. If *more than one*

malfunction is detected, all symbols will appear one after the other for about two seconds.

Driver information

In addition to the warning/indicator lights and the symbols in the instrument cluster display, driver information is displayed.



Fig. 28 Section of instrument cluster: Set/Check button

Driver information appears in the display when a defective light bulb is reported by the defective light bulb warning ⇒ page 35, when the brake pads are worn and before you engage a gear on vehicles with R tronic.

In addition, driver information may appear when a red symbol flashes in the driver display.

To display Driver information

As an example, the symbol appears in the display. If you now press the button ⇒ fig. 28, the following driver message appears in the display:

Switch off engine and check oil level

The driver message in the display goes out after about 5 seconds. You can display the driver message again by briefly pressing the button.

BRAKE/ⓘ Brake system malfunction

The indicator light flashes if the brake fluid level is too low, if there is a malfunction in the ABS system or when the parking brake is engaged.

If the **BRAKE/ⓘ** symbol flashes in the display with the parking brake released, there is a malfunction in the brake system. In addition to the symbol, one of two messages appears in the display:

Stop vehicle and check brake fluid**ABS fault! See owner's manual**

- ▶ Pull off the road and stop the vehicle.
- ▶ Obtain professional assistance.

USA models: if there is a malfunction in the ABS system, the **ABS** warning/indicator light illuminates along with the **BRAKE** system malfunction warning/indicator light ⇒ ⚠.

Canada models: if there is a malfunction in the ABS system, the **(ABS)** warning/indicator light illuminates together with the ⓘ brake system malfunction warning/indicator light ⇒ ⚠.

Parking brake set

The parking brake warning light **BRAKE/ⓘ** (Canada models) illuminates when the parking brake is set. In addition, a warning tone will sound after you have driven for longer than 3 seconds and faster than 3 mph (5 km/h).

system is malfunctioning. The rear wheels could quickly lock up when you apply the brakes. This could lead to loss of control and your vehicle could slide! Drive carefully to the nearest authorized Audi dealer and have the malfunction corrected.

⚠ Engine cooling system malfunction

A malfunction in the engine cooling system must be repaired as soon as possible.

When the ⓘ symbol in the display flashes, then either the engine coolant *temperature* is too high, or the coolant *level* is too low. In addition to the symbol, the following message also appears in the display:

Switch off engine and check coolant level

- ▶ Pull off the road and stop the vehicle.
- ▶ Turn off the engine.
- ▶ Check coolant level ⇒ *page 182*.
- ▶ Add coolant if necessary ⇒ *page 183*.
- ▶ Continue driving only after the engine coolant warning/indicator light goes out.
- ▶ Contact your authorized Audi dealer for assistance if necessary.

If the engine coolant level is correct, then the radiator fan may be the cause of the malfunction.

If the generator warning/indicator light should also illuminate ⇒ *page 17*, then the fan belt may be damaged.

⚠ WARNING

- Always observe the warnings in ⇒ *page 175, Working in the engine compartment*, before opening the engine compartment lid and checking the brake fluid.
- Driving with low brake fluid is a safety hazard! Stop the car and get professional assistance.
- If the brake system warning/indicator light illuminates together with the ABS warning/indicator light, then the ABS

⚠ WARNING

- If your vehicle should break down for mechanical or other reasons, park at a safe distance from moving traffic, turn off the engine and turn on the hazard warning lights ⇒ *page 57, Emergency flasher*.
- Never open the engine compartment lid if you see or hear steam or coolant escaping from the engine compartment - you risk being scalded. Wait until you can

no longer see or hear steam or coolant escaping.

- The engine compartment of any vehicle is a dangerous area. Before you perform any work in the engine compartment, turn off the engine and allow it to cool. Follow the warning stickers ⇒ *page 175, Working in the engine compartment.*

Note

Do not continue driving if the  symbol illuminates. There is a malfunction in the engine cooling system – you could damage your engine.

Engine oil pressure malfunction

The red engine oil pressure warning symbol requires immediate service or repair.

If the  symbol appears in the display and flashes, the oil pressure is too low. In addition to the symbol, the following message also appears in the display:

Switch off engine and check oil level

- ▶ Pull off the road and stop the vehicle.
- ▶ Shut the engine down.
- ▶ Check the engine oil level ⇒ *page 180.*
- ▶ Contact your authorized Audi dealer for assistance if necessary.

Engine oil level too low

If the engine oil level is too low, top off oil to the proper level ⇒ *page 180.*

Engine oil level OK

If the  symbol starts flashing again even though the engine oil level checks OK on the dipstick, **do not start driving again and do not let the engine run at idle.** Instead, contact your authorized Audi dealer for assistance.

Fuel supply too low

When the  symbol illuminates, this means there are about 2.6 gallons (10 liters) of fuel left in the fuel tank. Time to refuel!

⇒ *page 171.*

If the symbol lights up, even when there is ample fuel in the tank, and the text **TANK SYSTEM MALFUNCTION ! CONTACT WORKSHOP** appears in the display, there is a fault in the system. Contact a qualified workshop to have the fault rectified.

Checking the engine oil level

Please add max. 1 qt of engine oil!

If the  symbol comes on, add 1 quart (1 liter) of oil at the next opportunity

⇒ *page 180.*

Engine oil sensor defective

If the  symbol illuminates, contact your authorized Audi dealer and have the oil sensor inspected.

Worn brake pads

Brake pads!

If the warning light illuminates, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads inspected. On USA models the warning light  comes on together with the warning light **BRAKE**. Both sets of brake pads on an axle must always be replaced at the same time.

WARNING

Driving with bad brakes can cause a collision and serious personal injury.

- If the warning light  and the warning light **BRAKE**¹⁾ with the message **Brake pads!** comes on in the instrument cluster

1) **BRAKE**: USA models only

display, immediately contact your authorized Audi dealer or qualified workshop to have all brake pads checked or replaced if necessary.

/ **Speed warning 1**

If the  symbol illuminates, this means you are driving faster than the set vehicle speed. Slow down! ⇒ *page 28*.

/ **Speed warning 2**

If the  symbol illuminates, this means you have driven faster than the second set vehicle speed. Slow down! ⇒ *page 28*.

Significant loss of air pressure

Tire pressure that is too low must be corrected as soon as possible.

If the  warning light comes on and the message **Please check tire pressure** appears in the display, pressure in at least one tire is too low.

- ▶ Stop driving as soon as possible without endangering yourself and other drivers on the road.
- ▶ Inspect all tires.
- ▶ Correct the tire pressure ⇒ *page 195*.

Additional information about the **tire pressure monitoring system** can be found: ⇒ *page 207*.

TPMS Tire pressure monitoring system malfunction

A malfunction can have various causes.

If the  warning light in the instrument cluster flashes for approximately one minute and then remains continuously illuminated and additionally the **TPMS** symbol appears in the display, the tire pressure monitoring system is not available. The text **Tire pressure! System malfunction** appears in the display. This can have various causes.

- A wheel sensor or other component may have failed.
- During initialization the system has detected more than 4 wheels on the vehicle, for example while driving next to another car with a tire pressure monitoring system.
- Audi replacement parts were not used.
- If snow chains are being used, system function can be compromised due to the shielding properties of the chains.
- The tire pressure monitoring system may not be available because of a radio malfunction.
- Transmitters with the same frequency, such as radio headphones in the vehicle or radio equipment, can cause a temporary disruption of the system through excessive electromagnetic fields.
- Eliminate the interference if you can and then proceed as follows: Turn off the engine for 20 minutes. Then drive another 10 minutes. If the warning light comes on again, you should contact your authorized Audi dealer immediately to have the problem corrected.
- Do not use commercially available tire sealants. Otherwise, the electrical components of the tire pressure monitoring system will no longer work properly and the sensor for the tire pressure monitoring system will have to be replaced by a qualified workshop.

Windshield washer fluid level too low

If the  symbol illuminates, add windshield washer fluid to the washer system ⇒ *page 188*.

Battery voltage low

If the  symbol illuminates, contact your authorized Audi dealer and have the following components inspected:

- drive belt
- battery charge

Also see if the generator warning/indicator light illuminates ⇒ *page 17*.

Defective light bulb warning

The defective light bulb warning tells you when a vehicle light bulb has become defective.

If a defective bulb has been detected by the system or a light bulb burns out, the  symbol with a message appears in the display to tell you which bulb is burnt out and where it is located. For example:

Rear left turn signal

After 5 seconds, the message disappears. If you want to recall the message into the display, press the CHECK button ⇒ page 10, fig. 3 .

There are three reasons why the defective bulb message would appear in the display:

- The light bulb has burnt out ⇒ page 224.
- The fuse is “blown” ⇒ page 223, *Replacing fuses*.
- The wire connection to the light bulb is defective.

Have the bulb replaced or the connection repaired by your authorized Audi Service department.

WARNING

- Light bulbs are pressurized and could explode while they are being changed causing serious personal injury.
- Work with due care when handling the high-voltage section of gas discharge (xenon) lamps. Failing to do so could result in death or serious injury!

BRAKE LIGHT / Brake light defective

In case of a malfunction or component failure, the symbol **BRAKE LIGHT** (USA models) /  (Canada models) can appear. The following electrical components should be checked, repaired or replaced, as necessary:

- Brake light bulbs
- All wiring connections
- Brake light switch

Contact your authorized Audi dealer for assistance if necessary.

Tips

The brake light switch is only inspected as part of the functional check after the engine is started.

Light/rain sensor defective

The indicator light indicates a defect in the automatic headlights/automatic wiper system.

If the symbol  illuminates, the light sensor has failed. For safety reasons, the low beams are turned on permanently with the switch in **AUTO**. However, you can continue to turn the lights on and off using the light switch. In the case of a defect in the rain sensor, the windshield wiper lever functions are still available. Have the light/rain sensor checked as soon as possible at an authorized Audi dealer.

Selector lever defective

Applies to vehicles: with R tronic

Selector lever defective! No reverse gear!

If the symbols are illuminated, there is a malfunction in the R tronic selector lever. The selector lever displays go out or flash. It is not possible to engage reverse gear. If you have been shifting the transmission manually, it switches to automatic operation.

You can continue to shift the transmission manually. From the neutral position N, engage first gear by tapping the shift button  on the steering wheel. Then the transmission remains in manual operation and you can select the gears using the shift buttons.

Have the selector lever checked as soon as possible at an authorized Audi dealer or other qualified workshop.

Clutch is overheating

Applies to vehicles: with R tronic

Clutch is overheating ! If possible please stop vehicle

If the symbols are illuminated, the clutch is overheating and could be damaged if you continue to drive.

Stop your vehicle and allow the engine to run at idle for several minutes. This will cool the clutch.

Gearbox malfunction

Applies to vehicles: with R tronic

In the event of a system malfunction, R tronic switches to emergency operation mode.

Gearbox malfunction! You can continue driving

You can continue to drive the vehicle. See an authorized Audi dealer or other qualified workshop at the next opportunity.

Gearbox malfunction! You can continue driving but functions are restricted

There is a serious system malfunction:

- The program shifts only into certain gears.
- The engine may stall.
- It is not possible to restart the engine if it has been switched off.
- Continuing to drive could result in subsequent damage.

Note

If R tronic has switched to emergency operation mode, you should have the malfunction corrected as soon as possible.

Engine speed limitation

Maximum 6000 RPM

The engine speed is automatically limited to 6000 RPM. This protects the engine from overheating.

The engine speed limitation  deactivates once the engine is no longer in the critical

temperature range and you have released the accelerator pedal once.

Tips

When cold, the engine speed is limited to 6000 RPM (with the V10 engine) or 7000 RPM (with the V8 engine) to protect the engine. The limit is deactivated once the oil temperature rises above 140 °F (60 °C) and the engine is at operating temperature.

Opening and closing

Keys

Key set

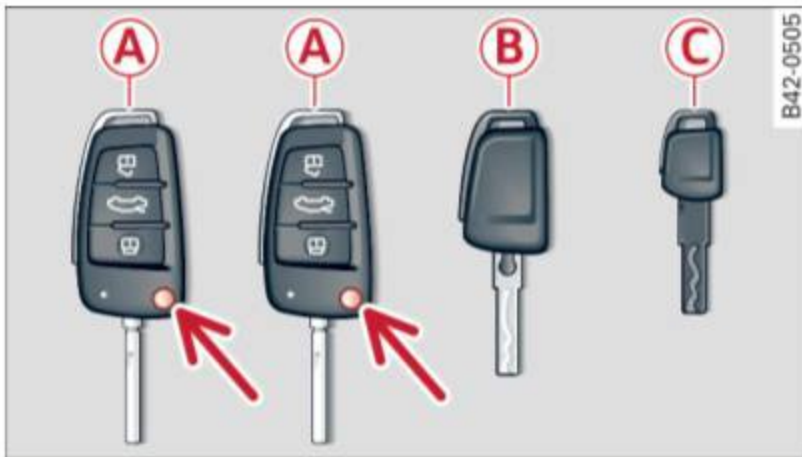


Fig. 29 Key set



Fig. 30 Remote master key: Indicator light

Your Audi comes with four keys ⇒ *fig. 29*:

- (A) two master keys with remote control
- (B) one valet key
- (C) one emergency key

Master key with remote control

You can centrally lock and unlock your vehicle and start the engine with the master key with remote control. To fold the key out and back in place, press the release button ⇒ *fig. 29* (arrow).

Valet key

The valet key only fits the lock in the driver's door and the ignition lock. If you have to leave the key with somebody else, you are well-advised to turn over the valet key only.

Be aware that the front lid and glove compartment can be opened from inside the vehicle using the release buttons.

Emergency key

The emergency key is only for temporary use if the vehicle key should be lost or misplaced.

Key replacement

If you lose a key, contact your authorized Audi dealer immediately to have the *lost* key disabled. Be sure to bring all your keys with you.

If a key is lost, you should report it to your insurance company.

Registered keys

You can inquire about the number of remote master keys registered to your vehicle

⇒ *page 24*. In this way, you can be certain of obtaining all the remote master keys if you purchase a used vehicle.

State of master key battery

When a button is pressed, the check light flashes ⇒ *fig. 30*. If the check light does not come on or flash, the battery is dead and has to be replaced.

Battery replacement ⇒ *page 38*.



WARNING

- Do not leave your vehicle unattended with the key in the ignition lock. Entry by unauthorized persons could endanger you or result in theft or damage the vehicle. Always lock all doors and take the key.
- Do not leave children unattended in the vehicle, especially with access to vehicle keys. Unguarded access to the keys provides children the opportunity to start the engine and/or activate vehicle systems such as the power windows etc. Unsupervised operation of any vehicle system by children can result in serious injury.



Tips

If you open the driver's door with the key left in the ignition lock, a chime will sound. This is your reminder to remove the key and lock the door.

Master key with remote control

The remote control allows you to lock or unlock the vehicle electronically.

The transmitter and battery are located in the head of the remote control. The receiver is located inside the vehicle. The maximum effective range depends on several things. Remember, if the battery is weak, the effective range decreases.

If you need to replace the remote control, or if you need to have it repaired, you must see your authorized Audi dealer. Only then can you use the key again.

Tips

- If the ignition is switched on, the remote control system is deactivated.
- The remote control system can be affected by other systems operating in the same frequency range close to the vehicle, such as mobile telephones, television broadcasting stations, etc.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ *page 212*.

Resetting the remote control

The remote control must be reset if the vehicle does not unlock.

- ▶ Press the unlock  button on the remote control.
- ▶ Within 30 seconds, unlock or lock the vehicle once at the door lock using the stem of the remote control key.
- ▶ Press the unlock button  or the lock button .

Master key battery replacement

Each master key contains a battery housed under the cover.



Fig. 31 Remote master key: opening the cover

We recommend having the battery changed by an authorized Audi dealer. However, if you wish to replace the dead battery yourself, proceed as follows:

- ▶ Pry apart the base ⇒ *fig. 31* **A** and the cover **B** **carefully** with a coin.
- ▶ Remove the cover (arrow).
- ▶ Remove the dead battery from the cover.
- ▶ Install the new battery. Please make certain that the “+” sign on the battery faces down in the cover. Correct polarity is shown on the cover.
- ▶ Place the cover with the new battery on the key base and press both parts together.



For the sake of the environment

Dispose of dead batteries properly so as not to pollute the environment.



Tips

The replacement battery must be the same specification as the original.

Electronic immobilizer

The immobilizer helps to prevent unauthorized use of your vehicle.

A computer chip inside your key automatically deactivates the electronic immobilizer when you insert the key in the ignition lock. When you remove the key from the ignition lock, the ►

electronic immobilizer is automatically activated once again.

If an unauthorized key was used, SAFE is displayed continuously in the odometer display field.

WARNING

Always take the key with you when you leave the vehicle. The key can disarm the electronic engine immobilizer and permit an unauthorized person to start the engine and enable operation of the vehicle systems such as power window leading to serious personal injury.

Tips

- The vehicle cannot be started if an unauthorized key is used. The vehicle may not start if another radio device such as a key for another vehicle or a transponder is located on the key ring.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ *page 212*.

Power locking system

General description

The power locking system locks or unlocks all doors simultaneously.

When opening and closing the doors, the power locking system locks or unlocks *both* doors together.

The remote master key locks and unlocks the doors using a radio signal ⇒ *page 40*.

Locking and unlocking with the key

You can also lock and unlock your vehicle using the key in the lock on the driver's door. The unlocking and locking mode can be changed in the Driver Information System ⇒ *page 24*.

Both doors are locked automatically when the vehicle is locked and the anti-theft alarm system is activated.

Auto Lock

The **Auto Lock** function locks all doors and the front lid once speed has exceeded approximately 9 mph (15 km/h).

The car is unlocked automatically once the ignition key is removed. In addition, the vehicle can be unlocked if the power locking system opening function  is activated or one of the door levers is used.

Turn signals

All the turn signals flash to indicate when the vehicle is locked and unlocked. The turn signals flash twice when the vehicle is unlocked. The turn signals flash once when all the doors and the front lid are locked. The interior lights are also switched on or off automatically according to the position of the door contact switch.

WARNING

- When you lock your vehicle from outside, nobody - especially children - should remain inside the vehicle. Remember, when you lock the vehicle from the outside the windows cannot be opened from the inside.
- When you leave the vehicle, always remove the ignition key and take it with you. This will prevent passengers (children, for example) from accidentally being locked in the vehicle should they accidentally press the power locking switch in one of the doors.
- Do not leave children inside the vehicle unsupervised. In an emergency it would be impossible to open the doors from the outside without the key.

Tips

- The driver's door can be locked and unlocked with the key if the power locking system fails. The passenger's door can be locked manually ⇒ *page 42*.

- In the event of a crash with airbag deployment all locked doors will be automatically unlocked to give access to the vehicle occupants from the outside.
- You are well advised not to keep valuables inside an unattended vehicle, visible or not. Even a properly locked vehicle cannot provide the security of a safe!

Unlocking and locking the vehicle with the remote control



Fig. 32 Remote control: function buttons

To unlock the vehicle

- Press button **A** once ⇒ *fig. 32*.

To lock the vehicle

- Press button **B** once ⇒ .

To unlock front lid only

- Press button **C** for approximately one second.

PANIC Button

- Push the red button **D** to activate the panic function. The horn sounds and the turn signals flash.
- Push the button **D** again to deactivate the panic function.

The turn signals flash twice when the vehicle is unlocked. If the vehicle is unlocked and a door or the front lid are not opened within the next 30 seconds, the vehicle locks again automatically. This feature prevents the vehicle from being left unlocked accidentally for a long period of time.

The turn signals briefly flash once and the horn sounds once when the doors and front lid are locked properly.



WARNING

Read and follow all WARNINGS ⇒ in *General description on page 39*.



Tips

- Use the remote control only when the doors and front lid are closed.
- In order to make sure the locking function is working, you should always keep your eye on the vehicle to make sure it is properly locked.
- Do not use the remote control if you are inside the car, otherwise you may unintentionally lock the vehicle, and then you would set off the anti-theft alarm when you try to open a door. In case this happens anyhow, push the unlock button .
- Use the panic function only if you are in an emergency situation.

Operating locks with the key

To lock and unlock the vehicle from the outside, turn the key in the lock of the driver's door.

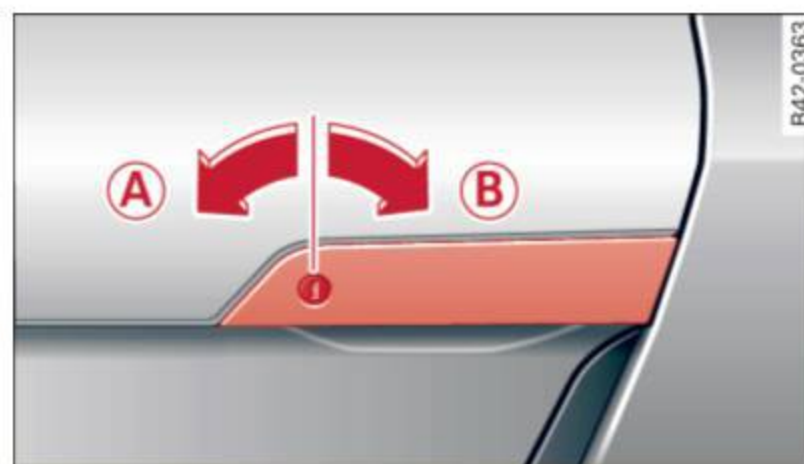


Fig. 33 Key turns for opening and closing

To unlock the vehicle

- Turn the key *one time* to position **A** to unlock the driver's door ⇒ *fig. 33*.

To lock the vehicle

- Turn the key in the lock of the driver's door to the lock position **B** ⇒ .

The turn signals briefly flash once and the horn sounds once when the doors and the front lid are locked properly.

WARNING

- Be careful when closing the windows. Check to see that no one is in the way, or serious injury could result!
- Always read and heed WARNING  in *General description on page 39*.

Tips

- However, note that which door is unlocked *mechanically* when the vehicle is opened depends on the settings in the menu display  *page 24*.
- Both doors are locked automatically when the vehicle is locked.

Locking and unlocking the vehicle from inside

The vehicle can be locked or unlocked from the inside using the power locking switch.



Fig. 34 Section from driver's door: Power locking switch

To lock the vehicle

- ▶ Press the upper part of the power locking switch   *fig. 34* .

To unlock the vehicle

- ▶ Press the lower part of the switch .

If you lock the vehicle using the power locking switch, please note the following:

- You cannot open the doors from the *outside* (increased security, for example when you are stopped at a red light).

- The LED in the power locking switch lights up when all the doors and the front lid are closed and locked.
- You can unlock and open the doors from the inside by pulling on the door handle.
- You cannot lock the vehicle with the central locking switch when the driver's door is open.
- If you have a crash and the airbag is activated, the doors automatically unlock.

WARNING

- If you use the power locking switch with the doors closed, remember that all the vehicle doors will lock.
- Locking doors from the inside can help prevent inadvertent door opening during an accident and can also prevent unwanted entry from the outside. Locked doors can, however, delay assistance to vehicle occupants and hold up rescue efforts from the outside in an accident or other emergency.

Emergency locking

If the power locking system fails (power failure), you will need to lock the passenger door separately.



Fig. 35 Emergency lock location on the front passenger's door



Fig. 36 Emergency locking

For this purpose, a mechanical locking device is provided on the end panel of the passenger door (only visible when the door is open).

- Open the door.
- Remove the cap ⇒ *fig. 35*.
- Insert the key into the inner slot ⇒ *fig. 36* and turn it about 90 degrees to the right as far as it can go.
- Replace the cap.

After you close the door you will no longer be able to open it from the outside. You can open it from the inside, however, by pulling on the door latch twice.

Front lid

Opening and closing the front lid



Fig. 37 Drivers door: remote front lid release



Fig. 38 Release lever under the front lid

When opening the front lid, the windshield wipers must be switched off and the wiper arms must be folded against the windshield. Otherwise the paint could be damaged.

Opening the front lid

- Press the center button on the master key or
- Pull the release button in the driver's door ⇒ *fig. 37*.
- Pull up on the release under the front lid ⇒ *fig. 38* (arrow). This releases the catch.
- Open the front lid all the way.

Closing the front lid

- Pull the front lid down until the pressure from the struts is reduced.
- Close the front lid.
- Press the front lid closed carefully using both hands until it latches audibly ⇒ ⚠.



WARNING

A front lid that is not completely latched could fly up and block your view while driving.

- When you close the front lid, check it to make sure the safety catch has properly engaged. The lid should be flush with the surrounding vehicle body parts.
- If you notice while driving that the lid is not secured properly, stop at once and close it.
- Never leave your vehicle unattended especially with the front lid left open. A child could crawl into the luggage compartment and pull the lid shut, becoming trapped and unable to get out. To reduce the risk of personal injury, never let children play in or around your vehicle. Always keep the front lid as well as the vehicle doors closed when not in use.

! Note

Make sure there are no objects protruding above the edge of the luggage compartment. Otherwise, the front lid could be damaged.

i Tips

If the front lid is open or not properly locked when the ignition is turned on, the door and front lid warning appears in the instrument cluster display.

Emergency release for front lid

If the front lid cannot be opened, an emergency release is provided.

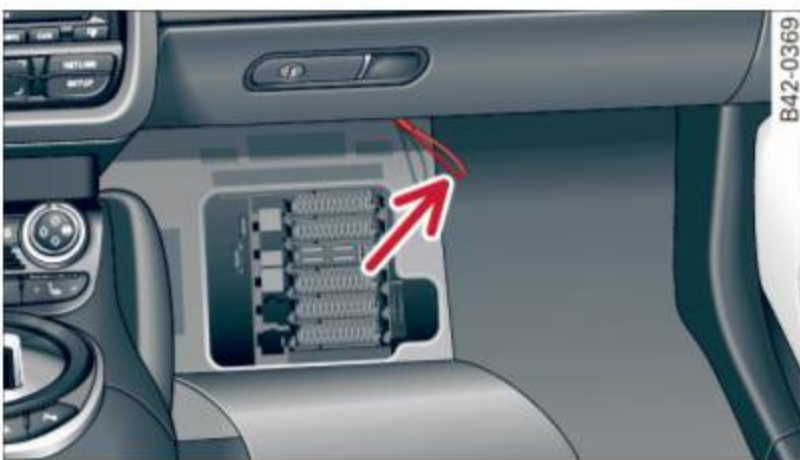


Fig. 39 Section: Emergency release

- Reach under the closed glove compartment. There is a red plastic cord under the glove compartment.
- Pull the red plastic cord towards you.

Anti-theft alarm system

Description

The anti-theft alarm triggers an alarm if anyone attempts to break into the vehicle.



Fig. 40 Diode position in the instrument panel

The anti-theft alarm system triggers an audible alarm and turns on the emergency flasher if an unauthorized interference with the vehicle is sensed by the system.

How is the anti-theft alarm system switched on?

The anti-theft alarm system is switched on when you lock the driver's door manually using the fold-out key, or when you use the remote control. The system is activated approximately 30 seconds after the vehicle is locked. The indicator light  fig. 40 starts flashing rapidly for 2 seconds and then blinks slowly.

How is the anti-theft alarm system switched off?

The anti-theft alarm system is switched off only when you unlock your vehicle. If you do not open a door within 30 seconds after you have unlocked with the remote control, the vehicle will lock itself again automatically.

When will the anti theft alarm system be triggered?

When the vehicle is locked, the alarm system monitors and protects the following parts of the vehicle:

- engine compartment
- luggage compartment
- doors

– ignition

When the system is activated, the alarm will be triggered if one of the doors, the engine compartment lid or the front lid are opened.

The anti-theft alarm system will also go off when the battery is disconnected.

You can also trigger the alarm by pressing the PANIC button on your remote-control key. This will alert other people in case of emergency. Press the **PANIC** button again to turn off the alarm.

How is the anti-theft alarm switched off when triggered?

To switch the alarm off, press the button  on the master key or switch the ignition on. The alarm will also switch itself off when it comes to the end of its cycle.

Emergency flasher

The emergency flasher will blink briefly when the doors, engine compartment lid and front lid are properly closed.

If the emergency flashers do not blink, check the doors, engine compartment lid and front lid to make sure they are properly closed. If you close a door, the engine compartment lid or the front lid with the anti-theft alarm switched on, the emergency flashers will blink only after you have closed the door or lid.

Power windows

Controls

The driver can operate all windows.



Fig. 41 Driver's door: power window switches



Fig. 42 Passenger's door: power window switch

The power window switches have a **two-position function**:

Opening the windows

- ▶ Press the switch and **hold it down** until the window has reached the desired position.
- ▶ Press the switch **briefly** to open the window automatically.
- ▶ By briefly pressing/pulling the switch again, the downward travel of the window can be stopped in any position ⇨ .

Closing the windows

- ▶ Pull the switch and **hold it** until the window has reached the desired position.
- ▶ Pull the switch **briefly** to close the window automatically.
- ▶ By briefly pressing/pulling the switch again, the upward travel of the window can be stopped in any position ⇨ .



WARNING

- Do not leave children unattended in the vehicle, especially with access to vehicle keys. Unsupervised use of the keys can result in starting of the engine and use of vehicle systems such as power windows, etc. which could result in serious injury.
- Remember – you can still open or close the power windows for about ten minutes after the ignition is switched off. Only when either of the front doors are opened are the power windows switched off.

- Be careful when closing the windows. Check to see that no one is in the way, or serious injury could result!
- Always remove the ignition key whenever you leave your vehicle.
- If you lock your vehicle from the outside, no one, especially children, should remain in the vehicle.
- Do not stick anything on the windows or the windshield that may interfere with the driver's field of vision.

Tips

- When the doors are opened, the windows are automatically lowered 0.4 in (10 mm).

Reactivating the system after battery disconnection

If the vehicle battery is disconnected and then reconnected, the automatic closing and opening function will not work until it is reactivated. To reactivate this feature, perform the following steps:

- Pull and hold the power window switch until the window is completely closed.
- Release the switch. Pull the switch again for one second. The automatic closing/opening is now reactivated.

Convertible top

Convertible top

General information

The fabric convertible top opens and closes automatically. When it is open, it is stored in the convertible top storage bay. The convertible top may be opened or closed at speeds up to 31 mph (50 km/h).

The convertible top is wind- and waterproof under normal conditions. Some moisture may collect in the vehicle interior, but only under extremely adverse weather conditions such as torrential rain. That is normal and no cause for concern.

Follow the cleaning and maintenance instructions ⇒ *page 163* to ensure the convertible top remains wind- and waterproof. Also note the following points:

- Only stow the convertible top when it is clean and dry. Grains of sand or coarse dirt particles can cause abrasions on the convertible top when stowed that can lead to damage to the fabric over time. Stowing the convertible top when it is damp can cause marks or permanent mildew spots to form.
- Do not leave the convertible top open for several weeks or the creases in it may become discolored. This is especially true if the top was stowed when damp.
- Remove ice and snow before opening the convertible top. Do not use any sharp edged objects to remove ice and snow or the convertible top could be scratched or damaged. The rear window may be cleared with a standard ice scraper.
- The fabric in the convertible top loses elasticity in sub-zero temperatures. We recommend not opening or closing the convertible top when the temperature is below 32 °F (0 °C). The convertible top will not open when the temperature is 5 °F (-15 °C) or below.

Opening and closing the convertible top



Fig. 43 Center console: convertible top switch

Requirement: the front lid must be closed and the ignition must be switched on.

Opening the convertible top

- Pull and hold the convertible top switch until the top is stowed in the bay and the cover on the bay has closed completely.

Opening the convertible top using the one-touch function

- Pull the switch briefly to open the convertible top completely. It is not necessary to hold the switch. The one-touch function is only available at speeds between 4 and 31 mph (6 and 50 km/h).

Closing the convertible top

- Press and hold the switch until the convertible top is closed and the latch is locked.

The indicator light  in the instrument cluster goes out when the top is completely open or closed.

The side windows automatically lower slightly during the opening/closing process.



WARNING

- Never drive when the convertible top is not locked correctly. The wind generated by driving could cause it to open, which could injure vehicle occupants or damage the vehicle.
- Make sure no one will be injured by the convertible top supports and other moving objects on the vehicle when opening and closing the top.

Note

- To prevent damage to the convertible top:
- do not store any objects in the convertible top storage bay.
 - make sure there is enough space above the vehicle when opening or closing the convertible top.

Tips

- When the indicator lamp  blinks, there is a system malfunction ⇒ *page 16*.
- The one-touch opening function is not available when the vehicle is traveling below 4 mph (6 km/h) or above 31 mph (50 km/h). If this is the case, a warning tone will sound and a message will appear in the instrument cluster ⇒ *page 47*.

Error message in the instrument cluster display

An error message appears if the convertible top cannot open or close.

Several conditions must be met for the convertible top to open or close automatically.

An error message in the instrument cluster display indicates if one of the conditions is not met or there is a malfunction.

Soft top: Please close engine lid!

The engine compartment lid must be closed when opening or closing the convertible top. This message appears in the instrument cluster display if the engine compartment lid is not closed.

Soft top: Cannot be used!

This error message appears if the convertible cannot open or close because of safety reasons or if there is a malfunction. The following causes are possible:

- **The vehicle is traveling too fast:** Convertible top operation is deactivated for safety reasons if the vehicle is traveling too fast. A message will appear. Reduce the vehicle

speed and pull or press the switch again to open or close the convertible top.

- **The battery voltage is too low:** The convertible top cannot open or close if the battery voltage is too low. This ensures there will be enough battery voltage left to start the vehicle. The convertible top can be operated again after the engine is started.
- **Overload protection is active:** Operating the convertible top continuously for a long period of time places stress on the hydraulic unit. Overload protection is activated to prevent damage to the system. This protective function prevents the convertible top from opening or close for approximately 15 to 30 minutes. It will function again after that ⇒ .
- **Malfunction:** Failure of system components is one possible cause for malfunction. If this happens, you can also operate the convertible top by hand ⇒ *page 49*.
- **The exterior temperature is too low:** The convertible top will not open in temperatures below (5 °F) (-15 °C).

Soft top not secure

If the convertible top is not **completely** open or closed and the vehicle is traveling too fast, the error message above appears and a warning tone sounds. Reduce the vehicle speed and pull or press the switch again to open or close the convertible top.

**WARNING**

Never drive when the convertible top is not locked correctly. The wind from driving could cause the convertible top to open. This can result in injuries and damage to the vehicle.

Wind deflector

The wind deflector reduces turbulence in the passenger compartment and makes driving more comfortable.

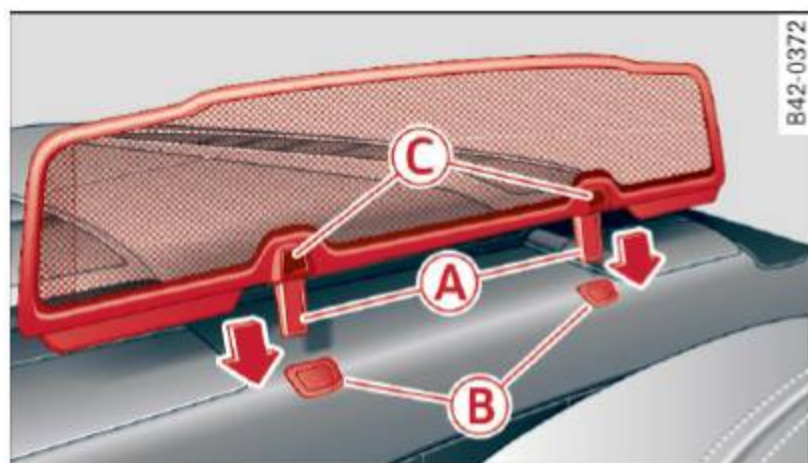


Fig. 44 Installing the wind deflector

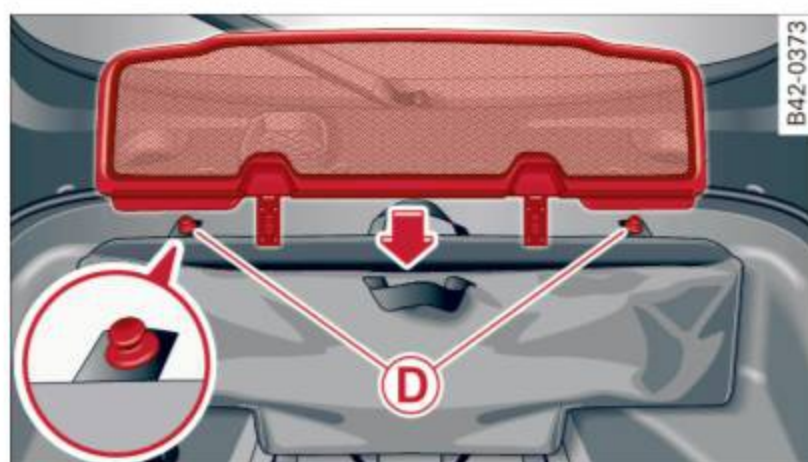


Fig. 45 Luggage compartment: storing the wind deflector

The wind deflector is located in the luggage compartment. Installing it from the side of the vehicle that is farthest from traffic is recommended for safety reasons. Follow the installation instructions provided in the storage bag.

Installing/removing the wind deflector

- To install the wind deflector, slide the retaining pin (A) into the mount (B) ⇒ fig. 44. The wind deflector is secure when it clicks into place and the red marks on both buttons are no longer visible.
- To remove the wind deflector, press both buttons (C) and pull the deflector upward.

Storing the wind deflector

- Slide the wind deflector into the storage bag with the retaining pins facing downward.
- Hang the storage bag on the retainers (D) in the luggage compartment ⇒ fig. 45.

! WARNING

- Do not use the wind deflector to secure cargo or other objects. This could result in injury.
- Be careful of traffic when installing the wind deflector.

! Note

To prevent damage to the vehicle paint, do not lean on the vehicle when installing the wind deflector. Objects such as belt buckles could scratch the surface of the paint.

i Tips

- Keeping both side windows raised provides the best wind protection.
- To prevent mildew, do not store the wind deflector when it is damp.

Rear window

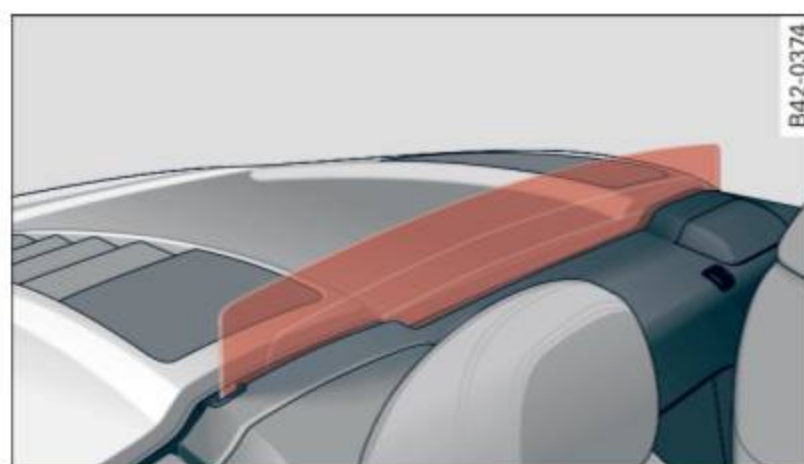


Fig. 46 Rear window in wind deflector position



Fig. 47 Section of the center console: convertible top switch

The rear window can be extended slightly when the convertible top is open to reduce air movement inside the vehicle and increase comfort. This is called the wind deflector position ⇒ fig. 46.

The rear window can be extended completely for cleaning. This is called the cleaning position.

Extending the rear window into the wind deflector position

- ▶ Pull and hold the rear window switch
⇒ *fig. 47.*
- ▶ Release the switch once the rear window has reached the wind deflector position.

Extending the rear window into the cleaning position

- ▶ Pull and hold the rear window switch
⇒ *fig. 47.*
- ▶ Release the switch once the rear window has reached the wind deflector position.
- ▶ Pull and hold the rear window switch again.
- ▶ Pull and hold the convertible top switch within one second ⇒ *page 46, fig. 43.*

Retracting the rear window

- ▶ Press and hold the rear window switch until the window has been retracted.

Retracting the rear window using the one-touch function

- ▶ Press the rear window switch briefly. There is no need to hold the switch.

The rear window can only be operated when the ignition is switched on.

The rear window can also be extended or retracted when the convertible top is closed.

WARNING

- Do not use the rear window to secure cargo or other objects. This could result in injury.
- Always pay attention and be careful when extending or retracting the rear window. It could cause injury by pinching.

Tips

- Keeping all of the windows raised provides the best wind protection.

- The vehicle must be stationary to bring the rear window into the cleaning position. The rear window will retract once you begin driving.

Convertible top emergency operation

General information

The convertible top can be closed by hand if there is a malfunction.

First check if overload protection is active ⇒ *page 47.* If this is the case, the convertible top will operate again after a short delay. Otherwise the following steps must be completed before closing the convertible top:

- ▶ Activate the parking brake.
- ▶ Open the side windows, if necessary.
- ▶ Remove the key from the ignition.

Emergency locking is not intended for long-term use or long drives. The convertible top will not be completely waterproof after using the emergency locking procedure because the seals will not be seated correctly. Only close the convertible top manually in an emergency. Please see an authorized Audi R8 dealer to have the cause of the malfunction corrected.

WARNING

- The ignition must be switched off during the entire closing procedure.
- When positioning the convertible top, avoid contact with the supports or other moving parts. Otherwise you could pinch your hands.
- Never drive when the convertible top is not locked correctly. The wind from driving could cause the convertible top to open. This can result in injuries and damage to the vehicle.

Tips

Have a second person assist when closing the convertible top. Opening the storage bay lid and positioning the convertible top is easier when a second person is assisting.

Step 1: Retract the rear window



Fig. 48 Upper storage compartment: removing the cover



Fig. 49 Upper storage compartment: using the Allen wrench as a crank to lower the rear window

The rear window must be retracted in order to close the convertible top. If the rear window switch is not functioning ⇒ *page 48*, the rear window can be cranked.

- ▶ Open the upper storage compartment between the seat backrests ⇒ *page 70*.
- ▶ Remove the cover using the screwdriver from the vehicle tool kit ⇒ *fig. 48*.
- ▶ Press the Allen wrench from the vehicle tool kit firmly into the opening until it clicks into place ⇒ *fig. 49*.
- ▶ Turn the bolt clockwise until the rear window is lowered.

Step 2: Release the pressure in the hydraulic system

The pressure in the hydraulic system must be released before the convertible top can be closed.

- ▶ Switch the ignition off.
- ▶ Pull or press the convertible top switch ⇒ *page 46, fig. 43* for approximately 10 seconds.



WARNING

If convertible top operation fails when opening or closing the top, do not hold or touch the supports or other moving parts when releasing the pressure. The convertible top will sink down and could pinch your hands.

Step 3: Open the convertible top storage bay lid



Fig. 50 Engine compartment: installing the emergency operation bolts



Fig. 51 Raising the storage bay lid and pulling it back

The engine compartment lid must be released using the emergency procedure in order to release the storage bay lid ⇒ *page 177*.

Releasing the convertible top storage bay lid

- ▶ Turn the emergency operation bolts on the left and right sides of the engine compartment ⇒ *fig. 50* clockwise using the open end wrench from the vehicle tool kit until the bolts are installed completely. The convertible top storage bay lid will raise approximately 0,4 in (1 cm) from the vehicle when the bolts are installed completely.
- ▶ Close the engine compartment lid ⇒ *page 176*.

Opening the convertible top storage bay lid

- From the rear of the vehicle, reach into the center ventilation slot in the storage bay lid with both hands and raise the lid approximately 12 in (30 cm).
- Hold the storage bay lid in this position and pull it toward you until it stops ⇒ *fig. 51*.

WARNING

When working in the engine compartment:

- Turn the engine off.
- Activate the parking brake.
- In vehicles with a manual transmission, move the shifter lever into idle. In vehicles with the R tronic transmission, move the selector lever into the N position.
- Remove the ignition key.
- Let the engine cool down.
- Keep children away from the engine compartment.

Note

To prevent damage to the vehicle, only open the convertible top storage bay lid when the engine compartment lid is closed.

Step 4: Remove the covers

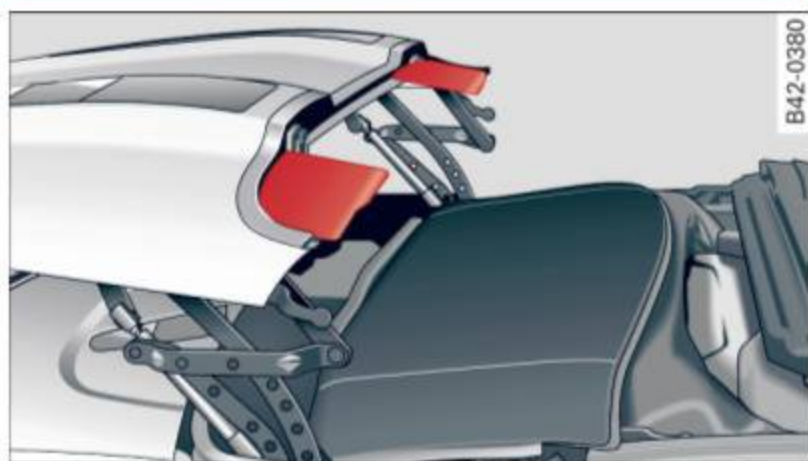


Fig. 52 Convertible top: covers marked



Fig. 53 Convertible top storage bay lid: removing the cover

The following steps must be performed on both sides of the vehicle.

- Remove the bolt in the cover on the bottom side of the storage bay lid using the open end wrench from the vehicle tool kit ① ⇒ *fig. 53*.
- Move the cover up and down carefully until it can be pulled downward from the teeth ②.

Step 5: Lift the convertible top out

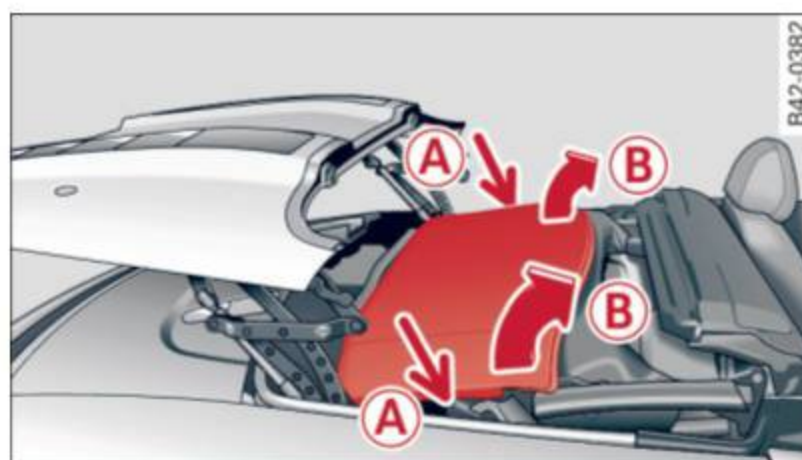


Fig. 54 Convertible top storage bay: lifting the convertible top out



Fig. 55 Windshield frame: pressing the convertible top forward

- Hold the convertible top at the (A) point (arrow) ⇒ *fig. 54* and raise it carefully ⇒ .

- Pull the convertible top all the way out in the direction indicated **(B)**. Position the fins upward at the same time.
- Press the convertible top as far forward toward the windshield frame as possible
⇒ *fig. 55*.

Have a second person assist when positioning the convertible top. That person should stand on the opposite side of the vehicle and perform the same steps.



WARNING

- When positioning the convertible top, avoid contact with the supports or other moving parts. Otherwise you could pinch your hands.
- When pressing the convertible top down onto the windshield frame, make sure that you do not pinch yourself or anyone else.

Step 6: Secure the convertible top

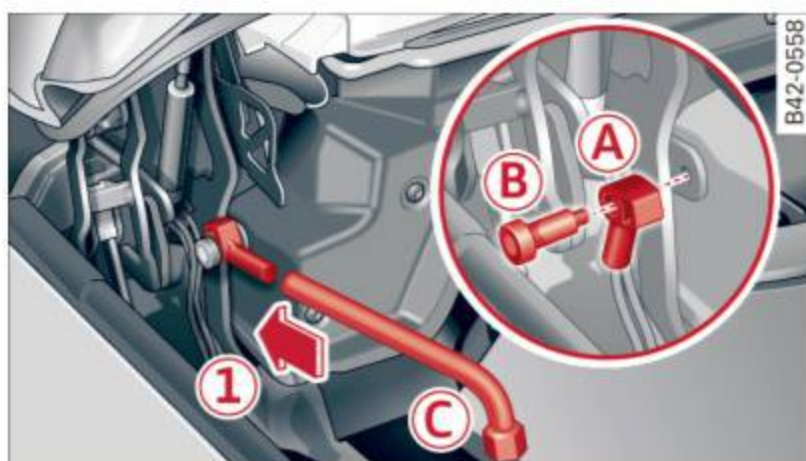


Fig. 56 Convertible top storage bay: installing the driver

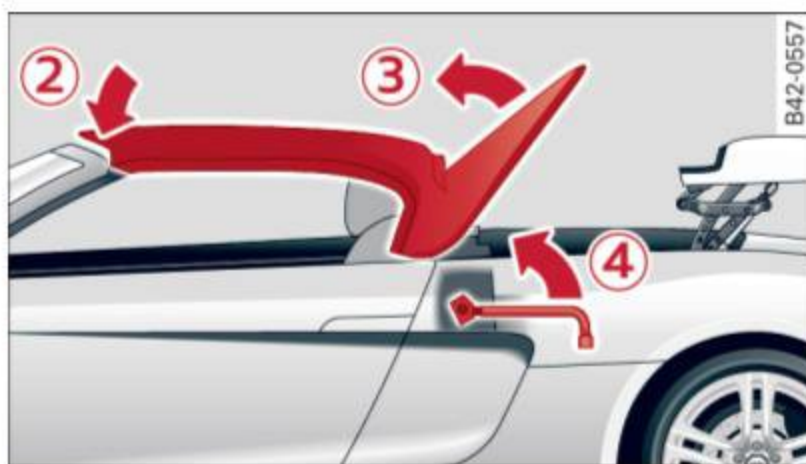


Fig. 57 Securing the convertible top

The convertible top must be under tension to secure it to the windshield frame. The wheel wrench, driver and bolts from the vehicle tool kit are required for this.

Have a second person assist with this step. That person should stand on the opposite side of the vehicle and perform the same steps.

- Position the driver **(A)** on the bolt **(B)** in the front section of the convertible top storage bay and rotate clockwise to install in the threads ⇒ *fig. 56*.
- Position the wheel wrench **(C)** with the long end on the driver **(1)**.
- Press the convertible top as far forward as possible toward the windshield frame **(2)** with one hand ⇒ *fig. 57*. At the same time, pull the fins upward **(3)** for support with the other hand.
- Now, grasp the fins with the hand that you used to move the convertible top forward and hold the fins in this position. With the other hand, turn the wheel wrench upward until it stops **(4)**.



Tips

- When pressing the convertible top forward, make sure the locking pins are seated in the latch on the windshield frame and not on the frame itself.
- When pressing the convertible top forward, make sure the locking pins are seated exactly in the latch on the windshield frame and not on the frame itself. This is the only way that the convertible top can be latched correctly.

Step 7: Lock the convertible top



Fig. 58 Inner side of the convertible top: removing the cap



Fig. 59 Inner side of the convertible top: positioning the Allen wrench

- ▶ Remove the cap in the center of the convertible top using the screwdriver from the vehicle tool kit ⇒ *fig. 58*. The emergency locking mechanism is located behind it.
- ▶ Insert the Allen wrench ① and turn the bolt to the left ② until it is tight and the convertible top is locked securely ⇒ *fig. 59*.
- ▶ Remove the Allen wrench from the opening and cover the opening with the cap.
- ▶ Remove the wheel wrench from the convertible top storage bay.
- ▶ Close the convertible top storage bay lid.

WARNING

Make sure the convertible top is locked correctly. Otherwise the wind from driving could cause the convertible top to open. This can result in injuries and damage to the vehicle.

Step 8: Secure the fins on the body

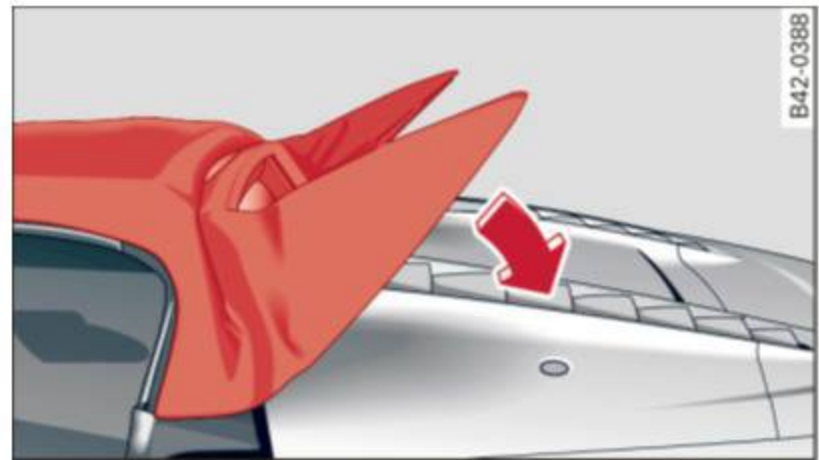


Fig. 60 Convertible top: pressing the fins downward

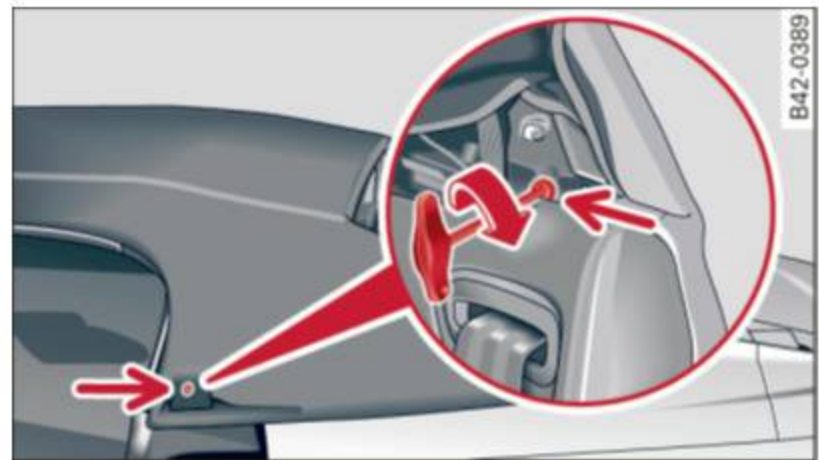


Fig. 61 Interior: tightening the bolt

The following steps must be performed on both sides of the vehicle.

- ▶ Press the fin downward firmly ⇒ *fig. 60*.
- ▶ Hold the fin in this position and tighten the bolt above the seat belt -arrow- using the Allen wrench from the vehicle tool kit at the same time ⇒ *fig. 61*.

A second person should assist when securing the fins to the body. Tightening the bolts is much easier if a second person presses the fins down.

WARNING

Make sure the fins lie on the body. Otherwise the convertible top will not lock securely and it could open while driving. This can result in injuries and damage to the vehicle.

Step 9: Extend the rear window

Fig. 62 Upper storage compartment between the seat backrests: extending the rear window

- ▶ Press the Allen wrench from the vehicle tool kit firmly into the opening until it clicks into place ⇒ *fig. 62*.
- ▶ Turn the bolt counterclockwise until the rear window is extended. Press the rear window back lightly while doing this.

**Note**

To prevent damage to the vehicle, make sure the rear window is in the guide in the convertible top when extending the window and the fins are secured on the body.

Clear vision

Lights

Switching the headlights on/off



Fig. 63 Instrument panel: light switch (automatic head- and taillight control)

Switching on the side marker lights

- Turn the light switch to .

Switching on the headlights and high beam

- Turn the light switch to .
- Push the high beam lever forward towards the instrument panel $\Rightarrow$ page 58.

Switching off the lights

- Turn the light switch to **0**.

Switching on automatic head- and taillight control

- Turn the light switch to **AUTO** $\Rightarrow$ fig. 63.

The headlights and taillights will come on automatically when the ignition is switched on and the light switch is in the position **AUTO** (only in nighttime conditions). When switching off the ignition, the headlights will go off and only the side marker lights will remain lit.

Daytime running lights

USA models: The daytime running lights will come on automatically when the ignition is switched on and the light switch is in the position **AUTO** (only in daylight conditions).

Canada models: The daytime running lights will come on automatically when the ignition is switched on and the light switch is in the

position **0**, **AUTO** (only in daylight conditions) or .

Automatic head- and taillight control

In the switch position **AUTO** the automatic head- and taillight control is activated. Light sensors are located in the inside mirror housing and constantly check the light conditions surrounding the vehicle. If ambient brightness falls below a factory set value (e.g. when driving into a tunnel), the head- and taillights including the license plate illumination are automatically turned on. When ambient brightness increases again, the external lights are turned off again $\Rightarrow$ . In the switch position **AUTO**, the low beams are turned off when the ignition is switched off. The remaining lights are turned off when the key is taken out of the ignition lock.

With automatic head- and taillight control, the high-beam function is also available, but with one restriction: If you have not switched the high beams back to low beams during automatic headlight operation (for example, after driving through a tunnel), only the low beams come on the next time automatic headlights are switched on. To use the high beams, you first have to pull the high beam lever back and then push the lever forward again.

The side marker lights and headlights can be switched on manually by turning the light switch to the desired position.

Light sensor malfunction

If there is a light sensor malfunction, the symbol  comes on in the display. For safety reasons, the low beams are turned on permanently with the switch in **AUTO**. However, you can continue to turn the lights on and off using the light switch. Have the light sensor checked as soon as possible at an authorized Audi dealer.

Coming home/leaving home function

The function is switched on when the switch is in the **AUTO** position and the function is

shown as active in the driver information system.

The **coming home** function illuminates the area around the vehicle when the ignition is switched off and the driver's door is opened. The length of time the lights remain on can be set in the menu display (**Lights > Exterior lights > coming home**).

The **leaving home** function illuminates the area around the vehicle when unlocking it.

WARNING

- Never use daytime running lights to see where you are going. They are not bright enough and will not let you see far enough ahead for safety, especially at dusk or when it is dark. Be aware of changes in outside light conditions when you are driving and respond by switching on your low beams.
- Automatic head- and taillight control is only intended to assist the driver. This feature does not relieve the driver of his responsibility to check the headlights and to turn them on manually according to the current light and visibility conditions. For example, fog and rain cannot be detected by the light sensors. Consequently, always switch the headlights on under these weather conditions and when driving in the dark.
- Crashes can happen when you cannot see the road ahead and when you cannot be seen by other motorists.
- Always turn on the headlights so that you can see ahead and so that others can see your car from the back.

Tips

- Always observe the specific local regulations for your area when to use your lights.
- Turn on low beams as evening approaches or in conditions of poor visibility.
- Do not attach stickers to the windshield in front of the sensors as this can disable

the automatic head- and taillight control and the automatic glare-dimming of the rearview mirror(s)*.

- If you remove the ignition from the ignition lock while the headlights are still on, a buzzer will sound as long as the driver's door is open to remind you to turn off the lights.
- In the AUTO mode, the low beams are turned off when the ignition is turned off. The remaining lights are turned off when the key is taken out of the ignition.
- In cool or damp weather conditions the headlights may fog over temporarily on the inside.
 - The critical factor is the temperature difference between the interior and the exterior of the headlight lens.
 - With the main beams switched on, the light-emitting area will be free of condensation after a short time, however the edges of the glass may still be fogged.
 - This physical phenomenon has no effect on the life of your vehicle's lighting system.

Instrument panel illumination

The illumination of the instruments, displays and the center console can be adjusted.



Fig. 64 Instrument panel illumination

You regulate the brightness of the instruments with the left thumbwheel  ⇒ *fig. 64*.

A phototransistor integrated into the instrument cluster controls the illumination of the needles in it. When the lights are switched on, the lighting for the center console and the

instruments (needles and dials) is automatically adjusted to ambient conditions. The driver can also adjust the brightness of the lighting.

Ignition ON, light switch at

With the ignition switched ON, the glow of *instrument needles* can be adjusted to appear brighter or dimmer.

Ignition ON, light switch at or .

With the lights switched on, the brightness of instrument cluster (i.e. needles, gauges and displays) and center console illumination can be adjusted.

Note

The instrument cluster and center console illumination (gauges and needles) comes on when you switch on the ignition and the **vehicle headlights are off**. Be aware of the following difference between models built to US or Canadian specifications:

- USA models: illumination of the instrument cluster (gauges and needles), dash and center console around the gearshift lever is controlled by a light sensor located in the instrument panel. The instrument panel illumination will automatically become dimmer as the daylight fades away and eventually will go out completely when outside light is very low. This is to remind you, the driver, to switch on the headlights before it gets too dark.
- Canada models: instrument panel illumination will stay bright regardless of the intensity of ambient light. Always be aware of changes in outside light conditions while you are driving. Respond in time to fading daylight by turning the light switch to position  (or “AUTO” if your car is equipped with this feature) to turn on your headlights.

Emergency flasher

The emergency flasher makes other motorists aware that you or your vehicle are in an emergency situation.



Fig. 65 Center console: emergency flasher switch

- Press the switch  $\Rightarrow$ fig. 65 to switch the emergency flasher on or off.

When the emergency flasher is on, all four turn signal blink at the same time. The turn signal indicator lights   in the instrument cluster, as well as the light in the emergency flasher switch  blink likewise. The emergency flasher also works when the ignition is switched off.

The emergency flasher will automatically switch on if you are in an accident where the airbag has deployed.

Tips

You should switch on the emergency flasher when:

- you are the last vehicle standing in a traffic jam so that any other vehicles coming can see you, or when
- your vehicle has broken down or you are in an emergency situation, or when
- your vehicle is being towed by a tow truck or if you are towing another vehicle behind you.

Turn signals and high beam lever

The lever is used to operate the turn signals and the high beam as well as the headlight flasher.



Fig. 66 Turn signal and high beam lever

The turn signal and high beam lever has the following functions:

Turn signals ⇐⇒

- ▶ Lift the lever up all the way ⇒ *fig. 66* to use the right turn signals ①, or push the lever down all the way to use the left turn signals ②.
- ▶ Move the lever (up or down) just to the point of resistance to use the turn signals for as long as you need them, for example when changing lanes.
- ▶ Briefly move the lever up or down just to the point of resistance and then release it to flash the turn signals *three times in succession*. This **Convenience turn signal** function must be activated in the menu display ⇒ *page 24*.

High beam ≡D

- ▶ Push the lever forward ③ to switch on the high beam.
- ▶ Pull the lever back towards you to switch off the high beam.

Headlight flasher ≡D

- ▶ Pull the lever toward the steering wheel ④ to use the headlight flasher.

Notes on these features

- The *turn signals* only work with the ignition switched on. The indicator lights ⇐ or ⇒ in the instrument cluster ⇒ *page 14* also blink.

- After you have turned a corner, the turn signal switches off automatically.
- The *high beam* works only when the headlights are on. The indicator light ≡D in the instrument cluster illuminates when the high beams are on.
- The *headlight flasher* works only as long as you hold the lever - even if there are no lights switched on. The indicator light ≡D in the instrument cluster illuminates when you use the headlight flasher.



Note

Do not use the high beam or headlight flasher if you know that these could be blinding oncoming traffic.

Interior lights

Interior lights

The interior lights include the reading lights for the driver and the front passenger.

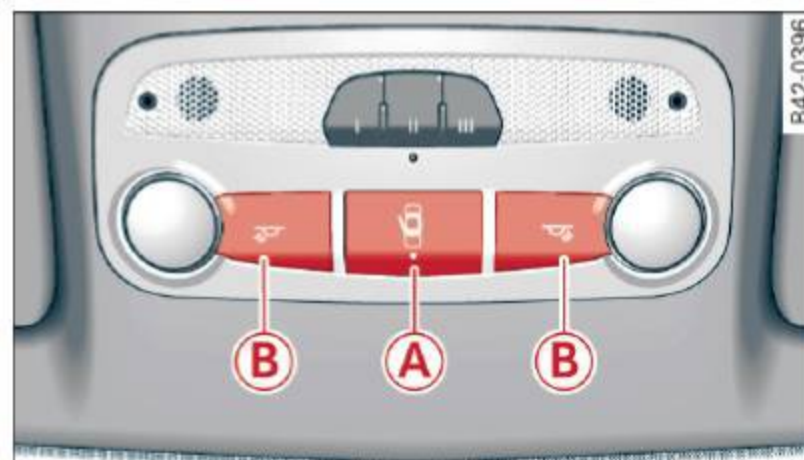


Fig. 67 Section from headliner: Interior lights

Activating door contact circuit

- ▶ Press the button ①. The LED in the button illuminates.

Deactivating door contact circuit

- ▶ Press the button ①. The LED in the button goes out.

Front reading lights ✎

- ▶ Press one of the switches ② to turn the right or left reading light on or off.

With the door contact circuit, the interior lights turn on as soon as you unlock the vehicle or open the doors. The interior lights are

also turned on when the ignition key is removed. The lights turn off about 30 seconds after the doors are closed. When the vehicle is locked or when the ignition is turned on, the interior lights are turned off.

When a door is open, the interior lights are turned off after about 10 minutes to prevent battery draining.

The brightness of the lights is controlled automatically by a dimmer when they are switched on and off.

Luggage compartment light

The light is located on the right side of the luggage compartment.

These lights come on automatically when the front lid is opened. The lights turn off automatically if the lid is left open for more than 10 minutes.

Vision

Sun visors

Using the sun visors makes driving safer.

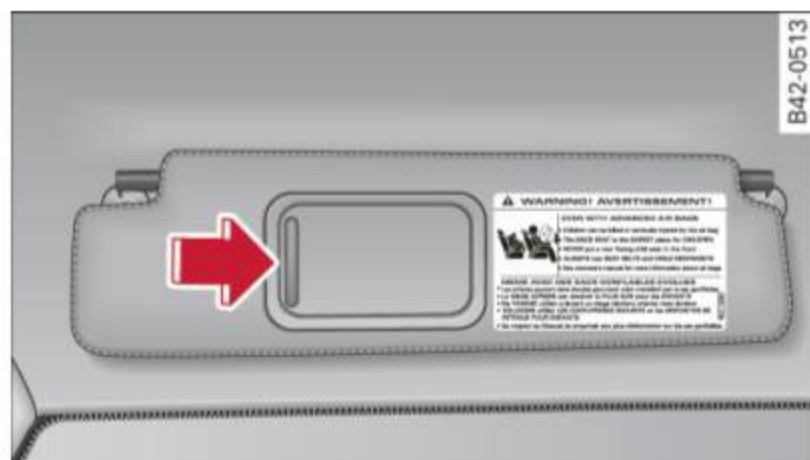


Fig. 68 Sun visor

The vanity mirrors in the sun visors are equipped with covers.

Wiper and washer system

Windshield wiper

The windshield wiper lever controls both the windshield wipers and the washer system.



Fig. 69 Wiper lever

The windshield wiper lever $\Rightarrow$ *fig. 69* has the following positions:

Intermittent wiping (activating rain sensor)

- ▶ Move the lever up to position **1**.
- ▶ Move the switch **A** to set the duration of the wipe intervals or to adjust the sensitivity of the light/rain sensor.

Low wiper speed

- Move the lever up to position ②.

High wiper speed

- Move the lever up to position ③.

One-touch wiping

- Move the lever to position **4**, when you want to wipe the windshield *briefly*.

Automatic wiper/washer

- ▶ Pull the lever to position ⑤ (toward the steering wheel) and hold.
- ▶ Release the lever. The washer system stops and the wipers continue to operate for about 4 seconds. Different numbers of wipe cycles are performed depending on how long the lever is held.

Turning off the wipers

- Move the lever back to position ①.

Moving wiper blades to the service position

- ▶ Do **not** lift the wiper arms away from the glass when they are in their parked position; this would damage the paint on the front lid.
- ▶ When there is a risk of frost, make sure that the wiper blades are not frozen to the windshield.
- ▶ Move wiper blades to the service position ⇒ *page 61*.

The windshield wipers and washer only work when the ignition is turned on.

To reduce the sensitivity of the sensor, move switch **A** down. To increase the sensitivity, move the switch up. The higher you adjust the sensitivity, the faster the sensor will react when it senses moisture on the windshield. The pauses between wiper turns depend not only on the sensitivity setting, but on the vehicle speed as well.

During a temporary stop, e.g. at a traffic signal, the set wiper speed is automatically reduced by one stage.

When the ignition is turned on, the washer jets are heated.



WARNING

- Wiper blades are crucial for safe driving! Only when they are in good condition are they able to clear the windows properly to provide uncompromising visibility. Worn or damaged wiper blades are a safety hazard ⇒ *page 61, Replacing front wiper blades!*
- The light/rain sensor is only designed to assist and support the driver. It remains entirely the driver's responsibility to monitor outside weather conditions and to manually activate the wipers as soon as rain or drizzle reduces visibility through the windshield.
- The windshield must not be treated with water-repellent materials. They can increase glare under poor visibility conditions such as wetness, darkness, or when

the sun is low on the horizon. In addition, they can cause the windshield wipers to chatter.



Note

In freezing or near freezing conditions:

- Always check that the wiper blades are not frozen to the glass before you turn the wipers on. Loosen a wiper blade which is frozen in place before operating the wipers to prevent damage to the wiper blade or the wiper motor.
- Do not use the wipers to clear a frosted window. Using the wipers as a convenient ice scraper will destroy the wiper blades.
- Before you take your vehicle to an automatic car wash, make sure you have the windshield wiper system switched off (lever in position 0), otherwise the windshield wiper system could get damaged in the car wash if it should suddenly come on.



Tips

- The windshield wipers are switched off when the ignition is turned off. Activate the windshield wipers after the ignition is switched back on by moving the windshield wiper lever to any position.
- Worn or dirty windshield wiper blades cause smearing, which can affect the operation of the light/rain sensor. Check the condition of your windshield wiper blades regularly.
- When the wipers are switched on manually and in rain conditions, the automatic headlights turn on ⇒ *page 55* or off during the day when the wipers are no longer operating. The automatic headlights function is available in this case only when the light switch is in the "AUTO" position ⇒ *page 55, fig. 63*.
- Make sure the washer fluid reservoir is topped off before going on a long trip. Look up ⇒ *page 188* for checking and filling the washer container.

- If you switch off the ignition with the windshield wiper lever still in the interval wipe position and then come back a while later and drive off, the rain sensor will reactivate itself after the vehicle speed has exceeded 4 mph (6 km/h).

Service position

It is only possible to change wiper blades if you move the wiper arms to the service position.

In order to use the windshield wipers, the front lid must be completely closed.

Moving wiper blades to the service position

- ▶ When there is a risk of frost, make sure that the wiper blades are not frozen to the windshield.
- ▶ Switch the ignition on.
- ▶ Move the wiper lever to position **0**
⇒ page 59, fig. 69.
- ▶ Press the **[RESET]** button until the **Display type** menu appears in the Driver Information System display.
- ▶ Using the rocker switch and the **[RESET]** button, select the **Set > Wipers > Front > Service position on** function. The windshield wiper arms move to the service position.

Moving wiper blades to park position

- ▶ Make certain that the wiper arms are lying against the windshield.
- ▶ Switch the ignition on and move the wiper lever from position **0** to **4** ⇒ page 59, fig. 69. The wiper arms will move back to the park position.

! Note

Never drive your vehicle when the windshield wiper arms are in the service position and pulled away from the windshield. When you drive faster than 4 mph (6 km/h), the wiper arms automatically return to the park position and could cause paint damage to the front lid!

i Tips

- You can also turn on the service position, for example, if you want to protect the windshield from icing by using a cover.
- The service position moves to **off** automatically when you operate the windshield wiper lever, or speed exceeds 4 mph (6 km/h).

Replacing front wiper blades

Wiper blades in good condition help keep the windshield clear.



Fig. 70 Unlatching wiper blades

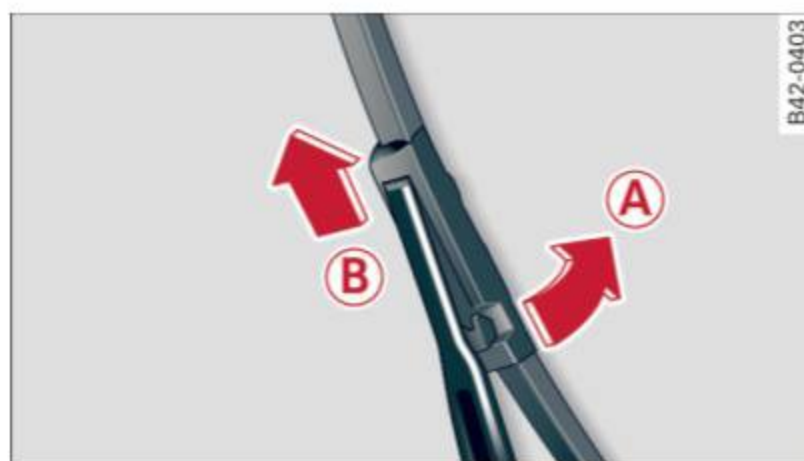


Fig. 71 Removing wiper blades

Removing the wiper blade

- ▶ Move the wipers to the service position
⇒ page 61.
- ▶ Fold the windshield wiper arm away from the glass.
- ▶ On the upper end of the wiper arm at the corrugation, squeeze the plastic retainer together on both sides in the direction of the arrow ⇒ fig. 70.
- ▶ Rotate the wiper blade in the direction of the arrow **(A)** ⇒ fig. 71 away from the wiper arm.
- ▶ Lift the wiper blade off in the direction of the arrow **(B)**.

Installing the wiper blade

- ▶ Place the rounded end of the wiper onto the end of the wiper arm in the **opposite** direction to the arrow **(B)** ⇒ *fig. 71*.
- ▶ Squeeze the corrugation on the wiper until you hear it click in the wiper arm.
- ▶ Fold the wiper arm back onto the windshield.
- ▶ Switch the ignition on and move the wiper lever down briefly ⇒ *page 59, fig. 69*. The wiper will move back to the park position.



WARNING

- Clean your wiper blades regularly with a windshield washer solution to prevent streaking. If the wiper blades are very dirty, for example with insects, carefully clean the wiper blades with a sponge or a soft brush.
- For your safety, you should replace the wiper blades once or twice a year. See your authorized Audi dealer for replacement blades.



Note

- The wiper blades may only be changed ⇒ *page 61* in the service position! Otherwise, you risk damaging the paint on the front lid or the windshield wiper motor.
- To prevent damage to the wiper system:
 - Always loosen blades which are frozen to the windshield before operating wipers.
 - Do not use gasoline, kerosene, paint thinner, or other solvents on or near the wiper blades.
 - Do not attempt to move the wipers by hand.



Tips

The front wiper blades are different lengths; the blade on the driver's side is longer.

Mirrors

Automatically dimming inside mirror

The automatic dimming function can be turned on and off if required.

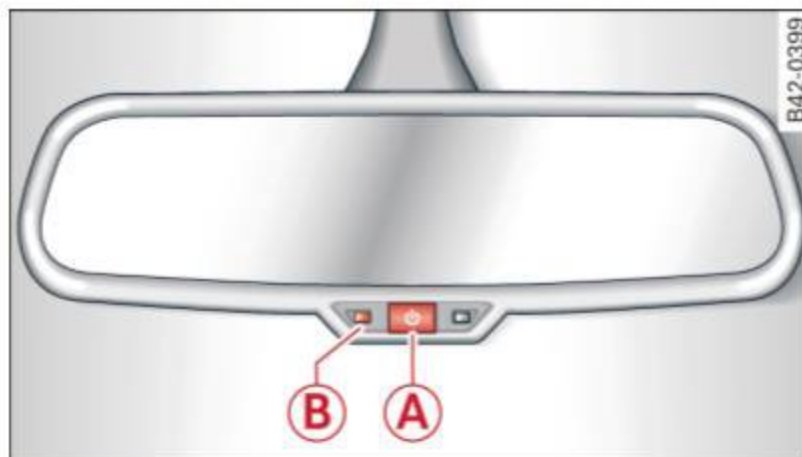


Fig. 72 Inside rearview mirror: auto dimming on/off button and indicator light

Disabling auto dimming

- ▶ Press button **(A)** ⇒ *fig. 72* - the green indicator light **(B)** goes out.

Activating/reactivating auto dimming

- ▶ Press button **(A)** ⇒ *fig. 72* - the green indicator light **(B)** goes on.

Automatic dimming function

The automatic dimming function is activated every time the ignition is turned on. The green indicator light is lit to indicate auto dimming is active.

When dimming is activated, the inside mirror will darken *automatically* in response to the amount of light striking the mirror (such as headlights from rearward approaching vehicles). Even in dimming mode, the mirror surface turns bright when:

- the interior light is switched on
- reverse gear is engaged.

Sensors for automatic headlights

With the help of the sensors in the mirror, when the light switch is in the **AUTO** position, the low beams are switched on and off automatically depending on the ambient light conditions.

! WARNING

Broken glass of automatic dimming mirror can cause electrolyte fluid leakage. Electrolyte fluid can irritate skin, eyes, and respiratory system.

- Repeated or prolonged exposure to electrolyte can cause irritation to the respiratory system, especially among people with asthma or other respiratory conditions. Get fresh air immediately by leaving the vehicle or, if that is not possible, open windows and doors all the way.
- If electrolyte gets into the eyes, flush them thoroughly with large amounts of clean water for at least 15 minutes; medical attention is recommended.
- If electrolyte contacts skin, flush affected area with clean water for at least 15 minutes and then wash affected area with soap and water; medical attention is recommended. Thoroughly wash affected clothing and shoes before reuse.
- If swallowed and person is conscious, rinse mouth with water for at least 15 minutes. Do not induce vomiting unless instructed to do so by medical professional. Get medical attention immediately.

! Note

Liquid electrolyte leaked from a broken mirror glass will damage any plastic surfaces it comes in contact with. Clean up spilled electrolyte immediately with clear water and a sponge.

i Tips

- **If you switch off the automatic dimming function on the inside mirror, automatic dimming of the outside mirrors will likewise be disabled.**
- Check to make sure there are no objects preventing light from reaching the inside mirror.
- Do not attach any stickers to the windshield in front of the two light sensors, as this would interfere with both the automatic operation of the headlights and

the automatic dimming of the inside mirror(s).

Outside mirrors

The outside mirrors are electrically adjusted.



Fig. 73 Forward section of driver's armrest: power mirror controls

Adjusting the outside mirrors

- ▶ Turn the adjusting knob to position **L** (driver's side) or in position **R** (passenger side) ⇒ *fig. 73*.
- ▶ Press the knob in the appropriate direction to move the mirror surface so that you have a good view to the rear.

Heated mirrors

- ▶ Turn the knob to position **A**.

Folding both outside mirrors flat*

- ▶ Turn the knob to **B**.

Depending on the outside temperature, the mirror surfaces are heated until the ignition is switched off - even if the knob is no longer in position **A**.

You are well-advised to fold* the outside mirrors in maneuvering in tight spaces or when leaving the car parked close to other vehicles.

! Note

- Curved (i.e. convex) mirror surfaces increase your field of view. Remember that vehicles or other objects will appear smaller and farther away than when seen in a flat mirror. If you use this mirror to estimate distances of following vehicles when changing lanes, you could

estimate incorrectly and cause an accident.

- If the mirror housing is moved unintentionally (for example, while parking your vehicle), then you must first fold the mirror electrically. Do not readjust the mirror housing manually. You could damage the motor which controls the mirror.

Tips

If there should be a malfunction in the electrical system, you can still adjust the outside mirrors by pressing the edge of the mirror.

Automatic dimming for outside mirrors

Applies to vehicles: with automatic dimming for outside mirrors

The outside mirrors are dimmed together with the automatic dimming of the inside mirror. When the ignition is switched on, the mirrors darken automatically depending on the light striking them (e.g. headlights from the rear).

When the interior lighting is switched on and when reverse gear is engaged, the mirrors are switched back to their original brightness (not dimmed).

WARNING

Broken glass of automatic dimming mirror can cause electrolyte fluid leakage. Electrolyte fluid can irritate skin, eyes, and respiratory system.

- Repeated or prolonged exposure to electrolyte can cause irritation to the respiratory system, especially among people with asthma or other respiratory conditions. Get fresh air immediately by leaving the vehicle or, if that is not possible, open windows and doors all the way.
- If electrolyte gets into the eyes, flush them thoroughly with large amounts of clean water for at least 15 minutes; medical attention is recommended.
- If electrolyte contacts skin, flush affected area with clean water for at least 15 minutes and then wash affected area

with soap and water; medical attention is recommended. Thoroughly wash affected clothing and shoes before reuse.

- If swallowed and person is conscious, rinse mouth with water for at least 15 minutes. Do not induce vomiting unless instructed to do so by medical professional. Get medical attention immediately.

Note

Electrolyte leaking from a broken mirror glass attacks the vehicle paint and plastic surfaces. Clean up spilled electrolyte immediately with clear water and a sponge.

Tips

- If automatic dimming for the inside mirror is switched off, the outside mirrors are also not dimmed automatically.
- Automatic dimming for the mirror only operates properly if the light striking the inside mirror is not hindered by other objects.

Digital compass

Activating or deactivating the compass

The direction is displayed on the interior rearview mirror.



Fig. 74 Inside rearview mirror: digital compass activated

- To activate or deactivate, hold the  button down until the red display appears or disappears.

The digital compass only works with the ignition turned on. The directions are displayed as initials: **N** (North), **NE** (Northeast), **E** (East), ►

SE (Southeast), **S** (South), **SW** (Southwest), **W** (West), **NW** (Northwest).

i Tips

To avoid inaccurate directions, do not allow any remote controls, electrical systems, or metal parts close to the mirror.

Setting the magnetic deflection zone

The correct magnetic deflection zone must be set in order to display the directions correctly.

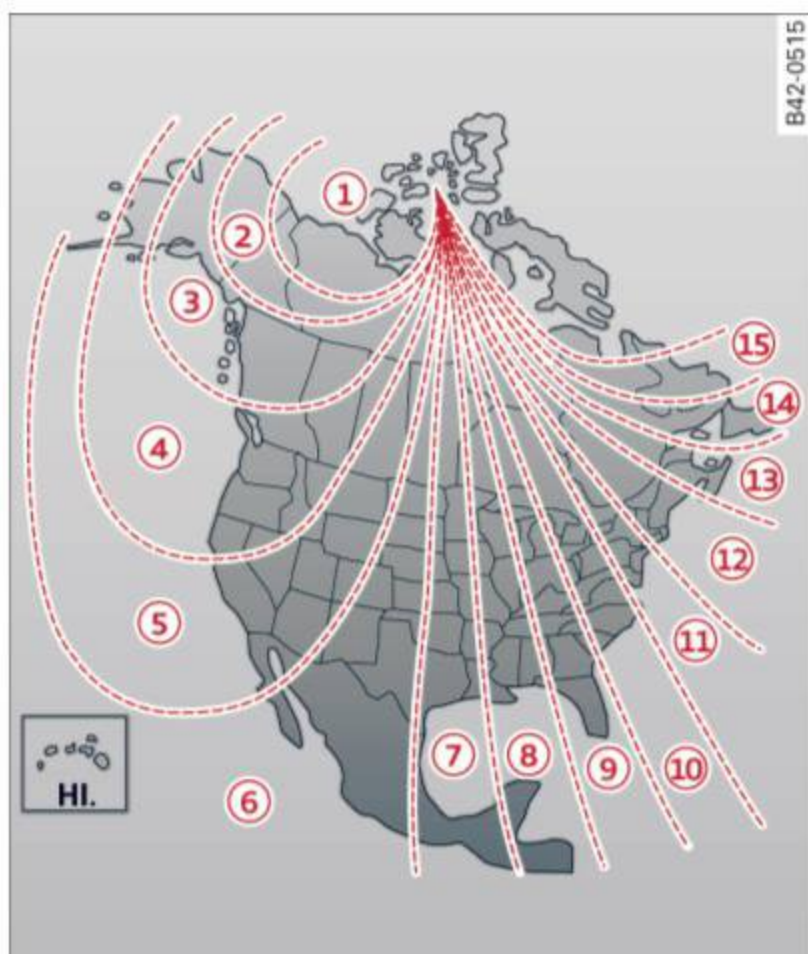


Fig. 75 Magnetic deflection zone boundaries

- Hold the **(A)** button $\Rightarrow$ page 64, fig. 74 down until the number of the set magnetic deflection zone appears on the interior rear view mirror.
- Adjust the magnetic deflection zone by repeatedly pressing on the **(A)** button. The set mode automatically deactivates after a few seconds.

Calibrating the compass

The compass has to be recalibrated if the display is wrong or inaccurate.

- Hold the **(A)** button down until the letter **C** is displayed on the interior rearview mirror.

- Drive in a circle at a speed of about 5 mph (10 km/h) until a direction is shown on the interior rearview mirror.



WARNING

The digital compass is to be used as a directional aid only. Even though you may want to look at it while you are driving, you must still pay attention to traffic, road and weather conditions as well as other possible hazards.

Seats and storage

General recommendations

Why is your seat adjustment so important?

The safety belts and the airbag system can only provide maximum protection if the front seats are correctly adjusted.

There are various ways of adjusting the front seats to provide safe and comfortable support for the driver and the front passenger. Adjust your seat properly so that:

- you can easily and quickly reach all the switches and controls in the instrument panel
- your body is properly supported thus reducing physical stress and fatigue
- the safety belts and airbag system can offer maximum protection ⇒ *page 117*.

In the following sections, you will see exactly how you can best adjust your seats.

There are special regulations and instructions for installing a child safety seat on the front passenger's seat. Always heed the information regarding child safety provided in ⇒ *page 138, Child Safety*.

WARNING

Incorrect seating position of the driver and all other passengers can result in serious personal injury.

- Always keep your feet on the floor when the vehicle is in motion — never put your feet on top of the instrument panel, out of the window or on top of the seat cushion! This applies especially to the passengers. If your seating position is incorrect you increase the risk of injury in the case of sudden braking or an accident. If the airbag inflates and the seating position is incorrect this could result in personal injury or even death.
- It is important for both the driver and front passenger to keep a distance of at

least 10 inches (25 cm) between themselves and the steering wheel and/or instrument panel. If you're sitting any closer than this, the airbag system cannot protect you properly. In addition to this, the front seats and head restraints must be adjusted to your body height so that they can give you maximum protection.

- Always try to keep as much distance as possible between yourself and the steering wheel or instrument panel.
- Do not adjust the driver's or front passenger's seat while the vehicle is moving. Your seat may move unexpectedly, causing sudden loss of vehicle control and personal injury. If you adjust your seat while the vehicle is moving, you are out of position.

Driver's seat

The correct seat position is important for safe and relaxed driving.

We recommend that you adjust the driver's seat in the following manner:

- ▶ Adjust the seat in fore and aft direction so that you can easily push the pedals to the floor while keeping your knee slightly bent ⇒  in *Why is your seat adjustment so important?* on *page 66*.
- ▶ Adjust the seatback so that when you sit with your back against the seatback, you can still grasp the top of the steering wheel.
- ▶ Position the head restraint according to the occupant's height ⇒ *page 68*. For maximum protection, the top of the head restraint should be at least at eye level, preferably higher and ideally level with the top of the head ⇒ *page 102, fig. 107*.

WARNING

Never place any objects in the driver's footwell. An object could get into the pedal area and interfere with pedal function. In case of sudden braking or an accident, you would not be able to brake or accelerate!

Front passenger's seat

Always move the front passenger seat into the rearmost position.

To avoid contact with the airbag while it is deploying, do not sit any closer to the instrument panel than necessary and always wear the three-point safety belt provided adjusted correctly. We recommend that you adjust the passenger's seat in the following manner:

- ▶ Move the front passenger seat into the rearmost position of the fore and aft adjustment range ⇒ ⚠ in *Why is your seat adjustment so important?* on page 66.
- ▶ Bring the backrest up to an (almost) upright position. **Do not** ride with the seat reclined.
- ▶ The ideal position for the head restraint is with the upper edge of the restraint level with the top of your head ⇒ page 68. You should *not* lower the top of the restraint below the level of your eyes.
- ▶ Place your feet on the floor in front of the passenger's seat.

Power seats

Adjustment switches

The operating logic for the switches corresponds to the construction and function of the seat.

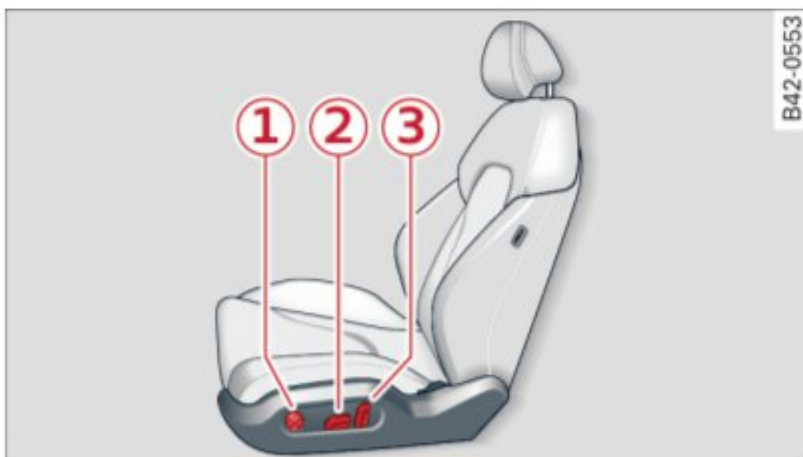


Fig. 76 Adjustment switches: locations on driver seat

The operating logic for the switches corresponds to the construction, the design and the function of the seat. Push or pull either switch in exactly the same direction you want the corresponding part of the seat to move.

Adjustment switches

- ① Adjusting the lumbar support
- ② Adjusting seat height and fore-and-aft position
- ③ Adjusting the angle of the seatback

Power seat adjustment

The switches can be moved in various directions to allow precise adjustment.

Read and heed all warnings before you adjust your seat. ⇒ ⚠.

Adjusting the curvature of the lumbar support

- ▶ Push the forward or rear depression on the switch shell ① ⇒ page 67, fig. 76 to increase or decrease the backrest curvature.

Adjusting the height of the lumbar support

- ▶ Push the top or bottom depression on the switch shell ① to raise or lower the support in the backrest.

Moving the front seats forward or backward

- ▶ Press the switch ② forward or backward horizontally.

Adjusting the seat height

- ▶ Pull or push the switch ② evenly at both ends to raise or lower the seat.

Angling the seat cushion up and down (front)

- ▶ Pull or push the switch ② at the front only to raise or lower the seat.

Angling the seat cushion up and down (rear)

- ▶ Pull or push the switch ② at the rear only to raise or lower the seat.

Adjusting the seatback

- ▶ Push or pull the switch ③ in the same direction you want the seatback to tilt.

WARNING

- Never adjust the driver's or front passenger seat while the vehicle is moving. If you do this while the vehicle is moving, you will be out of position. Always adjust the driver's or front passenger seat when the vehicle is not moving.
- Be careful when adjusting the seat height. Check to see that no one is in the way, or serious injury could result!
- Because the seats can be electrically adjusted with the ignition key removed, never leave children unattended in the vehicle. Unsupervised use of the electric seat adjustments may cause serious injury.
- To reduce the risk of injury in the case of sudden braking or accident, front passengers must never ride in a moving vehicle with the seatback reclined. Safety belts and the airbag system offer maximum protection only when the seatback is upright and the safety belts are properly positioned on the body. The more the seatback is reclined, the greater the risk of personal injury from an incorrect seating position and improperly positioned safety belts!
- Always make sure the front seatbacks are in the upright position when driving.

Head restraints

Adjusting head restraints

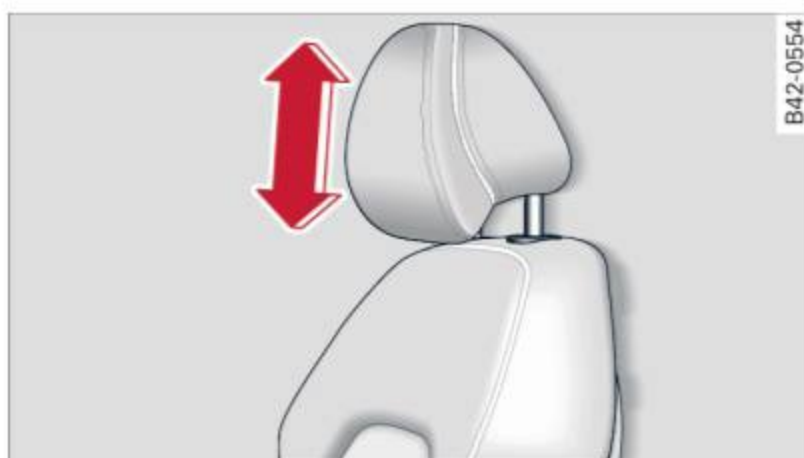


Fig. 77 Adjusting head restraints

The head restraints can be adjusted to provide safe support to head and neck at the optimum height. When optimally adjusted, the

top of the restraint should be level with the top of the head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ *page 102*.

- Grasp the sides of the head restraint with both hands and slide it upward/downward until you feel it click into place ⇒ *fig. 77*.

WARNING

- Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.
- Read and heed all WARNINGS ⇒ *page 102*.

Tips

Correctly adjusted head restraints and safety belts are an extremely effective combination of safety features.

Cup holder

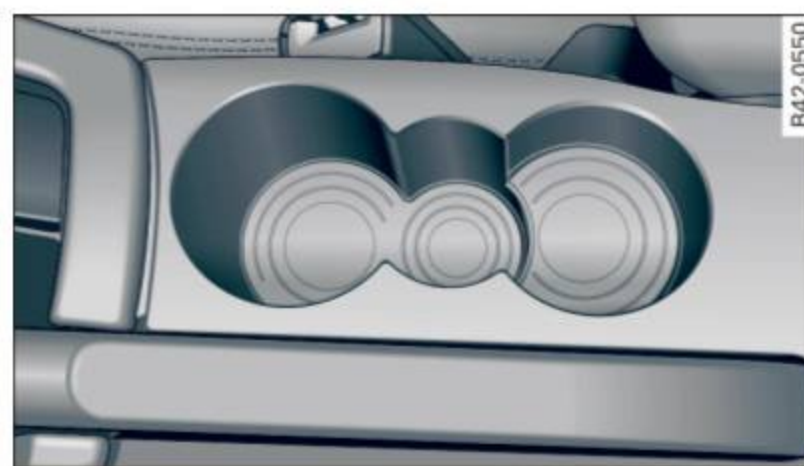


Fig. 78 Cup holder

WARNING

- Spilled hot liquid can cause an accident and personal injury.
- Never carry any beverage containers with hot liquids, such as hot coffee or hot tea, in the vehicle while it is moving. In case of an accident, sudden braking or other vehicle movement, hot liquid could spill, causing scalding burns. Spilled hot liquid can also cause an accident and personal injury.

- Use only soft cups in the cupholder. Hard cups and glasses can cause injury in an accident.
- Never use the cupholder or adapter as an ashtray - risk of fire.

! Note

Only drink containers with lids should be carried in the cupholder. Liquid could spill out and damage your vehicle's electronic equipment or stain the upholstery, etc.

Ashtray

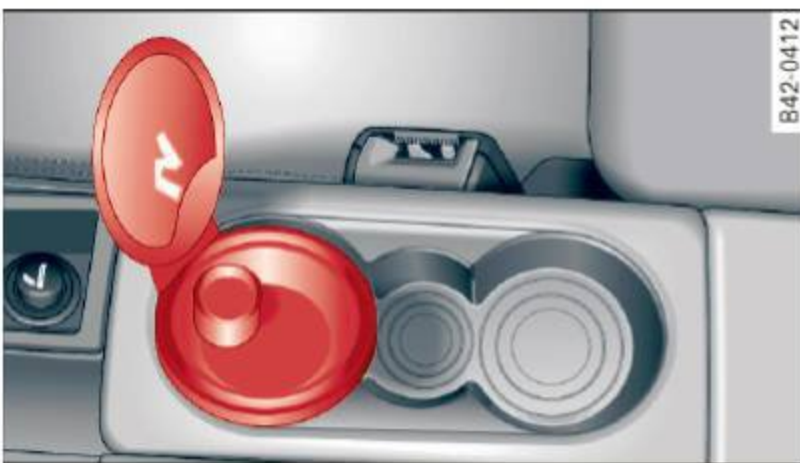


Fig. 79 Center console: ashtray

The ashtray is inserted in the cupholder.

Opening the ashtray

- ▶ Fold the cover upward.

Emptying the ashtray

- ▶ Lift the closed ashtray up out of the cupholder.

! WARNING

Never put waste paper in the ashtray. Hot ashes or other hot objects in the ashtray could set waste paper on fire.

Cigarette lighter/socket

The cigarette lighter or socket only work with the ignition on.

Using the cigarette lighter

- ▶ Slide the cover open to reach the cigarette lighter ⇒ *page 69*.

- ▶ Push the knob in.
- ▶ Wait until the cigarette lighter knob pops out.
- ▶ Remove the cigarette lighter immediately and use it.
- ▶ Reinsert cigarette lighter into the socket after use.

Connecting an appliance

- ▶ Slide the cover open to reach the cigarette lighter.
- ▶ Remove cigarette lighter.
- ▶ Plug in appliance to be used.

The socket of the cigarette lighter may be used for 12-volt appliances with maximum consumption of up to 100 watts, such as a flash light, small vacuum cleaner, etc.

! WARNING

- Improper use of the cigarette lighter can cause serious injury or start a fire.
- Be careful when using the cigarette lighter. If you do not pay attention to what you are doing when you are using the cigarette lighter you can burn yourself.

! Note

- To avoid damaging the socket, only use plugs that fit properly.
- Only use the cigarette lighter socket as a power source for electrical accessories for short durations. Use the sockets in the vehicle when a power source is needed for longer durations.

i Tips

- When the engine is off and accessories are still plugged in and are on, the vehicle battery can still be drained.
- The vehicle battery must not be charged with a standard small charger that plugs into the cigarette lighter or outlet.

Storage

General

WARNING

- Always remove objects from the instrument panel. Any items not put away could slide around inside the vehicle while driving or when accelerating or when applying the brakes or when driving around a corner.
- When you are driving make sure that anything you may have placed in the center console or other storage locations cannot fall out into the footwells. In case of sudden braking you would not be able to brake, depress the clutch or accelerate.

Glove compartment

The glove compartment is illuminated and can be locked.



Fig. 80 Glove compartment

To open glove compartment

- Pull the handle ⇒ *fig. 80* in the direction of the arrow, push down lid to the fully open position.

To close glove compartment

- Push the glove compartment lid upward until the lock engages.

The glove compartment light comes on as the parking or driving lights are switched on and the compartment is opened. You will find a glasses case in the lid.

The glove compartment has a standard 12-volt socket for connecting electrical accessories. The power consumption at the outlet must not exceed 100 watts. The socket works only with the ignition switched on.

WARNING

To reduce the risk of personal injury in an accident or sudden stop, always keep the glove compartment closed while driving.

Storage compartment in the front seats

Applies to vehicles: with storage compartment in the front seats

There is a fold-out storage compartment in the front of the seats.

Opening

- Lift the handle and pull the drawer out.

Closing

- Push the drawer in completely until it latches.

Tips

The maximum carrying capacity 2.2 lbs. (1 kg).

Storage compartments between the seat backrests

The storage compartments are illuminated and can be locked with the vehicle key.



Fig. 81 Storage compartments between the seat backrests

The CD changer* or the Audi Music Interface* are located in the lower storage compartment.

Opening the upper storage compartment

- Fold the lid upward in the direction of the arrow ① ⇒ *fig. 81*.

Opening the lower storage compartment

- Fold the lid downward in the direction of the arrow ②.



WARNING

Always keep the storage compartments closed when driving to help reduce the risk of injury.



Tips

Both lids must be closed in order to lock the compartments.

Warm and cold

Climate controls

Controls

The climate controls automatically maintain the selected temperature in the vehicle interior throughout each season.



Fig. 82 Climate controls

We recommend the following setting:

- ▶ Rotate the knob ⇒ fig. 82 ② to the right to switch on the air conditioning.
- ▶ Set the temperature to 72 °F (22 °C).
- ▶ Press the **AUTO** ⇒ fig. 82 button.

Using the previously recommended setting is the quickest way to achieve a comfortable climate in the vehicle. This setting should therefore only be changed when personal comfort levels or certain circumstances require it.

The climate controls are a combination of automatic heating and ventilation systems and a cooling system which dehumidifies and cools the air inside the vehicle.

The climate controls automatically maintain a temperature once it has been set. The temperature of the air from the vents, fan speed (air volume) and air distribution are also automatically adjusted. The system also takes into account strong sunshine so that manual adjustment is not necessary. So in almost all cases, **automatic mode** offers the best conditions for the comfort of the occupants at all times of the year ⇒ page 75.

Please note:

In cooling mode, relative humidity in the interior is reduced. This prevents the windows from fogging up. When outside temperatures are low (temperatures below freezing), the air conditioning (compressor) switches off automatically - air in the vehicle interior is not dehumidified.

When relative humidity and temperatures outside are high, **condensate** can drip from the air conditioning evaporator and form a pool of water under the vehicle. This is normal and not an indication of a leak!

When outside temperatures are low, the fan does not switch to a higher speed until the coolant has reached an adequate temperature, with the exception of the defrost setting.

When accelerating at wide-open throttle, the air conditioning compressor is temporarily switched off to maintain full engine power.

In order to ensure engine cooling under extreme engine loads, the compressor is switched off if coolant temperatures climb too high. ►

Functions are set by turning the rotary knob or switched on and off by tapping the buttons. The LED in the buttons illuminates when the function is active.

Button(s)	Meaning	Page
Rotary knob ①	Temperature selection	⇒ page 73
Rotary knob ② 	Switch air conditioning on/off Fan	⇒ page 74
Rotary knob ③	Air distribution	⇒ page 74
	Defrost	⇒ page 75
	Rear window defogger	⇒ page 76
	Heated seat driver/passenger side	⇒ page 76
	Recirculation	⇒ page 75
	Switch on cooling system	⇒ page 75

Pollutant filter

The pollutant filter (particle filter) ensures that contaminants in the outside air (such as dust or pollen) are greatly reduced or stopped. The air is also filtered in recirculation mode.

The pollutant filter element must be changed according to the intervals specified in the maintenance schedule so that the air conditioning system's performance is not adversely affected.

If the filter's effectiveness is weakened by driving the vehicle in areas with heavily polluted outside air, the filter element should also be changed between the listed services.

Energy management

To prevent the battery from being discharged and to restore the balance of energy, components which require large amounts of energy are temporarily cut back or switched off

⇒ page 155. Heating systems in particular require a great deal of energy. If you notice, for example, that the rear window heater is not heating, then it has been temporarily cut back or switched off by **energy management**. These systems are available again as soon as the energy balance has been restored.



WARNING

For safety reasons, it is important that all windows are free of ice, snow, and condensation. Only then is good visibility ensured. Please familiarize yourself with the correct operation of the air conditioning and how to dehumidify/defrost the windows.



Note

- If you suspect that the climate controls have been damaged, switch the system off to avoid damaging it, and have it inspected by an authorized Audi dealer.
- Audi climate control system repairs require special expertise and the proper tools. You should contact an authorized Audi dealer in the event of malfunctions.



Tips

- To avoid adversely affecting heating and cooling performance and to prevent condensation on the windows, the air intake in front of the windshield must be free of ice, snow, and leaves.
- Climate control works most effectively if the windows are closed. However, if the interior of a parked vehicle is extremely hot from the sun's rays, briefly opening the windows can speed up the cooling process.

Setting temperature

- Turn the rotary knob ① ⇒ page 72, fig. 82 to the desired temperature setting.

To set a lower temperature, turn the rotary knob to the left. To set a higher temperature, turn the rotary knob to the right. There are ►

additional intermediate settings available to adjust the temperature as needed.

Switching climate control on and off

Switching the climate control system on and off

- Turn the knob ② ⇒ *page 72, fig. 82* to the right to switch climate control on. The LED next to the word OFF goes out.
- Turn the knob ② ⇒ *page 72, fig. 82* to the left to switch the climate control system off. The LED next to the word OFF comes on.

Setting fan speed

- Turn the knob ② ⇒ *page 72, fig. 82* to the setting you want to adjust fan speed (air quantity).

If the difference between the desired temperature set by you and the vehicle's interior temperature is too great, the fan speed will change automatically. This is done so that the desired temperature setting is reached as quickly as possible.

Tips

If the difference between the desired temperature you have set and the vehicle's interior temperature is too high, the fan speed will change automatically. This is done so that the desired temperature setting is reached as quickly as possible.

Air distribution

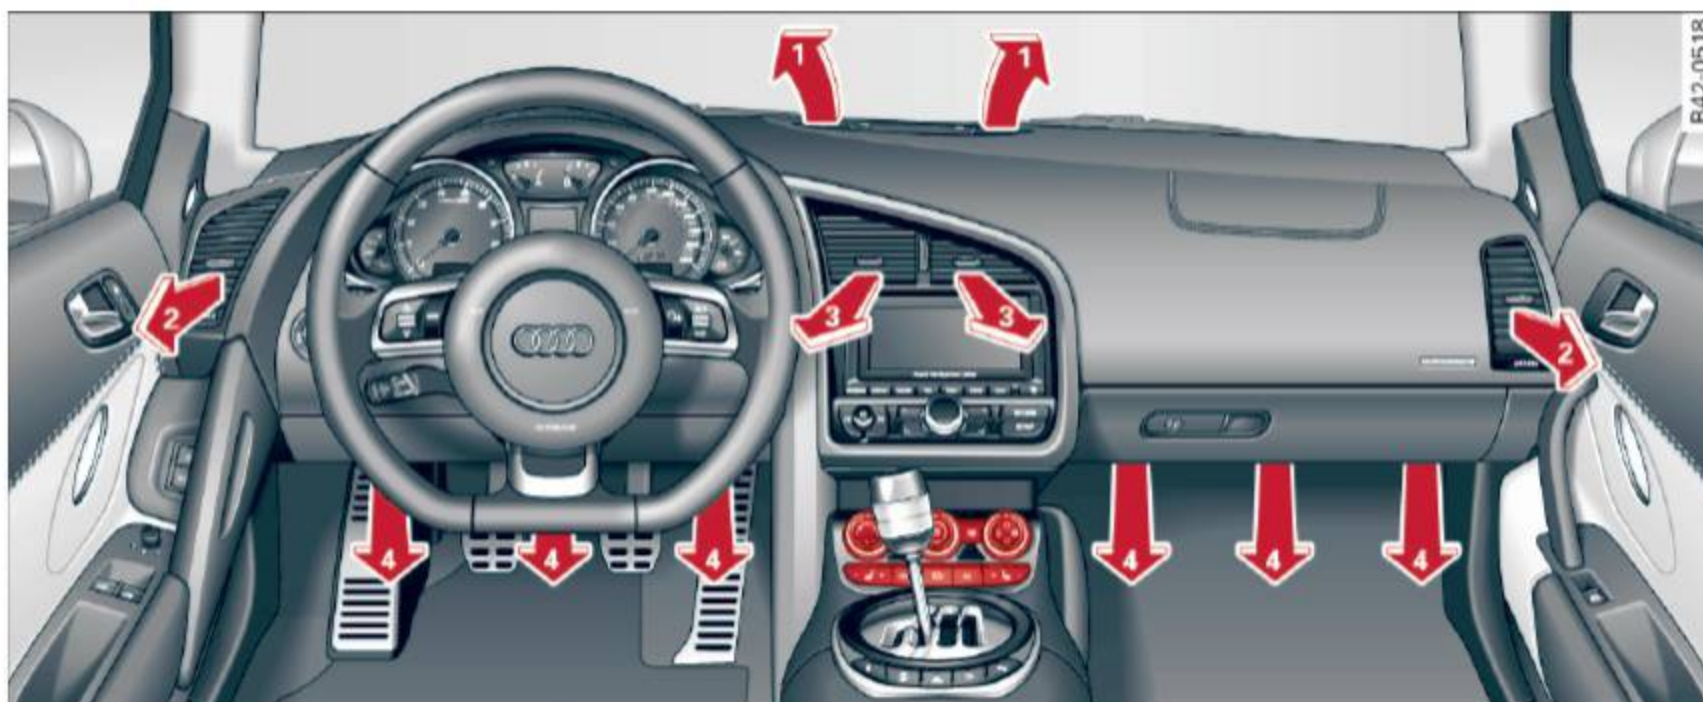


Fig. 83 Instrument panel: Location of air vents

- Turn the rotary knob ③ ⇒ *page 72, fig. 82* to the desired setting.
- To open and close the outlets, turn the adjusting ring.
- To adjust the direction of the airflow from the outlet, move the tab in the center of the outlet in the desired direction. The direction of the air delivered from the vents can be adjusted horizontally and vertically.

Air distribution:

- In setting , air flows only to the windows, vents ① and ② are open. To defrost the

driver and front passenger side windows most effectively, the vents ② should be directed toward the side windows.

- In setting , air flows only to the driver/passenger, vents ② and ③ are open.
- In setting , air flows only to the footwell, vents ④ are open.
- In setting , air flows only to the windows and the footwell, vents ①, ② and ④ are open.

There are additional combinations (through intermediate settings) available to adjust air distribution as needed.

Tips

If the climate controls are running in cooling mode, air should flow mainly from vents ② and ③. To achieve sufficient cooling, you should never close these vents completely.

Defrost

The windshield and side windows are defrosted or cleared of condensation as quickly as possible.

- ▶ To turn on the defogger/defroster, press the  button ⇒ *page 72, fig. 82.*
- ▶ To turn the defogger/defroster off, press the  button again, or the **AUTO** button.

Temperature is controlled automatically. The maximum amount of air flows mainly from vents 1 ⇒ *page 74.*

A small amount of air flows from vents 2 - if they are open ⇒ *page 74.*

Pressing the  button switches off recirculation mode.

Automatic operation **AUTO**

Standard operating mode at all times of the year.

Turning on automatic operation

- ▶ Set the temperature you want.
- ▶ Press the **AUTO** button ⇒ *page 72, fig. 82.*

Automatic operation ensures constant temperatures in the interior and dehumidifies the air inside the vehicle. Air temperature, volume, and distribution are controlled automatically to reach or maintain the desired interior temperature as quickly as possible. Fluctuations in exterior temperature and the effects of temperature from the position of the sun are compensated for automatically.

Manual air recirculation mode

The recirculation mode prevents polluted outside air from entering the vehicle interior.

Switching on air recirculation

- ▶ Press the button  ⇒ *page 72, fig. 82,*
⇒ .

Switching off air recirculation

- ▶ Press the button  again, or
- ▶ Press the **AUTO** button, or
- ▶ Press the  button.

In recirculation mode, air is drawn from the vehicle interior, filtered, and recirculated. We recommend that you select recirculation mode *briefly* ⇒  under the following conditions:

When driving through a tunnel or in a traffic jam so that exhaust fumes and odors cannot enter the vehicle interior.

WARNING

You should not use the recirculation mode for an extended period since no fresh air is drawn in, and with the air conditioning switched off the windows can fog up - this increases the risk of an accident!

A/C operation **AC**

Switching on A/C

- ▶ Press the **AC** button ⇒ *page 72, fig. 82.*

Switching A/C off

- ▶ Press the **AC** button again.

The cooling system is switched on during A/C operation - the heating and ventilation system is controlled automatically.

Tips

If the LED in the switch stays on after A/C operation has been switched off (= switching the A/C off), there is a fault in an air conditioning component. Please consult

an authorized Audi dealer when there is an operating problem.

Using the climate controls economically

Economical use of the climate controls helps to save fuel.

When climate control is working in cooling mode, engine performance is reduced and fuel consumption is affected. To keep the time the air conditioning is on as short as possible, you should do the following:

- ▶ If you would like to save fuel, switch the air conditioning off.
- ▶ If you open the windows while driving, switch the air conditioning off.
- ▶ If the vehicle is extremely hot due to the heat of the sun, briefly open doors and windows.



For the sake of the environment

When you save fuel, you reduce emissions from the vehicle.

Rear window defogger

The rear window defogger clears the rear window of condensation.

- ▶ Press the  button ⇒ page 72, fig. 82 to turn the rear window defogger on and off.

The rear window defogger works only when the engine is running. The indicator light in the button illuminates when the rear window defogger is turned on.

The rear window defogger is switched off automatically after approx. 10 minutes.



For the sake of the environment

As soon as the rear window is clear, you should switch the rear window defogger off. The reduced power consumption has a beneficial effect on fuel consumption.

Heated seats

The seat cushion and the seatback of the front seats can be heated electrically.

- ▶ Press the heated seats button  ⇒ page 72, fig. 82 to set the level of heating desired.

The range of controls goes from 1 to 3. The heat setting selected is shown by LEDs above the button.



Note

To avoid damage to the heating elements in the seats, do not kneel on the seats or place heavy loads on a small area of the seat.

On the road

Steering

Adjusting the steering wheel column

The steering wheel position can be continuously adjusted in height and distance.



Fig. 84 Lever under the steering column

- ▶ Push the lever ⇒ *fig. 84* down ⇒ ⚠.
- ▶ Move the steering wheel to the desired position.
- ▶ Push the lever against the steering column until it locks.

There must be at least 10 inches (25 cm) between your chest and the center of the steering wheel. If you cannot sit more than 10 inches (25 cm) from the steering wheel, see if adaptive equipment is available to help you reach the pedals and increase the distance from the steering wheel.

⚠ WARNING

Improper use of steering wheel adjustment and improper seating position can cause serious personal injury.

- Adjust the steering wheel column only when the vehicle is not moving to prevent loss of vehicle control.
- Adjust the driver's seat or steering wheel so that there is a minimum of 10 inches (25 cm) between your chest and the steering wheel ⇒ *page 100, fig. 106*. If you cannot maintain this minimum distance, the airbag system cannot protect you properly.
- If physical limitations prevent you from sitting 10 inches (25 cm) or more from

the steering wheel, check with your authorized Audi dealer to see if adaptive equipment is available.

- If the steering wheel is aligned with your face, the supplemental driver's airbag cannot provide as much protection in an accident. Always make sure that the steering wheel is aligned with your chest.
- Always hold the steering wheel with your hands at the 9 o'clock and 3 o'clock positions to reduce the risk of personal injury if the driver's airbag deploys.
- Never hold the steering wheel at the 12 o'clock position or with your hands inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms and head if the driver's airbag deploys.

Ignition lock and ignition switch

Ignition lock

The ignition key starts or stops the engine.

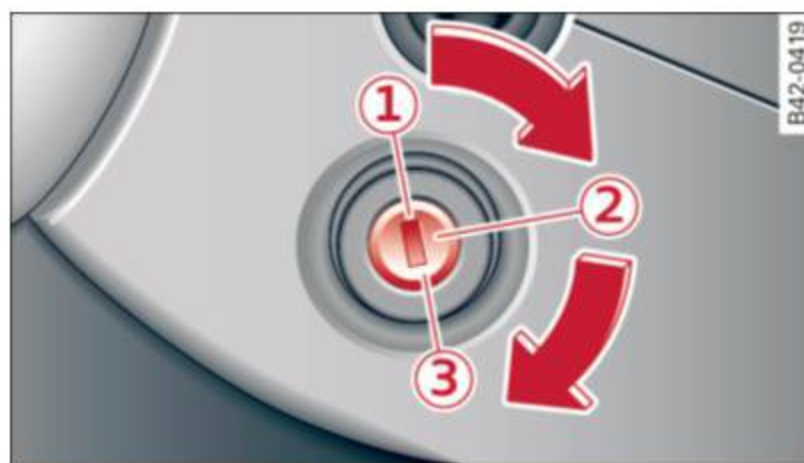


Fig. 85 Ignition lock positions

Ignition off ①

In position ⇒ *fig. 85* ① both the ignition and engine are off, and the steering is locked.

To **lock the steering** after you have removed the ignition key, turn the steering wheel in either direction until you hear it lock into place. You should always lock the steering whenever you leave your vehicle. This makes vehicle theft even more difficult ⇒ ⚠.

Ignition on ②

After switching the ignition on, the needles move all the way up and then down.

If it is difficult to turn the key after you have inserted it into the ignition lock, turn the steering wheel back and forth. This will take the load off the steering lock mechanism and you will be able to turn the key freely and start the engine.

Starting the engine ③

In this position the engine starts. While the engine is starting, the power supply to the headlights and other electrical consumers is temporarily interrupted to conserve battery power. After the engine has started, release the key and it will return to position ②.

Before the starter can be operated again the key must be turned back to position ①. The **non-repeat lock** prevents you from damaging the starter when the engine is running.



WARNING

- Never remove the key from the ignition lock while the vehicle is moving. The steering wheel will lock causing loss of control.
- If you have to leave your vehicle - even for just a minute - always remove the ignition key and take it with you. This is especially important if you are going to leave children behind in the vehicle. The children could start the engine or use other vehicle controls. Unsupervised use of vehicle controls (for example, power windows) can cause serious personal injuries.



Tips

If the vehicle battery has been disconnected and then reconnected, then you must leave the key in position ② for about 5 seconds before you can start the engine.

Starting the engine

The engine can only be started with your original Audi key.

On vehicles with R tronic*, the engine can be started in the neutral position N and in each gear (1 - 6 and R).

- ▶ Set the parking brake ⇒ .
- ▶ On vehicles with manual transmission*, fully depress the clutch pedal.
- ▶ Press and hold the brake pedal.
- ▶ Turn the ignition key to position ③
⇒ page 77, fig. 85 - do not depress the gas pedal when starting the engine.
- ▶ Let go of the key as soon as the engine starts - the starter must not continue to run. On vehicles with R tronic, select gear position N.

A cold engine may at first be loud after it has been started. This is due to the hydraulic valves building up the oil pressure. This is normal and no need for concern.

If the engine does not start immediately, stop trying after 10 seconds and then try to restart the engine about 30 seconds later.



WARNING

- Never start or let the engine run in a confined or enclosed area. Exhaust fumes from the engine contain carbon monoxide, a colorless and odorless gas. Carbon monoxide can be fatal if inhaled.
- Never leave the engine idling unattended. An unattended vehicle with a running engine poses a danger of personal injury or theft.
- With the engine running and a gear engaged, you have to hold the vehicle with the foot brake.



Note

- Avoid high engine speeds, fast acceleration or heavy engine loads while the engine is still cold. This could damage the engine.

- The engine cannot be started by pushing or towing the vehicle.



For the sake of the environment

To avoid unnecessary engine wear and to reduce exhaust emissions, do not let your vehicle stand and warm up. Be ready to drive off immediately after starting your vehicle.

Stopping the engine

On vehicles with R tronic*, the engine can be turned off in the neutral position N and in each gear (1 - 6 and R).

- Turn the ignition key to position ①
⇒ page 77, fig. 85.



WARNING

- Never turn off the engine until the vehicle has come to a complete stop.
- The brake booster and servotronic only work when the engine is running. With the ignition turned off, you have to apply more force when steering or braking. Since you cannot steer and stop normally, this can lead to accidents and serious injuries.



Note

- If the engine has been under heavy load for an extended period of time, heat builds up in the engine compartment after the engine is switched off - there is a risk of damaging the engine. Allow the engine to continue to run at idle for a short time or drive until it has cooled down before you turn it off ⇒ page 159.
- If the engine has been under heavy load for an extended period of time, it can become extremely hot. You should not park your vehicle over easily combustible objects or areas (e.g. grass or leaves). There is a risk of starting a fire.



Tips

After the engine has been switched off, the radiator fan can continue to run for up to 10 minutes - even with the ignition switched off. It can also switch on again after some time if the coolant temperature rises as the result of heat buildup or if the engine compartment is heated by the sun's rays and the engine is hot.

Parking brake

Parking brake

When the parking brake is set, it prevents the vehicle from rolling away unintentionally.

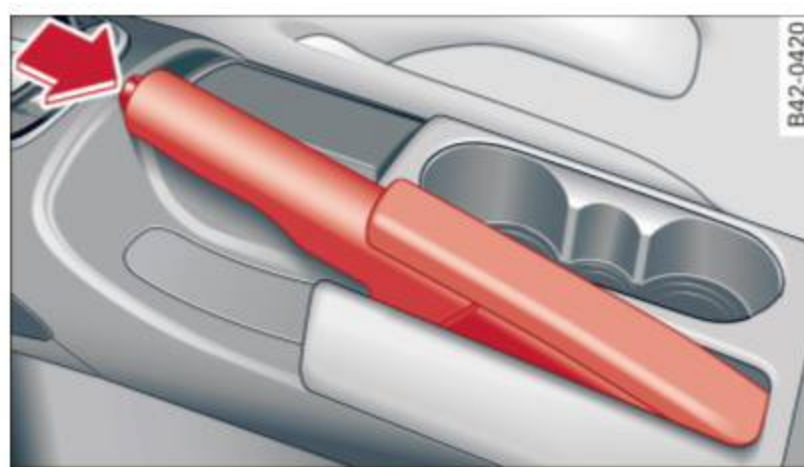


Fig. 86 Center console: Parking brake set

Setting the parking brake

- Pull the parking brake lever all the way up.

Releasing the parking brake

- Pull the parking brake lever up slightly and press the release button at the same time ⇒ fig. 86 - arrow -.
- Keep the release button pressed and lower the parking brake ⇒ ⚠.

If you should drive off with the parking brake still set, a warning tone will sound and the following message will appear in the instrument cluster to remind you to release the parking brake:

Parking brake is applied

The parking brake warning comes on only after you have driven for longer than 3 seconds and faster than 3 mph (5 km/h).

The parking brake warning light **BRAKE** (USA)/ (CDN) illuminates when the parking brake is set and you switch on the ignition.

WARNING

Always release the parking brake completely. A partially engaged brake will overheat the rear brakes, reduce their effectiveness and cause excessive wear. This could lead to brake failure and an accident.

Note

Only after the vehicle has come to complete stop, should you firmly set the parking brake and move the gearshift lever into a gear.

Parking

To prevent a parked vehicle from rolling away, there are a few things you should do.

- ▶ Stop the vehicle using the brake pedal.
- ▶ Set the parking brake firmly.
- ▶ Switch off the engine.
- ▶ Engage a gear ⇒ .

What else you should do when parking your vehicle on an incline or decline

Turn the steering wheel so that if the vehicle should start to roll, it will roll into the curb.

WARNING

- This is how you can reduce the risk of injury when leaving your vehicle.
- Never park the vehicle where it can come in contact with dry grass, spilled fuel or any other flammable materials.
 - Never allow anyone - especially small children - to remain in the vehicle when it is locked. Locked doors make it more difficult for rescuers to access the passenger compartment in the event of an emergency. Danger to life!
 - Never leave children unsupervised in the vehicle. Children could release the parking brake or move the gearshift lever out

of gear. The vehicle could start to roll away and cause an accident.

- No matter what the season is, the temperature in a parked vehicle can reach dangerous levels.

Starting on hills

Applies to vehicles: with hill hold assist

Hill hold assist makes it easier to start on hills.

The system is activated when the brake pedal is depressed **for a few seconds**.

After releasing the brake pedal, the brake power is held for a *brief moment* to prevent the vehicle from rolling back when starting. During this time, you can easily begin to move your vehicle.

WARNING

- If you did not begin moving immediately after releasing the brake pedal, the vehicle could begin to roll backward under certain circumstances. Depress the brake pedal immediately or engage the parking brake.
- If the engine stalls, depress the brake pedal immediately or engage the parking brake.
- To prevent the vehicle from rolling back unintentionally when starting in stop-and-go traffic, keep the brake pedal depressed for a few seconds before driving off.

Tips

You can find out if your vehicle is equipped with “hill hold assist” at an authorized Audi dealer.

Cruise control

Introduction

The cruise control system keeps the speed constant.

The cruise control system makes it possible to drive at a constant speed over 20 mph (US model) or 30 km/h (Canadian model). This is true only to the extent that engine power or engine braking effect allow. Using the system takes the strain off the “gas pedal foot” – especially on long trips.

In the control mode, the indicator light in the instrument cluster is lit (**CRUISE** (US model)/ (Canadian model)).

The cruise control system automatically **switches itself off immediately** under the following conditions:

- Pressing the brake pedal.
- Pressing the clutch pedal.

WARNING

- Always pay attention to traffic even when the cruise control system is switched on. You are always responsible for your speed and the distance between your vehicle and other vehicles.
- For safety reasons, the cruise control system should not be used in the city, in stop-and-go traffic, on twisting roads and when road conditions are poor (such as ice, fog, gravel, heavy rain and hydroplaning) - risk of accident.
- Turn off the cruise control system temporarily when entering turn lanes, highway exit lanes or in construction zones.
- Please note that inadvertently “resting” your foot on the accelerator pedal causes the cruise control system not to brake. This is because the cruise control system is overridden by the driver's acceleration.

Note

On manual transmission vehicles: If you shift into neutral with the cruise control

system switched on, always depress the clutch pedal! Otherwise the engine will race and could be damaged as a result.

Tips

When driving on steep downward grades, the cruise control system cannot keep the speed constant. The vehicle's own weight increases the speed. Shift into a lower gear in plenty of time or brake the vehicle with the foot brake.

Saving the speed

The desired speed must be saved.

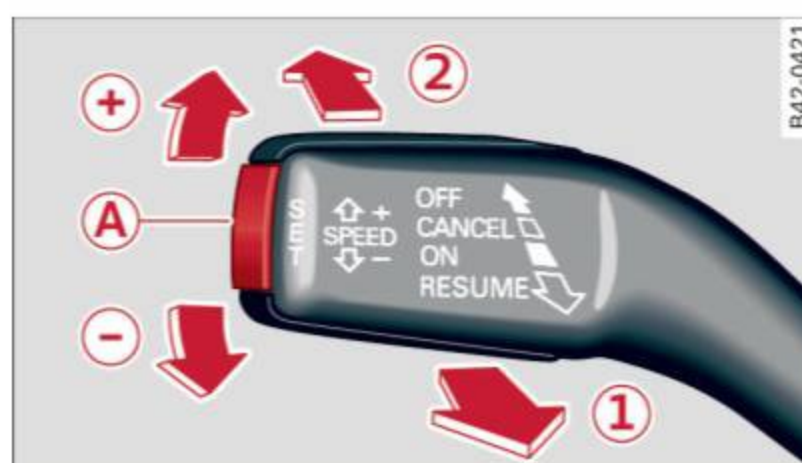


Fig. 87 Cruise control system controls

- Drive at the speed you wish to set.
- Pull the lever to position ① ⇒ fig. 87 to switch the system on.
- Briefly press button ①.

After the button ① is released, the current vehicle speed is stored and maintained, i. e. you are driving in control mode.

Changing speed

The desired speed can be changed.

Faster

- Press lever up towards the  ⇒ page 81, fig. 87.
- Release the lever to store the current speed.

Slower

- Press lever down towards the  ⇒ page 81, fig. 87.
- Release the lever to store the current speed. ►

You can also increase your speed by pressing the accelerator pedal. After you release the accelerator pedal, the system automatically adjusts back down to the speed you previously set.

However, if you exceed this speed by 5 mph (10 km/h) for longer than 5 minutes, the stored speed will be deleted. You will have to re-save it.

Briefly pressing lever

The desired speed is increased by about 2 mph (2 km/h) by briefly pressing the lever upwards towards $\Rightarrow$ page 81, fig. 87 $\oplus$.

The desired speed is decreased by about 2 mph (2 km/h) by briefly pressing the lever downwards towards $\Rightarrow$ page 81, fig. 87 $\ominus$.

Switching control mode off temporarily

- Step on the brake pedal, or
- Depress the clutch pedal all the way, or
- Press the lever towards $\textcircled{2}$ (not latched)
 $\Rightarrow$ page 81, fig. 87.

When the system is turned off temporarily, the speed stored at the time is retained.

To resume the stored speed, release the brake or clutch pedal and pull the lever to position $\textcircled{1}$.

If no desired speed was stored when the system was temporarily switched off, you can store a new desired speed as follows: Drive at the desired speed and briefly press button $\Rightarrow$ page 81, fig. 87 $\textcircled{A}$ (SET).

WARNING

You should only return to the saved speed if it is not too fast for the current traffic conditions - risk of an accident!

Deactivating

- Press lever into position $\textcircled{2}$ (latched)
 $\Rightarrow$ page 81, fig. 87.

The saved speed value is deleted when the ignition is switched off.

Tips

Switch the cruise control system off completely at the end of each trip. When you start the next trip, the desired speed can be set simply from the basic setting
 $\Rightarrow$ page 81.

Audi magnetic ride

Damping can be adjusted to the driver's preference and it adapts automatically to the current driving situation.



Fig. 88 Center console: Switch for Audi magnetic ride

- Press the switch $\Rightarrow$ fig. 88 to turn sport setting on or off.

Audi magnetic ride is an electronically controlled damping system. This chassis system assists the driver by adapting to the particular situation through imperceptible control processes. The **damping** provides individual modulation of damping forces. For example, with damping characteristics set to provide greater comfort, damping is set somewhat harder for a brief period only as required, when rounding a curve and when braking.

Standard setting

Select the standard setting if you prefer a suspension setting emphasizing comfort.

Sport setting

Select the sport setting if you prefer a sporty suspension setting. The LED in the switch $\textcircled{P}$ comes on to indicate sport setting.

**Tips**

The warning/indicator light  in the instrument cluster comes on in the event of a malfunction. Drive to the closest authorized Audi dealer as soon as possible and have the malfunction repaired.

Controls and equipment
Safety first
Vehicle operation
Vehicle care
Do-it-yourself service
Technical data

Manual transmission

Launch Control Program

Applies to vehicles: with V10 engine and manual transmission

The Launch Control Program enables maximum acceleration.

Requirement: The engine must be at operating temperature and the steering wheel must not be turned.

- ▶ With the engine running, press the  button one time. The ESP indicator light  in the Driver Information System display illuminates and the message **ESP sport - Warning! Restricted stability** appears.
- ▶ Press the clutch and hold it down.
- ▶ Engage the first gear.
- ▶ Press the accelerator pedal all the way down until the engine speed remains steady at 6500 RPM.
- ▶ Release the clutch carefully ⇒ .



WARNING

- Always adapt your driving to the traffic flow.
- Only use Launch Control when road and traffic conditions allow it and other drivers will not be endangered or annoyed by your driving and the vehicle's acceleration.
- Please note that the driving wheels can spin and the vehicle can break away when ESP is switched off, especially when the road is slippery.
- Once you have accelerated, you should switch the ESP back on by pressing the  button.



Tips

- When accelerating using the Launch Control program, all vehicle parts are subject to heavy loads. This can result in increased wear.
- The Launch Control Program only functions when the parking brake is released

and the vehicle speed is less than 3 mph (5 km/h).

Automated manual transmission

Description

Applies to vehicles: with R tronic

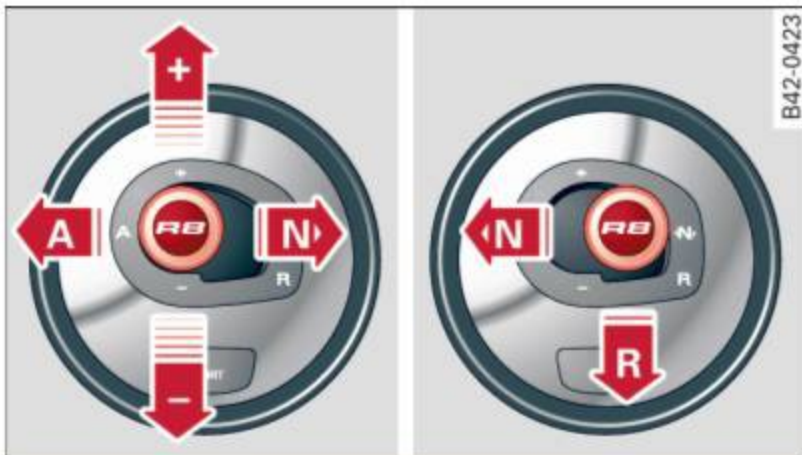


Fig. 89 Shift pattern



Fig. 90 Display: Gears engaged

R tronic is an automated manual transmission in which the function of the clutch and shifting is controlled by an electronic system.

The gears are engaged manually, similarly to a manual transmission. The gears can also be shifted automatically. The engine can be started and switched off in all gears.

The selected mode of operation, the gear engaged and the sport function are shown in the Driver Information System display ⇒ fig. 90.

M - Manual operation

In this operating mode, you shift the forward gears using the selector lever ⇒ page 86 or the shift paddles on the multifunction steering wheel ⇒ page 87.

A - Automatic operation

In this operating mode, the forward gears are shifted up or down depending on engine load and vehicle speed ⇒ page 87.

R - Reverse gear

Reverse gear must only be engaged when the vehicle is *stationary* and the engine is running at idle speed ⇒ ⚠.

To engage reverse gear, you have to press the brake pedal, move the selector lever to the right and tip it towards R. In reverse gear, the backup lights illuminate when the ignition is on.

N - Neutral

To engage neutral, you have to move the selector lever to the left or to the right. If reverse gear is engaged, move the selector lever to the left. If a forward gear is engaged, move the selector lever to the right.

Sport function

The sport function is switched on by pressing the **SPORT** button. The engine's power reserves can be used fully by upshifts later. Shift time is decreased and accelerator pedal response is improved. In addition, in manual operation the engine does **not** shift automatically into the next gear before it has reached the maximum permissible engine speed. In automatic operation, upshifting continues automatically.

⚠ WARNING

- If a gear is engaged when the vehicle is stationary, the accelerator must not be pressed inadvertently under any circumstances. Otherwise the vehicle will immediately start to move - sometimes even if the parking brake is firmly applied.
- Before you or other persons open the engine compartment lid and work on a running engine, select neutral position N and firmly apply the handbrake. Follow the warning notes.

i Tips

If you accidentally shifted into N while driving, you can engage a gear in the normal way using the selector lever.

Manual operation

Applies to vehicles: with R tronic

R tronic allows the driver to shift gears manually.

Starting from a stop

- ▶ Press and hold the brake pedal.
- ▶ Move the selector lever to the left.
- ▶ Tap the selector lever forward .
- ▶ Release the brake pedal and accelerate
⇒ .

Shifting

- ▶ To shift up, tap the selector lever forward .
- ▶ To shift down, tap the selector lever to the rear .

Stopping temporarily

- ▶ Prevent the vehicle from moving by using the foot brake, e.g. at traffic signals.
- ▶ Do not accelerate. If you do not press either the brake pedal or the accelerator pedal for some time when stationary, neutral position N is engaged automatically and a chime sounds.

Parking

- ▶ Press and hold the brake pedal ⇒ .
- ▶ Apply the hand brake firmly.
- ▶ Engage a gear.
- ▶ Switch the ignition off.

Stopping on an incline

- ▶ *Always* keep the vehicle stationary using the foot brake to prevent it from “rolling back”
⇒ . Do **not** try to prevent the vehicle from “rolling back” when a gear is engaged by increasing engine speed.
- ▶ Apply the hand brake firmly.

Starting on a hill

- ▶ With a gear engaged, remove your foot from the brake, accelerate and slowly release the hand brake.

When accelerating, R tronic shifts into the next gear in gears 1, 2, 3, 4 and 5 shortly be-

fore the maximum permissible engine speed is reached. Exception: You have activated the sport function ⇒ *page 85*.

If you have selected a lower gear than the current one, R tronic will shift down only when the engine will not be over-revved.

You can switch to automatic operation at any time ⇒ *page 87*.



WARNING

- Never leave your vehicle with the engine running while in gear. If you must leave your vehicle with the engine running, set the parking brake firmly and engage neutral N.
- With the engine running and a gear engaged, you have to hold the vehicle with the foot brake.
- Do not accelerate when you shift gears with the vehicle stationary and the engine running.
- Before driving down a steep slope, reduce your speed and shift into a lower gear with R tronic.
- Do not ride the brakes or apply the brake pedal too often or too long. Constant braking causes the brakes to overheat and substantially reduces braking performance, increases braking distance or causes complete failure of the brake system.



Note

If you must stop on an incline, always hold the vehicle in place with the foot brake to prevent it from rolling back. Never hold the vehicle on an incline with a slipping clutch. The clutch was overloaded if **Clutch overheating! If possible please stop vehicle** appears in the Driver Information System display.

Automatic operation

Applies to vehicles: with R tronic

The forward gears are shifted up or down automatically.

Starting from a stop

- ▶ Press and hold the brake pedal.
- ▶ Tap the selector lever towards A.
- ▶ Release the brake pedal and accelerate ⇒ ⚠ in *Manual operation* on page 86.

Under certain circumstances (driving in the mountains for example), it can be beneficial to switch temporarily to the manual shift program ⇒ *page 86* in order to adjust the gear ratios to driving conditions *manually*.

Kick-down

Applies to vehicles: with R tronic

When you depress the accelerator pedal beyond the resistance point, R tronic downshifts into a lower gear, depending on vehicle speed and engine rpm. The upshift into the next higher gear takes place once the maximum specified engine speed is reached. Exception: You have activated the sport function.

⚠ WARNING

Please note that the drive wheels can spin if kick-down is used on a smooth slippery road - there is a risk of skidding.

Launch Control Program

Applies to vehicles: with R tronic

The Launch Control Program enables maximum acceleration.

Requirement: The engine must be at operating temperature and the steering wheel must not be turned.

- ▶ With the engine running, press the  button one time. The ESP indicator light  in the Driver Information System display illuminates and the message **ESP sport - Warning! Restricted stability** appears.

- ▶ Press the brake pedal with your left foot and hold it down.
- ▶ Engage a gear.
- ▶ Press the **SPORT** button on the selector lever cover.
- ▶ Press the accelerator pedal with your right foot simultaneously until the engine has reached a constant speed.
- ▶ Remove your left foot from the brake ⇒ ⚠.



WARNING

- Always adapt your driving to the traffic flow.
- Only use Launch Control when road and traffic conditions allow it and other drivers will not be endangered or annoyed by your driving and the vehicle's acceleration.
- Please note that the driving wheels can spin and the vehicle can break away when ESP is switched off, especially when the road is slippery.
- Once the starting procedure is complete, you should switch ESP on again by pressing the  switch.



Tips

When accelerating using the Launch Control program, all vehicle parts are subject to heavy loads. This can result in increased wear.

Steering wheel with shift paddles

Applies to vehicles: with R tronic

The shift paddles allow you to select gears manually at the steering wheel.



Fig. 91 Sport steering wheel: Shift paddles

- ▶ To shift down, press the paddle on the left .
- ▶ To shift up, press the paddle on the right .

Of course, you can continue to use the manual shift program with the selector lever in the center console.

Parking system

Parking system advanced

Introduction

Applies to vehicles: with parking system advanced

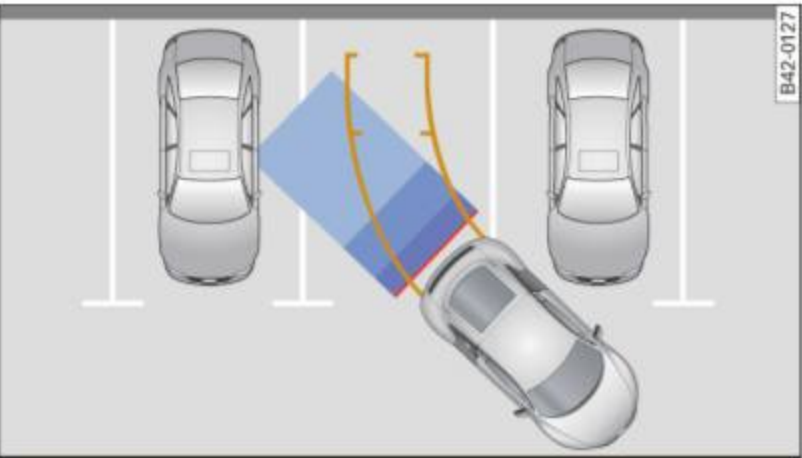


Fig. 92 Parking mode 1: Reverse parking

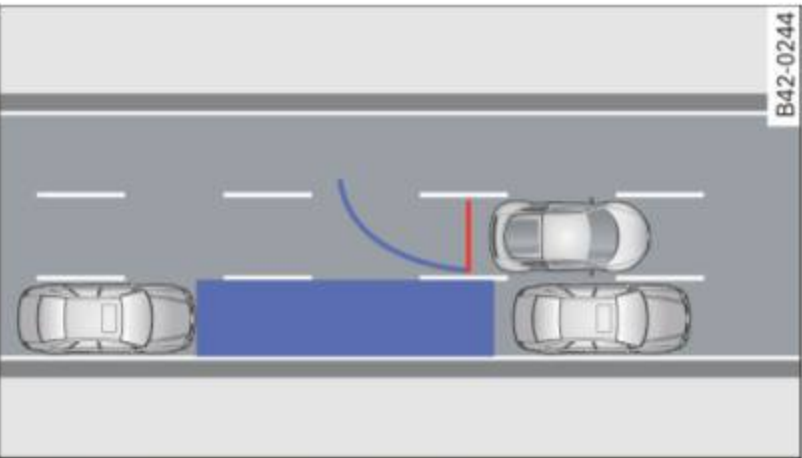


Fig. 93 Parking mode 2: Parallel parking

Vehicles with the parking system are equipped with a **rear view camera** in addition to the acoustic and visual parking system.

You can choose between two modes to help you when parking your vehicle. Use “parking mode 1” when parking in a parking space or garage ⇒ *fig. 92*. If you are going to be parallel parking, use “parking mode 2” ⇒ *fig. 93*.

General Information

Applies to vehicles: with parking system advanced

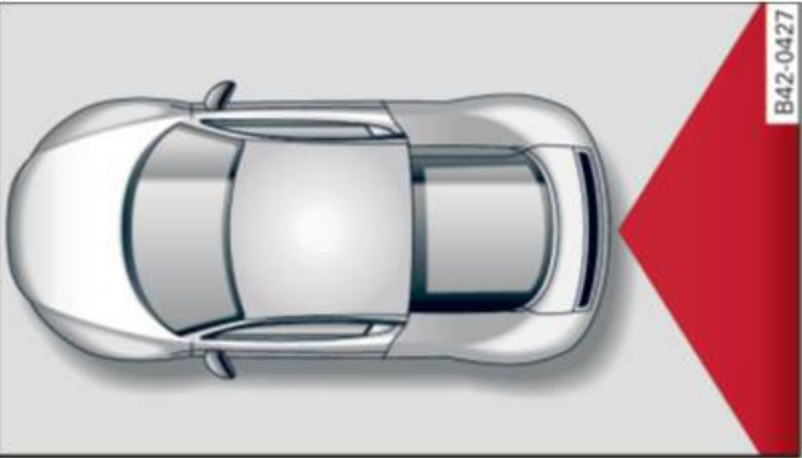


Fig. 94 View from top: Rearview camera coverage area

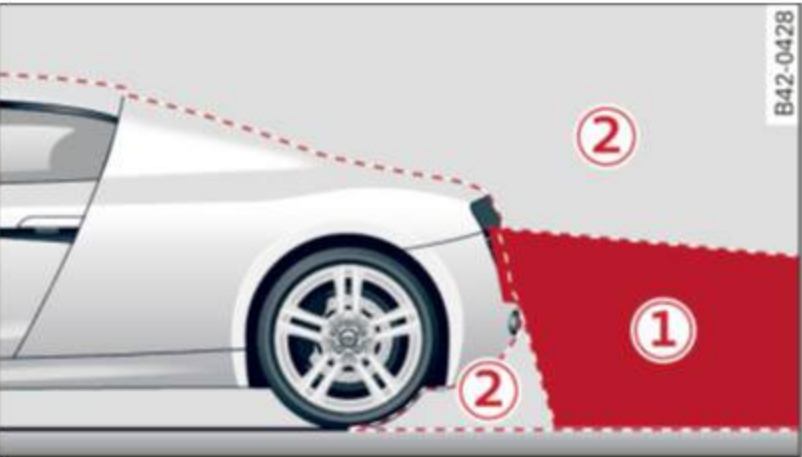


Fig. 95 Side view: Rearview camera coverage area

Sensors in the bumper

Sensors are located in the front and rear bumpers. If these detect an obstacle, audible and visual signals warn you. The range at which the sensors begin to measure is approximately:

front	side	3 ft (0.90 m)
	center	4 ft (1.20 m)
rear	side	2 ft (0.60 m)
	center	5.2 ft (1.60 m)

The closer you get to the obstacle, the shorter the interval between the audible signals. A continuous tone sounds when the obstacle is less than approximately 1 foot (0.30 meters) away. Do not continue driving farther.

If the distance to an obstacle remains constant, the volume of the distance warning gradually drops after about four seconds (this does not apply in the continuous tone range). ▶

Rear view camera coverage area

The rearview camera shows you the area behind your vehicle in the navigation system display. This area roughly corresponds to the area in ⇒ *fig. 94* and ① ⇒ *fig. 95*. Orientation lines and colored surfaces are projected in the area shown, which can help you with parking and maneuvering. Objects that are located in an area that is not captured by the camera ② ⇒ *fig. 95* and that are closer to the bumper will not appear on the navigation system display.

We recommend that you practice parking with the rearview camera in a traffic-free location or parking lot to become familiar with the system, the orientation lines, and their function. There should be sufficient light and good weather conditions when doing so.

In the navigation system display, objects or vehicles appear closer or further away if:

Objects or vehicles appear closer or farther away in the navigation system if:

- you are driving in reverse gear from a level surface onto an incline, or a downward slope,
- you are driving in reverse gear toward protruding objects.

The accuracy of the orientation lines and blue surfaces diminishes if:

- the rearview camera does not provide a reliable image, for example, in poor visibility conditions or if the lens is dirty,
- the image on the screen is not visible due to sun glare and reflection.

Caring for the rearview camera lens

The rearview camera is located in the center of the vehicle above the rear license plate bracket. In order for the rearview camera to function properly, the camera lens must be kept clean and free of snow and ice.

- Dampen the lens with a household alcohol-based glass cleaner, and clean the lens with a dry cloth.

- Remove snow with a hand brush and ice preferably with a de-icing spray ⇒ !.



WARNING

- The parking system cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.
- Sensors have blind spots in which objects cannot be detected. Pay special attention to small children and animals because the sensors cannot always detect them.
- Always keep your eyes on the vehicle's surroundings, using the rearview mirror as well.
- Do not allow yourself to be distracted from traffic by the rearview camera pictures in the navigation system display.
- If the position and the installation angle of the camera has changed, for example, after a rear end collision, do not continue to use the system for safety reasons. Have it checked by an authorized Audi dealer or other qualified workshop.



Note

- Low obstacles already signaled by a warning can disappear from the system's detection range as they are approached and will not continue to be signaled. Objects such as barrier chains, trailer draw bars, narrow painted vertical poles or fences may not be detected by the system, posing risk of damage.
- Never use warm or hot water to remove snow or ice from the rearview camera lens because the lens could crack.
- Never use products that are abrasive when cleaning the lens.

Switching on and off

Applies to vehicles: with parking system advanced



Fig. 96 Section of the center console: Park assist switch



Fig. 97 Navigation system display: visual distance display

Switching on

- ▶ Switch the navigation system and the navigation system display on.
- ▶ Engage the reverse gear, or
- ▶ Press the **P** switch in the center console ⇒ fig. 96. A short confirmation tone sounds and the indicator light in the switch lights up.

Switching between the rear view camera and visual display

- ▶ Press the **Graphic** control button ⇒ page 92, fig. 98 to see the visual display.
- ▶ Press the **Rear view** control button to see the rear view camera image ⇒ fig. 97.

Switching off

- ▶ Drive faster than 6 mph (10 km/h), or
- ▶ Press the **P** switch, or
- ▶ Switch off the ignition.

Segments in the visual display

The red segments in front of and behind the vehicle ⇒ fig. 97 help you to determine the distance between you and an obstacle. As your vehicle comes closer to the obstacle, the segments move closer to the vehicle. The collision area has been reached when the next to last segment is displayed. Do not continue driving farther ⇒ ⚠ in *General Information* on page 90!



WARNING

- The navigation system display cannot show, or cannot adequately show, certain objects (such as small posts or grating), recesses in the ground and protruding parts on another car.
- Only use the rearview camera to assist you if it shows a good, clear picture. For example, the image may be affected by the sun shining into the lens, dirt on the lens or if there is a defect.



Tips

- The sensors must be kept clean and free of snow and ice for the park assist to operate.
- You can change the volume and pitch of the signals ⇒ page 93.
- What appears in the display is time-delayed.

Reverse parking

Applies to vehicles: with parking system advanced

Parking mode 1 can be used when parking in a garage or into a parking space.

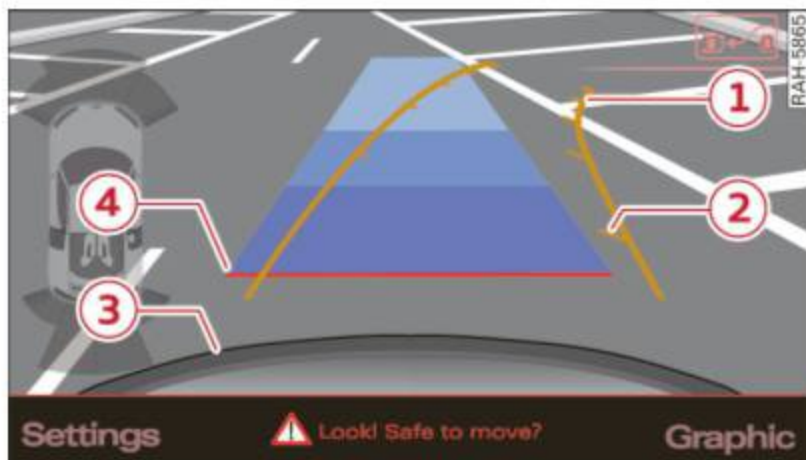


Fig. 98 Navigation system display: Aiming at a parking spot

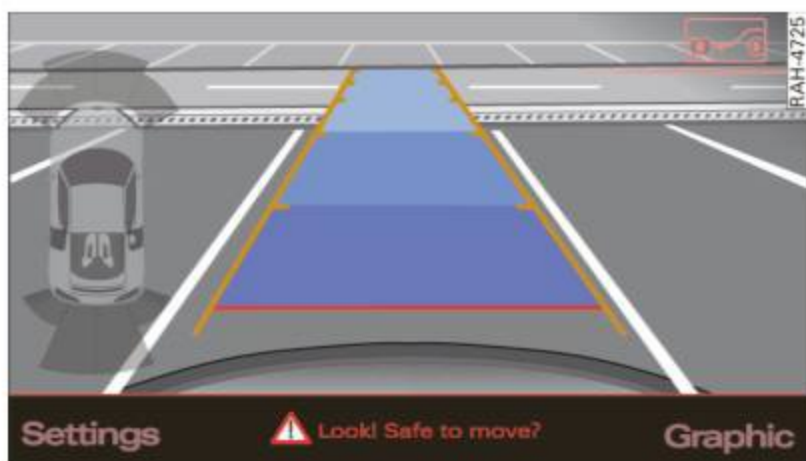


Fig. 99 Navigation system display: Aligning the vehicle

- ▶ Switch the navigation system and the display of the navigation system on.
- ▶ Select the reverse gear.
- ▶ Turn the steering wheel until the orange orientation lines ① appear in the parking spot ⇒ *fig. 98*. Use the markings ② to help you estimate the distance from an obstacle. Each marking represents 3 ft. (1 m). The blue area represents an extension of the vehicle's outline by approximately 16 ft. (5 m) to the rear.
- ▶ While driving in reverse gear, adjust the steering wheel angle to fit the parking spot with the aid of the orange orientation lines ⇒ *!* ③ marks the rear bumper. Stop the vehicle once the red orientation line ④ touches an object ⇒ *!*.

! WARNING

- The rearview camera does not show the entire area behind the vehicle ⇒ *page 89, fig. 95*. Watch out especially for small

children and animals. The rear view camera cannot always detect them, posing risk of an accident!

- Please note that objects not touching the ground can appear to be farther away than they really are (for example, the bumper of a vehicle or the rear of a truck). In this case, you should not use the orientation lines to help with parking, which poses danger of an accident!

! Note

In the navigation system display, the direction of travel of the vehicle rear is represented depending on the steering wheel angle. The vehicle front swings out more than the vehicle rear. Maintain plenty of distance so that your outside mirror or a corner of your vehicle does not collide with any obstacles. This can damage to your vehicle.

Parallel parking

Applies to vehicles: with parking system advanced

Use parking mode 2 to help you parallel park along the side of a street.

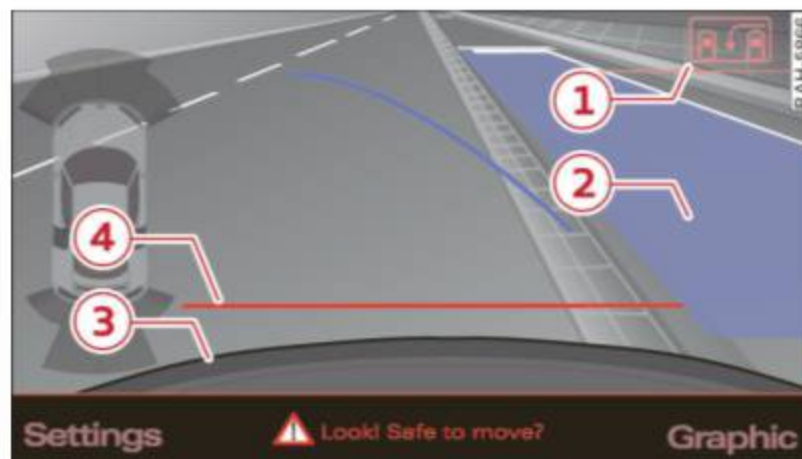


Fig. 100 Navigation system display: Blue surface aligned with parking spot

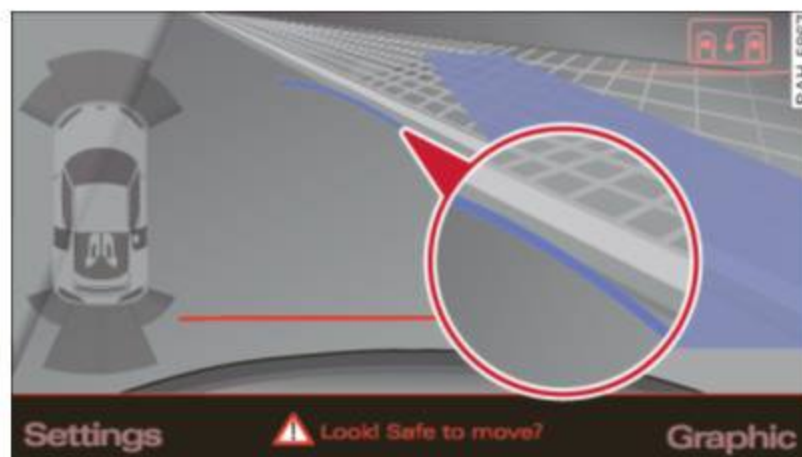


Fig. 101 Navigation system display: The blue curved line contacting the curb

The following steps apply only when there is no obstacle such as a wall near the parking spot. Otherwise, please read the information provided in the “Parking Next to Obstacles” section.

- ▶ Activate the turn signal.
- ▶ Position your vehicle parallel to the edge of the street, approximately 3 ft. (1 m) from a parked vehicle.
- ▶ Switch the navigation system and the navigation system display on.
- ▶ Select reverse gear. The parking aid turns on and parking mode 1 appears on the display.
- ▶ Press the control button **1** on the navigation system ⇒ *fig. 100*. Parking mode 2 appears.
- ▶ Back up and align your vehicle so the blue area **2** borders on the rear end of the vehicle or on the parking spot line. The blue area represents an extension of the vehicle's outline by approximately 16 ft (5 meters) to the rear. The long side of the blue area should be on the curb. The entire blue area must fit into the parking spot.
- ▶ With the vehicle stopped, turn the steering wheel to the right as far as it will go.
- ▶ Back into the parking spot until the blue curve touches the curb ⇒ *fig. 101*. Stop the vehicle.
- ▶ With the vehicle stopped, turn the steering wheel to the left as far as it will go.
- ▶ Continue to back into the parking spot until the vehicle is parked parallel to the curb. **3** marks the rear bumper. Stop the vehicle when the red orientation line **4** borders an object ⇒ . Keep an eye on the front of your vehicle while doing this ⇒ .

Parking next to obstacles

When there is an obstacle (such as a wall) next to the parking spot, choose a spot with more space on the sides. Position the long side of the blue area so that there is sufficient space from the curb. The area must not be on the curb. You will also need to start turning the steering wheel much earlier. There should be a sufficient amount of space between the curb and the blue curve, and the blue curve ⇒ *fig. 101* must **not** touch the curb.



WARNING

- The rearview camera does not show the entire area behind the vehicle ⇒ *page 89, fig. 95*. Watch out especially for small children and animals. The rear view camera cannot always detect them, posing risk of an accident!
- Please note that objects not touching the ground can appear to be farther away than they really are (for example, the bumper of a vehicle or the rear of a truck). In this case, you should not use the orientation lines to help with parking, which poses danger of an accident!



Note

In the navigation system display, the direction of travel of the vehicle rear is represented depending on the steering wheel angle. The vehicle front swings out more than the vehicle rear. Maintain plenty of distance so that your outside mirror or a corner of your vehicle does not collide with any obstacles. This can damage to your vehicle.



Tips

The left or right orientation lines and surfaces will be displayed, depending on the turn signal being used.

Adjusting the warning tones

Applies to vehicles: with parking system advanced

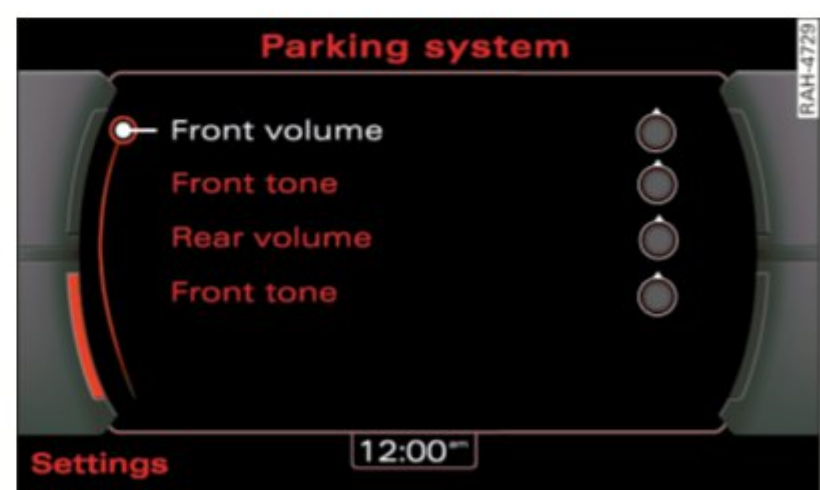


Fig. 102 Navigation system display: adjusting the parking system

Requirement: The parking system must be switched on.

- ▶ Press the Settings control button.
- **Front volume** - front sensor volume
- **Front frequency** - front sensor frequency
- **Rear volume** - rear sensor volume
- **Rear frequency** - rear sensor frequency
- **In-car entertainment fader** - when the parking system is switched on, the volume of the active audio source is lowered.

The newly adjusted value is briefly heard from the signal generator.

**Tips**

Changed settings are activated when parking system is switched on again.

Error messages

Applies to vehicles: with parking system advanced

There is an error in the system if the LED on the  switch is blinking and you hear a continuous alarm for a few seconds after switching on the parking system or when the parking system is already activated. Have your authorized Audi dealer correct the error.

**Tips**

If an error has occurred before the ignition is turned off, the LED in the  switch will blink the next time the ignition is switched on, reverse gear selected, and the acoustic parking system is activated.

HomeLink®

Universal remote control

General information

Applies to vehicles: with HomeLink® universal remote control

The HomeLink® feature can learn up to three radio frequency codes for most current transmitters used for operating garage doors, estate gates, home or outdoor lighting systems, and other devices.

You must first program the HomeLink® transmitter before you can use the system

⇒ *page 96, Programming the HomeLink® transmitter.*

In order to program the HomeLink® transmitter for devices utilizing rolling code, a second person on a ladder who can safely reach the garage door opener motor is recommended. It is also necessary to locate the “learn” button on your garage door opener motor. Refer to the operating instructions for the opener, as the location and color of this button may vary by manufacturer.

You can still use the original remote control for the device at any time.



WARNING

- Never use the HomeLink® transmitter with any garage door opener that does not have the safety stop and reverse feature as required by federal safety standards. This includes any garage door opener model manufactured before April 1, 1982.
- A garage door opener which cannot detect an object, signaling the door to stop and reverse does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.
- For safety reasons never release the parking brake or start the engine while anyone is standing in front of the vehicle.

- A garage door or an estate gate may sometimes be set in motion when the HomeLink® remote control is being programmed. If the device is repeatedly activated, this can overstrain motor and damage its electrical components - an overheated motor is a fire hazard!
- To avoid possible injuries or property damage, please always make absolutely certain that no persons or objects are located in the range of motion of any equipment being operated.



Tips

- If you would like more information on HomeLink®, where to purchase the HomeLink® compatible products, or would like to purchase the HomeLink® Home Lighting Package, please call toll-free: 1-800-355-3515.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ *page 212.*

Programming the HomeLink® transmitter

Applies to vehicles: with HomeLink® universal remote control

The transmitter is programmed in two phases. For rolling code transmitters, a third phase is also necessary.



Fig. 103 Overhead console: HomeLink® keypad



Fig. 104 Front bumper, driver side: location of transmitter unit

Phase 1: programming the overhead keypad

1. Make sure your vehicle is within operating range of the remote controlled garage door opener.
 2. Set the parking brake ⇒ ⚠ in *General information on page 95*.
 3. Turn the ignition on. Do not start the engine!
 4. Press and hold the two outside HomeLink® buttons **I** and **III** for approximately 20 seconds until indicator light **A** ⇒ *fig. 103* begins to flash. Then release both buttons. Do not hold the buttons for longer than 30 seconds.
- This procedure only needs to be performed **once**. It erases the factory-set default codes and does not have to be repeated to program additional remote controls.

5. Press and hold the HomeLink® button **I**, **II** or **III** until the indicator light **A** starts flashing *slowly*. Release the button.
- The system will remain in programming mode for 5 minutes. Go to the front of the vehicle and proceed with phase 2.

Phase 2: programming the bumper mounted transmitter

6. Hold the *original remote control* at a distance between 0–6 in. (0–15 cm) from the bumper below the appropriate headlight for your vehicle ⇒ *fig. 104* (use the shortest distance possible).
 7. Aim the remote control just below the **driver side** headlight.
 8. Press and hold the activation button on the remote control.
- May be different in Canada. If so, press and re-press (cycle) the activation button on your remote control every two seconds.
9. The emergency flashers will flash **three times** (after about 15–60 seconds) when the programming is successful. Release the button on the remote control.
- To program more devices, repeat steps 4 to 9.
10. Press and hold the trained HomeLink® button and observe the indicator light **A** ⇒ *fig. 103*.

- If the indicator light is solid/continuous, programming is complete and your device should activate when you press and release the trained HomeLink® button.
- If the indicator light blinks rapidly for 2 seconds and is then a solid/continuous light, proceed with phase 3 to program a rolling code device.

Phase 3: rolling code programming

- A second person on a ladder who can safely reach the garage door opener motor is recommended.
11. Locate the “learn” button on the garage door opener motor (refer to the operating instructions for the opener, as the location of this button may vary by manufacturer).

12. Press and release the learn button on the garage door opener motor.

► **Note:** once the button is pressed, there are **30 seconds** in which to initiate the next step.

13. On the HomeLink® keypad inside the vehicle, firmly press and hold the HomeLink® button previously programmed in phases 1 and 2 for two seconds and release. Repeat this sequence **twice**.

- Some vehicles may require the press/hold/release sequence up to three times to complete the training process.
- *HomeLink® should now activate your rolling code equipped device.*

If the 5 minute time limit is exceeded, the **emergency flashers will flash one time** to indicate that the process has been terminated. In this case, repeat steps 4 through 9.

If the emergency flashers do not flash *three* times (after about 15–60 seconds), programming was not successful. In this case, repeat steps 4 through 9.

Remote control units for garage door openers in Canada are set to stop transmitting radio frequency signals after two seconds. This time may not be sufficient for the HomeLink® system to learn the radio frequency signal. Perform all other steps as described above.

Operating the HomeLink® transmitter

Applies to vehicles: with HomeLink® universal remote control

The HomeLink® transmitter works in the same manner as the original handheld remote control that came with the system.



Fig. 105 Overhead console: HomeLink® keypad

- Press the appropriate programmed button **I**, **II** or **III** to activate the desired remote control function ⇒ ⚠ in *General information on page 95*.

Reprogramming a single button

Applies to vehicles: with HomeLink® universal remote control

A HomeLink® button can be reprogrammed individually without affecting the other button allocations.

Programming the overhead keypad

- Press the appropriate HomeLink® button until the indicator light begins flashing slowly.

Programming the bumper mounted transmitter

1. Hold the *original remote control* at a distance between 0–5 in. (0–13 cm) from the bumper below the appropriate headlight for your vehicle (use the shortest distance possible).
 2. Aim the remote control just below the **driver side** headlight.
 3. Press and hold the activation button on the remote control.
 4. The emergency flashers will flash **three times** (after about 15–60 seconds) when the programming is successful. Now release the button on the remote control.
- If the device utilizes a rolling code, please follow phase 3 of ⇒ *page 96, Programming the HomeLink® transmitter* for rolling code programming.

This procedure will cause the existing programming on the HomeLink® button to be erased!

Erasing the programming of the HomeLink® transmitter

Applies to vehicles: with HomeLink® universal remote control

When you erase the programming, the programming on all three of the transmitter channels will be lost!

- ▶ Perform steps 1 to 4 as described on
⇒ page 96, Phase 1: programming the overhead keypad.

When completed, the HomeLink® system will be in the programming mode and is then ready to learn the codes for remote controlled devices.



Tips

- Programmed buttons cannot be erased individually.
- For security reasons you are advised to erase the programming of the HomeLink® system before you sell your vehicle.

Driving Safely

General notes

Safe driving habits

Please remember - safety first!

This chapter contains important information, tips, instructions and warnings that you need to read and observe for your own safety, the safety of your passengers and others. We have summarized here what you need to know about safety belts, airbags, child restraints as well as child safety. Your safety is for us *priority number 1*. Always observe the information and warnings in this section - for your own safety as well as for that of your passengers.

The information in this section applies to all model versions of your vehicle. Some of the features described in this sections may be standard equipment on some models, or may be optional equipment on others. If you are not sure, ask your authorized Audi dealer.



WARNING

- Make certain that you follow the instructions and heed the WARNINGS in this Manual. It is in your interest and in the interest of your passengers.
- Always keep the complete owner's literature in your Audi when you lend or sell your vehicle so that this important information will always be available to the driver and passengers.
- Always keep the owner's literature handy so that you can find it easily if you have questions.

Safety equipment

The safety features are part of the occupant restraint system and work together to help reduce the risk of injury in a wide variety of accident situations.

Your safety and the safety of your passengers should not be left to chance. Advances in technology have made a variety of features available to help reduce the risk of injury in an

accident. The following is a listing of just a few of the safety features in your Audi:

- sophisticated safety belts for driver and all passenger seating positions,
- safety belt pretensioners,
- front airbags,
- knee airbags,
- side airbags in the seats
- adjustable head restraints,
- adjustable steering column.

These individual safety features can work together as a system to help protect you and your passengers in a wide range of accidents. These features cannot work as a system if they are not always properly adjusted and properly used!

Safety is everybody's responsibility!

Important things to do before driving

Safety is everybody's job! Vehicle and occupant safety always depends on the informed and careful driver.

For your safety and the safety of your passengers, **before driving always:**

- ▶ Make sure that all lights and signals are operating correctly.
- ▶ Make sure that the tire pressure is correct.
- ▶ Make sure that all windows are clean and afford good visibility to the outside.
- ▶ Secure all luggage and other items carefully ⇒ *page 70*.
- ▶ Make sure that nothing can interfere with the pedals.
- ▶ Adjust front seat, head restraint and mirrors correctly for your height.
- ▶ Instruct passengers to adjust the head restraints according to their height.
- ▶ Make sure to use the right child restraint correctly to protect children ⇒ *page 138, Child Safety*.
- ▶ Sit properly in your seat and make sure that your passengers do the same ⇒ *page 66, Seats and storage*.

- Fasten your safety belt and wear it properly. Also instruct your passengers to fasten their safety belts properly ⇒ *page 109*.

What impairs driving safety?

Safe driving is directly related to the condition of the vehicle, the driver as well as the driver's ability to concentrate on the road without being distracted.

The driver is responsible for the safety of the vehicle and all of its occupants. If your ability to drive is impaired, safety risks for everybody in the vehicle increase and you also become a hazard to everyone else on the road ⇒ . Therefore:

- Do not let yourself be distracted by passengers or by using a cellular telephone.
- NEVER drive when your driving ability is impaired (by medications, alcohol, drugs, etc.).
- Observe all traffic laws, rules of the road and speed limits and plain common sense.
- ALWAYS adjust your speed to road, traffic and weather conditions.
- Take frequent breaks on long trips. Do not drive for more than two hours at a stretch.
- Do NOT drive when you are tired, under pressure or when you are stressed.



WARNING

Impaired driving safety increases the risk of serious personal injury and death whenever a vehicle is being used.

Proper occupant seating positions

Proper seating position for the driver

The proper driver seating position is important for safe, relaxed driving.

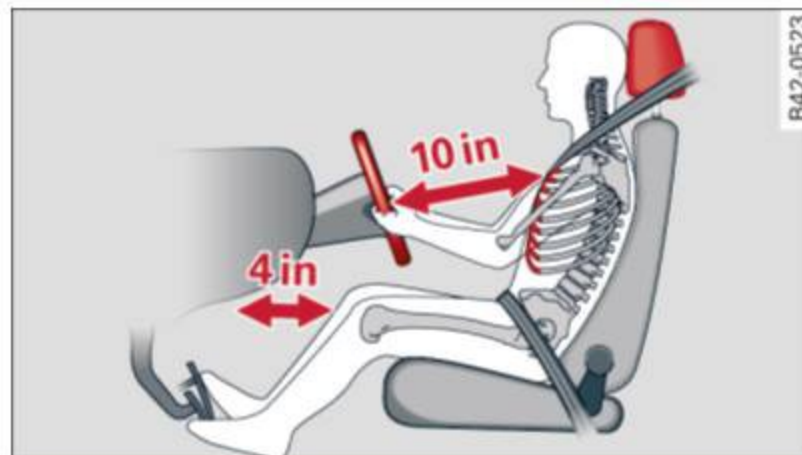


Fig. 106 Correct seating position

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the driver's seat to the following position:

- Adjust the steering wheel so that there is a distance of at least 10 inches (25 cm) between the steering wheel and your breast bone ⇒ *fig. 106*.
- Adjust the driver's seat so that you can easily push the pedals all the way to the floor while keeping your knee(s) slightly bent ⇒ .
- Grasp the top of the steering wheel with your elbow(s) slightly bent.
- Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible.
- Adjust the steering wheel so that the steering wheel and airbag cover points at your chest and not at your face.
- Adjust the angle of the seatback so that it is in an upright position so that your back comes in full contact with it when you drive.
- Fasten and wear safety belts correctly ⇒ *page 110*.
- Always keep both feet in the footwell so that you are in control of the vehicle at all times.

For detailed information on how to adjust the driver's seat, see ⇒ *page 66, Seats and storage*.

WARNING

Drivers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it deploys. To help reduce the risk of serious personal injury:

- Always adjust the driver's seat and the steering wheel so that there are at least 10 inches (25 cm) between your breastbone and the steering wheel.
- Always adjust the driver's seat and the steering wheel so that there are at least 4 inches (10 cm) between the knees and the lower part of the instrument panel.
- Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.
- Never hold the steering wheel at the 12 o'clock position or with your hands at other positions inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms and head if the driver's airbag inflates.
- Pointing the steering wheel toward your face decreases the ability of the supplemental driver's airbag to protect you in a collision.
- Always sit in an upright position and never lean against or place any part of your body too close to the area where the airbags are located.
- Before driving, always adjust the front seats and head restraints properly and make sure that all passengers are properly restrained.
- Never adjust the seats while the vehicle is moving. Your seat may move unexpectedly and you could lose control of the vehicle.
- Never drive with the backrest reclined or tilted far back! The farther the backrests

are tilted back, the greater the risk of injury due to incorrect positioning of the safety belt and improper seating position.

- Children must always ride in child seats ⇒ *page 138*. Special precautions apply when installing a child seat on the front passenger seat ⇒ *page 117*.

Proper seating position for the front passenger

The proper front passenger seating position is important for safe, relaxed driving.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the seat for the front passenger to the following position:

- ▶ Adjust the angle of the seatback so that it is in an upright position and your back comes in full contact with it whenever the vehicle is moving.
- ▶ Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ *page 102*.
- ▶ Keep both feet flat on the floor in front of the front passenger seat.
- ▶ Fasten and wear safety belts correctly ⇒ *page 112*.

For detailed information on how to adjust the front passenger's seat, see ⇒ *page 66, Seats and storage*.

WARNING

Front seat passengers who are unbelted, out of position or too close to the airbag can be seriously injured or killed by the airbag as it deploys. To help reduce the risk of serious personal injury:

- Passengers must always sit in an upright position and never lean against or place any part of their body too close to the area where the airbags are located.

- Passengers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it deploys with great force in the blink of an eye.
- Always make sure that there are at least 10 inches (25 cm) between the front passenger's breastbone and the instrument panel.
- Always make sure that there are at least 4 inches (10 cm) between the front passenger's knees and the lower part of the instrument panel.
- Each passenger must always sit on a seat of their own and properly fasten and wear the safety belt belonging to that seat.
- Before driving, always adjust the front passenger seat and head restraint properly.
- Always keep your feet on the floor in front of the seat. Never rest them on the seat, instrument panel, out of the window, etc. The airbag system and safety belt will not be able to protect you properly and can even increase the risk of injury in a crash.
- Never drive with the backrest reclined or tilted far back! The farther the backrests are tilted back, the greater the risk of injury due to incorrect positioning of the safety belt and improper seating position.
- Children must always ride in child seats ⇒ *page 138*. Special precautions apply when installing a child seat on the front passenger seat ⇒ *page 117*.

Proper adjustment of head restraints

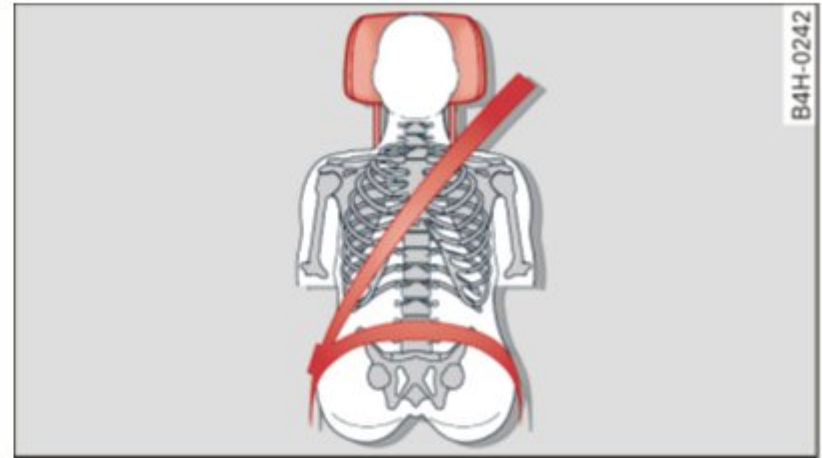


Fig. 107 Head restraint: viewed from the front

The head restraints must be correctly adjusted to achieve the best protection.

- Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇒ *fig. 107*.

Adjusting head restraints ⇒ *page 68*.



WARNING

Driving without head restraints or with improperly adjusted head restraints increases the risk of serious injuries in a collision. To help reduce the risk of injury:

- Always drive with the head restraints in place and properly adjusted.
- Every person in the vehicle must have a properly adjusted head restraint.
- Always make sure each person in the vehicle properly adjusts their head restraint. Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible,
- Never attempt to adjust head restraint while driving. If you have driven off and must adjust the driver headrest for any reason, first stop the vehicle safely before attempting to adjust the head restraint.
- Children must always be properly restrained in a child restraint that is appropriate for their age and size ⇒ *page 138*.

Examples of improper seating positions

The occupant restraint system can only reduce the risk of injury if vehicle occupants are properly seated.

Improper seating positions can cause serious injury or death. Safety belts can only work when they are properly positioned on the body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the proper seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:

- ▶ Never allow anyone to assume an incorrect seating position when the vehicle is being used ⇒ .

The following bullets list only some sample positions that will increase the risk of serious injury and death. Our hope is that these examples will make you more aware of seating positions that are dangerous.

Therefore, whenever the vehicle is moving:

- never stand up in the vehicle
- never stand on the seats
- never kneel on the seats
- never ride with the seatback reclined
- never lean up against the instrument panel
- never sit on the edge of the seat
- never sit sideways
- never lean out the window
- never put your feet out the window
- never put your feet on the instrument panel
- never rest your feet on the seat cushion or back of the seat
- never ride in the footwell
- never ride in the cargo area



WARNING

Improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- Sitting incorrectly places occupants at risk of being critically injured if the airbags deploy and strike them.
- Before you start driving, seat yourself properly and always maintain this seating position during the trip. Before each trip, instruct your passengers to seat themselves properly and to maintain this seating position during the trip
⇒ page 66, *Seats and storage*.

Driver and passenger side footwell

Important safety instructions



WARNING

Always make sure that the knee airbag can inflate without interference. Objects between yourself and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys or by being pushed into you as the airbag deploys.

- No persons (children) or animals should ride in the footwell in front of the passenger seat. If the airbag deploys, this can result in serious or fatal injuries.
- No objects of any kind should be carried in the footwell area in front of the driver's or passenger's seat. Bulky objects (shopping bags, for example) can hamper or prevent proper deployment of the airbag. Small objects can be thrown through the vehicle if the airbag deploys and injure you or your passengers.

Pedal area

The pedals must always be free to move and must never be interfered with by a floor mat or any other object.

- ▶ Make sure that all pedals move freely without interference.
- ▶ Make sure that nothing prevents all pedals from returning to their original positions.

Only use floor mats that leave the pedal area free and can be secured with floor mat fasteners.

If a brake circuit fails, increased brake pedal travel is required to bring the vehicle to a full stop.

! WARNING

Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious injury.

- Never place any objects in the driver's footwell. An object could get into the pedal area and interfere with pedal function. In case of sudden braking or an accident, you would not be able to brake or accelerate!
- Always make sure that nothing can fall or move into the driver's footwell.

Floor mats on the driver side

Always use floor mats that can be securely attached to the floor mat fasteners and do not interfere with the free movement of the pedals.

- ▶ Make sure that the floor mats are properly secured and cannot move and interfere with the pedals ⇒ .

Use only floor mats that leave the pedal area unobstructed and that are firmly secured so that they cannot slip out of position. You can obtain suitable floor mats from your authorized Audi dealer.

! WARNING

Pedals that cannot move freely can result in a loss of vehicle control and increase the risk of serious personal injury.

- Always make sure that floor mats are properly secured.
- Never place or install floor mats or other floor coverings in the vehicle that cannot be properly secured in place to prevent them from slipping and interfering with the pedals or the ability to control the vehicle.
- Never place or install floor mats or other floor coverings on top of already installed floor mats. Additional floor mats and other coverings will reduce the size of the pedal area and interfere with the pedals.
- Always properly reinstall and secure floor mats that have been taken out for cleaning.
- Always make sure that objects cannot fall into the driver footwell while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.

Stowing luggage**Loading the luggage compartment**

All luggage and other objects must be properly stowed and secured in the luggage compartment.

Loose items in the luggage compartment can shift suddenly, changing vehicle handling characteristics. Loose items can also increase the risk of serious personal injury in a sudden vehicle maneuver or in a collision.

In a collision, the laws of physics mean that even smaller items that are loose in the vehicle will become heavy missiles that can cause serious injury. Items in the vehicle possess energy which vary with vehicle speed and the weight of the item. Vehicle speed is the most significant factor.

For example, in a frontal collision at a speed of 30 mph (48 km/h), the forces acting on a 10-lb (4.5 kg) object are about 20 times the normal weight of the item. This means that the weight of the item would suddenly be about 200 lbs. (90 kg). You can imagine the injuries that a 200 lbs. (90 kg) item flying freely through the passenger compartment could cause in a collision like this.

WARNING

Improperly stored luggage or other items can fly through the vehicle causing serious personal injury in the event of hard braking or an accident. To help reduce the risk of serious personal injury:

- Always put objects, for example, luggage or other heavy items in the luggage compartment.

WARNING

Heavy loads will influence the way your vehicle handles. To help reduce the risk of a loss of control leading to serious personal injury:

- Always keep in mind when transporting heavy objects, that a change in the center of gravity can also cause changes in vehicle handling.
- Never exceed the Gross Axle Weight Rating or the Gross Vehicle Weight Rating specified on the safety compliance sticker on the left door jamb. Exceeding permissible weight standards can cause the vehicle to slide and handle differently.
- Please observe information on safe driving ⇒ *page 99*.

WARNING

Always make sure that the doors, all windows and the front lid are securely closed and locked to reduce the risk of injury when the vehicle is not being used.

- After closing the front lid, always make sure that it is properly closed and locked.
- Never leave your vehicle unattended especially with the front lid left open. A

child could crawl into the luggage compartment and close the front lid becoming trapped and unable to get out. Being trapped in a vehicle can lead to serious personal injury.

- Never let children play in or around the vehicle.
- Never let passengers ride in the luggage compartment. Vehicle occupants must always be properly restrained in one of the vehicle's seating positions.

Tips

The tire pressure must correspond to the load. The tire pressure is shown on the tire pressure label. The tire pressure label is located on the driver's side B-pillar. The tire pressure label lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and the tires that were on your vehicle at the time it was manufactured. For recommended tire pressures for normal load conditions, please see chapter ⇒ *page 193*.

Reporting Safety Defects

Applicable to U.S.A.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Audi of America, Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defects exists in a group ►

of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Audi of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at:

Tel.: 1-888-327-4236 (TTY: 1-800-424-9153)

or write to:

Administrator
NHTSA
1200 New Jersey Avenue, SE
Washington, D.C. 20590

You can also obtain other information about motor vehicle safety from:

<http://www.safercar.gov>

Applicable to Canada

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may telephone the toll free hotline:

Tel.: 1-800-333-0371 or

Tel.: 1-613-998-8616 if you are in the Ottawa area

TTY for hearing impaired:

1-888-675-6863

email comments/questions to:
roadsafetywebmail@tc.gc.ca

or contact Transport Canada by mail at:

Road Safety and Motor Vehicle
Regulation Directorate
Transport Canada
Tower C, Place de Ville,
330 Sparks Street
Ottawa, Ontario K1A 0N5

For additional road safety information, please visit the Road Safety website at:

<http://www.tc.gc.ca/roadsafety/index.htm>

Active rollover protection system

Function

The active rollover protection system helps protect vehicle occupants in the event of a rollover.

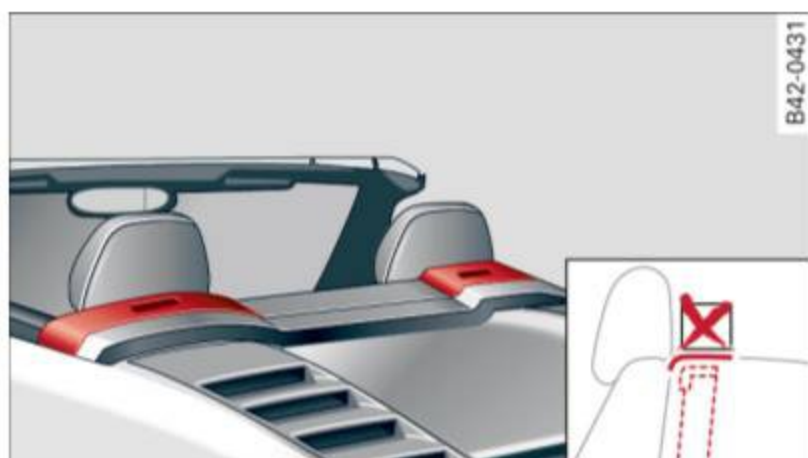


Fig. 108 Rollbar deployment range



Fig. 109 Rollbar deployed

The active rollover protection system consists of:

- two rollbars
- the safety belts with belt tensioners
- the windshield frame
- the rollover sensors.

The active rollover protection system provides additional safety in the event of a rollover. Within milliseconds, sensors deploy two rollbars located behind the headrests ⇒ fig. 109.

The rollbars, reinforced windshield frame and belt tensioners help protect vehicle occupants in the event of a rollover.

The rollover protection system functions when the convertible top is both open and closed.



WARNING

Do not use the area behind the headrests ⇒ fig. 108 as a storage area. This is the area where the rollbars deploy. If the rollover protection system is triggered, objects placed there can be propelled through the vehicle and make it more difficult for the rollbars to deploy. This increases the risk for serious or life-threatening injuries.

When is rollover protection deployed?

Rollover protection deploys in a collision or rollover.

Depending on the collision, sensors throughout the vehicle and the control module trigger the rollover system to deploy.

For safety reasons, rollover protection also deploys during front, side and rear collisions above a certain level of severity.

Retracting rollover protection



Fig. 110 Deployed rollbar with release loop



Fig. 111 Deployed rollbar with convertible top frame facing upward

If the rollbars deployed but the vehicle was not involved in a collision or rollover, you can ►

retract them without special tools. The system is ready for use again once they are retracted.

- ▶ Remove the wind deflector, if necessary
⇒ *page 48*.
- ▶ Lower the rear window, if necessary
⇒ *page 49*.
- ▶ Pull the loop upward in the direction of the arrow and hold it in place ① ⇒ *fig. 110*.
- ▶ Slide the rollbar down ② ⇒ .
- ▶ Release the loop just before the rollbar reaches its end position 1-2 in. (3-5 cm).
- ▶ Press the rollbar down firmly until it stops.
- ▶ Make sure the rollbar is secure before releasing it.
- ▶ Close the cover  ⇒ *fig. 111*.
- ▶ Repeat the procedure on the other rollbar.

so could result in damage to the vehicle. Please see your authorized Audi dealer for assistance.

WARNING

- Make sure your head or other parts of your body are not located in the area above the rollbar when pressing the rollbar down. If the rollbar is not secured correctly, it could deploy again as soon as you release it and cause injuries.
- Have the rollover protection system checked by your authorized Audi dealer if it malfunctions. Otherwise the system may not deploy correctly in a collision.
- Modifying the rollover protection system or individual components is not permitted.
- Work on the rollover protection system should only be performed by your authorized Audi dealer. Otherwise the system may not function correctly in a collision or it could deploy unexpectedly.
- Have the system inspected at service intervals. This ensures the system will always be ready for use. Have your authorized Audi dealer check the rollover protection system every two years at the latest.

Note

If the rollbars deploy when the convertible top is closed, do not open the top. Doing

Safety belts

General notes

Always wear safety belts!

Wearing safety belts correctly saves lives!

This chapter explains why safety belts are necessary, how they work and how to adjust and wear them correctly.

- Read all the information that follows and heed all of the instructions and WARNINGS.

WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

- Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always correctly wear safety belts when the vehicle is moving.
- Pregnant women, injured, or physically impaired persons must also use safety belts. Like all vehicle occupants, they are more likely to be seriously injured if they do not wear safety belts. The best way to protect a fetus is to protect the mother - throughout the entire pregnancy.

Number of seats

Your Audi R8 has two seating positions in the front. Each seating position has a safety belt.

WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

- Never strap more than one person, including small children, into any belt. It is especially dangerous to place a safety belt over a child sitting on your lap.
- Never let more people ride in the vehicle than there are safety belts available.

- Be sure everyone riding in the vehicle is properly restrained with a separate safety belt or child restraint.

Safety belt warning light

Your vehicle has a warning system for the driver and front seat passenger to remind you about the importance of buckling up.



Fig. 112 Safety belt warning light in the instrument cluster - enlarged

Before driving off, always:

- Fasten your safety belt and make sure you wear it properly.
- Make sure that your passengers also buckle up and wear their safety belts properly.
- Protect children with a child restraint system appropriate for the size and age.

The warning light  in the instrument cluster lights up when the ignition is switched on as a reminder to fasten the safety belts. In addition, you will hear a warning tone for a certain period of time.

Fasten your safety belt and make sure that your passengers also put on their safety belts properly.

WARNING

- Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always wear safety belts correctly when the vehicle is moving.

- Failure to pay attention to the warning light that comes on could lead to personal injury.

Why safety belts?

Safety belts protect

People think it's possible to use the hands to brace the body in a minor collision. It's simply not true!



Fig. 113 Driver is properly restrained in a sudden braking maneuver.

Safety belts used properly can make a big difference. Safety belts help to keep passengers in their seats, gradually reduce energy levels applied to the body in an accident, and help prevent the uncontrolled movement that can cause serious injuries. In addition, safety belts reduce the danger of being thrown out of the vehicle.

Safety belts attach passengers to the car and give them the benefit of being slowed down more gently or “softly” through the “give” in the safety belts, crush zones and other safety features engineered into today's vehicles. By “absorbing” the kinetic energy over a longer period of time, the safety belts make the forces on the body more “tolerable” and less likely to cause injury.

Although these examples are based on a frontal collision, safety belts can also substantially reduce the risk of injury in other kinds of crashes. So, whether you're on a long trip or just going to the corner store, always buckle up and make sure others do, too. Accident statistics show that vehicle occupants properly wearing safety belts have a lower risk of being

injured and a much better chance of surviving an accident. Properly using safety belts also greatly increases the ability of the supplemental airbags to do their job in a collision. For this reason, wearing a safety belt is legally required in most countries including much of the United States and Canada.

Although your Audi is equipped with airbags, you still have to wear the safety belts provided. Front airbags, for example, are activated only in some frontal collisions. The front airbags are not activated in all frontal collisions, in side and rear collisions, in roll overs or in cases where there is not enough deceleration through impact to the front of the vehicle. The same goes for the other airbag systems in your Audi. So, always wear your safety belt and make sure everybody in your vehicle is properly restrained!

Important safety instructions about safety belts

Safety belts must always be properly positioned across the strongest bones of your body.

- ▶ Always wear safety belts as illustrated and described in this chapter.
- ▶ Make sure that your safety belts are always ready for use and are not damaged.



WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death. Safety belts can work only when used correctly.

- Always fasten your safety belts correctly before driving off and make sure all passengers are properly restrained.
- For maximum protection, safety belts must always be positioned correctly on the body.
- Never strap more than one person, including small children, into any single safety belt.
- Never place a safety belt over a child sitting on your lap.

- Always keep feet in the footwell in front of the seat while the vehicle is being driven.
- Never let any person ride with feet on the instrument panel or sticking out the window or on the seat.
- Never remove a safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.
- Never wear belts twisted.
- Never wear belts over rigid or breakable objects in or on your clothing, such as eye glasses, pens, keys, etc., as these may cause injury.
- Never wear the shoulder part of the belt under your arm or otherwise out of position.
- Several layers of heavy clothing may interfere with correct positioning of belts and reduce their effectiveness.
- Always keep belt buckles free of anything that may prevent the buckle from latching securely.
- Never use comfort clips or devices that create slack in the shoulder belt. However, special clips may be required for the correct use of some child restraint systems.
- Never allow safety belts to become damaged by being caught in door or seat hardware.
- Torn or frayed safety belts can tear and damaged belt hardware can break in an accident. Inspect belts regularly. If webbing, bindings, buckles, or retractors are damaged, have belts replaced by an authorized Audi dealer or qualified workshop.
- Safety belts that have been worn and loaded in an accident must be replaced with the correct replacement safety belt by an authorized Audi dealer or qualified workshop. Replacement may be necessary even if damage cannot be clearly seen. Anchorages that were loaded must also be inspected.
- Never remove, modify, disassemble, or try to repair the safety belts yourself.

- Always keep the belts clean. Dirty belts may not work properly and can impair the function of the inertia reel
⇒ page 168, Safety belts.

Illustrating the principle of an accident

Frontal collisions and the law of physics

Frontal crashes create very strong forces for people riding in vehicles.

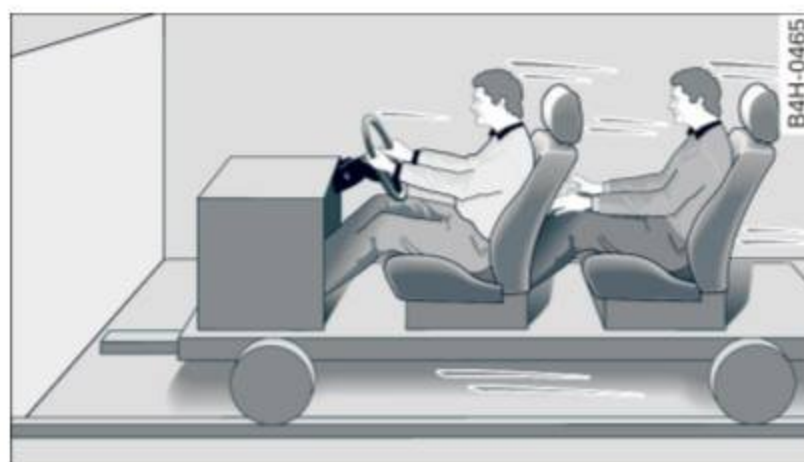


Fig. 114 Unbelted occupants in a vehicle heading for a wall

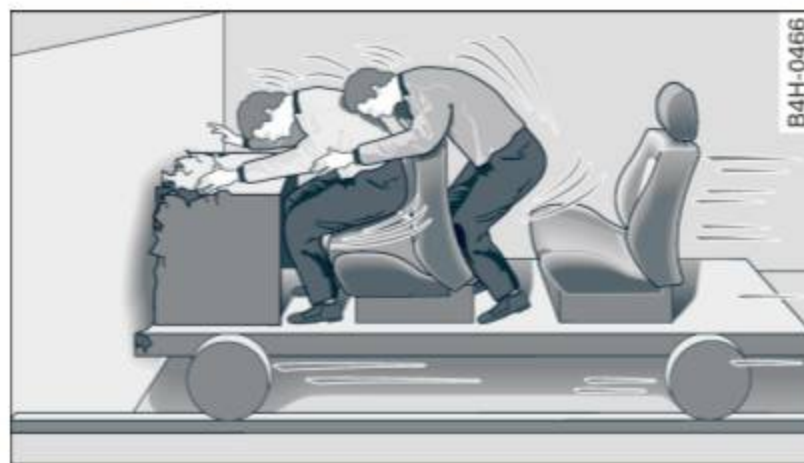


Fig. 115 The vehicle crashes into the wall.

The physical principles are simple. Both the vehicle and the passengers possess energy which varies with vehicle speed and body weight. Engineers call this energy “kinetic energy.”

The higher the speed of the vehicle and the greater the vehicle’s weight, the more energy that has to be “absorbed” in the crash.

Vehicle speed is the most significant factor. If the speed doubles from 15 to 30 mph (25 to 50 km/h), the energy increases 4 times!

Because the occupants in this vehicle are not using safety belts ⇒ *fig. 114*, they will keep moving at the same speed the vehicle was

moving just before the crash, until something stops them - here, the wall ⇒ *fig. 115*.

The same principles apply to people sitting in a vehicle that is involved in a frontal collision. Even at city speeds of 20 to 30 mph (30 to 50 km/h), the forces acting on the body can reach one ton (2,000 lbs., or 1,000 kg) or more. At higher speeds, these forces are even greater.

People who do not use safety belts are also not attached to their vehicle. In a frontal collision they will also keep moving forward at the speed their vehicle was travelling just before the crash. Of course, the laws of physics don't just apply to frontal collisions, they determine what happens in all kinds of accidents and collisions.

What happens to occupants not wearing safety belts?

In crashes, unbelted occupants cannot stop themselves from flying forward and being injured or killed. Always wear your safety belts!



Fig. 116 A driver not wearing a safety belt is violently thrown forward

Unbelted occupants are not able to resist the tremendous forces of impact by holding tight or bracing themselves. Without the benefit of safety restraint systems, the unrestrained occupant will slam violently into the steering wheel, instrument panel, windshield, or whatever else is in the way ⇒ *fig. 116*. This impact with the vehicle interior has all the energy they had just before the crash.

Never rely on airbags alone for protection. Even when they deploy, airbags provide only additional protection. Airbags are not sup-

posed to deploy in all kinds of accidents. Although your Audi is equipped with airbags, all vehicle occupants, including the driver, must wear safety belts correctly in order to minimize the risk of severe injury or death in a crash.

Remember too, that airbags will deploy only once and that your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed. Unbelted occupants can also be thrown out of the vehicle where even more severe or fatal injuries can occur.

How are safety belts worn correctly?

Fastening safety belts

Seat first - everybody buckle up!



Fig. 117 Head restraint adjustment and belt position



Fig. 118 Belt buckle and tongue on the driver's seat

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body.

- Adjust the front seat and head restraint properly ⇒ *page 66, Seats and storage.*

- ▶ Hold the belt by the tongue and pull it evenly across the chest and pelvis ⇒ .
- ▶ Insert the tongue into the correct buckle of your seat until you hear it latch securely ⇒ *fig. 118*.
- ▶ Pull on the belt to make sure that it is securely latched in the buckle.

Automatic safety belt retractors

Every safety belt is equipped with an automatic belt retractor on the shoulder belt. This feature locks the belt when the belt is pulled out fast, during hard braking and in an accident. The belt may also lock when you drive up or down a steep hill or through a sharp curve. During normal driving the belt lets you move freely.

Switchable locking feature

Every safety belt except the one on the driver seat is equipped with a switchable locking feature that **must** be used when the safety belt is used to attach a child seat. Be sure to read the important information about this feature ⇒ *page 146*.

WARNING

- Improperly positioned safety belts can cause serious injury in an accident
⇒ *page 113, Safety belt position*.
- Safety belts offer optimum protection only when the seatback is upright and belts are properly positioned on the body.
 - Never attach the safety belt to the buckle for another seat. Attaching the belt to the wrong buckle will reduce safety belt effectiveness and can cause serious personal injury.
 - A passenger who is not properly restrained can be seriously injured by the safety belt itself when it moves from the stronger parts of the body into critical areas like the abdomen.
 - Always lock the convertible locking retractor when you are securing a child seat in the vehicle ⇒ *page 148*.

Tips

Depending on vehicle equipment, microphones* are located on the safety belt to improve hands-free call quality. For additional information about safety belt microphones, refer to the infotainment system owner's manual.

Safety belt position

Correct belt position is the key to getting maximum protection from safety belts.

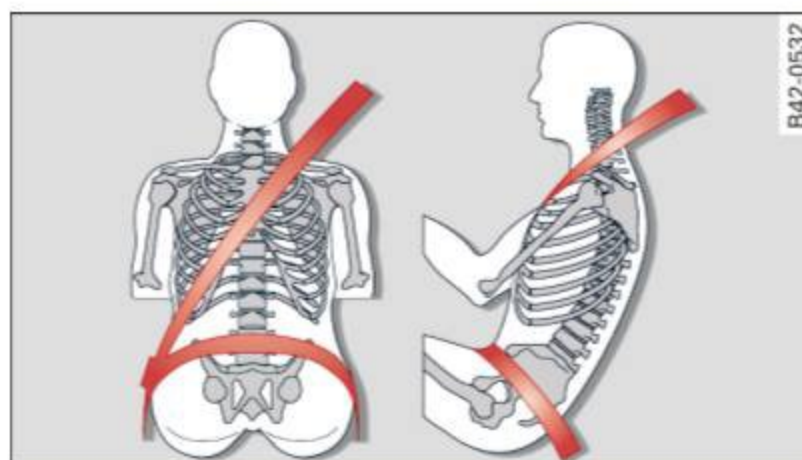


Fig. 119 Head restraint and safety belt position as seen from the side

Use the height adjustment to change the position of the shoulder straps of the front seat safety belts.

WARNING

- Improperly positioned safety belts can cause serious personal injury in an accident.
- The shoulder belt portion of the safety belt must be positioned over the middle of the occupant's shoulder and never across the neck or throat.
 - The safety belt must lie flat and snug on the occupant's upper body ⇒ *fig. 119*. Pull on the belt to tighten if necessary.
 - The lap belt portion of the safety belt must be positioned as low as possible across pelvis and never over the abdomen. Make sure the belt lies flat and snug ⇒ *fig. 119*. Pull on the belt to tighten if necessary.
 - A loose-fitting safety belt can cause serious injuries by shifting its position on your body from the strong bones to more

vulnerable, soft tissue and cause serious injury.

- Always read and heed all WARNINGS and other important information ⇒ *page 110*.

Pregnant women must also be properly restrained

The best way to protect the fetus is to make sure that expectant mothers always wear safety belts correctly - throughout the pregnancy.



Fig. 120 Safety belt position during pregnancy

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body ⇒ *page 113*.

- Adjust the front seat and head restraint correctly ⇒ *page 66, Seats and storage*.
- Hold the belt by the tongue and pull it evenly across the chest so that it sits as low as possible on the pelvis and there is no pressure on the abdomen ⇒ *fig. 120* ⇒ ⚠.
- Insert the tongue into the correct buckle of your seat until you hear it latch securely ⇒ *page 112, fig. 118*.
- Pull on the belt to make sure that it is securely latched in the buckle.

⚠ WARNING

Improperly positioned safety belts can cause serious personal injury in an accident.

- Expectant mothers must always wear the lap portion of the safety belt as low as possible across the pelvis and below the rounding of the abdomen.

- Always read and heed all WARNINGS and other important information ⇒ ⚠ in *Fastening safety belts on page 113*.

Unfastening safety belts

Unbuckle the safety belt with the red release button only after the vehicle has stopped.



Fig. 121 Releasing the tongue from the buckle

- Push the red release button on the buckle ⇒ *fig. 121*. The belt tongue will spring out of the buckle ⇒ ⚠.
- Let the belt wind up on the retractor as you guide the belt tongue to its stowed position.

⚠ WARNING

Never unfasten safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.

Improperly worn safety belts

Incorrectly positioned safety belts can cause severe injuries.

Wearing safety belts improperly can cause serious injury or death. Safety belts can only work when they are correctly positioned on the body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the correct seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:

- ▶ Never permit anyone to assume an incorrect sitting position in the vehicle while traveling ⇒ .

WARNING

Improperly worn safety belts increase the risk of serious personal injury and death whenever a vehicle is being used.

- Always make sure that all vehicle occupants are correctly restrained and stay in a correct seating position whenever the vehicle is being used.
- Always read and heed all WARNINGS and other important information ⇒ page 110.

Safety belt pretensioners

How safety belt pretensioners work

In front, side and rear end collisions and in a rollover above a particular severity, safety belts in use are tensioned automatically.

The safety belts for the front seating positions are equipped with safety belt pretensioners. The system is activated by sensors in front, side and rear-end collisions and in a rollover of great severity. This tightens the belt and takes up belt slack ⇒  in *Service and disposal of safety belt pretensioner on page 115*. Taking up the slack helps to reduce forward occupant movement during a collision.

Tips

The safety belt pretensioner can only be activated once.

- In minor frontal and side collisions, in rear-end collisions and in accidents involving very little impact force, the safety belt pretensioners are not activated.
- When the safety belt pretensioner is activated, a fine dust is released. This is normal and is not caused by a fire in the vehicle.
- The relevant safety requirements must be observed when the vehicle or compo-

nents of the system are scrapped. An authorized Audi dealer is familiar with these regulations and will be pleased to pass on the information to you.

- Be sure to observe all safety, environmental and other regulations if the vehicle or individual parts of the system, particularly the safety belt or airbag, are to be disposed. We recommend you have your authorized Audi dealer perform this service for you.

Service and disposal of safety belt pretensioner

The safety belt pretensioners are parts of the safety belts on your Audi. Installing, removing, servicing or repairing of belt pretensioners can damage the safety belt system and prevent it from working correctly in a collision.

There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment.

WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing a safety belt pretensioner from activating when needed or activating it unexpectedly:

- The belt pretensioner system can be activated only once. If belt pretensioners have been activated, the system must be replaced.
- Never repair, adjust, or change any parts of the safety belt system.
- Safety belt systems including safety belt pretensioners cannot be repaired. Special procedures are required for removal, installation and disposal of this system.
- For any work on the safety belt system, we strongly recommend that you see your authorized Audi dealer or qualified

technician who has an Audi approved repair manual, training and special equipment necessary.

**For the sake of the environment**

Undeployed airbag modules and pretensioners might be classified as Perchlorate Material -special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules, safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Airbag system

Important things to know

Importance of wearing safety belts and sitting properly

Airbags are only supplemental restraints. For airbags to do their job, occupants must always wear their safety belts properly and be in a proper seating position.

For your safety and the safety of your passengers, before driving off, always:

- ▶ Adjust the driver's seat and steering wheel properly ⇒ *page 100*,
- ▶ Adjust the front passenger's seat properly ⇒ *page 101*,
- ▶ Wear safety belts properly ⇒ *page 110*,
- ▶ Always use the proper child restraint to protect children properly ⇒ *page 138*.

In a collision, airbags must inflate within the blink of an eye and with considerable force. The supplemental airbags can cause injuries if the driver or the front seat passenger is not seated properly. Therefore in order to help the airbag to do its job, it is important, both as a driver and as a passenger to sit properly at all times.

By keeping room between your body and the steering wheel and the front of the passenger compartment, the airbag can inflate fully and completely and provide supplemental protection in certain frontal collisions ⇒ *page 100*, *Proper occupant seating positions*. For details on the operation of the seat adjustment controls ⇒ *page 67*.

It's especially important that children are properly restrained ⇒ *page 138*.

There is a lot that the driver and the passengers can and must do to help the individual safety features installed in your Audi work together as a system.

Proper seating position is important so that the front airbag on the driver side can do its job. If you have a physical impairment or con-

dition that prevents you from sitting properly on the driver seat with the safety belt properly fastened and reaching the pedals, or if you have concerns with regard to the function or operation of the airbag system, please contact your authorized Audi dealer or qualified workshop, or call Audi Customer CARE at 1-800-822-2834 for possible modification to your vehicle.

When the airbag system deploys, a gas generator will fill the airbags, break open the padded covers, and inflate between the steering wheel and the driver and between the instrument panel and the front passenger. The airbags will deflate immediately after deployment so that the front occupants can see through the windshield again without interruption.

All of this takes place in the blink of an eye, so fast that many people don't even realize that the airbags have deployed. The airbags also inflate with a great deal of force and nothing should be in their way when they deploy. Front airbags in combination with properly worn safety belts slow down and limit the occupant's forward movement. Together they help to prevent the driver and front seat passenger from hitting parts of the inside of the vehicle while reducing the forces acting on the occupant during the crash. In this way they help to reduce the risk of injury to the head and upper body in the crash. Airbags do not protect the arms or the lower parts of the body.

Both front airbags will not inflate in all frontal collisions. The triggering of the airbag system depends on the vehicle deceleration rate caused by the collision and registered by the electronic control unit. If this rate is below the reference value programmed into the control unit, the airbags will not be triggered, even though the car may be badly damaged as a result of the collision. Vehicle damage, repair costs or even the lack of vehicle damage is not necessarily an indication of whether an airbag should inflate or not.

Since the circumstances will vary considerably between one collision and another, it is not possible to define a range of vehicle speeds that will cover every possible kind and angle of impact that will always trigger the airbags. Important factors include, for example, the nature (hard or soft) of the object which the car hits, the angle of impact, vehicle speed, etc. The front airbags will also not inflate in side or rear collisions, or in roll-overs.

Always remember: Airbags will deploy only once, and only in certain kinds of collisions. Your safety belts are always there to offer protection in those situations in which airbags are not supposed to deploy, or when they have already deployed; for example, when your vehicle strikes or is struck by another vehicle after the first collision.

This is just one of the reasons why an airbag is a supplementary restraint and is not a substitute for a safety belt. The airbag system works most effectively when used with the safety belts. Therefore, always wear your safety belts properly ⇒ *page 109*.

WARNING

Sitting too close to the steering wheel or instrument panel will decrease the effectiveness of the airbags and will increase the risk of personal injury in a collision.

- Never sit closer than 10 inches (25 cm) to the steering wheel or instrument panel.
- If you cannot sit more than 10 inches (25 cm) from the steering wheel, investigate whether adaptive equipment may be available to help you reach the pedals and increase your seating distance from the steering wheel.
- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag.

- To reduce the risk of injury when an airbag inflates, always wear safety belts properly ⇒ *page 112, How are safety belts worn correctly?*.
- Never let children ride unrestrained or improperly restrained in the vehicle. Adjust the front seats properly. If children are not properly restrained, they may be severely injured or killed when an airbag inflates.
- Never ride with the backrest reclined.
- Always sit as far as possible from the steering wheel or the instrument panel ⇒ *page 100, Proper occupant seating positions*.
- Always sit upright with your back against the backrest of your seat.
- Never place your feet on the instrument panel or on the seat. Always keep both feet on the floor in front of the seat to help prevent serious injuries to the legs and hips if the airbag inflates.
- Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury when an airbag inflates.

WARNING

Airbags that have deployed in a crash must be replaced.

- Use only original equipment airbags approved by Audi and installed by a trained technician who has the necessary tools and diagnostic equipment to properly replace any airbag in your vehicle and assure system effectiveness in a crash.
- Never permit salvaged or recycled airbags to be installed in your vehicle.

Child restraints on the front seat – some important things to know

- Be sure to read the important information and heed the WARNINGS for important details about children and Advanced Airbags ⇒ *page 138*.

Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially those 12 years and younger, are properly restrained for their age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a child in a rearward-facing seat.

The Advanced Airbag System in your vehicle has been certified to comply with the requirements of United States Federal Motor Vehicle Safety Standard 208 as applicable at the time your vehicle was manufactured.

The Standard requires the front airbag on the passenger side to be turned off (“suppressed”) if a child up to about one year of age restrained in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified has been installed on the front passenger seat. For a listing of the child restraints that were used to certify compliance with the US Safety Standard ⇒ *page 140*.

The **PASSENGER AIR BAG OFF** light in the instrument panel tells you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit.

Each time you turn on the ignition, the **PASSENGER AIR BAG OFF** light will come on for a few seconds and:

- will stay on if the front passenger seat is not occupied,
- will stay on if there is a small child or child restraint on the front passenger seat,

- will go off if the front passenger seat is occupied by an adult as registered by the weight-sensing mat ⇒ *page 128, Monitoring the Advanced Airbag System*.

The **PASSENGER AIR BAG OFF** light comes on when the control unit detects a total weight on the front passenger seat that requires the front airbag to be turned off.

If the total weight on the front passenger seat is more than that of a typical 1 year-old child but less than the weight of a small adult, the front airbag on the passenger side can deploy (the **PASSENGER AIR BAG OFF** light does not come on). If the **PASSENGER AIR BAG OFF** light does not come on, the front airbag on the passenger side has not been turned off by the electronic control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

For example, the airbag may deploy if:

- a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇒ *page 140*), or
- a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light in the center of the instrument panel will come on and stay on.

The front airbag on the passenger side may *not* deploy (the **PASSENGER AIR BAG OFF** light does not illuminate and stay lit) even if a small adult or teenager, or a passenger who is not sitting upright with their back against a non-reclined backrest with their feet on the vehicle floor in front of the seat is on the front passenger seat ⇒ *page 100, Proper seating position for the driver*.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the “low risk” deployment criteria to reduce the risk of injury through interaction with the airbag. “Low risk” deployment occurs in those ►

crashes that take place at lower decelerations as defined in the electronic control unit

⇒ *page 128, PASSENGER AIR BAG OFF light.*

Always remember, a child safety seat or infant carrier installed on the front seat may be struck and knocked out of position by the rapidly inflating passenger's airbag in a frontal collision. The airbag could greatly reduce the effectiveness of the child restraint and even seriously injure the child during inflation.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.
- Forward-facing child safety seats installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious personal injury to the child.

WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by

its manufacturer for use on a front seat with a passenger front and side airbag.

- Never put the forward-facing child restraint up against or very near the instrument panel.
- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.
- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light will be displayed whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- If the **PASSENGER AIR BAG OFF** light does not stay on, perform the checks described ⇒ *page 128, Monitoring the Advanced Airbag System.*
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on, the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.
- Always carefully follow instructions from child restraint manufacturers when installing child restraints.

WARNING

If, in exceptional circumstances, you must install a forward or rearward-facing child restraint on the front passenger's seat:

- Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
- An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child – even with an Advanced Airbag System.
- Always follow the manufacturer's instructions provided with the child safety seat or carrier carefully.
- Never place additional items on the seat that can increase the total weight registered by the weight-sensing mat and can cause injury in a crash.

Front airbags

Description of front airbags

The airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 122 Location of driver airbag: in steering wheel



Fig. 123 Location of front passenger's airbag: in the instrument panel

Your vehicle is equipped with an “Advanced Airbag System” in compliance with United States Federal Motor Vehicle Safety Standard

(FMVSS) 208 as applicable at the time your vehicle was manufactured. The safety belts for the front seats have “pretensioners” that help to take slack out of the belt system. The pretensioners are also activated by the electronic control unit for the airbag system.

The front safety belts also have load limiters to help reduce the forces applied to the body in a crash.

The airbag for the driver is in the steering wheel hub ⇒ *fig. 122* and the airbag for the front passenger is in the instrument panel ⇒ *fig. 123*. The general location of the airbags is marked “AIRBAG”.

There is a lot you need to know about the airbags in your vehicle. We urge you to read the detailed information about airbags, safety belts and child safety in this and the other chapters that make up the owner's literature. Please be sure to heed the WARNINGS - they are extremely important for your safety and the safety of your passengers, especially infants and small children.



WARNING

Never rely on airbags alone for protection.

- Even when they deploy, airbags provide only supplemental protection.
- Airbags work most effectively when used with properly worn safety belts.
- Therefore, always wear your safety belts and make sure that everybody in your vehicle is properly restrained.



WARNING

A person on the front passenger seat, especially infants and small children, will receive serious injuries and can even be killed by being too close to the airbag when it inflates.

- Although the Advanced Airbag System in your vehicle is designed to turn off the front passenger airbag if an infant or a small child is on the front passenger seat, nobody can absolutely guarantee that deployment under these special

conditions is impossible in all conceivable situations that may happen during the useful life of your vehicle.

- The Advanced Airbag System can deploy in accordance with the “low risk” option under the U.S. Federal Standard if a child that is heavier than the typical one-year old child is on the front passenger seat and the other conditions for airbag deployment are met.
- For their own safety, all children, especially 12 years and younger, should always ride properly restrained for their age and size.

Advanced front airbag system

Your vehicle is equipped with a front Advanced Airbag System in compliance with United States Federal Motor Vehicle Safety Standard 208 as applicable at the time your vehicle was manufactured.

The front Advanced Airbag System supplements the safety belts to provide additional protection for the driver's and front passenger's heads and upper bodies in frontal crashes. The airbags inflate only in frontal impacts when the vehicle deceleration is high enough.

The front Advanced Airbag System for the front seat occupants is not a substitute for your safety belts. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you, if you are sitting upright, wearing your safety belt and wearing it properly. This is why you and your passengers must always be properly restrained, not just because the law requires you to be.

The Advanced Airbag System in your vehicle has been certified to meet the “low risk” requirements for 3 and 6 year-old children on the passenger side and very small adults on the driver side. The low risk deployment criteria are intended to help reduce the risk of injury through interaction with the front airbag that can occur, for example, by being too

close to the steering wheel and instrument panel when the airbag inflates.

In addition, the system has been certified to comply with the “suppression” requirements of the Safety Standard, to turn off the front airbag for infants 12 months old and younger who are restrained on the front passenger seat in child restraints that are listed in the Standard ⇒ *page 140, Child restraints and Advanced Airbags*.

“Suppression” requires the front airbag on the passenger side to be turned off if:

- a child up to about one year of age is restrained on the front passenger seat in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified. For a listing of the child restraints that were used to certify your vehicle's compliance with the US Safety Standard ⇒ *page 140*,
- weight less than a threshold level stored in the control unit is detected on the front passenger seat.

When a person is detected on the front passenger seat, weighing more than the total weight of a child that is about 1 year old restrained in one of the rear-facing or forward-facing infant restraints (listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified), the front airbag on the passenger side may or may not deploy.

The **PASSENGER AIR BAG OFF** light comes on when the electronic control unit detects a total weight on the front passenger seat that requires the front airbag to be turned off. If the **PASSENGER AIR BAG OFF** light does not come on, the front airbag on the passenger side has not been turned off by the control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

If the total weight on the front passenger seat is more than that of a typical 1 year-old, ►

but less than the weight of a small adult, the front airbag on the passenger side may deploy (the **PASSENGER AIR BAG OFF** light does not come on).

For example, the airbag may deploy if:

- a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇒ *page 140*),
- a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light in the center of the instrument panel will come on and stay on.

The front airbag on the passenger side may *not* deploy (the **PASSENGER AIR BAG OFF** light does not illuminate and stay lit) if:

- a small adult or teenager is on the front passenger seat
- a passenger who is not sitting upright with their back against a non-reclined backrest with their feet on the vehicle floor in front of the seat is on the front passenger seat.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the “low risk” deployment criteria to help reduce the risk of injury through interaction with the airbag. “Low risk” deployment occurs in those crashes that take place at lower decelerations as defined in the electronic control unit ⇒ *page 128*.

Please be sure to read the important information in the sections that follow and be sure to heed all of the WARNINGS.

WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly.

- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it in-

flates - even with an Advanced Airbag
⇒ *page 117*.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- Although the Advanced Airbag System in your vehicle is designed to turn off the front airbag when a rearward-facing child restraint has been installed on the front passenger seat, nobody can absolutely guarantee that deployment is impossible in all conceivable situations that may happen during the useful life of your vehicle.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door, or roof.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up against or very near the instrument panel.

- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.
- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

Advanced Airbag System components

The front passenger seat in your vehicle has a lot of very important parts of the Advanced Airbag System in it. These parts include the weight-sensing mat, sensors, wiring, brackets, and more. The function of the system in the front passenger seat is checked by the electronic control unit when the ignition is on. The control unit monitors the Advanced Airbag System and turns the airbag indicator light on when a malfunction in the system components is detected. The function of the airbag indicator light is described in greater detail below. Because the front passenger seat contains important parts of the Advanced Airbag System, you must take care to prevent it from being damaged. Damage to the seat may prevent the Advanced Airbag for the front passenger seat from doing its job in a crash.

The front Advanced Airbag System consists of the following:

- Crash sensors in the front of the vehicle that measure vehicle acceleration/deceleration to provide information to the Advanced Airbag System about the severity of the crash.
- An electronic control unit, with integrated crash sensors for front and side impacts. The control unit “decides” whether to fire the front airbags based on the information received from the crash sensors. The control unit also “decides” whether the safety belt pretensioners should be activated.
- An Advanced Airbag with gas generator for the driver inside the steering wheel hub.
- An Advanced Airbag with gas generator inside the instrument panel for the front passenger.
- A weight-sensing mat under the upholstery padding of the front passenger seat cushion that measures the total weight on the seat. The information registered is sent continuously to the electronic control unit to regulate deployment of the front Advanced Airbag on the passenger side.
- An airbag monitoring system and indicator light in the instrument cluster ⇒ *page 128*.
- The **PASSENGER AIR BAG OFF** light comes on and stays on in the center of the instrument panel ⇒ *page 128, fig. 125* and tells you when the front Advanced Airbag on the passenger side has been turned off.
- A sensor below the safety belt latch for the front seat passenger to measure the tension on the safety belt. The tension on the safety belt and the weight registered by the weight-sensing mat help the control unit “decide” whether the front airbag for the front passenger seat should be turned off or not ⇒ *page 119, Child restraints on the front seat – some important things to know*.
- A sensor in the safety belt latch for the driver and for the front seat passenger that senses whether that safety belt is latched or not and transmits this information to the electronic control unit.



WARNING

Damage to the front passenger seat can prevent the front airbag from working properly.

- Improper repair or disassembly of the front passenger and driver seat will prevent the Advanced Airbag System from functioning properly.
- Repairs to the front passenger seat must be performed by qualified and properly trained workshop personnel.
- Never remove the front passenger or driver seat from the vehicle.

- Never remove the upholstery from the front passenger seat.
- Never disassemble or remove parts from the seat or disconnect wires from it.
- Never carry sharp objects in your pockets or place them on the seat. If the weight-sensing mat in the passenger seat is punctured it cannot work properly.
- Never carry things on your lap or carry objects on the passenger seat. Such items can increase the weight registered by the weight-sensing mat and send the wrong information to the airbag control unit.
- Never store items under the front passenger seat. Parts of the Advanced Airbag System under the passenger seat could be damaged, preventing them and the airbag system from working properly.
- Never place seat covers or replacement upholstery that have not been specifically approved by Audi on the front seats.
- Seat covers can prevent the Advanced Airbag System from recognizing child restraints or occupants on the front passenger seat and prevent the side airbag in the seat backrest from deploying properly.
- Never use cushions, pillows, blankets or similar items on the front passenger seat. The additional padding will prevent the weight-sensing mat in the seat from accurately registering the child restraint or person on the seat and prevent the Advanced Airbag System from functioning properly.
- If you must use a child restraint on the front passenger seat and the child restraint manufacturer's instructions require the use of a towel, foam cushion or something else to properly position the child restraint, make certain that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever the child restraint is installed on the front passenger seat.

- If the **PASSENGER AIR BAG OFF** light does not come on and stay on, the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

How the Advanced Airbag System components work together

The front Advanced Airbag System and the side airbags supplement the protection offered by the front three-point safety belts with pretensioners and load limiters and the adjustable head restraints to help reduce the risk of injury in a wide range of accident and crash situations. Be sure to read the important information about safety and heed the **WARNINGS** in this chapter.

Deployment of the Advanced Airbag System and the activation of the safety belt pretensioners depend on the deceleration measured by the crash sensors and registered by the electronic control unit. Crash severity depends on speed and deceleration as well as the mass and stiffness of the vehicle or object involved in the crash.

When the electronic control unit registers a low severity crash and the safety belt is being used, the airbag will not deploy. If the safety belt is not being used, the first stage deploys, followed by the second stage after a much later time in the crash sequence.

If the electronic control unit registers a crash of medium severity, the first stage of the airbag deploys followed by the second stage at a much later time in the crash sequence - regardless of whether the safety belt is being used or not. In higher severity crashes as registered by the electronic control unit, both the first and second stages deploy almost at the same time.

On the passenger side, regardless of safety belt use, the airbag will be turned off if the weight on the passenger seat is less than the ►

amount programmed in the electronic control unit. The front airbag on the passenger side will also be turned off if one of the child safety seats that has been certified under Federal Motor Vehicle Safety Standard 208 has been recognized on the seat. The **PASSENGER AIR BAG OFF** light comes on and stays on to tell you when the front Advanced Airbag on the passenger side has been turned off

⇒ page 119, *Child restraints on the front seat – some important things to know.*



WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly.

- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
 - You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag
- ⇒ page 117.

More important things to know about front airbags



Fig. 124 Inflated front airbags

Safety belts are important to help keep front seat occupants in the proper seated position so that airbags can deploy properly and provide supplemental protection in a frontal collision.

The front airbags are designed to provide additional protection for the chest and face of the driver and the front seat passenger when:

- safety belts are worn properly,

- the seats have been positioned so that the occupant is properly seated as far as possible from the airbag,
- and the head restraints have been properly adjusted.

Because airbags inflate in the blink of an eye with great force, things you have on your lap or have placed on the seat could become dangerous projectiles, and be pushed into you if the airbag inflates.

When an airbag deploys, fine dust is released. This is normal and is not caused by a fire in the vehicle. This dust is made up mostly of a powder used to lubricate the airbags as they deploy. It could irritate skin.

It is important to remember that while the supplemental airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example swelling, bruising and minor abrasions, can also happen when airbags inflate. Airbags do not protect the arms or the lower parts of the body. Front airbags supplement the three point safety belts only in some frontal collisions in which the vehicle deceleration is high enough to deploy the airbags.

Front airbags will not deploy:

- if the ignition is switched off when a crash occurs,
- in side collisions,
- in rear-end collisions,
- in rollovers,
- when the crash deceleration measured by the airbag system is less than the minimum threshold needed for airbag deployment as registered by the electronic control unit.

The front passenger airbag also will not deploy:

- when the front passenger seat is not occupied,
- when the weight on the front passenger seat as sensed by the Advanced Airbag System indicates that the front airbag on the passenger side has to be turned off by the

electronic control unit (the **PASSENGER AIR BAG OFF** light comes on and stays on).

WARNING

Sitting in the wrong position can increase the risk of serious injury in crashes.

- To reduce the risk of injury when the airbags inflate, the driver and passengers must always sit in an upright position, must not lean against or place any part of their body too close to the area where the airbags are located.
- Occupants who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds with great force in the blink of an eye
⇒ page 119.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on, the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

WARNING

Objects between you and the airbag will increase the risk of injury in a crash by interfering with the way the airbag unfolds

or by being pushed into you as the airbag inflates.

- Never hold things in your hands or on your lap when the vehicle is in use.
- Never transport items on or in the area of the front passenger seat. Objects could move into the area of the front airbags during braking or other sudden maneuvers and become dangerous projectiles that can cause serious personal injury if the airbags inflate.
- Never place or attach accessories or other objects (such as cup holders, telephone brackets, large, heavy or bulky objects) on the doors, over or near the area marked "AIRBAG" on the steering wheel, instrument panel, seat backrests or between those areas and yourself. These objects could cause injury in a crash, especially when the airbags inflate.
- Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury, particularly when the seat is reclined.

WARNING

The fine dust created when airbags deploy can cause breathing problems for people with a history of asthma or other breathing conditions.

- To reduce the risk of breathing problems, those with asthma or other respiratory conditions should get fresh air right away by getting out of the vehicle or opening windows or doors.
- If you are in a collision in which airbags deploy, wash your hands and face with mild soap and water before eating.
- Be careful not to get the dust into your eyes, or into any cuts or scratches.
- If the residue should get into your eyes, flush them with water.

Monitoring the Advanced Airbag System

Airbag monitoring indicator light

Two separate indicators monitor the function of the Advanced Airbag System: the airbag monitoring indicator light and the **PASSENGER AIR BAG OFF** light.

The Advanced Airbag System (including the electronic control unit, sensor circuits and system wiring) is monitored continuously to make sure that it is functioning properly whenever the ignition is on. Each time you turn on the ignition, the airbag monitoring indicator light  will come on for a few seconds (self diagnostics).

The system must be inspected when the indicator light :

- does not come on when the ignition is switched on,
- does not go out a few seconds after you have switched on the ignition, or
- comes on while driving.

If an airbag system malfunction is detected, the indicator light will first start flashing to catch the driver's attention and then stay on continuously to serve as a constant reminder to have the system inspected immediately.

If a malfunction occurs that turns the front airbag on the passenger side off, the **PASSENGER AIR BAG OFF** light will come on and stay on whenever the ignition is on.



WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.

- If the airbag indicator light comes on, it means that there may be something wrong with the Advanced Airbag System. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

- Have the airbag system inspected immediately by your authorized Audi dealer.

PASSENGER AIR BAG OFF light



Fig. 125 Section from the instrument panel: PASSENGER AIR BAG OFF light

The **PASSENGER AIR BAG OFF** light is located in the center of the instrument panel
⇒ *fig. 125*.

The **PASSENGER AIR BAG OFF** light will come on and stay on to tell you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit. Each time you turn on the ignition, the **PASSENGER AIR BAG OFF** light will flash for a few seconds and:

- will stay on if the front passenger seat is not occupied,
- will stay on if there is a small child or child restraint on the front passenger seat,
- will go out if the front passenger seat is occupied by an adult as registered by the weight-sensing mat.

The PASSENGER AIR BAG OFF light must come on and stay on if the ignition is on and

- a car bed has been installed on the front seat, or
- a rearward-facing child restraint has been installed on the front passenger seat, or
- a forward-facing child restraint has been installed on the front passenger seat, or
- the weight registered on the front passenger seat is equal to or less than the combined weight of a typical 1 year-old restrained in one of the rear-facing or forward-facing infant restraints listed in Federal Motor

Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified.

If the front passenger seat is not occupied, the front airbag will not deploy, and the **PASSENGER AIR BAG OFF** light will stay on. Never install a rearward-facing child restraint on the front passenger seat ⇒ *page 119, Child restraints on the front seat – some important things to know* and ⇒ *page 138, Child Safety*.

If the PASSENGER AIR BAG OFF light comes on when one of the conditions listed above is met, be sure to check the light regularly to make certain that the **PASSENGER AIR BAG OFF** light stays on continuously whenever the ignition is on. If the **PASSENGER AIR BAG OFF** light does not appear on and stay on all the time, stop as soon as it is safe to do so and

- reactivate the system by turning the ignition off and then turning it on again;
- remove and reinstall the child restraint. Make sure that the child restraint is properly installed and that the safety belt for the front passenger seat has been correctly routed through the child restraint as described in the child restraint manufacturer's instructions;
- make sure that the convertible locking feature on the safety belt for the front passenger seat has been activated and that the safety belt has been pulled tight. The belt must not be loose or have loops of slack so that the sensor below the safety belt latch on the seat can do its job ⇒ *page 146*;
- make sure that things that may increase the weight of the child and child safety seat are not being transported on the front passenger seat;
- make sure that the safety belt tension sensor is not blocked. Shake the safety belt latch on the front passenger seatback and forth;
- If a strap or tether is being used to tie the child safety seat to the front passenger seat, make sure that it is not so tight that it

causes the weight-sensing mat to measure more weight than is actually on the seat.

If the PASSENGER AIR BAG OFF light still does not come on and does not stay on continuously (when the ignition is switched on),

- take the child restraint off the front passenger seat and have the airbag system inspected by your authorized Audi dealer. Do not transport children without a child safety seat.

The **PASSENGER AIR BAG OFF** light should NOT come on when the ignition is on and an adult is sitting in a proper seating position on the front passenger seat. If the **PASSENGER AIR BAG OFF** light comes on and stays on or flashes for about 5 seconds while driving, under these circumstances, make sure that:

- the adult on the front passenger seat is properly seated on the center of the seat cushion with his or her back up against the backrest and the backrest is not reclined ⇒ *page 100, Proper occupant seating positions*,
- the adult is not taking weight off the seat by holding on to the passenger assist handle above the front passenger door or supporting their weight on the armrest,
- the safety belt is being properly worn and that there is not a lot of slack in the safety belt webbing,
- accessory seat covers or cushions or other things that may cause an incorrect reading or impression on the weight-sensing mat under the upholstery of the seat have been removed from the front passenger seat,
- a safety belt extender has not been left in the safety belt latch for the front passenger seat.

In addition to the **PASSENGER AIR BAG OFF** light in the center of the instrument panel, the message **PASSENGER AIR BAG OFF** or **PASSENGER AIR BAG ON** will briefly appear in the instrument cluster display. This is to inform the driver of the current front passenger airbag status.

Important safety instructions on monitoring the Advanced Airbag System

WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.

- If the airbag indicator light comes on, it means that there may be something wrong with the Advanced Airbag System. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.
- Have the airbag system inspected immediately by your authorized Audi dealer.

WARNING

If the front airbag inflates, a child without a child restraint, or in a rearward-facing child safety seat, or in a forward-facing child restraint that has not been properly installed will be seriously injured and can be killed.

- Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially 12 years and younger, always ride properly restrained for their age and size.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay, on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.
- A tight tether or other strap on a rearward-facing child restraint attached to the front passenger seat can put too much pressure on the weight-sensing mat in the seat and register more weight than is actually on the seat. The heavier weight registered can make the system

work as though an adult were on the seat and deploy the Advanced Airbag when it must be suppressed, causing serious or even fatal injury to the child.

- If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger seat, always move the seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible. The backrest must be adjusted to an upright position. Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

WARNING

- If the **PASSENGER AIR BAG OFF** light does not go out when an adult is sitting on the front passenger seat after taking the steps described above, have the airbag system inspected by your authorized Audi dealer before transporting anyone on the front passenger seat.

Tips

If the weight-sensing mat in the front passenger seat detects an empty seat, the front airbag on the passenger side will be turned off, and the **PASSENGER AIR BAG OFF** will stay on.

Care, service and disposal of the airbags

Parts of the airbag system are installed at many different places on your Audi. Installing, removing, servicing or repairing a part in an area of the vehicle can damage a part of an airbag system and prevent that system from working properly in a collision.

There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment. ►

 WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing an airbag from deploying when needed or deploying an airbag unexpectedly:

- Never cover, obstruct, or change the steering wheel horn pad or airbag cover or the instrument panel or modify them in any way.
- Never attach any objects such as cup holders or telephone mountings to the surfaces covering the airbag units.
- For cleaning the horn pad or instrument panel, use only a soft, dry cloth or one moistened with plain water. Solvents or cleaners could damage the airbag cover or change the stiffness or strength of the material so that the airbag cannot deploy and protect properly.
- Never repair, adjust, or change any parts of the airbag system.
- All work on the steering wheel, instrument panel, front seats or electrical system (including the installation of audio equipment, cellular telephones and CB radios, etc.) must be performed by a qualified technician who has the training and special equipment necessary.
- For any work on the airbag system, we strongly recommend that you see your authorized Audi dealer or qualified workshop.
- Never modify the front bumper or parts of the vehicle body.
- Always make sure that the side airbag can inflate without interference:
 - Never install seat covers or replacement upholstery over the front seatbacks that have not been specifically approved by Audi.
 - Never use additional seat cushions that cover the areas where the side airbags inflate.
 - Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired

immediately by an authorized Audi dealer.

- The airbag system can be activated only once. After an airbag has inflated, it must be replaced by an authorized Audi dealer or qualified technician who has the technical information, training and special equipment necessary.
- The airbag system can be deployed only once. After an airbag has been deployed, it must be replaced with new replacement parts designed and approved especially for your Audi model version. Replacement of complete airbag systems or airbag components must be performed by qualified workshops only. Make sure that any airbag service action is entered in your Audi Warranty & Maintenance booklet under *AIRBAG REPLACEMENT RECORD*.
- For safety reasons in severe accidents, the alternator and starter are separated from the vehicle battery with a pyrotechnic circuit interrupter.
 - Work on the pyrotechnic circuit interrupter must only be performed by a qualified dealer - risk of an accident!
 - If the vehicle or the circuit interrupter is scrapped, all applicable safety precautions must be followed.


For the sake of the environment

Undeployed airbag modules and pretensioners might be classified as Perchlorate Material - special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Other things that can affect Advanced Airbag performance

Changing the vehicle's suspension system can change the way that the Advanced Airbag System performs in a crash. For example, using tire-rim combinations not approved by Audi, lowering the vehicle, changing the stiffness of the suspension, including the springs, suspension struts, shock absorbers etc. can change the forces that are measured by the airbag sensors and sent to the electronic control unit. Some suspension changes can, for example, increase the force levels measured by the sensors and make the airbag system deploy in crashes in which it would not deploy if the changes had not been made. Other kinds of changes may reduce the force levels measured by the sensors and prevent the airbag from deploying when it should.

The sensors in the safety belt buckle for the driver and front passenger seat tell the electronic control module if the safety belt is latched or not. If the safety belt is being used, the front airbag will deploy at a slightly higher rate of vehicle deceleration than if the safety belt is not being used. Therefore, in a particular collision, it is possible that an airbag will not deploy at a seating position where the safety belt is being used but will inflate at the position where the safety belt is not being used. It is important that nothing interfere with the safety belt buckles so that the sensors can send the correct information about safety belt use to the electronic control unit.

! WARNING

Changing the vehicle's suspension including use of unapproved tire-rim combinations can change Advanced Airbag performance and increase the risk of serious personal injury in a crash.

- Never install suspension components that do not have the same performance characteristics as the components originally installed on your vehicle.
- Never use tire-rim combinations that have not been approved by Audi.

! WARNING

Items stored between the safety belt buckle and the center console can cause the sensors in the buckle to send the wrong information to the electronic control module and prevent the Advanced Airbag System from working properly.

- Always make sure that nothing can interfere with the safety belt buckles and that they are not obstructed.



For the sake of the environment

Undeployed airbag modules and pretensioners might be classified as Perchlorate Material - special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Knee airbags

Description of knee airbags

The airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 126 Driver's airbag

The airbag for the driver is located in the instrument panel underneath the steering wheel ⇒ *fig. 126*, the airbag for the passenger is at about the same height in the instrument panel underneath the glove compartment. ►

The knee airbag offers additional protection to the driver's and passenger's knees and upper and lower thigh areas as a supplement to the safety belts.

If the front airbags deploy, the knee airbags also deploy in frontal collisions above a certain severity ⇒ *page 126, More important things to know about front airbags.*

Besides their normal safety function, safety belts work to help keep the driver or front passenger in position in case of a frontal collision so that the airbags can provide protection.

The airbag system is not a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is why you should always wear your safety belt, not just because the law requires you to do so ⇒ *page 110, Why safety belts?*

The safety belt buckle for the driver and front seat passenger have switches that tell the airbag control module if the safety belt is being used or not. If the safety belt is being used, the knee airbag will deploy at a slightly higher rate of deceleration than if the belt is not being used. Therefore, in a particular collision, it is possible that an airbag will not deploy at a seating position where the safety belt is being used but will inflate at the position where the safety belt is not being used.

Remember too, airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed, for example when your vehicle strikes or is struck by another after the first collision.

This is just one of the reasons why an airbag is not a substitute for the safety belt. The airbag system works most effectively when used with the safety belts. Therefore, always wear your safety belts correctly.

It is important to remember that while the supplemental airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising, and minor abrasions can also be associated with airbags.

The knee airbag system basically consists of:

- The electronic control module
- Two inflatable airbags (airbag and gas generator), one for the driver and one for the front passenger
- The airbag indicator light in the instrument panel

The knee airbag system will not deploy:

- when the ignition is turned off
- in front-end collisions when the deceleration measured by the control unit is too low
- in side collisions
- in rear-end collisions
- in rollovers
- in the event of a system malfunction (warning/indicator light illuminated) ⇒ *page 17.*



WARNING

- Safety belts and the airbag system can only provide protection when occupants are in the proper seating position ⇒ *page 126.*
- If the airbag indicator light comes on when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. The airbag may not work properly when the vehicle acceleration in a side collision is high enough to deploy the airbag. See also ⇒ *page 17.*

How knee airbags work

The risk of injury to the leg area is reduced by fully deployed knee airbags.

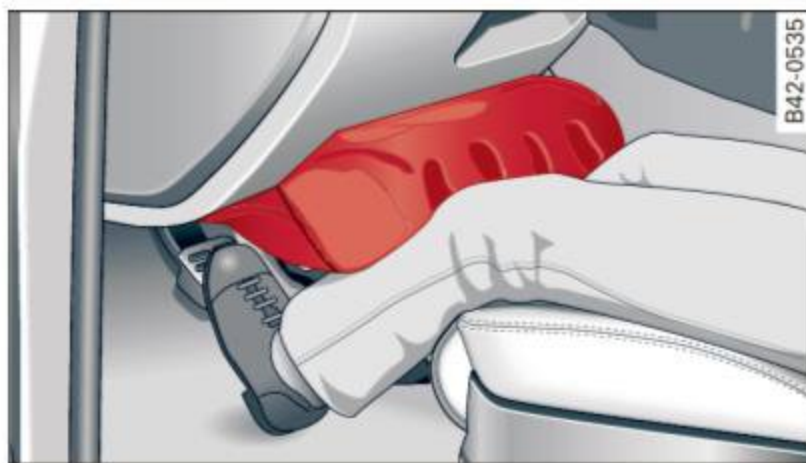


Fig. 127 Inflated airbags protecting in a frontal collision

The knee airbag system has been designed so that the airbags for the driver and front passenger are deployed in certain but not all frontal collisions.

If the front airbags deploy, the knee airbags also deploy in frontal collisions above a certain severity.

When the system is deployed, the airbags start to fill with a propellant gas, and inflate between the lower part of the instrument panel and the driver and the lower part of the instrument panel and the front passenger
⇒ page 126, fig. 124.

Although they are not a soft pillow, they can “cushion” the impact and in this way they can help to reduce the risk of injury to the lower extremities.

All this takes place instantaneously, so fast that many people don't even realize that the airbags have deployed. The airbags also inflate with a great deal of force and it is important for occupant safety that nothing should be in their way when they deploy.

Fully inflated airbags in combination with properly worn safety belts slow down and limit the occupant's forward movement and help to reduce the risk.

Important safety instructions on the knee airbag system

Airbags are only supplemental restraints. Always wear safety belts correctly and ride in a proper seating position.

There is a lot that you and your passengers must know and do to help the safety belts and airbags to provide supplemental protection.



WARNING

An inflating knee airbag can cause serious injury. Wearing safety belts incorrectly and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- The airbag system cannot protect you properly if you are seated too close to any of the airbag locations. When adjusting their seat positions, it is important that both the driver and the front passenger keep their upper bodies and knees at the following minimum safe distances:
 - 10 inches (25 cm) between the chest and the steering wheel/instrument panel.
 - 4 inches (10 cm) between the knees and the lower part of the instrument panel.
- The risk of personal injury increases if you lean forward or to the side, or if the seat is improperly positioned and you are not wearing your safety belt. The risk increases even more should the airbag deploy.
- Always make sure that the knee airbag can inflate without interference. Objects between yourself and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys or by being pushed into you as the airbag deploys.
- No persons (children) or animals should ride in the footwell in front of

the passenger seat. If the airbag deploys, this can result in serious or fatal injuries.

- No objects of any kind should be carried in the footwell area in front of the driver's or passenger's seat. Bulky objects (shopping bags, for example) can hamper or prevent proper deployment of the airbag. Small objects can be thrown through the vehicle if the airbag deploys and injure you or your passengers.
- Make sure there are no cracks, deep scratches or other damage in the area of the instrument panel where the knee airbags are located.
- If children are incorrectly seated, their risk of injury increases in the case of an accident ⇒ *page 138, Child Safety*.

Side airbags

Description of side airbags

The airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 128 Side airbag location in the driver's seat

The side airbags are located in the sides of the front seat backrests ⇒ *fig. 128* facing the doors. They are identified by the word "AIR-BAG".

The side airbag system basically consists of:

- the electronic control module and external side impact sensors
- the two side airbags located in the sides of the front backrests

- the airbag warning light in the instrument cluster.

The airbag system is monitored electronically to make certain that it is functioning properly at all times. Each time you turn on the ignition, the airbag system indicator light will come on for a few seconds (self diagnostics).

The side airbag system supplements the safety belts and can help to reduce the risk of injury to the driver's and front passenger's upper torso and head injuries on the side of the vehicle that is struck in a side collision. The airbag deploys only in side impacts and only when the vehicle acceleration registered by the control unit is high enough. If this rate is below the reference value programmed into the control unit, the side airbags will not be triggered, even though the car may be badly damaged as a result of the collision. It is not possible to define an airbag triggering range that will cover every possible angle of impact, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the impacting object, the angle of impact, vehicle speed, etc. ⇒ *page 137, Important safety instructions on the side airbag system*.

Aside from their normal safety function, safety belts work to help keep the driver or front passenger in position in the event of a side collision so that the side airbags can provide protection.

The airbag system is *not* a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the side airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is another reason why you should always wear your safety belts, not just because the law requires you to do so ⇒ *page 110, Why safety belts?*

It is important to remember that while the supplemental side airbag system is designed to reduce the likelihood of serious injuries,

other injuries, for example, swelling, bruising, and minor abrasions can also be associated with deployed side airbags. Remember too, side airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection.

Vehicle damage, repair costs or even the lack of vehicle damage are not necessarily an indication of over-sensitive or failed airbag activation. In some collisions, both front and side airbags may inflate. Remember too, that airbags will deploy only once and only in certain kinds of collisions - your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed.

The side airbag system will not deploy:

- when the ignition is turned off
- in side collisions when the acceleration measured by the sensor is too low
- in front-end collisions
- in rear-end collisions
- in rollovers.

In some types of accidents the front airbags and side airbags may be triggered together.



WARNING

- Safety belts and the airbag system will only provide protection when occupants are in the proper seating position ⇒ *page 137*.
- If the airbag indicator light comes on when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. The airbag may not work properly when the vehicle acceleration in a side collision is high enough to activate the airbag.

How supplemental side airbags work

Side airbags deploy instantly and can help reduce the risk of upper torso injuries for occupants who are properly restrained.



Fig. 129 Inflated side airbags on left side of vehicle

When the system is triggered, the airbag is filled with propellant gas and breaks through a seam in the seat surface area marked "AIR-BAG". It expands between the side trim panel and the passenger. In order to help provide this additional protection, the side airbag must inflate within a fraction of a second at very high speed and with great force. The supplemental side airbag could injure you if your seating position is not proper or upright or if items are located in the area where the supplemental side airbag expands. This applies especially to children ⇒ *page 138, Child Safety*. Supplemental side airbags inflate between the occupant and the door panel on the side of the vehicle that is struck in certain side collision ⇒ *fig. 129*.

Although they are not a soft pillow, they can "cushion" the impact and in this way they can help to reduce the risk of injury to the upper part of the body.

A fine dust may develop when the airbag deploys. This is normal and does not mean there is a fire in the vehicle.

Important safety instructions on the side airbag system

Airbags are only supplemental restraints. Always properly wear safety belts and ride in a proper seating position.

There is a lot that you and your passengers must know and act accordingly to help the safety belts and airbags do their job to provide supplemental protection.

WARNING

An inflating side airbag can cause serious or fatal injury. Improperly wearing safety belts and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- In order to reduce the risk of injury when the supplemental side airbag inflates:
 - Always sit in an upright position and never lean against the area where the supplemental side airbag is located.
 - Never let a child or anyone else rest their head against the side trim panel in the area where the supplemental side airbag inflates.
 - Always make sure that safety belts are worn correctly,
 - Do not let anyone sitting in the front seat put their hand or any other parts of their body out of the window.
- Always make sure that the side airbag can inflate without interference.
 - Never install seat covers or replacement upholstery over the front seat backs that have not been specifically approved by Audi.
 - Never use additional seat cushions that cover the areas where the side airbags deploy.
 - Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.

- Objects between you and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys or by being pushed into you as the airbag inflates.
- Never place or attach accessories or other objects (such as cup holders, telephone brackets, or even large, bulky objects) on the doors, over or near the area marked “AIRBAG” on the seat backrests.
- Such objects and accessories can become dangerous projectiles and cause injury when the supplemental side airbag deploys.
- Never carry any objects or pets in the deployment space between them and the airbags or allow children or other passengers to travel in this position.
- Always prevent the side airbags from being damaged by heavy objects knocking against or hitting the sides of the seat-backs.
- The airbag system can only be triggered once. If the airbag has been triggered, the system must be replaced by an authorized Audi dealer.
- Damage (cracks, deep scratches etc.) to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
- If children are seated improperly, their risk of injury increases in the case of an accident ⇒ *page 138, Child Safety*.
- Never attempt to modify any components of the airbag system in any way.

Child Safety

Important things to know

Introduction

The physical principles of what happens when your vehicle is in a crash apply also to children ⇒ *page 112*. But unlike adults and teenagers, their muscles and bones are not fully developed. In many respects children are at greater risk of serious injury in crashes than adults.

Because children's bodies are not fully developed, they require restraint systems especially designed for their size, weight, and body structure. Many countries and all states of the United States and provinces of Canada have laws requiring the use of approved child restraint systems for infants and small children.

In a frontal crash at a speed of 20-35 mph (30-56 km/h) the forces acting on a 13-pound (6 kg) infant will be more than 20 times the weight of the child. This means the weight of the child would suddenly be more than 260 pounds (120 kg). Under these conditions, only an appropriate child restraint properly used can reduce the risk of serious injury. Child restraints, like adult safety belts, must be used properly to be effective. Used improperly, they can increase the risk of serious injury in an accident.

Consult the child safety seat manufacturer's instructions in order to be sure the seat is right for your child's size ⇒ *page 141, Important safety instructions for using child safety seats*. Please be sure to read and heed all of the important information and WARNINGS about child safety, Advanced Airbags, and the installation of child restraints in this chapter.

There is a lot you need to know about the Advanced Airbags in your vehicle and how they work when infants and children in child restraints are on the front passenger seat. Because of the large amount of important information, we cannot repeat it all here. We urge you to read the detailed information in this

owner's manual about airbags and the Advanced Airbag System in your vehicle and the very important information about transporting children on the front passenger seat. Please be sure to heed the WARNINGS - they are extremely important for your safety and the safety of your passengers, especially infants and small children.

 **WARNING**

All vehicle occupants and especially children must be restrained properly whenever riding in a vehicle. An unrestrained or improperly restrained child could be injured by striking the interior or by being ejected from the vehicle during a sudden maneuver or impact. An unrestrained or improperly restrained child is also at greater risk of injury or death through contact with an inflating airbag.

 **WARNING**

Children on the front seat of any car even with Advanced Airbags can be seriously injured or even killed when an airbag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on, the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

 WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Always follow the manufacturer's instructions provided with the child safety seat or carrier.
- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible before installing the child restraint. The backrest must be adjusted to an upright position.
- Always make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

Advanced front airbag system and children

Your vehicle is equipped with an “Advanced Airbag System” in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208 as applicable at the time your vehicle was manufactured.

The Advanced Airbag system in your vehicle has been certified to meet the “low-risk” requirements for 3- and 6- year-old children on the passenger side and small adults on the driver side. The low risk deployment criteria are intended to reduce the risk of injury through interaction with the airbag that can occur, for example, by being too close to the steering wheel and instrument panel when the airbag inflates. In addition, the system has been certified to comply with the “suppression” requirements of the Safety Standard, to turn off the front airbag for infants up to 12 months who are restrained on the front passenger seat in child restraints that are listed in the Standard.

Even though your vehicle is equipped with an Advanced Airbag system, a child should always ride in the seat properly restrained for its age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a larger child in a rearward-facing seat.

Advanced Airbags and the weight-sensing mat in the front seat

The Advanced Airbag System in your vehicle detects the presence of an infant or child in a child restraint on the front passenger seat using the weight-sensing mat in the seat cushion and the sensor below the safety belt latch on the front passenger seat that measures the tension on the safety belt.

The weight-sensing mat measures total weight of the child and the child safety seat and a child blanket on the front passenger seat. The weight on the front passenger seat is related to the design of the child restraint and its “footprint”, the size and shape of the bottom of the child restraint as it sits on the seat. The weight of a child restraint and its “footprint” vary for different kinds of child restraints and for the different models of the same kind of child restraint offered by child restraint manufacturers.

The weight ranges for the individual types, makes and models of child restraints that the NHTSA has specified in the Safety Standard together with the weight ranges of typical infants and typical 1 year-old child have been stored in the control unit of the Advanced Airbag System. When a child restraint is being used on the front passenger seat with a typical 1 year-old child, the Advanced Airbag System compares the weight measured by the weight sensing mat with the information stored in the electronic control unit.

The electronic control unit also registers the tension on the front passenger safety belt. ►

The tension on the safety belt for the front passenger seat will be different for an adult who is properly using the safety belt as compared to the tension on the belt when it is used to attach a child restraint to the seat. The sensor below the latch for the safety belt for the front seat passenger measures the

tension on the belt. The input from this sensor is then used with the weight to “decide”, whether there is a child restraint with a typical 1 year-old child on the front passenger seat and whether or not the airbag must be turned off.

Child restraints and Advanced Airbags

Regardless of the child restraint that you use, make sure that it has been certified to meet United States Federal Motor Vehicle Safety Standards and has been certified by its manufacturer for use with an airbag. If in exceptional circumstances you must use it on the front passenger seat, carefully read all of the information on child safety and Advanced Airbags and heed all of the applicable WARNINGS. Make certain that the child restraint is correctly recognized by the weight-sensing mat inside the front passenger seat, that the front passenger airbag is turned off and that the airbag status is always correctly signaled by the **PASSENGER AIR BAG OFF** light.

Many types and models of child restraints have been available over the years, new models are introduced regularly incorporating new and improved designs and older models are taken out of production. Child restraints are

not standardized. Child restraints of the same type typically have different weights and sizes and different 'footprints,' the size and shape of the bottom of the child restraint that sits on the seat, when they are installed on a vehicle seat. These differences make it virtually impossible to certify compliance with the requirements for advanced airbags with each and every child restraint that has ever been sold in the past or will be sold over the course of the useful life of your vehicle.

For this reason, the United States National Highway Traffic Safety Administration has published a list of specific type, makes and models of child restraints that must be used to certify compliance of the Advanced Airbag System in your vehicle with the suppression requirements of Federal Motor Vehicle Safety Standard 208. These child restraints are:

Subpart A – Car bed child restraints

Model	Manufactured on or after
Angel Guard Angel Ride AA2403FOF	September 25, 2007

Subpart B – Rear-facing child restraints

Model	Manufactured on or after
Century SmartFit 4543	December 1, 1999
Cosco Arriva 22-013PAW and base 22-999WHO	September 25, 2007
Evenflo Discovery Adjust Right 212	December 1, 1999
Evenflo First Choice 204	December 1, 1999
Graco Infant 8457	December 1, 1999
Graco Snugride	September 25, 2007
Peg Perego Primo Viaggio SIP IMUN00US	September 25, 2007

Subpart C – Forward-facing and convertible child restraints

Model	Manufactured on or after
Britax Roundabout E9L02xx	September 25, 2007
Cosco Touriva 02519	December 1, 1999
Cosco Summit Deluxe High Back Booster 22-262	September 25, 2007
Cosco High Back Booster 22-209	September 25, 2007
Evenflo Tribute V 379xxxx	September 25, 2007
Evenflo Medallion 254	December 1, 1999
Evenflo Generations 352xxxx	September 25, 2007
Graco ComfortSport	September 25, 2007
Graco Toddler Safety Seat Step 2	September 25, 2007
Graco Platinum Cargo	September 25, 2007

 WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

 Tips

The child seats listed in categories A to C have been tested by Audi only for the Advanced Airbag function.

Important safety instructions for using child safety seats

Correct use of child safety seats substantially reduces the risk of injury in an accident!

As the driver, you are responsible for the safety of everybody in the vehicle, especially children:

- ▶ Always use the right child safety seat for each child and always use it properly
⇒ *page 143*.
- ▶ Always carefully follow the child safety seat manufacturer's instructions on how to route the safety belt properly through the child safety seat.
- ▶ When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇒ *page 146*.
- ▶ Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).
- ▶ If a strap or tether is being used to tie the child safety seat to the front passenger seat, make sure that it is not so tight that it causes the weight-sensing mat to measure more weight than is actually on the seat.

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, a ▶

child should always ride in the seat properly restrained for its age and size.



WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death.

- All vehicle occupants and especially children must always be restrained properly whenever riding in a vehicle.
- An unrestrained or improperly restrained child can be injured or killed by being thrown against the inside of the vehicle or by being ejected from it during a sudden maneuver or impact.
- An unrestrained or improperly restrained child is at much greater risk of injury or death by being struck by an inflating airbag.
- Commercially available child safety seats are required to comply with U.S. Federal Motor Vehicle Safety Standard (FMVSS) 213 (in Canada CMVSS 213).
- When buying a child restraint, select one that fits your child and the vehicle.
- Only use child restraint systems that fully contact the flat portion of the seat cushion. The child restraint must not tip or lean to either side. Audi does not recommend using child safety seats that rest on legs or tube-like frames. They do not provide adequate contact with the seat.
- Always heed all legal requirements pertaining to the installation and use of child safety seats and carefully follow the instructions provided by the manufacturer of the seat you are using.
- Never let more than one child occupy a child safety seat.
- Never let babies or older children ride in a vehicle while sitting on the lap of another passenger.
- Holding a child in your arms is never a substitute for a child restraint system.

- The strongest person could not hold the child with the forces that exist in an accident. The child will strike the interior of the vehicle and can also be struck by the passenger.
- The child and the passenger can also injure each other in an accident.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.
- Forward-facing child safety seats installed on the front passenger's seat can interfere with the airbag when it inflates and cause serious injury to the child.
- If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:
 - Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
 - Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
 - Always move the front passenger seat into the rearmost position of the passenger seat's fore and aft adjustment range, and as far away from the airbag as possible before installing the child restraint.
 - Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
 - Always make sure that the backrest is in the upright position.

- Always buckle the child safety seat firmly in place even if a child is not sitting in it. A loose child safety seat can fly around during a sudden stop or in a collision.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 109, Safety belts*, ⇒ *page 117, Airbag system* and ⇒ *page 138, Child Safety*.

! WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

Child safety seats

Infant seats

Babies and infants up to about one year old and 20 lbs. or 9 kg need special rearward-facing child restraints that support the back, neck and head in a crash.



Fig. 130 Rearward-facing infant seat, properly installed on the passenger seat

- ▶ When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇒ *page 146*.
- ▶ Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).

Infants up to about one year (20 lbs. or 9 kg) are best protected in special infant carriers and child safety seats designed for their age group. Many experts believe that infants and small children should ride only in special restraints in which the child faces the back of the vehicle. These infant seats support the baby's back, neck and head in a crash ⇒ *fig. 130*.

! WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a crash.

- Never install a rear-facing child restraint in the forward-facing direction. Such restraints are designed for the special needs of infants and very small children and cannot protect them properly if the seat is forward-facing.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 109, Safety belts*, ⇒ *page 117, Airbag system* and ⇒ *page 138, Important things to know*.

Convertible child safety seats

Properly used convertible child safety seats can help protect toddlers and children over age one who weigh between 20 and 40 lbs. (9 and 18 kg) in a crash.

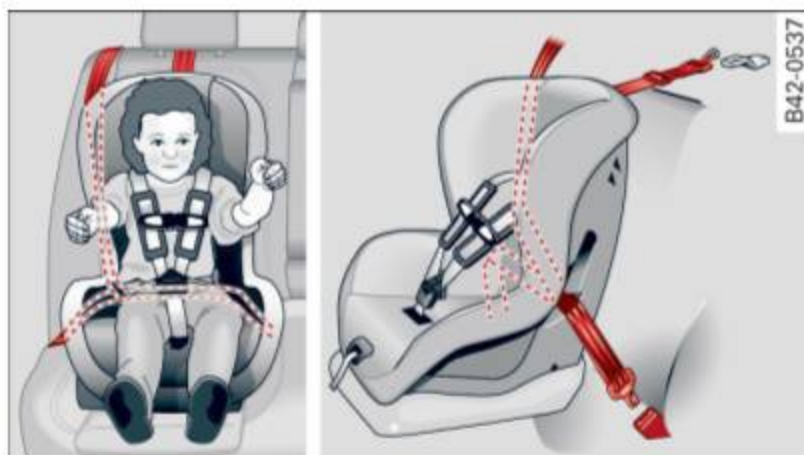


Fig. 131 Schematic overview: installation of the seat using the vehicle's safety belt system

- ▶ When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇒ *page 146*.
- ▶ Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm) ⇒ *page 146*.

A toddler or child is usually too large for an infant restraint if it is more than one year old and weighs more than 20 lbs. (9 kg).

Toddlers and children who are older than one year up to about 4 years old and weigh more than 20 lbs. (9 kg) up to 40 lbs. (18 kg) must always be properly restrained in a child safety seat certified for their size and weight ⇒ *fig. 131*.



WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a collision or other emergency situation.

- Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an air-

bag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates – even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on have the airbag system inspected immediately by your authorized Audi dealer.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 109, Safety belts*, ⇒ *page 117, Airbag system* and ⇒ *page 138, Important things to know*.



WARNING

If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:

- Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Always follow the manufacturer's instructions provided with the child safety seat or carrier.
- Always move the front passenger seat into the rearmost position of the passenger seat's fore and aft adjustment range, and as far away from the airbag as possible before installing the child restraint.
- Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.

- Always make sure the backrest is in an upright position.
- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.
- If the light does not stay on, perform the checks ⇒ *page 128, Monitoring the Advanced Airbag System*.
- If the **PASSENGER AIR BAG OFF** light does not come on and stay on have the airbag system inspected immediately by your authorized Audi dealer.

Booster seats and safety belts

Properly used booster seats can help protect children weighing between about 40 lbs. and 80 lbs. (18 kg and 36 kg) who are less than 4 ft. 9 in. (57 inches/1.45 meters) tall.



Fig. 132 Passenger seat: child properly restrained in a booster seat

The vehicle's safety belts alone will not fit most children until they are at least 4 ft. 9 in. (57 inches/1.45 meters) tall and weigh about 80 lbs. (36 kg). Booster seats raise these children up so that the safety belt will pass properly over the stronger parts of their bodies and the safety belt can help protect them in a crash.

- ▶ Do not use the convertible locking retractor when using the vehicle's safety belt to restrain a child on a booster seat.
- ▶ Always position the shoulder portion of the safety belt midway over the child's shoulder.
- ▶ Always make sure that the shoulder portion of the safety belt never rests against or across the child's neck.

- ▶ Always make sure that the child can properly wear the lap portion of the belt low across the thighs or pelvis and *never* over the stomach or abdomen.

Children up to at least 8 years old (over 40 lbs. or 18 kg) are best protected in child safety seats designed for their age and weight. Experts say that the skeletal structure, particularly the pelvis, of these children is not fully developed, and they must not use the vehicle safety belts without a suitable child restraint.

It is usually best to put these children in appropriate booster seats. Be sure the booster seat meets all applicable safety standards.

Booster seats raise the seating position of the child and reposition both the lap and shoulder parts of the safety belt so that they pass across the child's body in the right places. The routing of the belt over the child's body is very important for the child's protection, whether or not a booster seat is used.

Children who are at least 4 ft. 9 in. (57 inches/1.45 meters) tall can generally use the vehicle's three point lap and shoulder belts. Never use the lap belt portion of the vehicle's safety belt alone to restrain any child, regardless of how big the child is. Always remember that children do not have the pronounced pelvic structure required for the proper function of lap belt portion of the vehicle's three point lap and shoulder belts. The child's safety absolutely requires that a lap belt portion of the safety belt be fastened snugly and as low as possible around the pelvis. Never let the lap belt portion of the safety belt pass over the child's stomach or abdomen.

In a crash, airbags must inflate within a blink of an eye and with considerable force. In order to do its job, the airbag needs room to inflate so that it will be there to protect the occupant as the occupant moves forward into the airbag.

A vehicle occupant who is out of position and too close to the airbag gets in the way of an inflating airbag. When an occupant is too close, he or she will be struck violently and

will receive serious or possibly even fatal injury.

In order for the airbag to offer protection, it is important that all vehicle occupants, especially any children, who must be in the front seat because of exceptional circumstances, be properly restrained and as far away from the airbag as possible. By keeping room between the child's body and the front of the passenger compartment, the airbag can inflate completely and provide supplemental protection in certain frontal collisions.



WARNING

Not using a booster seat, using the booster seat improperly, incorrectly installing a booster seat or using the vehicle safety belt improperly increases the risk of serious personal injury and death in a collision or other emergency situation. To help reduce the risk of serious personal injury and/or death:

- Always make sure to position the shoulder portion of the three-point belt over the middle of child's shoulder.
- Never let the shoulder portion of the belt rest against or across the neck, face, chin, or throat of the child.
- Always make sure the lap belt portion of the three-point belt is worn snug and passes as low as possible across the child's pelvis. Never let the belt pass over the soft abdomen.
- Failure to properly route safety belts over a child's body will cause severe injuries in an accident or other emergency situation ⇒ *page 109*.
- Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an airbag inflates.
- Never let a child stand or kneel on the seat.
- Never let a child ride in the cargo area of your vehicle.
- Always remember that a child leaning forward, sitting sideways or out of posi-

tion in any way during an accident can be struck by a deploying airbag. This will result in serious personal injury or death.

- If you must install a booster seat on the front passenger seat because of exceptional circumstances the **PASSENGER AIR BAG OFF** light must come on and stay on, whenever the ignition is switched on.
- If the **PASSENGER AIR BAG OFF** light does not come on and stay on, perform the checks described ⇒ *page 128, Monitoring the Advanced Airbag System*.
- If the **PASSENGER AIR BAG OFF** light does not come on and stay on whenever the ignition is switched on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your Audi dealer.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 109, Safety belts*, ⇒ *page 117, Airbag system* and ⇒ *page 138, Important things to know*.

Installing a child safety seat

Securing a child safety seat using a safety belt

Safety belts for the front passenger can be locked with the convertible locking retractor to properly secure child safety seats.

The safety belts emergency locking retractors for the front passenger's seat safety belt have a convertible locking retractor for child restraints. The safety belt must be locked so that belt webbing cannot unreel. The retractor can be activated to lock the safety belt and prevent the safety belt webbing from loosening up during normal driving. A child safety seat can only be properly installed when the safety belt is locked so that the child and child safety seat will stay in place. ►

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, a child should always ride in the seat properly restrained for its age and size.

WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

- Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
- Always buckle the child safety seat firmly in place even if a child is not sitting in it. A loose child safety seat can fly around during a sudden stop or in a collision.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof.
- Forward-facing child safety seats or infant carriers installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious injury to the child.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 138*. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ *page 119, Child restraints on the front seat – some important things to know*.

WARNING

Always take special precautions if you must install a forward or rearward-facing child restraint on the front passenger's seat in exceptional situations:

- Whenever a forward or rearward-facing child restraint is installed on the front passenger seat, the **PASSENGER AIR BAG OFF** light must come on and stay on whenever the ignition is switched on.

- If the **PASSENGER AIR BAG OFF** light does not come on and stay on, perform the checks described ⇒ *page 128, Monitoring the Advanced Airbag System*.
- If the **PASSENGER AIR BAG OFF** light does not come on and stay on whenever the ignition is switched on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your Audi dealer.
- Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
- An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child.
- Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
- Never place additional items on the seat that can increase the total weight registered by the weight-sensing mat and can cause injury in a crash.

WARNING

Forward-facing child restraints:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up, against or very near the instrument panel.
- Always move the passenger seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible before installing the forward-facing child restraint. The backrest must be adjusted to an upright position.

- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

WARNING

Rearward-facing child restraints:

- A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.
- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof.
- Always be especially careful if you must install a rearward facing child safety seat on the front passenger seat in exceptional circumstances.
- A tight tether strap on a rearward-facing child restraint attached to the front passenger seat can put too much pressure on the weight-mat in the seat and register a heavier weight in the Advanced Airbag System. The heavier weight registered can make the system work as though an adult were on the seat and deploy the Advanced Airbag when it must be suppressed causing serious or even fatal injury to the child.
- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.
- Never install a rearward facing child safety seat on the front passenger seat unless the **PASSENGER AIR BAG OFF** light comes on and stays on. If the **PASSENGER AIR BAG OFF** light does not come on and stay on the inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, door or roof. Have the airbag system inspected immediately by your authorized Audi dealer.

Activating the convertible locking retractor

Use the convertible locking retractor to secure a child restraint.

Always heed the child safety seat manufacturer's instructions when installing a child restraint in your vehicle. To activate the convertible locking retractor:

- ▶ Place the child restraint on a seat.
- ▶ Slowly pull the belt **all the way out**.
- ▶ Route it around or through the child restraint belt path ⇒ .
- ▶ Push the child safety seat down with your full weight to get the safety belt really tight.
- ▶ Insert the belt tongue into the buckle for that seating position.
- ▶ Guide the safety belt back into the retractor until the belt lies flat and snug on the child safety seat.
- ▶ You should hear a “clicking” noise as the belt winds back into the inertia reel. Test the convertible locking retractor by pulling on the belt. You should no longer be able to pull the belt out of the retractor. The convertible locking retractor is now activated.
- ▶ Make sure that the red release button is facing away from the child restraint so that it can be unbuckled quickly.
- ▶ Pull on the belt to make sure the safety belt is properly tight and fastened so that the seat cannot move forward or sideways more than one inch (2.5 cm).

WARNING

- Using the wrong child restraint or an improperly installed child restraint can cause serious personal injury or death in a crash.
- Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
 - Always buckle the child safety seat firmly in place even if a child is not sitting in it.

A loose child safety seat can fly around during a sudden stop or in a crash.

- Always make sure the seat backrest to which the child restraint is installed is in an upright position. Otherwise, the seat-back with the child safety seat attached to it could fly forward in the event of an accident or other emergency situation.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 138*. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ *page 119, Child restraints on the front seat – some important things to know*.

Deactivating the convertible locking retractor

The convertible locking retractor for child restraints will be deactivated automatically when the belt is wound all the way back into the retractor.

- ▶ Press the red button on the safety belt buckle. The belt tongue will pop out of the buckle.
- ▶ Guide the safety belt all the way back into its stowed position.

Always let the safety belt retract completely into its stowed position. The safety belt can now be used as an ordinary safety belt without the convertible locking retractor for child restraints.

If the convertible locking retractor should be activated inadvertently, the safety belt must be unfastened and guided completely back into its stowed position to deactivate this feature. If the convertible locking retractor is not deactivated, the safety belt will gradually become tighter and uncomfortable to wear.



WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

- Never unfasten the safety belt to deactivate the convertible locking retractor for child restraints while the vehicle is moving. You would not be restrained and could be seriously injured in an accident.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇒ *page 138*. Special precautions apply when installing a child safety seat on the front passenger seat ⇒ *page 119, Child restraints on the front seat – some important things to know*.

Additional Information

Sources of information about child restraints and their use

There are a number of sources of additional information about child restraint selection, installation and use:

NHTSA advises that the best child safety seat is the one that fits your child and fits in your vehicle, and that you will use correctly and consistently.

Try before you buy!

U.S National Highway Traffic Safety Administration

Tel.: 1-888-327-4236 (TTY: 1-800-424-9153)
www.nhtsa.gov

National SAFE KIDS Campaign

Tel.: (202) 662-0600
www.safekids.org

Safety BeltSafe U.S.A

Tel.: (800) 745-SAFE (English)
Tel.: (800) 747-SANO (Spanish)
www.carseat.org

Transport Canada Information Centre

Tel.: 1 (800) 333-0371 or call
1 (613) 998-8616 if you are in the Ottawa area
www.tc.gc.ca/roadsafety

Audi Customer CARE

Tel.: (800) 822-2834

Intelligent technology

Notice about data recorded by vehicle control modules

Your vehicle is not equipped with an Event Data Recorder (EDR), installed by some manufacturers for the express purpose of capturing data for retrieval after an accident or crash event. EDR's are sometimes called "crash recorders".

Some state laws restrict the retrieval or downloading of data stored by EDR's that were installed in a vehicle for the express purpose of retrieving data after an accident or crash event without the owner's consent.

Although your vehicle is not equipped with an EDR, it is equipped with a number of electronic control modules for various vehicle systems such as, for example, engine function, emission control, as well as for the airbags and safety belts.

These electronic control modules also record vehicle-related data during normal vehicle operation for diagnostic and repair purposes. The recording capacity of the electronic control modules is limited to data (no sound is recorded) and only a small amount of data is actually recorded over a very limited period of time and stored when a system fault or other condition is sensed by a control unit. Some of the data then stored may relate to vehicle speed, direction, braking as well as restraint system use and performance in the event of a crash or other condition. Stored data can only be read and downloaded with special equipment.

Electronic Stabilization Program (ESP)

The Electronic Stabilization Program increases driving stability.



Fig. 133 Center console with  button

Intent and purpose

The Anti-Lock Brake System (ABS), Electronic Differential Lock (EDL) and Anti-Slip Regulation System (ASR) are integrated in the Electronic Stabilization Program (ESP). It increases control over the vehicle in handling conditions close to the limit of "grip", such as when accelerating and cornering. It reduces the risk of skidding under all road conditions and at all speeds and improves vehicle stability. When road conditions are poor, ESP makes it easier to start from a complete stop as well as accelerate and drive up hills. ESP switches on automatically when you start the engine. It should normally be activated at all times because this ensures optimum vehicle stability.

Critical driving situations

With an *oversteering* vehicle (the vehicle turns too sharply and the rear wheels slide toward the outside of a curve), ESP primarily brakes the outside front wheel, with an *understeering* vehicle (the vehicle does not turn sharply enough and pushes out of a curve) it brakes the inside rear wheel or other additional wheels. This brake intervention is accompanied by noises.

If the speed of a wheel slows down too much relative to vehicle speed while braking and it starts to lock, brake pressure to this wheel is reduced. This adjustment process can be felt ►

as a pulsing motion of the brake pedal, accompanied by some noises. In order for ABS to be able to operate optimally in this range, you must keep the brake pedal depressed - never “pump the brakes”. You should not expect that braking distances will be *shortened* under all circumstances with ABS. Braking distance may even be slightly *longer*, for example on gravel or with fresh snow on a slippery surface.

If a significant *speed differential* between the drive wheels on one axle is determined (for example, on a surface that is slippery *on one side*), the EDS brakes the spinning wheel and transfers power to the other drive wheels. This is done up to a speed of about 60 mph (100 km/h). Noises from the brake system signal that wheel spin is being controlled.

If one wheel spins when starting from a complete stop because of a different grip (for example, one wheel on ice), keep your foot *hard* on the accelerator until the vehicle starts to move.

If the wheels spin, ASR will automatically reduce engine torque and match power to road surface conditions.

Switching on Sport mode

In specific driving situations (e.g. Launch Control), you switch ASR and ESP to Sport mode by pressing the  button once. The indicator light  illuminates and **ESP sport - Warning! Restricted stability** appears. “Slip” is matched to the speed. You should do this only if your driving skill and traffic conditions permit.

Switching ASR/ESP off

In certain situations (e.g. in deep snow, on a loose surface, or when rocking the vehicle free), switch ASR and ESP off by pressing the  button for more than 3 seconds. The indicator light  illuminates and **ESP switched off - Warning! Restricted stability** appears. You should do this only if your driving skill and traffic conditions permit.

Switching ASR/ESP on

Activate ASR/ESP by pressing the  button again. The message **ESP on** appears in the display briefly.

Brake overheating

So that the disc brake on a braked wheel does not overheat, the EDS switches off automatically if there is unusually severe loading at this wheel. The vehicle is still drivable and has the same properties as a vehicle without EDS.

As soon as the brake has cooled down, EDS switches on again automatically.



WARNING

- Even ESP, ABS, EDS and ASR cannot overcome the laws of physics. You should keep this in mind in particular on an icy or wet road. If the systems intervene, you should adjust your speed immediately to road and traffic conditions. Do not be tempted by the increased safety provided to take risks – you risk having an accident.
- Please keep in mind that the risk of an accident is increased by driving too fast, particularly in corners and on icy or wet roads, and by driving too close to the vehicle ahead. Even ESP, ABS, EDS and ASR cannot eliminate the increased risk of having an accident.
- Apply the throttle carefully when accelerating on a consistently slippery surface, e.g. on ice and snow. The drive wheels can spin in spite of the EDS and thereby affect vehicle stability - you risk having an accident.
- Please note that when ASR or ESP/ASR is deactivated, the drive wheels can spin on icy and slippery roads and the vehicle can break away - there is a risk of skidding!



Tips

- In the event of a defect in the rear spoiler system or in Audi magnetic ride, it can happen that ASR and ASR/ESP cannot be

deactivated, or they are activated automatically in the deactivated state.

- If a malfunction occurs in the EDS, this is signaled by an indicator light, see ⇒ page 18.
- Some tracks (e.g. steeply banked turns) may affect ESP response.

Rear spoiler

The rear spoiler improves vehicle handling and enhances driver control.



Fig. 134 Switch for rear spoiler

The rear spoiler deploys and retracts. Spoiler operation can be set for automatic or manual operation.

Automatic mode (normal operation)

- Extending automatically: This occurs when driving faster than approximately 62 mph (100 km/h) or at a certain engine compartment temperature¹⁾.
- Retracting automatically: This occurs when driving slower than approximately 22 mph (35 km/h) or at a certain engine compartment temperature¹⁾.

Manual mode

- Extending manually: Press the switch ⇒ fig. 134 briefly to extend the rear spoiler completely.
- Retracting manually: When driving at speeds below approximately 12 mph (20 km/h), press and hold the switch to retract the rear spoiler. When driving at speeds between 12 mph and 62 mph (20 km/h and

100 km/h), press the switch briefly to retract the rear spoiler completely. You cannot retract the rear spoiler if it extended due to the engine compartment temperature.

Indicator light

When the indicator light  appears, there is a system malfunction. The rear spoiler may not be able to extend. This could change the vehicle's driving characteristics at high speeds. Do not exceed 87 mph (140 km/h). Drive to your authorized Audi dealer immediately to have the malfunction corrected.



WARNING

Driving at higher speeds without the rear spoiler deployed can impair handling characteristics, making the vehicle harder to control.

- Improper operation of the rear spoiler can cause crushing injuries. Always make sure that nobody, especially children, is in the way when the rear spoiler is deployed or retracted.
- Always obey speed limits and other traffic laws.
- Hot air from the engine compartment can escape through the rear spoiler when it is open and it could burn you.



Note

- Never push the vehicle or apply force to the rear spoiler – it could be damaged.
- Operate the rear spoiler manually only when the engine compartment lid is closed, otherwise there is a risk of damage.



Tips

Clean the spoiler compartment every 2 to 3 months. The spoiler compartment must always be free of ice, snow, leaves or other debris.

¹⁾ The rear spoiler only extends or retracts above a certain engine temperature in some models.

Braking

New brake pads

During the first 250 miles (400 km), new brake pads do not possess their full braking effect, they have to be “broken in” first. The distance can be ten times longer in vehicles with ceramic brakes*. You can compensate for this slightly reduced braking power by pushing harder on the brake pedal. Avoid heavy braking loads during the break-in period.

Operating conditions and driving habits

The brakes on today’s automobiles are still subject to wear, depending largely on operating conditions and driving habits ⇒ ⚠. On vehicles that are either driven mostly in stop-and-go city traffic or are driven hard, the brake pads should be checked by your authorized Audi dealer more often than specified in the **Warranty & Maintenance booklet**. Failure to have your brake pads inspected can result in reduced brake performance.

On steep slopes, you should use the braking effect of the engine. This way, you prevent unnecessary wear on the brake system. If you must use your brakes, do not hold the brakes down continuously. Pump the brakes at intervals.

Moisture or road salt

At speeds *above* 70 mph (110 km/h) and with the windshield wipers switched *on* (at least interval stage 4), the brake pads are briefly applied against the brake discs. This occurs at regular intervals without the driver noticing and provides for better brake response time under wet conditions.

Under certain conditions, for example, when driving through water or very heavy rain, or even after washing your vehicle, the braking effect can be reduced due to moisture (or in freezing conditions ice) on the brake pads. A few cautious brake applications should dry off the brake pads or remove any ice coatings.

The effectiveness of the brakes can be reduced when the vehicle is driven on a salt-covered

road and the brakes are not used. Likewise, you clean off accumulated salt coating from brake discs and pads with a few cautious applications of the brake ⇒ ⚠.

Corrosion

There may be a tendency for dirt to build up on the brake pads and corrosion to form on the discs if the car is not driven regularly or only for short trips with little use of the brakes.

If the brakes are not used frequently, or if corrosion has formed on the discs, it is advisable to clean off the pads and discs by braking firmly a few times from a moderately high speed ⇒ ⚠.

Faults in the brake system

If you should notice a *sudden* increase in brake pedal travel, then one of the two brake circuits may have failed. Drive immediately to the nearest qualified workshop to have the damage repaired. Drive at reduced speed on the way there and anticipate longer stopping distances and higher pedal pressure ⇒ ⚠.

Low brake fluid level

Malfunctions can occur in the brake system if the brake fluid level is too low. The brake fluid level is monitored electronically.

Brake power assist unit

The brake power assist unit increases the pressure that you generate with the brake pedal. It works only when the engine is running.

Brake lining wear status

Brake lining wear may be checked by visual inspection of the condition of the brake pads through the openings in the wheel. If necessary, the wheel may be removed for this inspection ⇒ *page 216*.



WARNING

- You should perform braking maneuvers for the purpose of cleaning the brake system only if road conditions permit.

Other road users must not be put at risk - you may cause an accident!

- Before descending a steep grade, reduce speed and shift transmission into a lower gear or lower driving position. Do not ride the brakes or hold the pedal down too long or too often. This could cause the brakes to get hot and diminish braking efficiency.
- Do not “ride the brakes” by resting your foot on the pedal when you do not intend to brake. This may cause the brakes to overheat, premature wear and increased stopping distance.
- Under certain climatic and operating conditions such as passing through water, driving in heavy rain or after washing the vehicle, the effectiveness of the brakes can be reduced. In winter, ice can accumulate on the brake pads, linings, discs and drums. Cautiously apply brakes for a test. Brakes will dry and ice coatings will be cleaned off after a few cautious brake applications.
- Driving for an extended period of time on salt-covered roads without using your brakes can also affect braking efficiency. Clean off accumulated salt coating from brake discs and pads with a few cautious brake applications.
- If you damage the front spoiler, or if you install a different spoiler, be sure the air flow to the front brakes is not obstructed. Otherwise the brake system could overheat reducing the effectiveness of the entire brake system.
- Failure of one brake circuit will impair braking capability, resulting in increased stopping distance. Avoid driving the vehicle and have it towed to the nearest authorized Audi dealer or qualified workshop.
- Never let the vehicle roll to a stop with the engine shut off.
- If the brake booster is not working, for example when towing your vehicle, or because the brake booster has somehow been damaged, the brake pedal must be

pressed considerably harder to make up for the lack of booster assistance.

Power steering

When the engine is running, power steering makes it easier for the driver to steer.

Power steering helps the driver steer the vehicle with little physical effort .

If the engine is not running, the power steering system is also not working. In this case, you will find it extremely difficult to turn the steering wheel.

If you turn the steering *fully* to the left or right when the vehicle is stationary, you place a very heavy load on the power steering system. Turning the steering wheel fully to the left or right will cause noise in the system. It also reduces engine idle speed.

Note

Do not hold the steering turned fully to the left or right for more than 10 seconds when the engine is running. There is a risk of damage to the power steering system.

Tips

- In the event of a power steering system failure, or if the engine is not running (while being towed), you will still be able to steer the vehicle. However, you will require more effort to do so.
- If the power steering system has a leak or is defective, you should immediately contact a qualified workshop.
- The power steering system requires a special hydraulic fluid. The power steering fluid reservoir is located in the engine compartment. The correct hydraulic fluid level is important for proper operation of the power steering system. The power steering fluid level is checked according to the Audi maintenance service schedule.

Driving with your quattro®

With all-wheel drive, all four wheels are driven.

General information

With all-wheel drive, power is distributed to all four wheels. This happens automatically depending on your driving style and the road conditions at the time. See also ⇒ *page 150*.

Winter tires

When driving in the winter, your vehicle with all-wheel drive has an advantage, even with regular tires. In winter road conditions it may be advisable to mount winter tires (or all-season tires) for improved driveability and braking: these tires must be mounted on **all four wheels**.

Snow chains

Where snow chains are mandatory on certain roads, this normally also applies to vehicles with all-wheel drive ⇒ *page 204, Snow chains*.

Replacing wheels/tires

Only the wheel/tire sizes specified by the manufacturer may be used on vehicles with all-wheel drive ⇒ *page 199*.

WARNING

- Always adjust your driving to road and traffic conditions. Do not let the extra safety afforded by all-wheel drive tempt you into taking extra risks.
- Although all-wheel drive is very effective, always remember that braking capacity is limited by tire traction. You should therefore not drive at excessive speeds on icy or slippery road surfaces.
- On wet road surfaces, be careful not to drive too fast because the front wheels could begin to slide on top of the water (aquaplaning). If this should occur, you will have no warning from a sudden increase in engine speed as with a front-

wheel drive vehicle. Always drive at speeds which are suited to the road conditions. – risk of crash.

Energy management

Starting ability is optimized

Energy management controls the distribution of electrical energy and thus optimizes the availability of electrical energy for starting the engine.

If a vehicle with a conventional energy system is not driven for a long period of time, the battery is discharged by idling current consumers (e.g. immobilizer). In certain circumstances it can result in there being insufficient energy available to start the engine.

Intelligent energy management in your vehicle handles the distribution of electrical energy. Starting ability is markedly improved and the life of the battery is extended.

Basically, energy management consists of **battery diagnosis, idling current management** and **dynamic energy management**.

Battery diagnosis

Battery diagnosis continuously determines the state of the battery. Sensors determine battery voltage, battery current and battery temperature. This determines the current state of charge and the power of the battery.

Idling current management

Idling current management reduces energy consumption while the vehicle is standing. With the ignition switched off, it controls the energy supply to the various electrical components. Data from battery diagnosis is considered.

Depending on the battery's state of charge, individual consumers are gradually turned off to prevent excessive discharge of the battery and thus maintain starting capability. ►

Dynamic energy management

While the vehicle is being driven, dynamic energy management distributes the energy generated according to the needs of the individual components. It regulates consumption, so that more electrical energy is not being used than is being generated and ensures an optimal state of charge for the battery.



Tips

- But even energy management cannot negate the limits of physics. Consider that the power and life of a battery are limited.
- If starting ability is threatened, you are informed by a warning ⇒ *page 156, Driver notification in the instrument cluster display.*

What you should know

The highest priority is given to maintaining starting capability.

The battery is severely taxed in short-distance driving, in city traffic and during the cold time of year. Abundant electrical energy is required, but only a little is generated. It is also critical if the engine is not running and electrical components are turned on. In this instance energy is being consumed but none is being generated.

It is in precisely these situations that you will notice energy management actively regulating the distribution of energy.

Vehicle stands for an extended period

If you do not drive your vehicle over a period of several days or weeks, electrical components are gradually cut back or switched off. This reduces energy consumption and maintains starting capability over a longer period.

Take into consideration that when you unlock your vehicle, some convenience functions, such as the remote key or power seat adjustment, may not be available. The convenience functions will be available again when you turn on the ignition and start the engine.

With the engine turned off

If you listen to the radio, for example, with the engine turned off, the battery is being discharged.

If starting capability is jeopardized due to energy consumption, a message appears in the driver information display.

You have to start the engine to charge the battery.

With the engine running

Although electrical energy is generated when the vehicle is being driven, the battery can become discharged. This happens mostly when little energy is being generated and a great deal consumed and the battery's state of charge is not optimal.

To bring the energy balance back into equilibrium, consumers which require especially large amounts of energy are temporarily cut back or switched off. Heating systems in particular require a great deal of energy. If you notice, for example, that the heated seats or the heated rear window are not heating, they have been temporarily cut back or switched off. These systems will be available again as soon as the energy balance has been restored.

You will also notice that engine idle speed has been increased slightly. This is normal and not a cause for concern. By increasing engine idle speed the additional energy required is generated and the battery is charged.

Driver notification in the instrument cluster display

If battery power drops into the range where it can limit the ability of the engine to start, this is shown in the instrument cluster display with the following driver message:



Low battery charge: battery will be charged while driving

This notification reminds you that the starting capability of the engine may be limited. As soon as you start driving again, the battery



will be recharged and the notification will go out.

Driver notification appears and goes out again

If this driver notification appears after the ignition is turned on or while driving and it goes out again after a while, the battery has been adequately recharged.

Driver notification appears and does not go out again

If this driver notification appears after the ignition is turned on or while driving and does not go out again, the battery's state of charge is not in the optimal range. Starting ability is restricted. Have the battery checked as soon as possible by an authorized Audi dealer or qualified workshop.

Dry sump lubrication

High lateral and longitudinal forces affect the engine and the vehicle during sporty driving. Dry sump lubrication ensures that your engine is supplied with oil and properly lubricated even under these conditions.

In a “normal” vehicle the oil pump sends the oil from the oil pan to the lubrication points in the engine. The oil then returns to the oil pan. In extreme situations, the oil pump may draw in air, which results in insufficient oil pressure.

With dry sump lubrication, the oil is not in the oil pan (it is “dry”), but in a separate oil tank. While one pump supplies the engine with oil, a second pump suctions the oil out of the engine and returns it to the oil tank. Because the oil tank is tall and narrow, oil pressure is constant even under extreme conditions.

In addition, the oil pan in vehicles with dry sump lubrication is noticeably shallower. This allows the engine to be installed lower in the vehicle, bringing down the center of gravity. This improves your vehicle's handling.

Driving and environment

Break-in period

A new vehicle must be broken in, and the break-in period should be 1,500 miles (2,500 km). Do not use full acceleration for the first 600 miles (1,000 km) and do not exceed the maximum engine speed of 6,000 rpm. You must also not use full acceleration between 600 and 1,200 miles (1,000 to 2,000 km). From 1,200 to 1,500 miles (2,000 to 2,500 km), you can gradually increase maximum engine speed to 8,250 rpm for brief periods.

During the first hours of operation, there is greater friction in the engine and the transmission than later when all the moving parts have broken in.

The way you drive during the first 1,500 miles (2,500 km) affects engine quality. If you drive at moderate engine speeds thereafter, particularly when the engine is cold, you reduce engine wear and increase the potential mileage of the engine.

Do not drive at RPMs that are too *low*. Shift down when the engine is no longer running “smoothly”. Extremely high RPMs are governed automatically.

Driving through water on roads

Note the following to avoid vehicle damage when driving through water, for example on flooded roads:

- The water must not be any higher than the bottom of the vehicle body.
- Do not drive faster than walking speed.

WARNING

After driving through water, mud, slush, etc., the brakes may be slow to take effect because of wet brake rotors and pads. Dry the brakes first by braking carefully to restore the full braking effect.

Note

Vehicle components such as the engine, transmission, suspension or electrical system can be severely damaged by driving through water.

Tips

- Check the depth of the water before driving through it.
- Do not stop the vehicle, drive in reverse or switch the engine off when driving through water.
- Keep in mind that oncoming vehicles may create waves that raise the water level and make it too deep for your vehicle to drive through safely.
- Avoid driving through salt water because it can cause corrosion.

Catalytic converter

You must use lead-free gasoline in your vehicle, otherwise you will destroy the catalytic converter.

Never run the fuel tank completely dry; the irregular fuel supply could cause misfires. This allows unburned fuel into the exhaust system, possibly resulting in overheating and damage to the catalytic converter.

WARNING

- Do not park or operate the vehicle in areas where the hot exhaust system may come in contact with dry grass, brush, fuel spills or other material which can cause a fire.
- Do not apply additional undercoating or rustproofing on or near the exhaust manifold, exhaust pipes, catalytic converter or heat shields. During driving, the substance used for undercoating could overheat and cause a fire.

Note

To ensure efficient operation of the Emission Control System:

- Have your vehicle maintained properly and in accordance with the service recommendations in your Warranty & Maintenance booklet.
- Lack of proper maintenance as well as improper use of the vehicle will impair the function of the Emission Control System and could lead to damage.

Sporty driving

Warming up and cooling down

By carefully warming up and cooling down your vehicle, you can help ensure that it is not overstressed unnecessarily during sporty driving.

When warming up, the vehicle is driven at a maximum engine speed of 6000 RPM (V10 engine) or 7000 RPM (V8 engine) in order to raise the engine oil temperature to a minimum of 140 °F (60 °C). The tires also only reach their full road holding capability once they have warmed up.

The cooling fan can continue to run in your vehicle after the engine is switched off. However, driving the vehicle to cool it down is particularly important. During sporty driving, the engine and brakes, the exhaust system, and the transmission all become extremely hot. Before you park the vehicle, you should drive it for a few miles/kilometers at light load in the low rpm range to allow it to cool down.

Driving on a track

Before you take your vehicle out on a track, ensure that it is in perfect condition. For example, you should check the tire tread and the brake pads. It is best to increase tire pressure by about 0.3 bar.

When driving on a track, oil consumption may be somewhat higher than in “normal” operation ⇒ *page 180*.

You should definitely inspect your vehicle after subjecting it to severe conditions. Are the brake pads OK? Is there anything unusual

about the tires, including the inner and outer sidewalls (e.g. tread, blistering)? Are the air intakes free of leaves and tire dust? Is the oil level OK?

Your authorized Audi dealer or qualified workshop will be happy to undertake an inspection before and after use on the race track.

Tips

- Some race tracks (e.g. steeply banked turns) may affect the response of the ESP.
- When driven on a race track, all vehicle parts are severely stressed. This can result in increased wear.

Operation and maintenance

Fuel economy, environmental impact, and wear on your engine, brakes and tires largely depend on three factors:

- your personal driving style
- operating conditions
- technical limitations

By having your vehicle regularly serviced by an authorized Audi dealer helps to ensure that it runs properly and economically. The condition of your vehicle not only affects its safety and ability to hold its value, it also affects **fuel consumption**.

The amount of oil used is related to engine load and speed.

It is normal for the oil consumption of a new engine to reach its lowest value after a certain mileage has been driven.

You must drive your vehicle about 3,000 miles (5,000 kilometers) before you can properly assess oil consumption.

This also applies to fuel consumption and engine output.

Note

- Have your vehicle maintained properly and in accordance with the service

recommendations in your Warranty & Maintenance booklet. Lack of proper maintenance as well as improper use of the vehicle will impair the function of the emission control system and could lead to damage.

- Do not alter or remove any component of the Emission Control System unless approved by the manufacturer.
- Do not alter or remove any device, such as heat shields, switches, ignition wires, valves, which are designed to protect your vehicle's Emission Control System and other important vehicle components.

**Tips**

The consumption estimates as published by the ENVIRONMENTAL PROTECTION AGENCY (EPA) and Transport Canada may not correspond to your actual consumption on the road, which will vary depending upon vehicle load and speed, road and weather conditions, trip length, etc.

Trailer towing

Your Audi R8 is not designed to tow a trailer.

Towing a trailer with your Audi R8 is not recommended and can cause damage to the vehicle. Damage caused by towing a trailer is not covered under warranty.

Cleaning and protection

General information

Regular care preserves vehicle value.

Regular and correct care will contribute to maintaining the beauty and value of your Audi. Furthermore, good care may be a condition for substantiating a warranty claim should corrosion damage or paint defects occur.

Your authorized Audi R8 dealer has a variety of **dedicated vehicle-care products**. Please make sure you apply them correctly.



WARNING

- Cleaning agents may be poisonous. Keep them out of the reach of children.
- Heed all caution labels.
- Always read directions on the container before using any product. Follow the directions carefully.
- Most chemical cleaners are concentrated and have to be diluted.
- Use spot removing fluids only in well ventilated areas.
- Do not use gasoline, kerosene, diesel fuel, nail polish remover or other volatile fluids. They may be toxic, flammable or hazardous in other ways. Do not wash, wax or dry the vehicle with the ignition on or the engine running.
- Do not clean the undersides of chassis, fenders, wheel covers, etc. without protecting your hands and arms. You may cut yourself on sharp-edged metal parts.
- Moisture and ice on brakes may impair braking efficiency ⇒ *page 153, Braking*. Test the brakes carefully each time you wash the vehicle.



For the sake of the environment

Select only environmentally friendly cleaning products. Leftover cleaning products should not be disposed of in the household waste.

Care of exterior

Washing your vehicle

The longer insect remains, bird droppings, tree resin, road and industrial dust, tar, soot particles, road salt, and other aggressive deposits remain on the vehicle surface, the more lasting their destructive effect will be. High temperatures, for example from intense sunlight, intensify the corrosive effect.

After the end of winter road salting, the underside of the vehicle should be thoroughly washed.

Automatic car washes

You must take the necessary precautions such as closing the windows and convertible top before using an automatic car wash. If your vehicle has special accessories - e.g. spoilers, radio antenna - it is best to speak to the operator of the car wash ⇒

Only use car washes where the vehicle remains stationary and the cleaning equipment moves around the vehicle while washing and drying. It is not possible to use car washes where the vehicle is moved forward on a conveyor ⇒

It is preferable to wash your vehicle in a brushless carwash.

Washing with a power washer

When washing your vehicle with a power washer, be sure to follow the operating instructions for the power washer. This applies particularly to the **pressure** and the **spraying distance**. Maintain sufficient distance from soft materials such as rubber hoses, sound deadening material, and the parking aid sensors* that are located in the front or rear bumper.

Do not use washers with a **rotating jet** or a nozzle spraying a **high pressure jet** of water in any case. ►

Hand washing

When washing your vehicle by hand, first soften the dirt with copious amounts of water and rinse it off as best you can.

Then clean the vehicle using a soft **sponge**, an **auto glove** or a low-pressure **wash brush**.

Work from the top down to the bottom, starting with the convertible top ⇒ *page 163*. Use a **shampoo** only for very stubborn dirt.

Rinse the sponge or auto glove thoroughly at frequent intervals.

Clean the wheels, door sills and similar areas last. Use a separate sponge for this.



WARNING

- Car washes with conveyors can damage the vehicle tires, which could cause the tire to lose pressure suddenly while driving and put you at risk for an accident. Do not use car washes with conveyors.
- Switch off the ignition when you wash your vehicle to avoid an accident.
- Protect your hands and arms from sharp metal edges when you clean the underbody, the inside of the wheel wells or the wheel covers to avoid cutting yourself.
- When washing your vehicle in the winter: Moisture and ice in the brake system can affect the brakes.
- Never wash tires with a jet that sprays water in a direct stream. This could cause invisible damage to the tires and weaken them, even if the spray is from a relatively long distance and for a short time. Damaged and weakened tires can fail and cause accidents and personal injury.



Note

- Never drive your vehicle through any automatic car wash that fails to provide either sufficient clearance for your vehicle or sufficient track width for your tires. Risk of expensive damage to the vehicle's underbody, tires, and rims!
- As described in your Warranty & Maintenance booklet, damage or malfunction

due to misuse of the vehicle or failure to operate the vehicle in accordance with the instructions of this Owner's Manual will not be covered under warranty.

- Fold the exterior mirrors flat - there is a risk of damaging the exterior mirrors. Power folding exterior mirrors must not be folded in or out by hand. Use the power function!
- Do not wash the vehicle in direct sunlight. You may damage the paint.
- Do not use sponges designed to remove insects, rough kitchen sponges, or similar products. You risk damaging the paint surface.
- You should remove debris (such as insects) from the headlight lenses on a regular basis, for example when refueling your vehicle. Never clean the headlights with a dry cloth or sponge. Use a wet cloth or sponge. It is best to use soapy water.
- Never clean tires using a nozzle that sprays water in a direct stream. Damage can occur even with a relatively long spraying distance and for a very short time.
- To avoid damaging your vehicle, always make sure that there is sufficient distance between the spray head and soft materials like rubber hoses, plastic parts and sound-deadening materials. Never aim the spray head at the same point for a long time. This also applies to cleaning headlights and painted bumpers. Remember: the closer the nozzle is to the surface of the material, the greater the stress on the material.
- Never clean the convertible top using a power washer.



For the sake of the environment

Wash your vehicle only at specially designed facilities. They can prevent any dirty water contaminated by oil from entering the waste water. In certain areas washing a car outside of such facilities is not permitted.

Convertible top care

The convertible top requires special care.

Keeping your top looking great and making certain that it lasts a long time depend to a great extent on proper use and care. Remove bird droppings as soon as possible, since the corrosive chemicals in them will cause the rubber impregnation in your top to swell and possibly allow the fabric to leak.

With *normal soiling*, all you need to do is clear the top with a soft brush and clear water. Always brush in the direction of the fabric from front to rear.

If the top is *very dirty* and has *spotted areas* clean it with a brush using a convertible top cleaner. Always brush in the direction of the fabric from front to rear. Rinse with plenty of clear water, and allow the top to air-dry.

Chamois are not suitable for drying the top.

Never use gasoline, spot remover, benzene, paint thinner or solvents to remove spots. We recommend that you only use cleaners especially formulated for use on convertible tops, and that you follow the produce use directions carefully. Authorized Audi dealers can provide detailed information.

WARNING

Always read and heed all WARNINGS and the information on ⇒ *page 161*.

Note

Never use a high-pressure power washer to clean the convertible top.

Wind deflector

Clear the wind deflector with water or, if it is heavily soiled, a chemically neutral cleaning solution.

WARNING

Always read and heed all WARNINGS and the information on ⇒ *page 161*.

Waxing and polishing

Waxing

Waxing protects the paint. When water no longer clearly **beads** on the clean paint you should renew your vehicle's protection by applying a good **hard wax polish**.

Even if you regularly use a **wax process** in the car wash, we recommend protecting the paint at least twice per year using hard wax.

It is much easier to clean insects and other debris from *freshly* waxed paint.

Polishing

Polishing is necessary only if the paint on your vehicle has lost its shine and if you cannot achieve any gloss with wax materials.

If the polish you use does not contain any preservative ingredients, you will have to wax the paint afterwards.



WARNING

Always read and heed all WARNING and other Information ⇒ *page 161*.



Note

Do not treat matte anodized metal trim, plastic, or rubber parts with polish or wax.

Trim strips

For environmental reasons, Audi fabricates the bright trim strips and trim pieces from pure chromium-free aluminum.

Dirt and marks on the trim strips should be removed with a **pH-balanced** cleaning agent (do not use a chrome cleaner). Paint polishes are also not suitable for the care of decorative parts and trim strips. Alkaline cleaners which are often used before entering car washes can cause dull or milky spots when they dry.

Authorized Audi dealers carry cleaning products which have been tested for use on your vehicle and are not harmful to the environment.

 WARNING

Always read and heed all WARNING and other Information ⇒ *page 161*.

Plastic and vinyl

Use a clean, damp cloth or sponge to remove dust and light surface dirt. For other soil, use a lukewarm all-purpose cleaning solution or a mild saddle soap for vinyl trim. Paint care products are not suitable for plastic and vinyl.

 WARNING

Always read and observe all WARNINGS and other information ⇒ *page 161*.

Carbon-fiber parts

Applies to vehicles: with carbon-fiber parts

The carbon-fiber parts of your vehicle have a painted surface. They do not require special care and are cleaned like other painted parts ⇒ *page 161*.

Touch-up paint

Your authorized Audi dealer has touch-up paint for minor scratches and stone chips. Minor paint damages such as scratches or stone chips should be touched up immediately to prevent corrosion.

The number for the original vehicle paint can be found on the vehicle identification label ⇒ *page 226*.

However, if corrosion has formed, you must have this thoroughly removed by you authorized Audi dealer or other qualified workshop.

 WARNING

Always read and heed all WARNINGS and the information ⇒ *page 161*.

Windows

Clear vision improves traffic safety.

In order to maintain the performance of the windshield wiper blades, never clean the window glass with insect remover or wax.

Rubber, oil, grease, or silicone residue can be removed using a **glass cleaner** or a **silicone remover**. Wax residue, however, can only be removed using a special cleaner. You can obtain more information from your authorized Audi dealer.

You should also clean the inside of the window glass at regular intervals.

The cloth or chamois used on paint surfaces contains wax residue. Use a separate cloth or chamois to dry the window glass.

Cleaning the rear window

Audi recommends cleaning the window using a soft cotton cloth and water mixed with cleaning solution or window cleaner (1:1 mixture). To avoid streaks, do not wipe the window dry with paper towels.

Do not use any cleaning solutions that contain ammonia, acids, silicone or fluoride or cleaners that are abrasive or could cause scratches. Do not use any alkaline cleaning solutions.

 WARNING

- The windshield must not be treated with water-repellent materials. They can increase glare under poor visibility conditions such as wetness, darkness, or when the sun is low on the horizon. In addition, they can cause the windshield wipers to chatter.
- Always read and heed all WARNINGS and other information ⇒ *page 161*.

 Note

- Never use warm or hot water to remove snow and ice from windows and mirrors. This could cause the glass to crack.
- To prevent damage to the wires of the rear defogger, do not place any adhesive

stickers on the inside of the rear window over the wires.

- To help prevent dirt from scratching the window, always scrape in a forward direction - pushing the scraper away from you - never back and forth.

Weatherstrips

To seal properly, the weatherstrips around the front lid, doors, engine compartment lid, etc. must remain pliable. Spray the weatherstrips with silicone or coat them with talcum powder or glycerine to retain the flexibility of the rubber and to protect them against freezing in the winter.

WARNING

Always read and heed all WARNINGS and the information ⇨ *page 161*.

Tips

Keep silicone sprays off the windshield to avoid wiper smear in rain.

Wheels

Regular care is required to preserve the decorative appearance of the wheels. Road salt and brake dust must be washed off regularly or the wheels will be damaged.

Use only special acid-free cleaning agents. You can find proper wheel cleaner at authorized Audi dealers and specialty stores. Do not leave the cleaner on the wheels longer than specified. Wheel cleaners containing acid can damage the surface of the wheel bolts.

Paint polish or other abrasive materials must not be used when caring for wheels. If the protective coating has been damaged, from stones for example, touch up the damage as soon as possible.

WARNING

- Moisture and ice on brakes may affect braking efficiency - ⇨ *page 153, Braking*.

Test the brakes carefully after each vehicle wash.

- Always read and heed all WARNINGS and the information ⇨ *page 161*.

Exhaust tail pipes

Road salt and other corrosive materials will damage the material in the exhaust tail pipes if they are not cleaned regularly. Do not clean the tail pipes with wheel cleaner, paint polish, chrome polish or other abrasive cleaners. Clean the tail pipes with car care products that are suitable for stainless steel.

Your authorized Audi dealer can provide cleaning products that have been tested and approved for your vehicle.

Care of interior

Radio and navigation display

The display may be cleaned with a soft cloth and commercially-available "LCD cleaner". The cloth should be coated lightly when the cleaning solution when cleaning the display.

Note

To prevent scratches, only clean the display when it is dry.

Plastic parts and imitation leather

You can clean plastic parts and imitation leather with a damp cloth. If this does not remove the dirt, you can treat these parts only with special **solvent-free plastic cleaning and care products**.

WARNING

- Solvents can change the properties of some plastics and make it harder for the airbag to deploy.
- Never clean the instrument panel or the surface of Airbag modules with cleaning products that contain solvents.
 - Products containing solvents will make the surface of this part porous.

- Serious injuries can result if plastic parts come loose when the airbag is deployed.
- Always read and heed all WARNINGS and the information ⇒ *page 161*.

Note

Cleaning agents containing solvents will attack the material and can change the way it behaves.

Carbon-fiber parts

Applies to vehicles: with carbon-fiber parts

The carbon-fiber parts of your vehicle have a painted surface. They do not require any special care and are cleaned like plastic parts ⇒ *page 165*.

Fabrics and fabric coverings

Fabrics and fabric coverings (e.g. seats, door trim panels, etc.) should be cleaned at regular intervals with a vacuum cleaner. This removes surface dirt particles which could become embedded in the fabric through use. Steam cleaners should not be used, because the steam tends to push the dirt deeper into the fabric and lock it there.

Normal cleaning

Generally, we recommend using a soft sponge or a lint-free microfiber cloth to clean fabric. Brushes should only be used for carpets and floor mats, since other fabric surfaces could be harmed by brushes.

Normal surface stains can be cleaned using a commercially available foam cleaner. Spread the foam on the surface of the fabric with a soft sponge and work it in gently. Do not saturate the fabric. Then pat the foam dry using absorbent, dry cloths (e.g. microfiber cloth) and vacuum it after it has dried completely.

Cleaning stains

Stains caused by beverages (e.g. coffee, fruit juice, etc.) can be treated with a mild detergent solution. Apply the detergent solution with a sponge. In the case of stubborn stains,

a detergent paste can be applied directly to the stain and worked into the fabric. Afterwards, use copious amounts of clean water to remove the remaining detergent. Apply the water with a damp cloth or sponge and pat the fabric dry with an absorbent, dry cloth.

Stains from chocolate or makeup should have detergent paste (e.g. ox-gall soap) rubbed in to them. Afterwards, remove the soap with water (damp sponge).

Alcohol can be used to treat stains from grease, oil, lipstick or a ballpoint pen. Melted grease or dye must be patted off using absorbent material. It may be necessary to retreat the areas with detergent paste and water.

In the case of general soiling of the upholstery and cover material, we recommend hiring a specialist that has the equipment to clean the seat covers and other fabric surfaces by shampooing and spray extraction.



WARNING

Always read and heed all WARNINGS and the information ⇒ *page 161*.



Tips

Open Velcro fasteners on your clothing can damage the seat cover. Please make sure that Velcro fasteners are closed.

Natural leather

Applies to vehicles: with natural leather

Audi makes great efforts to maintain the properties, natural look and feel of interior leather.

General

We offer many different types of leather on our vehicles. Most are different types of nappa leather, which has a smooth surface and comes in various colors.

The intensity of the color determines the visual characteristics and appearance. If the surface of the leather has a typical natural look, then the leather is a nappa leather that has

been left in a relatively natural condition. This leather offers particularly good comfort and breathes well. Fine veins, closed grains, insect bites, skin folds, and subtle variations in color remain visible. These characteristics demonstrate that the material is natural.

Natural nappa leather is not covered by a color finish. It is therefore more sensitive to soiling and wear, which is something you need to consider if children, animals or other factors might prove to be particularly hard on the leather.

By contrast, leather types that are covered by a colored finish layer are more durable. This has a positive effect on the leather's resistance to wear and soiling in daily use. On the other hand, the typical characteristics of natural leather are barely or not apparent. However, this does not mean that the leather itself is of inferior quality.

Care and handling

Because of the exclusive nature of the types of leather that Audi uses and their unique properties (such as sensitivity to oils, grease, soiling, etc.), you will need to be somewhat careful with these leathers, and a certain type of care is required. For example, dark clothing materials can discolor leather seats (especially if such clothing is damp and was not dyed correctly). Dust and dirt particles in pores, folds, and seams can have an abrasive effect and can damage the leather surface as well as weaken seams.

The leather should be cleaned regularly as needed. After having been used for a relatively long time, your leather seats will acquire a rich aged finish. This is a characteristic of natural leather and a sign of true quality.

In order to maintain the value of this natural product over the life of your vehicle, you should follow the recommendations below:

Note

- To keep your leather from bleaching out, do not allow it to be exposed to bright

sunlight for long periods of time. If you have to leave the vehicle parked outside for long periods, cover the leather to protect it from direct exposure to sunlight.

- Sharp objects on clothing, such as zippers, rivets or sharp pieces on belts can leave permanent scratches or scrape marks on the surface of the leather.

Tips

- After each time you clean the leather and at regular intervals, use a leather preservative creme that contains UV-blockers and that works into the leather. This creme will nourish and moisturize the leather, helping it to breathe and stay supple. It also helps to build up a protective coating on the surface.
- Clean the leather every 2 - 3 months, and clean any areas that get soiled.
- Remove fresh marks made by ballpoint pens, ink, lipstick, shoe polish, etc. as soon as possible.
- Preserve the color of the leather as needed by using a special colored leather care creme to touch up areas of uneven color.

Cleaning and caring for leather upholstery and trim

Applies to vehicles: with natural leather

Natural leather requires special care and attention.

Normal cleaning

- Clean soiled areas with a slightly moistened cotton or woolen cloth.

More stubborn dirt

- More stubborn dirt can be removed using a cloth saturated with a mild soap solution (2 tablespoons mild liquid soap).
- Never allow the soap solution to saturate the leather, and make certain that no water soaks into the seams.
- Wipe off the soap solution with a soft, dry cloth.

Cleaning spots

- ▶ Remove fresh **water-based** spots (such as coffee, tea, juices, blood) with an absorbent cloth or paper towel.
- ▶ Remove fresh **grease or oil-based spots** (such as butter, mayonnaise, chocolate) with an absorbent cloth or paper towel, or use the cleaner from the leather care kit if the spot has not yet penetrated into the surface of the leather.
- ▶ Use an oil/grease dissolving spray, if **oil/grease spots have dried on**.
- ▶ Remove specific kinds of spots (ballpoint pen, felt marker, fingernail polish, water-based paint, shoe polish, etc.) with a spot remover specifically formulated for leather.

Leather care

- ▶ Every half year use an approved leather care product (available from your authorized Audi dealer) to care for the leather.
- ▶ Apply the product very sparingly.
- ▶ Wipe it off with a damp cloth.

If you have any questions about cleaning and caring for the leather in your vehicle, it is best to contact your authorized Audi dealer, who will be glad to help you and tell you about our full range of leather care products, such as:

- Leather cleaning and care kit
- Cremes to care for colored leather
- Spot removers for ballpoint pens, shoe polish, etc.
- Oil/grease dissolving spray
- New and upcoming products.



WARNING

Always read and heed all WARNINGS and the information ⇒ *page 161*.



Note

- Never use chemical solvents (e.g. lighter fluid, turpentine), waxes, shoe polish or similar products on the leather surfaces in your Audi.

- To avoid damage, have stubborn stains removed by a commercial cleaning specialist.

Cleaning Alcantara® (synthetic suede)

Applies to vehicles: with Alcantara upholstery

Removing dust and dirt

- ▶ Moisten a cloth, *squeeze out excess water* and wipe down the seat surfaces.

Removing stains

- ▶ Moisten a cloth with lukewarm water or with diluted **ethyl (rubbing) alcohol**.
- ▶ Dab at the stain. Start at the outside and work inwards.
- ▶ Once the stain is no longer visible, use a soft dry cloth or tissue to soak up the moisture.

Do not use leather cleaning products on Alcantara.

You may use a suitable shampoo for removing dust and dirt.

Dust and grit in the pores and seams can scratch and damage the surface. If the car is left standing in the sun for long periods, the Alcantara covers should be protected against direct sunlight to prevent it from fading. Slight color variations will develop in normal use and are not an indication of material deterioration.



Note

- Never use chemical solvents (e.g. lighter fluid, turpentine), waxes, shoe polish or similar products on Alcantara® surfaces.
- To avoid damage, have stubborn stains removed by a commercial cleaning specialist.
- Do not use brushes, stiff sponges or similarly abrasive cleaning aids.

Safety belts

Heavily soiled safety belts may not retract properly.

- ▶ Keep belts clean.

- ▶ For cleaning, use a mild soap and water solution. Let belts dry thoroughly and away from direct sunlight.
- ▶ Do not allow inertia reel safety belts to retract before they are completely dry.
- ▶ Check the condition of your safety belts *regularly*.

WARNING

Damaged safety belts can break in a crash.

- Anything that might damage your safety belts could mean that you and your passengers would not be adequately protected in an accident.
- Safety belt performance depends on correct installation. Never remove belts from the vehicle to clean them.
- Do not use chemical cleaning agents, bleach or dyes. They have corrosive properties which weaken the webbing.
- When cleaning your safety belts, inspect them for damage. If you discover damage, see your authorized Audi dealer.
- Always read and heed all WARNINGS and the information ⇒ *page 161*.

Engine compartment

Be especially careful when cleaning the engine compartment.

Corrosion protection

The engine compartment and transmission have been corrosion-protected at the factory.

Good anti-corrosion treatment is very important, particularly in the winter. If the vehicle is frequently driven on salt treated roads, the entire engine compartment and plenum panel should be thoroughly cleaned at the end of winter and retreated to prevent salt damage. At the same time, the underside of the vehicle should be washed as well.

If the engine compartment is cleaned at any time with grease removing solutions¹⁾, or if

you have the engine washed, the anti-corrosion treatment is almost always removed as well. It is therefore essential to have a long-lasting corrosion protection reapplied to all surfaces, seams, joints and components in the engine compartment.

WARNING

Be aware: The engine compartment of any motor vehicle is a potentially hazardous area.

- Before working in the engine compartment, be sure to read the information ⇒ *page 175*.
- Before reaching into the front plenum panel, always remove the ignition key. Otherwise, the windshield wiper system could unintentionally be switched on, possibly causing personal injury from the moving wiper linkage.
- Never reach into the area around or touch the radiator fan. The auxiliary fan is temperature controlled and can switch on suddenly - even when the ignition is off.
- Do not wash, wax or dry the engine with the engine running. Moving or hot parts could injure you.
- Do not clean the underside of the chassis, fenders, wheel covers, or other hard to reach parts without protecting your hands and arms. You may cut yourself on sharp-edged metal parts.
- Always read and heed all WARNINGS and other information ⇒ *page 161*.

¹⁾ Use only the correct cleaning solutions. Never use gasoline or diesel fuel.

Fuel supply and filling your fuel tank

Gasoline

Fuel supply

Using the right fuel helps keep the environment clean and prevents engine damage.

Fuel recommendation

The fuel recommended for your vehicle is **unleaded premium** grade gasoline. See also ⇒ *page 228, Data*. Audi recommends using TOP TIER Detergent Gasoline with a minimum octane rating of 91 AKI (95 RON). For more information on TOP TIER Detergent Gasoline, please go to the official website (www.toptier-gas.com).

The recommended gasoline octane rating for your engine can also be found on a label located on the inside of the fuel filler flap. This rating may be specified as AKI or RON.

Your vehicle may also be operated using unleaded regular gasoline with a minimum octane rating of 87 AKI/91 RON. However, using 87 AKI/91 RON octane fuel will slightly reduce engine performance.

Use unleaded gasoline only. Unleaded gasoline is available throughout the USA, Canada, and in most European countries. We recommend that you do not take your vehicle to areas or countries where unleaded gasoline may not be available.

For more information on refueling your vehicle, see ⇒ *page 171*.

Octane rating

Octane rating indicates a gasoline's ability to resist engine damaging "knock" caused by premature ignition and detonation. Therefore, buying the correct grade of gasoline is very important to help prevent possible engine damage and a loss of engine performance.

Gasoline most commonly used in the United States and Canada has the following octane

ratings that can usually be found on the filler pump:

- Premium Grade: 91 - 96 AKI
- Regular Grade: 87 - 90 AKI

Explanation of the abbreviations:

AKI = **A**nti **K**nock **I**ndex = $(R+M)/2 = (RON + MON)/2$

RON = **R**esearch **O**ctane **N**umber

MON = **M**otor **O**ctane **N**umber.



Note

- Do not use any fuel with octane ratings lower than 87 AKI or 91 RON otherwise expensive engine damage will occur.
- Do **not** use leaded gasoline! The use of leaded gasoline will severely damage your vehicle's catalytic converter and its ability to control exhaust emissions.

Blended gasoline

Use of gasoline containing alcohol or MTBE (methyl tertiary butyl ether)

You may use unleaded gasoline blended with alcohol or MTBE (commonly referred to as oxygenates) if the blended mixture meets the following criteria:

Blend of gasoline methanol (wood alcohol or methyl alcohol)

- Anti-knock index must be 87 AKI or higher.
- Blend must contain no more than 3% methanol.
- Blend must contain more than 2% co-solvents.

Blend of gasoline and ethanol (grain alcohol or ethyl alcohol)

- Anti-knock index must be 87 AKI or higher.
- Blend must not contain more than 10% ethanol.

Blend of gasoline and MTBE

- Anti-knock index must be 87 AKI or higher. ►

- Blend must contain not more than 15% MTBE.

Seasonally adjusted gasoline

Many gasoline grades are blended to perform especially well for winter or summer driving. During seasonal change-over, we suggest that you fill up at busy gas stations where the seasonal adjustment is more likely to be made in time.

Note

- Methanol fuels which do not meet these requirements may cause corrosion and damage to plastic and rubber components in the fuel system.
- Do not use fuels that fail to meet the specified criteria in this chapter.
- If you are unable to determine whether or not a particular fuel blend meets the specifications, ask your service station or its fuel supplier.
- Do not use fuel for which the contents cannot be identified.
- Fuel system damage and performance problems resulting from the use of fuels different from those specified are not the responsibility of Audi and are not covered under the New Vehicle or the Emission Control System Warranties.
- If you experience a loss of fuel economy or driveability and performance problems due to the use of one of these fuel blends, we recommend that you switch to unblended fuel.

Gasoline additives

A major concern among many auto manufacturers is carbon deposit build-up caused by the type of gasoline you use.

Although gasoline grades differ from one manufacturer to another, they have certain things in common. All gasoline grades contain substances that can cause deposits to collect on vital engine parts, such as fuel injectors and intake valves. Although most gasoline brands include additives to keep engine and

fuel systems clean, they are not equally effective.

Audi recommends using TOP TIER Detergent Gasoline. For more information on TOP TIER Detergent Gasoline, please go to the official website (www.toptiergas.com).

After an extended period of using inadequate fuels, built-up carbon deposits can rob your engine of peak performance.

Note

Damage or malfunction due to poor fuel quality is not covered by the Audi New Vehicle Limited Warranty.

Fuel tank

Fuel filler neck

The fuel filler neck is located on the right rear side panel behind the fuel filler flap.

If the unlocking system should fail, you can still open the flap manually - for detailed instructions see *⇒ page 173*.

You can find the fuel tank capacity of your vehicle in **Technical Data** *⇒ page 228*.

The label on the inside of the fuel filler flap tells you the correct fuel for your vehicle. For more information about fuel specifications, see *⇒ page 170*.

Your vehicle fuel tank has an on-board refueling vapor recovery system. This feature helps to prevent fuel vapors from escaping from the tank and polluting the environment while you refuel your vehicle. In order to fill the tank properly while protecting the environment, please follow this refueling procedure carefully.

WARNING

Under normal operating conditions, never carry additional fuel containers in your car. Gas canisters and other containers used to transport fuel can be dangerous. Such containers, full or empty, may leak and could cause a fire in a collision. If you must

transport fuel to use for your lawn mower, snow blower, etc., be very careful and always observe local and state laws regarding the use, transportation and storage of such fuel containers. Make certain the container meets industry standards (ANSI/ASTM F852 - 86).

Note

Never drive your vehicle until the fuel tank is completely dry. The irregular supply of fuel can cause misfiring. Gasoline could enter into the exhaust system and damage the catalytic converter.

Refueling



Fig. 135 Driver's door: Unlocking fuel filler flap



Fig. 136 Fuel cap hooked on the opened fuel filler flap

When adding fuel, the ignition and any cellular phones in the vehicle must be switched off.

Taking the fuel cap off

- ▶ To open the fuel filler flap, press the button ⇒ *fig. 135*.
- ▶ Unscrew fuel filler cap counter-clockwise and hang it on the fuel filler flap ⇒ *fig. 136*.

Refueling procedure

- ▶ Insert the fuel nozzle from the gasoline pump into the fuel filler neck as far as it will go.
- ▶ Select a medium refueling rate so that the nozzle switches off automatically when the tank is full.

Putting the fuel cap back on

- ▶ After filling your tank, twist the fuel filler cap clockwise until you hear a definite click.
- ▶ Close the fuel filler flap.

To avoid fuel spilling or evaporating from the fuel tank always close fuel filler cap properly and completely. An improperly closed fuel filler cap may also cause the MIL lamp ⇒ *page 21* to come on.

WARNING

Improper refueling or handling of fuel can cause fire, explosion and severe burns.

- Fuel is highly flammable and can cause severe burns and other injuries.
- Failure to shut the engine off while refueling and/or to insert the pump nozzle fully into the fuel filler neck could cause fuel to spray out of filler neck or to overflow. Fuel spray and overflowing fuel can cause a fire.
- Never use a cellular telephone while refueling. The electromagnetic radiation can cause sparks that can ignite fuel vapors and cause a fire.
- Never get back into your vehicle while refueling. If in exceptional circumstances you must get back in your vehicle while refueling, make certain that you close the door and touch metal to discharge static electricity before touching the filler nozzle again. Static electricity can cause sparks that can ignite fuel vapors released during refueling.
- Never smoke or have an open flame anywhere in or near your vehicle when refueling or filling a portable fuel container.

- For your safety, we strongly recommend that you do not travel with a portable fuel container in your vehicle. The container, full or empty may leak and could cause a fire, especially in a crash.
- If, under exceptional circumstances, you must transport a portable fuel container, please observe the following:
 - Never fill a portable fuel container while it is anywhere in or on the vehicle (for example, in the luggage compartment, or on the trunk). Static electricity can build up while filling and can ignite fuel vapors causing a fire.
 - Always place a portable fuel container on the ground before filling.
 - Always keep the filler nozzle completely inside the portable container before and during filling.
 - If filling a portable container made of metal, the filler nozzle must always be in contact with the container. This will help prevent static electricity from discharging and cause a fire.
 - Never spill fuel inside the vehicle or luggage compartment. Fuel vapors are highly flammable.
 - Always observe local and state/provincial laws regarding the use, storage and transportation of fuel containers
 - Make certain the fuel container meets industry standards (ANSI / ASTM F852-86).

! Note

If any fuel has spilled onto the car, it should be removed immediately to prevent damage to the paint.

🌳 For the sake of the environment

As soon as the correctly operated nozzle switches off automatically for the first time, the tank is full. Do not try to add more fuel because fuel may spill out. In addition, the expansion space in the fuel tank will be filled - causing the fuel to

overflow when it becomes warm and pollute the environment.

i Tips

- Running your engine while refueling may cause vapors to escape or even fuel to spill out of the tank. This would then shut off the fuel nozzle before the tank is full.
- Do not refuel your vehicle with the ignition switched on. The fuel gauge may otherwise not indicate the correct fuel level after refueling.

Unlocking the fuel filler flap by hand

You can open the fuel filler flap by hand if the power locking system should fail.



Fig. 137 Engine compartment: loosening the fuel filler flap cable



Fig. 138 Engine compartment: releasing the fuel filler flap using the emergency release

You can release the fuel filler flap using a red emergency release loop. It is located in the right side of the engine compartment.

- Open the engine compartment lid.
- Loosen the fuel filler flap cable from its mount **A** on the crossmember ⇒ *fig. 137*.

- ▶ Pull the red loop in the direction of the arrow until the fuel filler flap opens
⇒ *fig. 138*.
- ▶ Once the fuel filler flap is open, secure the cable on the crossmember again.
- ▶ Close the engine compartment lid
⇒ *page 176*.

Checking and filling

Engine compartment lid

Releasing the engine compartment lid

The engine compartment lid is released from inside the vehicle.



Fig. 139 Driver's side: releasing the engine compartment lid

Requirement: The ignition must be switched on.

- ▶ Make sure the rear spoiler is retracted ⇒ page 152.
- ▶ Pull the (A) button. The engine compartment lid opens slightly.
- ▶ Open the engine compartment lid ⇒ ⚠.

⚠ WARNING

Hot engine coolant can burn you.

- To reduce the risk of being burned, never open the engine compartment lid if you see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before carefully opening the engine compartment lid.

! Note

To prevent damage to the vehicle, only open the engine compartment lid when the convertible top storage bay lid is closed.

i Tips

An emergency release can be used if the engine compartment lid cannot be released with the button (A) ⇒ page 177.

Working in the engine compartment

Be especially careful whenever you work in the engine compartment!

Whenever you must perform any work in the engine compartment, for example checking and filling the different fluids, there is a risk of injury, burns and accidents. To prevent personal injury always observe the following WARNINGS. The engine compartment of any vehicle is a hazardous area! ⇒ ⚠.

⚠ WARNING

To help avoid injury, before you check anything under the engine compartment lid:

- Switch off the engine.
- Remove the ignition key.
- Apply the parking brake.
- Move selector lever of R tronic to "N" (Neutral); put manual transmission in Neutral.
- Always let the engine cool down. Hot components will burn skin on contact.
- To reduce the risk of being burned, never open the engine compartment lid if you see or hear steam or coolant escaping from the engine compartment. Wait until no steam or coolant can be seen or heard before carefully opening the engine compartment lid.
- Keep children away from the engine compartment.
- Never spill fluids on hot engine components. They can cause a fire.
- Never open the coolant reservoir cap when the engine is still warm. The coolant system is pressurized and hot coolant could spray out.
- Protect your face, hands and arm from steam or hot engine coolant by placing a

thick rag over the cap when you open the coolant reservoir.

- If work on the fuel system or the electrical system is necessary:
 - Always disconnect the battery.
 - Never smoke or work near heaters or open flames. Fluids in the engine compartment could start a fire.
 - Keep an approved fire extinguisher immediately available.
- To avoid electrical shock and personal injury while the engine is running or being started, never touch:
 - Ignition cables
 - Other components of the high voltage electronic ignition system.
- If you must perform a check or repair with the engine running:
 - First, fully apply the parking brake, move selector lever of R tronic to “N” (Neutral); put manual transmission in Neutral.
 - Always use extreme caution to prevent clothing, jewelry, or long hair from getting caught in the radiator fan, V-belts or other moving parts, or from contacting hot parts. Tie back hair before starting, and wear no clothing that will hang or droop into the engine.
 - Minimize exposure to emission and chemical hazards ⇒ .



WARNING

California Proposition 65 Warning:

- Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of

California to cause cancer and reproductive harms. Wash hands after handling.



Note

When adding fluids, always make sure that they are poured into the proper container or filler opening, otherwise serious damage to vehicle systems will occur.



For the sake of the environment

To detect leaks in time, inspect the vehicle floor pan from underneath regularly. If you see spots from oil or other vehicle fluids, have your vehicle inspected by an authorized Audi dealer.

Closing the engine compartment lid

- ▶ Make sure that the rear spoiler is retracted ⇒ *page 152*.
- ▶ Pull the engine compartment lid down until the pressure from the struts is reduced.
- ▶ Press the engine compartment lid closed ⇒ .



WARNING

A engine compartment lid that is not completely latched could fly up and block your view while driving.

- When you close the engine compartment lid, check it to make sure the safety catch has properly engaged. The engine compartment lid should be flush with the surrounding vehicle body parts.
- If you notice while driving that the engine compartment lid is not secured properly, stop at once and close it.

Engine compartment lid emergency release

The emergency release loop is located under the right trim panel near the front passenger seat.

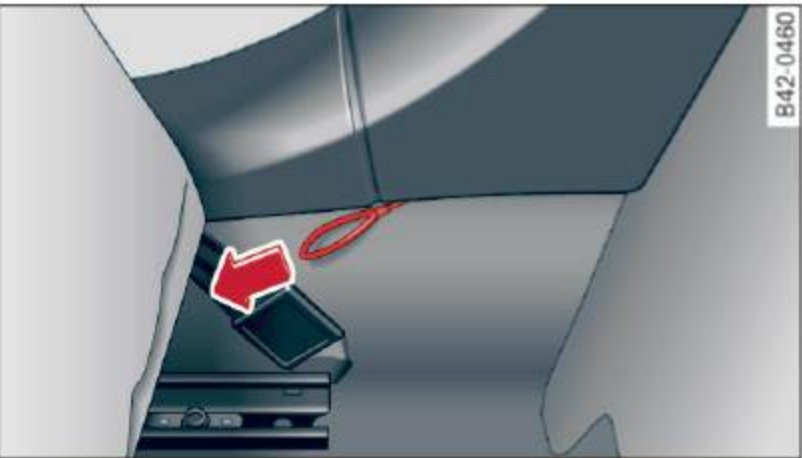


Fig. 140 Front passenger footwell: emergency release loop

- ▶ Make sure the rear spoiler is retracted
⇒ page 152.
- ▶ Pull the loop forward to release the engine compartment lid. The engine compartment lid opens slightly.
- ▶ Open the engine compartment lid ⇒ ⚠ in Releasing the engine compartment lid on page 175.

! Note

To prevent damage to the vehicle, only open the engine compartment lid when the convertible top storage bay lid is closed.

Engine compartment

These are the most important items that you can check.

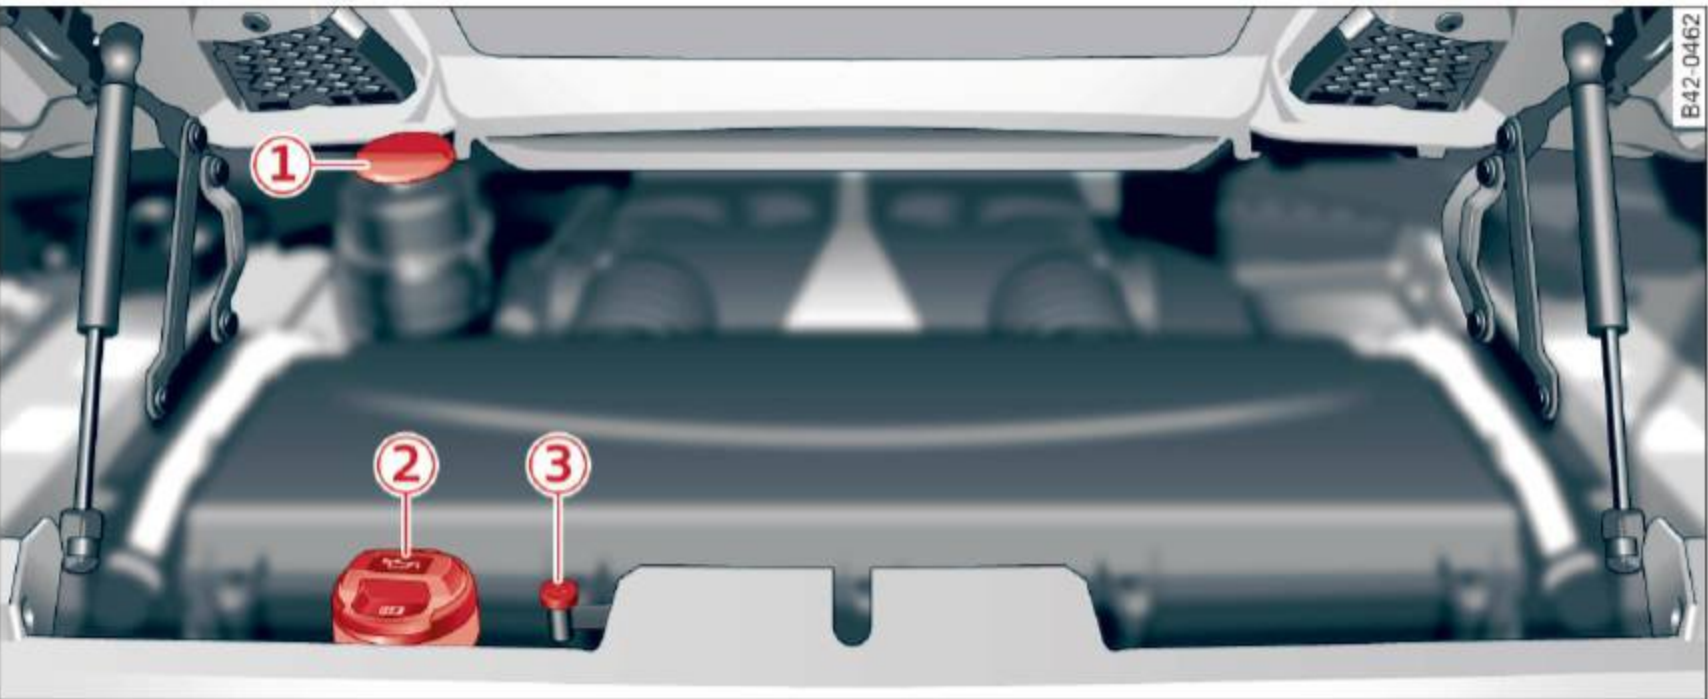


Fig. 141 Typical layout for containers, engine oil dipstick and engine oil filler cap

- | | |
|---------------------------------------|-----|
| ① Power steering fluid reservoir (⚙). | 154 |
| ② Engine oil filler cap (🛢). | 180 |
| ③ Engine oil dipstick | 180 |

⚠ WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ ⚠ in Working in the engine compartment on page 175.

i Tips

The coolant expansion tank is located under the convertible top storage bay lid
⇒ page 183.

Engine oil

Engine oil specifications

The engine oil used in your Audi needs the right kind of oil.

The engine in your Audi is a sophisticated powerplant that was built to exacting specifications. This engine needs the right kind of engine oil that meets specifications regarding quality and viscosity so that it can run smoothly and reliably. Choosing the right oil and changing oil within the time and mileage intervals printed in your vehicle's Warranty & Maintenance booklet matters a lot more today than it did years ago. Audi has developed a special quality standard for engine oil that will help assure that your vehicle's engine will get the lubrication it needs for proper operation.

Modern engine lubrication has taken a quantum leap in the last few years. Many synthetic oils available today provide better engine lubrication that can outlast traditional petroleum-based oils, making them a smart choice for use throughout the life of your Audi.

Whether you use synthetic or petroleum-based engine oil, the oil that you use must conform to Audi's oil quality standard VW 502 00 to help keep your vehicle's engine running smoothly and help prevent the formation of harmful deposits, sometimes called "sludge," that over time can lead to expensive repairs.

At the time of printing, engine oils available in the U.S. and Canada that meet the exacting specifications of Audi oil standard VW 502 00 are synthetic engine oils. This does not mean, however, that every synthetic engine oil will meet Audi oil standard VW 502 00. So always be sure that you use an approved oil.

To help prevent the formation of harmful deposits use only oil with the following specifications printed on the oil container:

Audi oil standard VW 502 00

Oil container labels may carry the specification singly or in combination with other designations and oil quality standards.

Viscosity

Engine oils are graded according to their viscosity. The proper viscosity grade oil for your engine depends on climactic or seasonal conditions where you drive. You can use oil with a viscosity grade of SAE 5W40 across all temperature ranges for normal driving conditions.

However, if engine oil viscosity grade SAE 5W40 is not available, you can also use viscosity grade SAE 5W-30 or SAE 0W-40 as long as it meets Audi oil quality standard VW 502 00 specifications.

Because engine oil that meets the Audi oil standard may not be available everywhere when you need it, we strongly recommend that you always carry with you an extra quart (liter) of oil that expressly conforms to the VW 502 00 specification, in case you have to top off the oil while on the road.

Only if the level of the oil is at or below the minimum mark on the oil dipstick - and no oil that expressly conforms to Audi oil standard VW 502 00 specifications is available - may you top off with a high quality engine oil, preferably synthetic-based, that meets ACEA A3, ACEA A5 or ACEA B5 or API SL specifications, but even then, only in viscosity grades SAE 5W-40, SAE 5W-30, or SAE 0W-40. However, during the entire time between oil change intervals, never top off with more than a total of 0.5 qt/liter engine oil that does not conform to Audi oil specification VW 502 00.

For more information about engine oil that has been approved for your vehicle, please contact either your authorized Audi dealer or Audi Customer Relations at 1 (800) 822-2834 or visit our web site at www.audiusa.com or www.audicanada.ca. Here you will also find a current list of oils (manufacturers, brand names etc.) that conform to Audi oil standard VW 502 00.

Changing the engine oil



The engine oil and oil filter must be changed according to the mileage (kilometers) and time intervals specified in your vehicle's Warranty & Maintenance booklet. Do not exceed these intervals – harmful deposits from old engine oil can reduce engine performance and can lead to expensive engine repairs.

Changing the oil at the recommended intervals is so very important because the lubricating properties of oil decrease gradually during normal vehicle use. If you are not sure when you have your oil changed, ask your authorized Audi Service Advisor.

Under some circumstances the engine oil should even be changed more frequently. Change oil more often if you drive mostly short distances, operate the vehicle in dusty areas or mostly under stop-and-go traffic conditions, or when you use your vehicle where temperatures stay below freezing point for long periods.

Detergent additives in the oil will make fresh oil look dark after the engine has been running for a short time. This is normal and is not a reason to change the oil more often than recommended.

Damage or malfunctions due to lack of maintenance

It is essential that you change your oil at the recommended intervals using only engine oil that complies with Audi oil standard VW 502 00. Your Limited New Vehicle Warranty does not cover damage or malfunctions due to failure to follow recommended maintenance and use requirements as set forth in the Audi Owner's Manual and Warranty & Maintenance booklet. Your authorized Audi dealer will have to deny warranty coverage unless you present to the dealer proof in the form of Service or Repair Orders that all scheduled maintenance was performed in a timely manner.

Engine oil consumption

The engine in your vehicle depends on an adequate amount of oil to lubricate and cool all of its moving parts.

In order to provide effective lubrication and cooling of internal engine components, all internal combustion engines consume a certain amount of oil. Oil consumption varies from engine to engine and may change significantly over the life of the engine. Typically, engines with a specified break-in period (see ⇒ *page 158*) consume more oil during the break-in period than they consume after oil consumption has stabilized.

Under normal conditions, the rate of oil consumption depends on the quality and viscosity of the oil, the RPM (revolutions per minute) at which the engine is operated, the ambient temperature and road conditions. Further factors are the amount of oil dilution from water condensation or fuel residue and the oxidation level of the oil. As any engine is subject to wear as mileage builds up, the oil consumption may increase over time until replacement of worn components may become necessary.

With all these variables coming into play, no standard rate of oil consumption can be established or specified. There is no alternative to regular and frequent checking of the oil level, see **Note**.

If the yellow engine oil level warning symbol in the instrument cluster  lights up, you should check the oil level as soon as possible ⇒ *page 180*. Top off the oil at your earliest convenience ⇒ *page 180*.



WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒  *in Working in the engine compartment on page 175.*



Note

Driving with an insufficient oil level is likely to cause severe damage to the engine. ►

i Tips

If you have the impression your engine consumes excessive amounts of oil, we recommend that you consult your authorized Audi dealer to have the cause of your concern properly diagnosed. Keep in mind that the accurate measurement of oil consumption requires great care and may take some time. Your authorized Audi dealer has instructions about how to measure oil consumption accurately.

Checking the engine oil level

Fig. 142 Instrument cluster: Engine oil temperature display

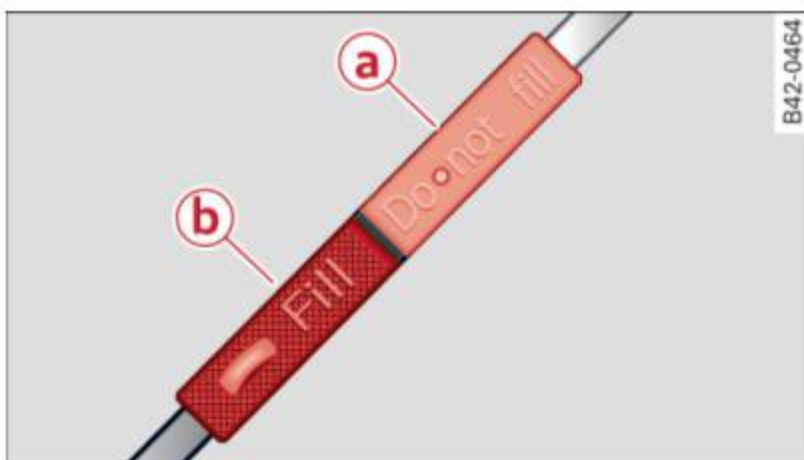


Fig. 143 Markers on oil dipstick

Before you check anything in the engine compartment, **always read and heed all WARNINGS** ⇒  in *Working in the engine compartment* on page 175.

Determining oil level

- ▶ Warm up the engine by driving until the instrument cluster display shows an oil temperature of 210 °F (100 °C) to 230 °F (110 °C) ⇒ *fig. 142* **1**.
- ▶ Park your vehicle so that it is horizontally level.

- ▶ Allow the warm engine to run for about two minutes at idle.
- ▶ Shut the engine off and wait two minutes.
- ▶ Check the oil level on the engine oil dipstick ⇒ *fig. 143*.

Oil level within range **a**

- ▶ Do *not* add oil.

Oil level within range **b**

- ▶ Add 1 quart (1 liter) of oil ⇒ *page 180*. Afterwards, the oil level should be within range **a**.

Depending on the way the vehicle is driven and the operating conditions, oil consumption can be up to 1 quart per 600 miles (1 liter per 1,000 km). Consumption may be higher within the first 3,000 miles (5,000 km).

**Adding engine oil **

Fig. 144 Engine compartment: Oil filler cap location

Before you check anything in the engine compartment, **always read and heed all WARNINGS** ⇒  in *Working in the engine compartment* on page 175.

- ▶ Unscrew the cap  to the engine oil filling hole ⇒ *fig. 144*.
- ▶ Carefully top off with the appropriate oil ⇒ *page 228*.
- ▶ Check the oil level again ⇒ *page 180*.
- ▶ Top off the oil again, if necessary.
- ▶ Screw the cap back on the filling hole and slide the oil dipstick in as far as it will go. ▶

! WARNING

- While topping off, the oil must not come in contact with hot engine parts - fire hazard!
- The oil filler cap must be properly secured to prevent oil from being sprayed on the hot engine and exhaust system when the engine is running - fire hazard!
- If your skin has come in contact with the engine oil, you must subsequently cleanse it thoroughly.

! Note

- The oil level must not be above range **a** - danger of converter or engine damage! Contact an authorized Audi dealer to draw off oil, if necessary.
- Audi does not recommend the use of oil additives. They may damage the engine and adversely affect your New Vehicle Warranty.

🌱 For the sake of the environment

- Under no circumstances can the oil come in contact with the sewage network or the soil.
- Observe and follow legal regulations when disposing of empty oil containers.

Engine cooling system

Coolant

The coolant provides cooling for the engine. The percentage of the coolant additive determines the freeze protection of the coolant in the winter.

The cooling system has been filled at the factory with a permanent coolant which does not need to be changed. The coolant consists of a mixture of water and the manufacturer's glycol-based coolant additive G12++ antifreeze with anticorrosion additives (50% for USA models; 60% for Canadian models).

Coolant additive

The percentage of the coolant additive depends on the climatic conditions in which the vehicle is operated. If the percentage of freeze protection in the coolant is too low, the coolant can freeze, leading to a failure of the cooling and heating circuit.

The percentage of coolant additive has already been adjusted at the factory for the vehicle's climatic conditions.

The mix ratio for USA models is 50% water and 50% coolant additive, for Canadian models 40% water and 60% coolant additive. This mixture both assures the necessary frost protection (-31 °F/-35 °C for USA models, -40 °F/-40 °C for Canada models) and protects metal components in the engine's cooling system from corrosion and scaling. It also raises the boiling point of the coolant.

Summer time

Do not reduce the concentration of the coolant in the summer by adding plain water. **The proportion of coolant additive must be at least 50% but not more than 60%** to maintain antifreeze protection and cooling efficiency.

! WARNING

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ **! in Working in the engine compartment on page 175.**

! Note

- Before winter sets in, have the coolant checked to see if the coolant additive in your vehicle is sufficient to meet the climate conditions. This is especially important if you live in a region where the winter is extremely cold. If necessary, increase the proportion of coolant additive to 60%.
- Only G12++, an additive meeting specification "TL-VW 774G" may be used as a coolant additive. Other coolant additives

may seriously degrade the corrosion protection. The resulting damage can cause loss of coolant and subsequently lead to serious engine damage.

- The coolant additive G12++ must not be mixed with other coolant additives.
- Do not add any type of radiator leak sealant to your vehicle's engine coolant. Adding radiator repair fluid may adversely affect the function and performance of your cooling system and could result in damage not covered by your New Vehicle Limited Warranty.

Checking the engine coolant level

Proceed carefully when checking the coolant.

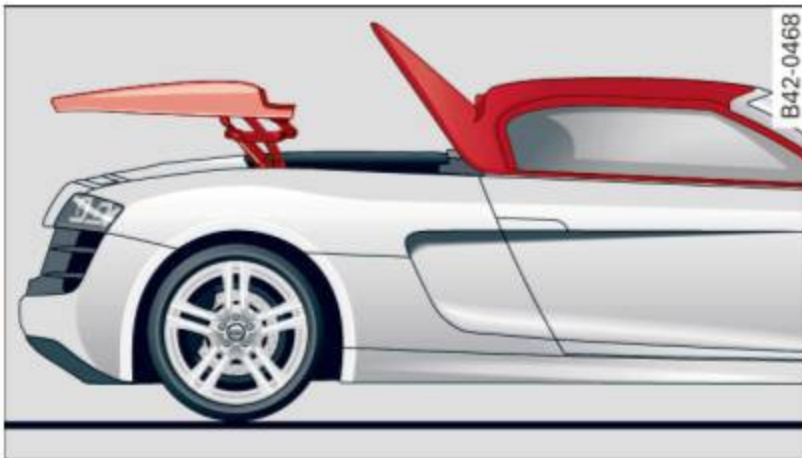


Fig. 145 Convertible top: service position

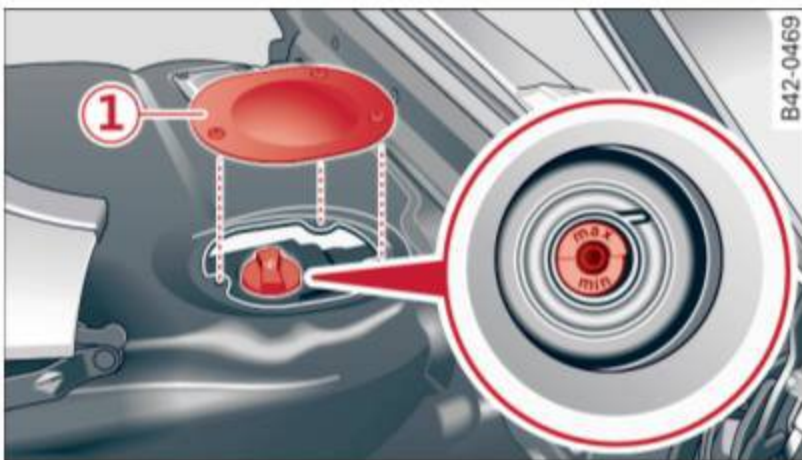


Fig. 146 Convertible top storage bay: coolant expansion tank

Before you check anything in the engine compartment, **always read and heed all WARNINGS** ⇒  in *Working in the engine compartment* on page 175.

The coolant expansion tank is located in the right side of the convertible top storage bay under the round metal cover ⇒ *fig. 146*. The convertible top must be in the service position to check the coolant level ⇒ *fig. 145*.

Bringing the closed convertible top into the service position

- ▶ Switch the ignition on.
- ▶ Pull and hold the convertible top switch.
- ▶ Press and hold the rear window switch too until the convertible top moves into the service position ⇒ *fig. 145*.

Bringing the open convertible to into the service position

- ▶ Switch the ignition on.
- ▶ Press and hold the convertible top switch.
- ▶ Press and hold the rear window switch too until the convertible top moves into the service position ⇒ *fig. 145*.

Opening the coolant expansion tank cover

- ▶ Stop the engine and allow it to cool.
- ▶ Switch the ignition off.
- ▶ Carefully remove the bolts in the cover **1** using a screwdriver and remove the cover. The coolant reservoir is located below ⇒ *fig. 146*.

Checking the engine coolant level

- ▶ Place a rag or cloth on the cap of the coolant expansion tank and turn the cap **carefully** to the left (counter-clockwise) ⇒ .
- ▶ Read the coolant level inside the coolant expansion tank ⇒ *fig. 146*. With a cold engine, it must be above the "min" mark. With a hot engine, it can be a little above the indicated range.

To obtain an accurate reading, the engine must be switched off.

The expansion tank in your vehicle is equipped with an electric coolant level sensor ⇒ *page 32*. We still recommend you check the coolant level from time to time.

Coolant loss

Coolant loss may indicate a **leak** in the cooling system. In the event of coolant loss, the cooling system should be inspected immediately by your authorized Audi dealer. It is not enough merely to add coolant.

In a **sealed** system, losses can occur only if the boiling point of the coolant is exceeded as a result of overheating.

WARNING

- The cooling system is under pressure. Do not open the cap of the coolant expansion tank when the engine is hot. You risk being scalded.
- The coolant additive, and therefore the coolant itself, is hazardous to health. Keep the coolant additive in the original container out of the reach of children. It is a poison hazard.

Note

Do not add any type of radiator leak sealant to your vehicle's engine coolant. Adding radiator repair fluid may adversely affect the function and performance of your cooling system and could result in damage not covered by your New Vehicle Limited Warranty.

Adding coolant

Before you check anything in the engine compartment, **always read and heed all WARNINGS** ⇒  in *Working in the engine compartment* on page 175.

- ▶ Add coolant.
- ▶ Twist the cap on again *tightly*.
- ▶ Tighten the cap  ⇒ page 182, fig. 146 again.

Replacement engine coolant must conform to exact specifications ⇒ page 181, *Coolant*. If the coolant additive G12++ is not available in an emergency, you must not add any other additive. In this case, use only water and restore the correct mix ratio with the specified coolant additive as soon as possible.

Always use *new* engine coolant when refilling.

Do not fill coolant above the “MAX” mark. Excess coolant will be forced out through the pressure relief valve in the cap when the engine becomes hot.

With a major loss of coolant, you should add the coolant only when the engine has *cooled*. In this way you prevent engine damage.

WARNING

- The cooling system is under pressure and can get very hot. Reduce the risk of scalding from hot coolant by following these steps.
- Turn off the engine and allow it to cool down.
- Protect your face, hands and arms from escaping fluid and steam by covering the cap with a large, thick rag.
- Turn the cap slowly and very carefully in a counter-clockwise direction while applying light, downward pressure on the top of the cap.
- To avoid being burned, do not spill antifreeze or coolant on the exhaust system or hot engine parts. Under certain conditions, the ethylene glycol in engine coolant can catch fire.
- Antifreeze is poisonous. Always store antifreeze in its original container and well out of the reach of children.
- If you drain the coolant, it must be caught and safely stored in a proper container clearly marked “poison”.

Note

- Coolant pollutes the environment and could cause an engine fire. Excess coolant will be forced out through the pressure relief valve in the cap when the engine becomes hot.
- If, in an emergency, only water can be added, the correct ratio between water and antifreeze ⇒ page 181 must be restored as soon as possible.



For the sake of the environment

Drained coolant should not be reused. Always dispose of used coolant while observing all environmental regulations.

Brake fluid

Notice

Have the brake fluid changed by an experienced technician.

Brake fluid absorbs moisture from the air. If the water content in the brake fluid is too high, corrosion in the brake system may result after a period of time. The boiling point of the brake fluid will also decrease considerably and decrease braking performance.

Therefore, the brake fluid must be changed **every two years**. Always use new brake fluid which conforms to Federal Motor Vehicle Standard "FMVSS 116 DOT 4".

Brake fluid is replaced according to the Audi maintenance service schedule. Your authorized Audi dealer is equipped with the necessary special tools and replacement parts, has the necessary expertise, and can dispose of the used fluid.



WARNING

- Brake fluid is poisonous. It must be stored only in the closed original container out of the reach of children!
- Brake failure can result from old or inappropriate brake fluid. Observe these precautions:
 - Use only brake fluid that meets SAE specification J 1703 and conforms to Federal Motor Vehicle Standard 116. Always check with your authorized Audi dealer to make sure you are using the correct brake fluid. The correct type of brake fluid is also indicated on the brake fluid reservoir.
 - The brake fluid must be new. Heavy use of the brakes can cause a vapor lock if the brake fluid is left in the system too long. This can seriously affect the efficiency of the brakes as well as your safety. This could result in an accident.



Note

Brake fluid will damage the paint of your vehicle.



For the sake of the environment

Because of the problem of proper disposal of brake fluid as well as the special tools required and the necessary expertise, we recommend that you have the brake fluid changed by your authorized Audi dealer.

Battery

General information

All work on the battery requires technical knowledge.

The battery is located behind the cover in the luggage compartment. Remove the cover by pushing it to the left and lifting it out.

The battery is practically maintenance-free and is checked as part of your vehicle's maintenance services.

You are well advised to replace a battery that is older than 5 years.

Disconnecting the battery terminals

Some vehicle functions (power window regulators, for example) are lost if the battery terminals are disconnected. These functions have to be relearned after the battery terminals are connected again. To prevent this, the battery should only be disconnected from the vehicle electrical system when absolutely necessary for repairs.

Vehicles not driven for long periods

The battery becomes discharged due to quiescent current consumers even when the vehicle is not used. With extended periods of non-use in the **cold** season, you should have the vehicle battery removed by an authorized Audi dealer or qualified workshop and stored in an frost-free place. This prevents the battery from "freezing" and thereby being destroyed. During the **warmer** seasons it is enough to

disconnect the battery negative terminal. Occasionally charge a disconnected battery.

Winter operation

The cold time of year places a special strain on the battery, resulting in reduced starting power. So before the cold weather starts, have the battery inspected and charged as necessary.

**WARNING**

- All work on the battery requires technical knowledge. Please contact an authorized Audi dealer or another authorized facility for questions about the battery - danger of acid burns and explosion hazard!
- The battery must not be opened! Do not try to change the battery's liquid level, otherwise detonating gas will escape from the battery - explosion hazard!

Working on the battery

	Always wear eye protection.
	Battery acid contains sulfuric acid. Always wear gloves and eye protection.
	No - sparks - flames - smoking.
	When a battery is charged, it produces hydrogen gas which is explosive and could cause personal injury.
	Always keep the battery well out of reach of children.

The following WARNINGS are very important when working on the battery:

**WARNING**

Whenever working on the battery or on the electrical system, there is the risk of injury, accident and even fire. Read and heed the following WARNINGS:

- Always wear eye protection. Do not let battery acid or any lead particles get on your skin or clothing. Shield your eyes. Explosive gases can cause blindness or other injury.
- Battery acid contains sulfuric acid. Sulfuric acid can cause blindness and severe burns.
- Always wear gloves and eye protection. Do not tilt the battery because acid could leak out of the ventilation openings.
- If you get battery acid in your eyes or on your skin, immediately rinse with cold water for several minutes and get medical attention.
- If you should ingest any battery acid, seek medical attention immediately.
- Do not expose the battery to an open flame, electric sparks or an open light.
- Do not smoke.
- Do not interchange the positive and negative cables.
- When working on the battery, be sure not to short-circuit the terminals with tools or other metal objects. This would cause the battery to heat up very quickly, which could lead to damage or explosion and personal injury.
- When a battery is charged, it produces hydrogen gas which is explosive and could cause personal injury.
- Always keep the battery well out of the reach of children.
- Before work is done on the electrical system, disconnect the negative ground cable.
- Before performing any work on the electrical system, switch off the engine and ignition as well as any electrical equipment. The negative cable on the battery must be disconnected. If you are just going to replace a light bulb, then it is enough to switch off the lights.
- Before disconnecting the battery, switch off the anti-theft alarm system! Otherwise you will set off the alarm.

- When disconnecting the battery, first disconnect the negative cable and then the positive cable.
- Before reconnecting the battery, make sure all electrical consumers are switched off. Reconnect the positive cable first and then the negative cable. Never interchange the cables - this could start a fire!
- Never charge a frozen or a thawed-out battery. It could explode! If a battery has frozen, then it must be replaced. A discharged battery can freeze over at 32 °F (0 °C).
- Make sure the vent hose is always attached to the opening on the side of the battery.
- Never use batteries which are damaged. Danger of explosion! Always replace a damaged battery.

WARNING

California Proposition 65 Warning:

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive problems. Wash hands after handling.

Note

- Do not disconnect the vehicle battery when the ignition is switched on or when the engine is running, otherwise, you will damage electronic components in the electrical system.
- If your vehicle is going to stand for a long period of time without being driven, protect the battery from “freezing”, otherwise it will be damaged and will then have to be replaced.

Charging the battery

Connections for charging the battery are located in the luggage compartment.

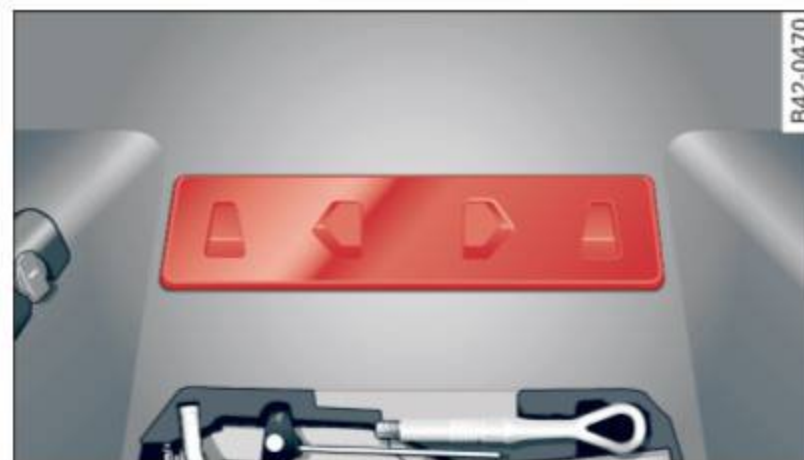


Fig. 147 Luggage compartment: battery cover

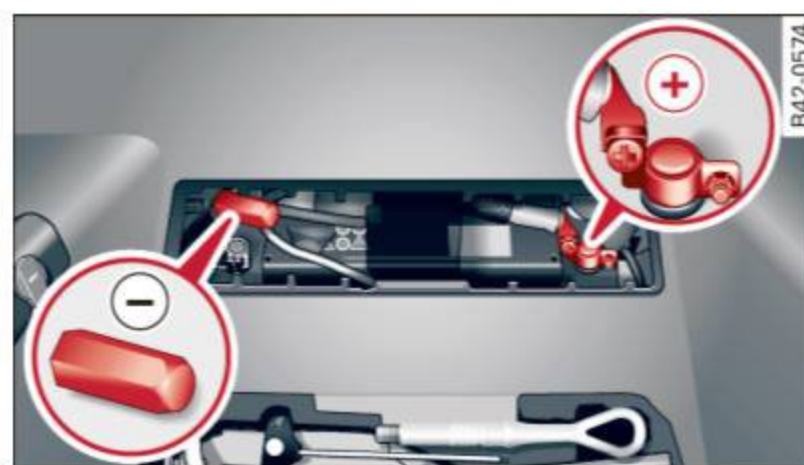


Fig. 148 Luggage compartment: connectors for a charger and jump start cables

Do *not* connect the negative cable directly to the negative terminal on the battery. Connect it to a **jump start pin** instead ⇒ *fig. 148*.

- ▶ Always read and heed all WARNINGS ⇒  in *Working on the battery* on page 185 and ⇒ .
- ▶ Switch off the ignition and all electrical consumers.
- ▶ Open the luggage compartment lid ⇒ *page 42*.
- ▶ Remove the battery cover ⇒ *fig. 147*.
- ▶ Connect the terminal clamps from the charger to the battery terminal (red = “positive”) and the jump start pin ⇒ *fig. 148* (black or brown = “negative”) as specified.
- ▶ Only now plug the mains lead for the charging equipment into the wall outlet and turn it on.
- ▶ When the battery is fully charged: Turn the charging equipment off and remove the mains lead from the wall outlet.
- ▶ Now remove the clamps for the charging equipment.

- ▶ Install the battery cover.
- ▶ Close the luggage compartment lid
⇒ page 42.

When charging at *low* voltages (e.g. with a **trickle charger**), the battery cables do not have to be disconnected first. Before charging at *high* voltages, i.e. “**fast charging**”, you must disconnect both cables. In either case, follow the instructions from the manufacturer of the charger.

Fastcharging a battery is **dangerous** ⇒ ⚠ in *Working on the battery on page 185*. It requires special charging equipment and the knowledge to go with it. We recommend having your battery fast charged only by a qualified workshop.

A discharged battery can **freeze** at temperatures of only 32 °F (0 °C). Allow a frozen battery to thaw completely before attempting to charge it ⇒ ⚠. However, we recommend not using a thawed battery again because the battery casing can be cracked due to ice formation and can leak battery acid.

Do not open the battery caps when charging the battery.

⚠ WARNING

Charging a battery can be dangerous.

- Never charge a frozen battery. It may explode because of gas trapped in the ice. Allow a frozen battery to thaw out first.
- Do not reuse batteries which were frozen. The battery housing may have cracked and weakened when the battery froze.
- Charge the battery in a well ventilated area. Keep away from open flame or electrical spark. Do not smoke. Hydrogen gas generated by the battery is explosive.
- To reduce the danger of explosion, never connect or disconnect charger cables while the charger is operating.
- Fast charging a battery is dangerous and should only be attempted by a competent technician with the proper equipment.

- Battery acid that may spill during charging should be washed off with a solution of warm water and baking soda to neutralize the acid.

! Note

Never use a fast charger as a booster to start the engine. This will seriously damage sensitive electronic components, such as control units, relays, radio, etc., as well as the battery charger.

i Tips

- The vehicle battery must not be charged with a standard small charger that plugs into the cigarette lighter or outlet.
- Only charge the battery through the connections in the luggage compartment.

Replacing the battery

The new battery must have the same specifications as the old one.

Your vehicle is equipped with an intelligent energy management system for distributing electricity ⇒ page 155. The battery charges better in vehicles with the energy management system than in vehicles without the system. To ensure that the additional power is available after replacing the battery, replacing with the same type of battery from the same manufacturer (like the battery that was delivered with the vehicle) is recommended. An authorized dealer must code the battery in the energy management control module.

The new battery must have the same capacity, voltage (12 volts), current and design and it must be sealed with plugs. The battery must conform to the standards TL 825 06 (from October 2006) and VW 7 50 73 (from August 2001).

Since the vehicle battery is difficult to reach, we recommend having the battery replaced by an authorized Audi R8 dealer or other qualified workshop.

! Note

- Your vehicle is equipped with a special battery. Installing a different type of battery can cause problems in the vehicle electrical system. When replacing the vehicle battery, always install one with the same specifications as the original battery.
- Make sure that the gas venting hose is always connected to the original opening on the battery side. Otherwise gasses or battery acid could leak out.
- Battery holder and terminals always have to be secured correctly.
- Read and follow the warnings under *⇒ page 185, Working on the battery* before performing any work on the battery.

🌱 For the sake of the environment

Because of the problem of proper disposal of a battery, we recommend your authorized Audi dealer change the battery for you. Batteries contain sulfuric acid and lead and must always be disposed of properly in compliance with all environmental regulations. Disposing of vehicle batteries improperly is very dangerous to the environment. Make sure that the removed battery cannot overbalance, otherwise sulfuric acid might escape!

The windshield washer container  is located in the luggage compartment. You can find the reservoir **capacity** in the table in *⇒ page 229*.

Clean water should be used when filling up. If possible, use soft water to prevent scaling on the washer jets. Always add a glass cleaner solution (with frost protection in the winter).

! Note

- Do not mix engine coolant antifreeze or any other additives to fill up the windshield washer reservoir.
- Do not use glass cleaners containing paint solvent; you risk damaging the paint.

Windshield washer container



Fig. 149 Luggage compartment: Windshield washer fluid reservoir

Tires and wheels

Tires

General notes

Tires may be the least appreciated and most abused parts of a motor vehicle.

Tires may be the least appreciated and most abused parts of a motor vehicle. Tires are, however, one of the most important parts of a vehicle, particularly considering the comparatively small patch of rubber on each tire that assures that all-important contact between you, your vehicle and the road.

Maintaining the correct tire pressure, making sure that your vehicle and its tires do not have to carry more weight than they can safely handle, avoiding damage from road hazards and regularly inspecting tires for damage including cuts, slashes irregular wear and overall condition are the most important things that you can do to help avoid sudden tire failure including tread separation and blowouts.

Avoiding damage

If you have to drive over a curb or similar obstacle, drive very slowly and as close as possible at a right angle to the curb.

Always keep chemicals including grease, oil, gasoline and brake fluid off the tires.

Inspect the tires regularly for damage (cuts, cracks or blisters, etc.). Remove any foreign bodies embedded in the treads.

Storing tires

Mark tires when you remove them to indicate the direction of rotation. This ensures you to be able to mount them correctly when you re-install them.

When removed, the wheels or tires should be stored in a cool, dry and preferably dark place.

Store tires in a vertical position if they are not mounted on rims, in a horizontal position if they are mounted on rims.

New tires

New tires have to be broken in ⇒ .

The tread depth of new tires may vary, according to the type and make of tire and the tread pattern.

Hidden damage

Damage to tires and rims is often not readily visible. If you notice unusual vibration or the vehicle pulls to one side, this may indicate that one of the tires has been damaged. The tires must be checked immediately by an authorized Audi dealer or qualified workshop.

Unidirectional tires

A unidirectional tire can be identified by arrows on the sidewall, that point in the direction the tire is designed to rotate. You must follow the specified direction of rotation. This is necessary so that these tires can develop their optimum characteristics regarding grip, road noise, wear and hydroplaning resistance. For more information ⇒ *page 216*.



WARNING

New tires or tires that are old, worn or damaged cannot provide maximum control and braking ability.

- New tires tend to be slippery and must be broken in. To reduce the risk of losing control, a collision and serious personal injuries, drive with special care for the first 350 miles (560 km).
- Driving with worn or damaged tires can lead to loss of control, sudden tire failure, including a blowout and sudden deflation, crashes and serious personal injuries. Have worn or damaged tires replaced immediately.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at low speed.

– Never mount used tires on your vehicle if you are not sure of their “previous history.” Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.

– If you notice unusual vibration or if the vehicle pulls to one side when driving, always stop as soon as it is safe to do so and check the wheels and tires for damage.

Glossary of tire and loading terminology

Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of R tronic, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Aspect ratio

means the ratio of the height to the width of the tire in percent. Numbers of 55 or lower indicate a low sidewall for improved steering response and better overall handling on dry pavement.

Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Bead separation

means a breakdown of the bond between components in the bead.

Cord

means the strands forming the plies in the tire.

Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment.

Extra load tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

Gross Axle Weight Rating (“GAWR”)

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

Gross Vehicle Weight Rating (“GVWR”)

means the maximum total loaded weight of the vehicle.

Groove

means the space between two adjacent tread ribs.

Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum loaded vehicle weight

means the sum of:

- (a) Curb weight
- (b) Accessory weight
- (c) Vehicle capacity weight, and
- (d) Production options weight

Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called “maximum inflation pressure.”

Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

Occupant distribution

means distribution of occupants in a vehicle.

Outer diameter

means the overall diameter of an inflated new tire.

Overall width

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

Ply

means a layer of rubber-coated parallel cords.

Production options weight

means the combined weight of those installed regular production options weighing over 5 lbs. (2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

Radial ply tire

means a pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure

see ⇒ *page 190, Cold tire inflation pressure.*

Reinforced tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

Rim

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Rim diameter

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

Rim size designation

means rim diameter and width.

Rim width

means nominal distance between rim flanges.

Sidewall

means that portion of a tire between the tread and bead.

Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇒ *page 200*. You may not find this information on all tires because it is not required by law.

The speed rating letter code, where applicable, is molded on the tire sidewall and indicates the maximum permissible road speeds ⇒ ⚠ in *Winter tires on page 204*.

Tire pressure monitoring system

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning tell-tale.

Tread

means that portion of a tire that comes into contact with the road.

Tread separation

means pulling away of the tread from the tire carcass.

Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇒ *page 198, Tread Wear Indicator (TWI)* for more information on measuring tire wear.

Uniform Tire Quality Grading

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative comparisons among tires. The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles or perform in a certain way. It simply gives tire buyers additional information to combine with other considerations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the tire manufacturers in three areas: treadwear, traction and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

U.S. DOT Tire Identification Number (TIN)

This is the tire’s “serial number” It begins with the letters “DOT” and indicates that the

tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

DOT ... 2210 ...

means that the tire was produced in the 22nd week of 2010. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

Vehicle capacity weight

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle’s total seating capacity as listed on the label located on the driver’s side B-pillar.

Vehicle maximum load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

Vehicle normal load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with table below ⇒ *page 192*) and dividing by two.

Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, number of occupants	Vehicle normal load, number of occupants	Normally loaded vehicle, occupant distribution
2	2	2 in front

Cold tire inflation pressure

Tire pressure affects the overall handling, performance and safety of a vehicle.

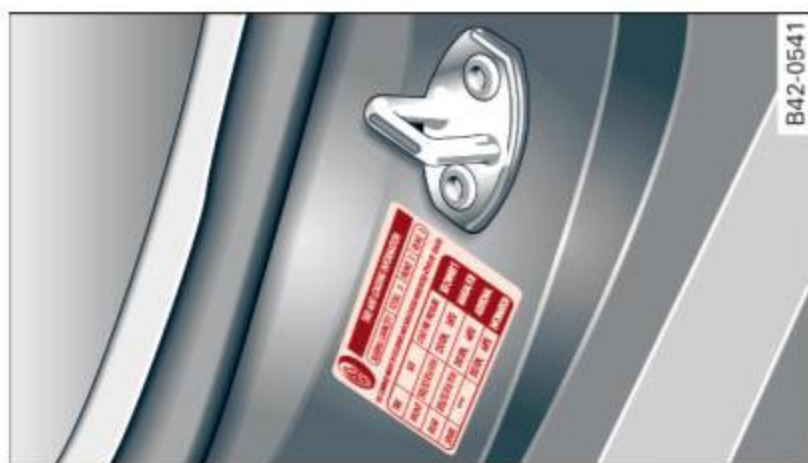


Fig. 150 Tire pressure label: located on driver's side B-pillar

Tire pressure generally refers to the amount of air in a tire that it needs it to do its job and safely carry the combined load of the entire vehicle and its contents. Tire pressure is measured in kilopascals (kPa), the international measuring unit and in pounds per square inch (PSI). Tire pressure is based in part on the vehicle's design and load limit – the greatest amount of weight that the vehicle can carry safely and the tire size. The proper tire pressure is frequently referred to as the “recommended cold tire inflation pressure.” Air in the tires expands when the tire heats up because of internal friction when it flexes in use. The tire pressure is higher when the tire has warmed up than when it is “cold.” It is the inflation pressure in a “cold” tire that counts. Therefore, you should never let air out of a warm tire to match “cold tire inflation pressure” recommendations. The tires would then be underinflated and could fail suddenly.

Maintaining proper tire pressure is one of the most important things you can do to help avoid sudden tire failure. Underinflated tires are a major cause of sudden tire failure. Keeping tires at the right pressure is also important for safe and responsive vehicle handling, traction, braking and load carrying. **Tire pressures are particularly important when the vehicle is being driven at higher speeds, and then especially when heavily loaded even within the permissible load-carrying capacities approved for your vehicle.**

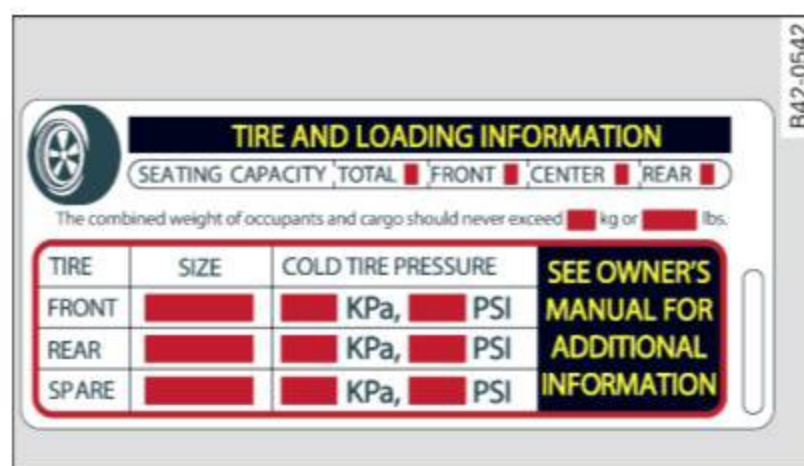


Fig. 151 Tire pressure label

The recommended tire pressures for your Audi depend on the kind of tires on your vehicle and the number of passengers and/or amount of luggage you will be transporting.

The tire pressure label located on driver's side B-pillar on your Audi lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and tires that were on your vehicle at the time it was manufactured.

If you wish to improve comfort when operating the vehicle at normal load (up to 2 occupants), you can adjust tire pressures to those specified for normal vehicle load. Before operating the vehicle at maximum load, you must increase the tire pressures to those specified for maximum vehicle load ⇒ ⚠.

Bear in mind that the tire pressure monitoring system can only monitor the tire pressures that are stored. The system does not recognize the load condition of your vehicle.

See the illustration ⇒ *fig. 150* for the location of the label on driver's side B-pillar (color of the actual label and exact location on the vehicle will vary slightly).

Note that the following table is accurate at the time of going to press and is subject to change. In the event of discrepancies, the tire pressure label on driver's side B-pillar always takes precedence. ►

The table below lists the recommended cold tire inflation pressures for the Audi model covered by your Owner’s Literature at the vehi-

cle’s capacity weight and the tire sizes installed on the respective models as original equipment, or as a factory option.

Engine (dis- place- ment in liter)	Tire designation	Tire pressure front				Tire pressure rear			
		normal load condition		full load condition		normal load condition		full load condition	
		PSI	kPA	PSI	kPA	PSI	kPA	PSI	kPA
8-cylin- der 4.2	235/35 R19 91Y XL	45	310	45	310	---	---	---	---
	295/30 R19 100Y XL	---	---	---	---	41	280	41	280
	305/30 R19 102Y XL	---	---	---	---	41	280	41	280
10-cyl- inder 5.2	235/35 R19 91Y XL	45	310	45	310	---	---	---	---
	295/30 R19 100Y XL	---	---	---	---	41	280	41	280
	305/30 R19 102Y XL	---	---	---	---	41	280	41	280

XL = reinforced

Because technical changes may be made to vehicle equipment during the model year, always compare the tire size designation on the tire pressure label on your vehicle with the tires on your vehicle. Make sure that the tire size information on the vehicle label is the same as the size of the tires on the vehicle. This is especially important if the vehicle belongs to someone else or you bought the vehicle with different rims/tires or you bought the vehicle as a previously owned vehicle.

Remember, your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle’s Gross Vehicle Weight Rating (“GVWR”). The Gross Axle Weight Rating (“GAWR”) is the maximum load that can be applied at each of the vehicle’s two axles. The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located either on the driver’s side B-pillar. The tire pressure label on your Audi lists the maximum combined weight of all of the occupants and luggage or other cargo that the vehicle can carry. For the location of the tire pressure label

⇒ *fig. 150.*

 **WARNING**

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of a loss of vehicle control.
- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- Tires on a vehicle that has been overloaded can fail suddenly causing loss of control and a crash.

 **WARNING**

- Incorrect tire pressures and/or underinflation can lead to a serious or fatal accident.
- Incorrect tire pressures and/or underinflation cause increased tire wear and can affect the handling of the vehicle.
- Incorrect tire pressures and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.

Checking tire pressure

The correct tire pressure for the tires originally installed on your vehicle is listed on the tire pressure label located on driver's side B-pillar.

The recommended tire pressures are on the tire pressure label and in the table
⇒ *page 193, Cold tire inflation pressure*. This means that the pressure must be checked and adjusted when the tire has not been driven for more than a couple of miles (kilometers) at low speeds during the previous three hours. Air in the tires expands when the tire heats up as a result of internal friction as it flexes in use. The tire pressure is higher when the tire has warmed up than when it is “cold”.

It is the inflation pressure in a “cold” tire that counts. Therefore, you should never let air out of a warm tire to match “Cold tire inflation pressure” recommendations ⇒ *page 193*. The tires would then be underinflated and could fail suddenly.

The tire pressure label on your Audi lists the recommended cold tire inflation pressures for the new, original equipment tires that were on your vehicle at the time it was manufactured. For the location of the label
⇒ *page 193, fig. 150*.

Most tires lose air naturally over time. They can also lose some air if you drive over a pothole or hit a curb while parking. It is usually not possible to see whether the radial tires used today are underinflated just by looking at them.

Therefore, be sure to check tire pressures at least once a month and always before going on a long trip. Make sure to take the number of people and the amount of luggage into account when adjusting tire pressure for a trip – even one that you would not consider to be “long”. See ⇒ *page 196, Tires and vehicle load limits* for more important information.

Always use an accurate tire pressure gauge when checking and adjusting inflation pressures. Check all of the tires. If the pressure in

any tire is too high when the tire is “cold”, let air out of the tire slowly with the edge of the tire gauge and keep checking the pressure until you reach the pressure that is correct for the load (passengers and luggage) and kind of driving you plan to do.

If the pressure in any tire is too low, note the difference between the pressure in the cold tire and the pressure you need and add the air that you need to reach the correct pressure for the vehicle load (passengers and luggage) for the tires on your vehicle as listed on the on your vehicle and in this manual and the kind of driving you plan to do.

Never exceed the maximum inflation pressure listed on the tire sidewall for any reason.

Remember that the vehicle manufacturer, not the tire manufacturer, determines the correct tire pressure for the tires on your vehicle.

It is important to check the tire pressure when the tires are cold.

- Read the required tire pressure from the tire pressure label located on driver's side B-pillar.
- Turn the valve stem cap counter-clockwise to remove it from the tire valve.
- Place the air pressure gauge on the valve.
- The tire pressures should only be checked and adjusted when the tires are cold. The slightly raised pressures of warm tires must not be reduced.
- Adjust the tire pressure to the load you are carrying.
- Reinstall the valve stem cap on the valve.

When should I check the tire pressure?

The correct tire pressure is especially important at high speeds. The pressure should therefore be checked at least once a month and always before starting a journey.

When should I adjust the tire pressures?

Adjust the tire pressure to the load you are carrying. After changing a wheel or replacing

wheels you have to adjust the tire pressures on all wheels.

WARNING

Incorrect tire pressures and/or underinflation can lead sudden tire failure, loss of control, collision, serious personal injury or even death.

- When the warning symbol  appears in the instrument cluster, stop and inspect the tires.
- Incorrect tire pressure and/or underinflation can cause increased tire wear and can affect the handling of the vehicle and stopping ability.
- Incorrect tire pressures and/or underinflation can also lead to sudden tire failure, including a blowout and sudden deflation, causing loss of vehicle control.
- The driver is responsible for the correct tire pressures for all tires on the vehicle. The applicable pressure values are located on a sticker on the driver's side B-pillar.
- Only when all tires on the vehicle are filled to the correct pressure, the tire pressure monitoring system can work correctly.
- The use of incorrect tire pressure values can lead to accidents or other damage. Therefore it is essential that the driver observe the specified tire pressure values for the tires and the correct pressures for the function of the tire pressure monitoring system.
- Always inflate tires to the recommended and correct tire pressure before driving off.
- Driving with underinflated tires bend more, letting them get too hot resulting in tread separation, sudden tire failure and loss of control.
- Excessive speed and/or overloading can cause heat build-up, sudden tire failure and loss of control.
- If the tire pressure is too low or too high, the tires will wear prematurely and the vehicle will not handle well.

- If the tire is not flat and you do not have to change a wheel immediately, drive at reduced speed to the nearest service station to check the tire pressure and add air as required.

Note

Driving without valve stem caps can cause damage to the tire valves. To prevent this, always make sure that factory installed valve stem caps on all wheels are securely mounted on the valve.

For the sake of the environment

Underinflated tires will also increase the fuel consumption.

Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating** ("GVWR").

The "GVWR" includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry ("seating capacity") with an assumed weight of 150 lbs. (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle.

The **Gross Axle Weight Rating** (“GAWR”) is the maximum load that can be applied at each of the vehicle’s two axles.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located on the driver’s side B-pillar. Your Audi has 2 seating positions in the front for total seating capacity of 2. Each seating position has a safety belt ⇒ *page 109, Safety belts*.

The fact that there is an upper limit to your vehicle’s Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The tire pressure label on your Audi also lists the maximum combined weight of all of the occupants and luggage or other cargo that the vehicle can carry. For the location of the label ⇒ *page 193, fig. 150*.

WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.
- The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.

Determining correct load limit

Use the example below to calculate the total weight of the

passengers and luggage or other things that you plan to transport so that you can make sure that your vehicle will not be overloaded.

Steps for Determining Correct Load Limit

1. Locate the statement “THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS” on your vehicle’s placard (tire inflation pressure label) ⇒ *page 193, fig. 150*.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from “XXX” kilograms or “XXX” pounds shown on the sticker ⇒ *page 193, fig. 150*.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available

cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)

5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
 6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.
- Check the tire sidewall (⇒ *page 199, fig. 153*) to determine the designated load rating for a specific tire.

Tire service life

The service life of tires depends on a lot of different things including proper installation and balancing, correct tire pressure and driving style.



Fig. 152 Tire tread: tread wear indicators (TWI)

Tread Wear Indicator (TWI)

The original tires on your vehicle have 1/16 inch (1.6 mm) high “wear indicators” ⇒ *fig. 152* running across the tread. Depending on the make, there will be six to eight of them evenly placed around the tire. Marks on the tire sidewall (for example “TWI” or other symbols) indicate the positions of the tread wear indicators. Worn tires must be replaced. Different figures may apply in other countries ⇒ ⚠.

Tire pressure

Incorrect tire pressure causes premature wear and can cause sudden tire blow-out. For this reason, tire pressure must be checked at least once a month ⇒ *page 195*.

Driving style

Driving fast around curves, heavy acceleration and hard braking increase tire wear.

Wheel balancing

The wheels on new vehicles are balanced. However, various situations during everyday driving can cause them to become unbalanced, resulting in vibrations you can usually feel through the steering wheel.

Unbalanced wheels must be rebalanced to avoid excessive wear on steering, suspension and tires. A wheel must also be rebalanced when a new tire is installed.

Incorrect wheel alignment

Incorrect wheel alignment can cause excessive tire wear, impairing the safety of the vehicle. If tires show excessive wear, have the wheel alignment checked by an authorized Audi dealer or qualified workshop.

All-wheel drive

Only the wheel/tire sizes specified by the manufacturer may be used on vehicles with all-wheel drive. For details see ⇒ *page 155*. ►

! WARNING

Sudden tire failure can lead to loss of control, a crash and serious personal injury!

- Never drive a vehicle when the tread on any tire is worn down to the wear indicators.
- Worn tires are a safety hazard, they do not grip well on wet roads and increase your risk of “hydroplaning” and loss of control.
- Always keep chemicals that can cause tire damage, such as grease, oil, gasoline and brake fluid away from tires.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at lower speeds.
- Never mount used tires on your vehicle if you are not sure of their “previous history.” Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.

New tires and replacing tires and wheels

New tires and wheels have to be broken in.

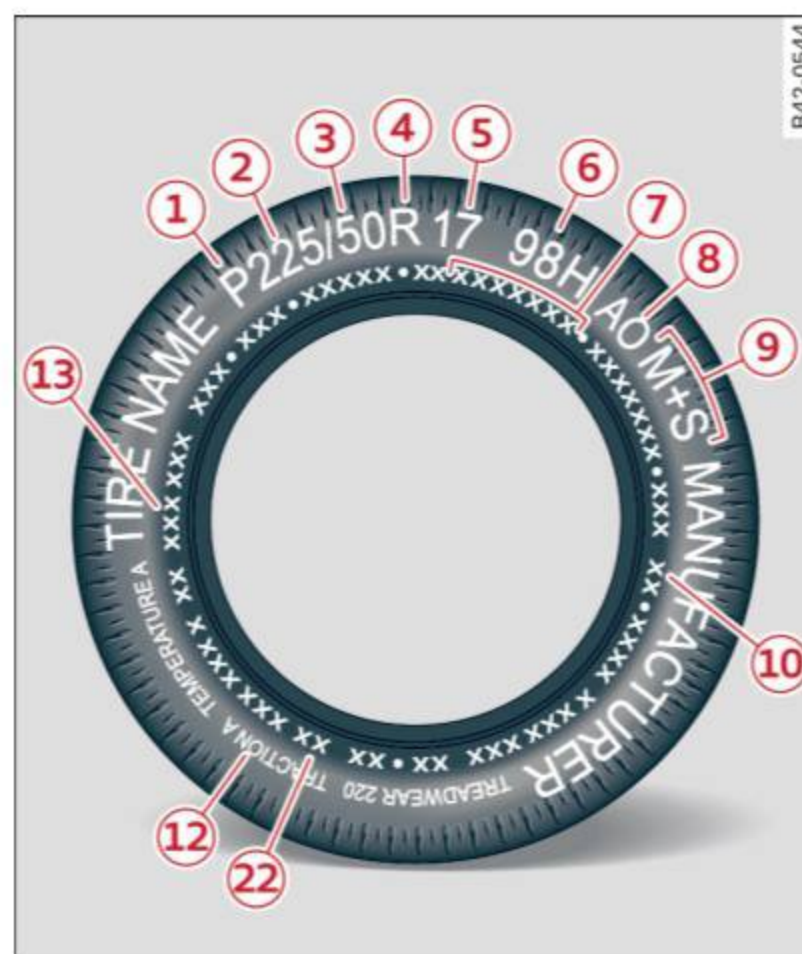


Fig. 153 Tire specification codes on the sidewall of a tire

No.	Description
①	Passenger car tire (where applicable)
②	Nominal width of tire in millimeters
③	Ratio of height to width (aspect ratio)
④	Radial
⑤	Rim diameter code
⑥	Load index and speed rating
⑦	U.S. DOT tire identification number
⑧	Audi Original tire
⑨	Severe snow conditions
⑩	Tire ply composition and materials used
⑪	Maximum load rating
⑫	Treadwear, traction and temperature grades
⑬	Maximum permissible inflation pressure

The tires and rims are essential parts of the vehicle's design. The tires and rims approved by Audi are specially matched to the characteristics of the vehicle and can make a major

contribution to good road holding and safe handling when in good condition and properly inflated ⇒ .

We recommend that all work on tires and wheels be performed by an authorized Audi dealer. They are familiar with recommended procedures and have the necessary special tools and spare parts as well as the proper facilities for disposing of the old tires.

Authorized Audi dealers have the necessary information about technical requirements for installing or changing tires and rims.

Replacing tires and wheels

Tires should be replaced at least in pairs and not individually (for example both front tires or both rear tires together).

Be sure to read and heed the information to the tire pressure monitoring system ⇒ *page 201*.

Always buy replacement radial tires that have the same specifications as the tires approved for your vehicle by Audi. Replacement tires must always have the same load rating specification as the original equipment or approved optional tires listed in the table ⇒ *page 193*.

Audi-approved specification tires are specially matched to your vehicle and its load limits, and can contribute to the important roadholding, driving characteristics, and safety of the vehicle. The table (⇒ *page 193*) lists specifications of the tires approved for the Audi models covered by your Owner's Literature.

The tire pressure label located on driver's side B-pillar (⇒ *page 193*, *fig. 151*) lists the specifications of the original equipment tires installed on your vehicle at the time it was manufactured.

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires ⇒ *fig. 153*. This information identifies and describes the fundamental characteristics, the quality grade of the tire and also provides a tire identification number

for safety standard certification and in case of a recall.

Tire specifications

Knowledge of tire specifications makes it easier to choose the correct tires. Radial tires have the tire specifications marked on the sidewall, for example:

P235 / 35 R 18 91 Y

This contains the following information:

- P** Indicates the tire is for passenger cars
- 235** Nominal tire width in mm of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire
- 35** Height/width ratio in percent (aspect ratio)
- R** Tire construction: **Radial**
- 18** Rim diameter code (in inches)
- 91** Load rating code
- Y** Speed rating letter code
- XL** (or "xl", "EXTRA LOAD", or "RF") indicates that the tire is a "Reinforced" or an "Extra Load" tire
- M+S** (or "M/S") Indicates that the tire has some mud and snow capability

The tires could also have the information of direction of rotation ⇒ *page 189*.

Tire manufacturing date

The manufacturing date is also indicated on the tire sidewall (possibly only on the *inner* side of the wheel):

"DOT ... 2210..." means, for example, that the tire was produced in the 22nd week of 2010.

Speed rating (letter code)

The speed rating letter code on the wheels indicates the maximum permissible road speeds ⇒  in *Winter tires on page 204*.

- P** up to 93 mph (150 km/h)
- Q** up to 99 mph (158 km/h)
- R** up to 106 mph (170 km/h)
- S** up to 110 mph (180 km/h)



T	up to 118 mph (190 km/h)
U	up to 124 mph (200 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h) ¹⁾
Z	over 149 mph (240 km/h) ¹⁾
W	up to 168 mph (270 km/h) ¹⁾
Y	up to 186 mph (298 km/h) ¹⁾

Your vehicle is normally factory equipped with tires, which possess excellent driving characteristics and give your Audi optimum driving comfort ⇒ .

U.S. DOT Tire Identification Number (TIN) and tire manufacture date

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example, the numbers 2210 mean that the tire was produced in the 22nd week of 2010. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

Audi original tire

Tires with the identification "AO" or "RO" have been specially matched with your Audi. We recommend using only these tires because they meet the highest standards regarding safety and driving characteristics when used correctly. Your authorized Audi dealer will gladly provide you with more information.

Tire ply composition and materials used

The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the

tire, which include steel, nylon, polyester, and others.

Maximum Load Rating

This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

Tire quality grading for treadwear, traction, and temperature resistance

Tread wear, traction and temperature grades ⇒ *page 203*.

Maximum Permissible Inflation Pressure

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

Replacing tires or rims on vehicles equipped with tire pressure monitoring system

The wheels on your vehicle are equipped with a sensor which constantly monitors the air pressure inside the tire, and then transmits this information to the tire pressure monitoring system. If you are going to replace the wheel rims on your vehicle, make sure the new rims also have these sensors. The sensors must be compatible with the tire pressure monitoring system on your vehicle.

If you install rims, which do not have the sensors, or have sensors which are not compatible, then the tire pressure monitoring system will not work properly. In this case, the tire pressure monitoring system would not be able to monitor the tire pressure or warn you if it is necessary.

- The battery inside of the tire pressure sensor has a limited service life.
- Always drive with the valve stem caps securely mounted. We recommend using factory installed valve stem caps. Ask your authorized Audi dealer to replace lost valve stem caps.

¹⁾ For tires with a maximum speed capability over 149 mph (240 km/h), tire manufacturers sometimes use the letters "ZR."

The installation of replacement tires with steel cord body plies in the tire sidewall may cause malfunction of the tire pressure monitoring system, and is not recommended (cord material information is molded on the tire sidewall).

Always check your tire pressure monitoring system indicator after replacing one or more tires on your vehicle. If the tire pressure monitoring system indicator flashes, or is on, your system is not working properly.

WARNING

- Using incorrect or unmatched tires and / or wheels or improper tire and wheel combinations can lead to loss of control, collision and serious personal injury.
- Always use tires, rims and wheel bolts that meet the specifications of original factory-installed tires or other combinations that have been specifically approved by the vehicle manufacturer.
- Tires age even if they are not being used and can fail suddenly, especially at high speeds. Tires that are more than 6 years old can only be used in an emergency and then with special care and at lower speeds.
- Never mount used tires on your vehicle if you are not sure of their “previous history.” Old used tires may have been damaged even though the damage cannot be seen that can lead to sudden tire failure and loss of vehicle control.
- Only the wheel/tire sizes specified by the manufacturer may be used on vehicles with all-wheel drive.
- Never drive faster than the maximum speed for which the tires on your vehicle are rated because tires that are driven faster than their rated speed can fail suddenly.
- Overloading tires cause heat build-up, sudden tire failure, including a blowout and sudden deflation and loss of control.

- Temperature grades apply to tires that are properly inflated and not over or underinflated.
- For technical reasons it is not always possible to use wheels from other vehicles – in some cases not even wheels from the same vehicle model.
- Do not use run-flat tires on your vehicle. Using run-flat tires can lead to vehicle damage or crashes.

Note

- For technical reasons, it is not generally possible to use the wheel rims from other vehicles. This can hold true for wheels of the same vehicle type.
- If you should put different wheels and tires on your vehicle (e.g. winter wheels and tires), you must be certain that the wheels and tires are compatible with the tire pressure monitoring system. Otherwise the system will register a malfunction and a fault message will be displayed. For more information, contact your authorized Audi dealer.

Note

- When installing new tires, be careful not to damage the valves or tire pressure monitoring system sensors.
- Never drive without the valve stem cap. The valves could get damaged.
- If the sensors must be replaced, then the valve must also be replaced at the same time.

For the sake of the environment

Dispose of old tires in accordance with the local requirements.

Tips

Tires with the identification “R01” have been specially matched with your Audi. We recommend using only these tires because they meet the highest standards regarding safety and driving characteristics when used correctly. Your authorized Audi R8

dealer will gladly provide you with more information.

Uniform tire quality grading

- Tread wear
- Traction AA A B C
- Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇒ *page 199, fig. 153.*

For example: Tread wear **200**, Traction **AA**, Temperature **A**.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The *traction* grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇒ ⚠.

Temperature

The *temperature* grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipa-

te heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure ⇒ ⚠.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.



WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Winter tires

Winter tires can improve vehicle handling on snow and ice. At temperatures below 45 °F (7 °C) we recommend changing to winter tires.

In some heavy snow areas, local governments may require true winter or “snow” tires, those with very deeply cut tread. These tires should only be used in pairs and be installed on all four wheels. Make sure you purchase snow tires that are the same size and construction type as the other tires on your vehicle.

If your vehicle is equipped with all-wheel drive*, this will improve traction during winter driving, even with the standard tires. However, we strongly recommend that you always

equip all four wheels on your vehicle with correctly fitted winter tires or all-season tires, when winter road conditions are expected. This also improves the vehicle's braking performance and reduces stopping distances.

Summer tires provide less grip on ice and snow.

Winter tires (snow tires) must always be fitted on all four wheels.

Compatible tire pressure monitoring sensors must be installed on all four winter tires for the tire pressure monitoring system to function properly ⇒ *page 201*.

Ask your authorized Audi dealer or qualified workshop for permitted **winter tire sizes**. Use only radial winter tires.

Winter tires lose their effectiveness when the tread is worn down to a depth of 0.157 inch (4 mm).

Only drive with winter tires under winter conditions. Summer tires handle better when there is no snow or ice on the roads and the temperature is above 45 °F (7 °C).

Please always remember that winter tires may have a lower speed rating than the tires originally installed on your vehicle at the time it was manufactured. Please see ⇒ *page 200*, *Speed rating (letter code)* for a listing of the speed rating letter codes and the maximum speed at which the tires can be driven.

The speed rating letter code (⇒ *page 191*) is on the side wall of the tire ⇒ *page 199*.

WARNING

Winter tires have maximum speed limits that may be lower than your vehicle's maximum speed. Always know the maximum speed before driving off. Never drive faster than the speed permitted for your specific winter tires. This will cause damage to the tires leading to an accident and serious personal injury to you and your passengers.

WARNING

Driving faster than the maximum speed for which the winter tires on your vehicle were designed can cause tire failure including a blowout and sudden deflation, loss of control, crashes and serious personal injuries. Have worn or damaged tires replaced immediately.

- Winter tires have maximum speed rating that may be lower than your vehicle's maximum speed.
- Never drive faster than the speed for which the winter or other tires installed on your vehicle are rated.

WARNING

Always adjust your driving to the road and traffic conditions. Never let the good acceleration of the winter tires and all-wheel drive tempt you into taking extra risks. Always remember:

- When braking, an all-wheel drive vehicle handles in the same way as a front drive vehicle.
- Drive carefully and reduce your speed on icy and slippery roads, even winter tires cannot help under black ice conditions.

For the sake of the environment

Use summer tires when weather conditions permit. They are quieter, do not wear as quickly and reduce fuel consumption.

Snow chains

Snow chains may be fitted only to the rear wheels, and only to certain tire sizes. Ask your authorized Audi dealer on which tire sizes snow chains can be used.

The snow chains must have low-profile links and must not be thicker than 0.53 inch (13.5 mm), including the lock.

Remove wheel center covers before putting snow chains on your vehicle ⇒ . For safety reasons cover caps must then be fitted over

the wheel bolts. These are available from authorized Audi dealers.

WARNING

Using the wrong snow chains for your vehicle or installing them incorrectly can increase the risk of loss of control leading to serious personal injury.

- Snow chains are available in different sizes. Always make sure to follow the instructions provided by the snow chain manufacturer.
- When driving with snow chains, never drive faster than the speed permitted for your specific snow chains.
- Always observe local regulations.

Note

- Remove snow chains before driving on roads not covered with snow to avoid damaging tires and wearing the snow chains down unnecessarily.
- Snow chains, which come into direct contact with the wheel rim, can scratch or damage it. Therefore, make sure that the snow chains are suitably covered. Check the position of the snow chains after driving a few yards and correct if necessary. Follow the instructions from the snow chain manufacturer when doing so.

Tips

Where snow chains are mandatory on certain roads, this normally also applies to vehicles with all-wheel drive.

Wheel bolts

Wheel bolts must always be tightened to the correct torque.

The design of wheel bolts is matched to the factory installed rims. If different rims are fitted, the correct wheel bolts with the right length and correctly shaped bolt heads must be used. This ensures that wheels are fitted securely and that the brake system functions correctly.

In certain circumstances, you may not use wheel bolts from a different vehicle – even if it is the same model ⇒ *page 211*.

WARNING

Improperly tightened or maintained wheel bolts can become loose causing loss of control, a collision and serious personal injury.

- Always keep the wheel bolts and the threads in the wheel hubs clean so the wheel bolts can turn easily and be properly tightened.
- Never grease or oil the wheel bolts and the threads in the wheel hubs. They can become loose while driving if greased or oiled, even if tightened to the specified torque.
- Only use wheel bolts that belong to the rim being installed.
- Never use different wheels bolts on your vehicle.
- Always maintain the correct tightening torque for the wheel bolts to reduce the risk of a wheel loss. If the tightening torque of the wheel bolts is too low, they can loosen and come out when the vehicle is moving. If the tightening torque is too high, the wheel bolts and threads can be damaged and the wheel can become loose.

Note

The specified torque for the wheel bolts is 90 ft lb (120 Nm) with a tolerance of ± 7.4 ft lb (± 10 Nm). Torque wheel bolts diagonally. After changing a wheel, the torque must be checked as soon as possible with a torque wrench – preferably by an authorized Audi dealer or qualified workshop.

Low aspect ratio tires

Your Audi is factory-equipped with low aspect ratio tires. These tires have been thoroughly tested and been selected specifically for your model for their superb performance, road feel and handling under a variety of driving

conditions. Ask your authorized Audi dealer for more details.

The low aspect ratio of these tires is indicated by a numeral of **55 or less** in the tire's size designation. The numeral represents the ratio of the tire's sidewall height in relation to its tread width expressed in percentage. Conventional tires have a height/width ratio of 60 or more.

The performance of low-aspect-ratio tires is particularly sensitive to improper inflation pressure. It is therefore important that low aspect ratio tires are inflated to the specified pressure and that the inflation pressure is regularly checked and maintained. Tire pressures should be checked at least once a month and always before a long trip ⇒ *page 195, Checking tire pressure*.

What you can do to avoid tire and rim damage

Low aspect ratio tires can be damaged more easily by impact with potholes, curbs, gullies or ridges on the road, particularly if the tire is underinflated.

In order to minimize the occurrence of impact damage to the tires of your vehicle, we recommend that you observe the following precautions:

- Always maintain recommended inflation pressures. Check your tire pressure every 2.000 miles (3.000 km) and add air if necessary.
- Drive carefully on roads with potholes, deep gullies or ridges. The impact from driving through or over such obstacles can damage your tires. Impact with a curb may also cause damage to your tires.
- After any impact, immediately inspect your tires or have them inspected by the nearest authorized Audi dealer. Replace a damaged tire as soon as possible.
- Inspect your tires every 2.000 miles (3.000 km) for damage and wear. Damage is not always easy to see. Damage can lead to loss of air and underinflation, which could eventually cause tire failure. If you believe that a

tire may have been damaged, replace the tire as soon as possible.

- These tires may wear more quickly than others.
- Please also remember that, while these tires deliver responsive handling, they may ride less comfortably and make more noise than other choices.

Reduced performance in winter/cold season conditions

All tires are designed for certain purposes. The low aspect ratio, ultra high performance tires originally installed on your vehicle are intended for maximum dry and wet road performance and handling. They are not suitable for cold, snowy or icy weather conditions. If you drive under those circumstances, you should equip your vehicle with winter tires, which offer better traction under those conditions. We suggest you use the recommended snow tires specified for your vehicle, or their equivalent.

Refer to ⇒ *page 203* for more detailed information regarding winter tires.

Tire pressure monitoring system

General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as ►

soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Introduction

The tire pressure monitoring system monitors air pressure in all four road wheels while the vehicle is moving.

As soon as the tire pressure monitoring system senses a significant loss of air pressure in one or several tires, text messages and yellow symbols appear in the instrument cluster display to alert the driver. The  warning light

in the instrument cluster comes on when the tire is significantly underinflated ⇒ *page 34*.

The warning light  also illuminates in the case of a system malfunction.

Be aware that tire pressure is also dependent on the temperature of the tire. For every 18 °F (10 °C) increase in tire temperature, tire pressure increases by about 1.5 psi (0.1 bar). The tire warms up while the vehicle is moving and tire pressure rises. So you should adjust tire pressure only when they are *cold*, when the temperature of the tires is roughly the same as the ambient air temperature.

In order to keep the tire pressure monitoring system properly calibrated, tire pressure on all four tires should be checked at regular intervals.

The tire pressure is shown on the label located on the driver's side B-pillar (visible when the door is open).



WARNING

When the tire pressure monitoring system warning light is lit, one or more of your tires is significantly under-inflated. You should stop and check your tires as soon as possible, and inflate them to the proper pressure as indicated on the vehicle's tire pressure label ⇒ *page 193*. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also is likely to impair the vehicle's handling and stopping ability.



For the sake of the environment

Driving with under-inflated tires reduces fuel efficiency and tire tread life.



Tips

- Each tire should be checked monthly when the temperature of the tires is about the same as ambient air temperature and set to the recommended inflation pressure as specified on the tire pressure label ⇒ *page 193*.

- The tire pressure monitoring system helps the driver to keep an eye on tire pressures. But the driver still has the responsibility for maintaining the correct tire pressure.
- Tire pressure must only be adjusted when the temperature of the tires is about the same as ambient air temperature.
- When tires are replaced, the sensors and valves should not be exchanged. The valve core, nut, valve sealing and seal washer (replacement kit) needs to be replaced. If necessary, the valve and the wheel electronics have to be replaced.
- The tire pressure monitoring system on your Audi was calibrated using tires with “RO” identification. We recommend using these tires.
- If you should put different wheels and tires on your vehicle (e.g. winter wheels and tires), you must be certain that the wheels and tires are compatible with the tire pressure monitoring system. Otherwise the system will register a malfunction and a fault message will be displayed. For more information, contact your authorized Audi dealer.
- For Declaration of Compliance to United States FCC and Industry Canada regulations ⇒ *page 212*.

You can switch between programmed tire sets at any time without reinitializing the system.



Tips

If the programming process was not completed successfully, the message **Wheel sensors could not be initialised** appears in the display and the **TPMS** indicator light turns on. If this happens, repeat the procedure.

Programming a new set of tires

Applies to vehicles: with tire pressure monitoring system

When driving with a new set of tires, you can program them to the tire pressure monitoring system using the menu display.

- ▶ Turn the ignition on.
- ▶ Select the menu: **Set > Tire pressure > Wheel change**.
- ▶ Confirm that you would like to begin the programming process. The message **Wheel sensors are being initialised. This may take a few minutes...** appears in the instrument cluster display.

Consumer Information

Warranty coverages

Your Audi is covered by the following warranties:

- *New Vehicle Limited Warranty*
- *Limited Warranty Against Corrosion Perforation*
- *Emissions Control System Warranty*
- *Emissions Performance Warranty*
- *California Emissions Control Warranty (USA vehicles only)*
- *California Emissions Performance Warranty (USA vehicles only)*

Detailed information regarding your warranties can be found in your **Warranty & Maintenance booklet**.

Operating your vehicle outside the U.S.A. or Canada

Government regulations in the United States and Canada require that automobiles meet specific emission regulations and safety standards. Therefore, vehicles built for the U.S.A. and Canada differ from vehicles sold in other countries.

If you plan to take your vehicle outside the continental limits of the United States or Canada, there is the possibility that

- unleaded fuels for vehicles with catalytic converter may not be available;
- fuel may have a considerably lower octane rating. Improper fuel may cause engine damage;
- service may be inadequate due to lack of proper service facilities, tools or testing equipment;
- replacement parts may not be readily available.
- Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries outside of North America.

Note

Audi cannot be responsible for mechanical damage that could result from inadequate fuel, service or parts availability.

Audi Service Repair Manuals and Literature

Audi Official Factory Service Manuals and Literature are published as soon as possible after model introduction. Service Manuals and literature are available to order from the Audi Technical Literature Ordering Center at:

<https://www.audi.techliterature.com>

Maintenance

General

Your vehicle has been designed to help keep maintenance requirements to a minimum. However, a certain amount of regular maintenance is still necessary to assure your vehicle's safety, economy and reliability. For detailed vehicle maintenance consult your Warranty & Maintenance booklet.

Under difficult operating conditions, for example at extremely low outside temperatures, in very dusty regions, etc., some service work should be performed between the intervals specified. This applies particularly to:

- oil changes, and
- cleaning or replacing the air filter.



For the sake of the environment

By regularly maintaining your vehicle, you help make sure that emission standards are maintained, thus minimizing adverse effects on the environment.

Important considerations for you and your vehicle

The increasing use of electronics, sophisticated fuel injection and emission control systems, and the generally increasing technical complexity of today's automobiles, have

steadily reduced the scope of maintenance and repairs which can be carried out by vehicle owners. **Also, safety and environmental** concerns place very strict limits on the nature of repairs and adjustments to engine and transmission parts which an owner can perform.

Maintenance, adjustments and repairs usually require special tools, testing devices and other equipment available to specially trained workshop personnel in order to assure proper performance, reliability and safety of the vehicle and its many systems.

Improper maintenance, adjustments and repairs can impair the operation and reliability of your vehicle and even void your vehicle warranty. Therefore, proof of servicing in accordance with the maintenance schedule may be a condition for upholding a possible warranty claim made within the warranty period.

Above all, operational safety can be adversely affected, creating unnecessary risks for you and your passengers.

If in doubt about any servicing, have it done by your authorized Audi dealer or any other properly equipped and qualified workshop. We strongly urge you to give your authorized Audi dealer the opportunity to perform all scheduled maintenance and necessary repairs. Your dealer has the facilities, original parts and trained specialists to keep your vehicle running properly.

Performing limited maintenance yourself

The following pages describe a limited number of procedures which can be performed on your vehicle with ordinary tools, should the need arise and trained personnel be unavailable. Before performing any of these procedures, always thoroughly read all of the applicable text and carefully follow the instructions given. Always rigorously observe the **WARNINGS** provided.

Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒  **and** ⇒  *in Working in the engine compartment on page 175.*



WARNING

- Serious personal injury may occur as a result of improperly performed maintenance, adjustments or repairs.
- Always be extremely careful when working on the vehicle. Always follow commonly accepted safety practices and general common sense. Never risk personal injury.
- Do not attempt any of the maintenance, checks or repairs described on the following pages if you are not fully familiar with these or other procedures with respect to the vehicle, or are uncertain how to proceed.
- Do not do any work without the proper tools and equipment. Have the necessary work done by your authorized Audi dealer or another properly equipped and qualified workshop.
- Always remove the ignition key before anyone gets under the vehicle.
- Always support your vehicle with safety stands if it is necessary to work underneath the vehicle. The jack* is not adequate for this purpose and could collapse causing serious personal injury.
- If you must work underneath the vehicle with the wheels on the ground, always make sure the vehicle is on level ground, that the wheels are always securely blocked and that the engine cannot be started.
- Always make sure the transmission selector lever is in “N” (Neutral) (R tronic) or Neutral (manual transmission) and the hand brake is firmly applied.



For the sake of the environment

- Changing the engine settings will adversely affect emission levels. This is detrimental to the environment and increases fuel consumption.
- Always observe environmental regulations when disposing of old engine oil, used brake fluid, dirty engine coolant, spent batteries or worn out tires.

- Undeployed airbag modules and pretensioners might be classified as Perchlorate Material -special handling may apply, see www.dtsc.ca.gov/hazardous-waste/perchlorate. When the vehicle or parts of the restraint system including airbag modules safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Additional accessories, modifications and parts replacement

Additional accessories and parts replacement

Always consult an authorized Audi dealer before purchasing accessories.

Your vehicle incorporates the latest safety design features ensuring a high standard of active and passive safety.

This safety could be compromised by non-approved changes to the vehicle. For this reason, if parts have to be replaced, please observe the following points when installing additional accessories:

Approved Audi accessories and genuine Audi parts are available from authorized Audi dealers.

These dealers also have the necessary facilities, tools and trained specialists to install the parts and accessories properly.

WARNING

- Using the wrong spare parts or using non-approved accessories can cause damage to the vehicle and serious personal injury.
- Use only accessories expressly approved by Audi and genuine Audi spare parts

- These parts and accessories have been specially designed to be used on your vehicle.
- Never install accessories such as telephone cradles or beverage holders on airbag covers or within the airbag deployment zones. Doing so will increase the risk of injury if airbags are triggered in an accident!
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ *page 175*.

Note

- If items other than genuine Audi spare parts, add-on equipment and accessory items are used or if repair work is not performed according to specified methods, this can result in severe damage to your vehicle's engine and body (such as corrosion) and adversely affect your vehicle's warranty.
- The innovative aluminium concept of your Audi means that all servicing, repairs or other work on the vehicle body must be carried out exclusively by an Audi workshop.
- If emergency repairs must be performed elsewhere, have the vehicle examined by an authorized Audi dealership as soon as possible.
- The manufacturer cannot be held liable for damage which occurs due to failure to comply with these stipulations.

Technical Modifications

Our guidelines must be complied with when technical modifications are made.

Always consult an authorized Audi dealer **before** starting work on any modifications.

This will help ensure that vehicle function, performance and safety are not impaired ⇒ .

Attempting to work on electronic components and the software used with them can cause ►

malfunctions. Because of the way electronic components are interconnected with each other, such malfunctions can also have an adverse affect on other systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and an increased wear of vehicle parts ⇒ ⚠.

Authorized Audi dealers will perform this work in a professional and competent manner or, in special cases, refer you to a professional company that specializes in such modifications.

 **WARNING**

Improper repairs and modifications can change the way vehicle systems work and cause damage to the vehicle and serious personal injury.

 **Note**

If emergency repairs must be performed elsewhere, have the vehicle examined by an authorized Audi dealership as soon as possible.

Declaration of Compliance, Telecommunication or Electronic Systems

Radio Frequency Devices and Radiocommunication Equipment User Manual Notice.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Devices

The following devices each comply with FCC Part 15.19, FCC Part 15.21 and RSS-Gen Issue 1:

- Cell phone package
- Electronic immobilizer
- HomeLink® universal remote control
- Remote control key
- Tire pressure monitoring system

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-Gen Issue 1

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

What do I do now?

Trunk escape handle

Applies to vehicles: with trunk escape handle

In case of an emergency, the front lid can be opened from the inside using the trunk escape handle.

- To open the front lid pull the handle.

The trunk escape handle inside the luggage compartment is made of fluorescent material to glow in the dark.

WARNING

The trunk escape handle is to be used only in an emergency.

Breakdown kit

The breakdown kit consists of vehicle tool kit and tire mobility system.

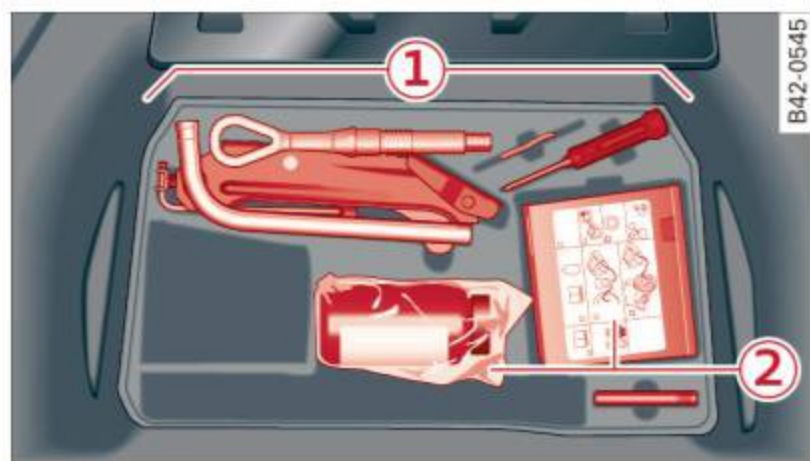


Fig. 154 Breakdown kit in luggage compartment

- ① Vehicle tool kit
- ② Tire mobility system ⇨ *page 213*

The breakdown kit is located in the luggage compartment under the cargo floor.

The tool kit consists of the following items:

- Hook for removing hub cap
- Lug wrench
- Alignment pin for changing wheels
- Screwdriver with reversible blade
- Towing eye
- Jack* (not a vehicle component; contact your authorized Audi dealer if needed)

Before returning the jack* to its place, retract the jack arm fully.

Note: some of the items listed above are provided on certain models only or are optional extras.

WARNING

- Never use the hexagonal socket in the handle of the screwdriver to loosen or tighten the wheel bolts.
- The jack* (available as a replacement part) is intended only for your vehicle model. Under no circumstances use it to lift heavy vehicles or other loads; you risk injuring yourself.
- Never start or run the engine while the vehicle is supported by the jack*.
- If you must work under the vehicle, always use safety stands specifically designed for this purpose.
- Using a bumper jack to raise the vehicle will damage the bumper system. The jack may slip, causing injury.

Tire repair

General and safety pointers

Tire repair is intended only for temporary, short-term use.



Fig. 155 Tire damage for which the Tire Mobility System is not suited

Your vehicle is equipped with a tire repair kit, the **Tire Mobility System (TMS)**.

In the event of a tire failure, the **TMS** is in the luggage compartment under the floor. It consists of the tire sealant and an electric air pump.

Using **TMS**, tire damage caused by foreign bodies up to about **0.16 inch (4 mm)** in diameter can be sealed reliably.

The foreign object must stay in the tire.

The tire sealant must not be used:

- for cuts or punctures in the tire which are larger than 0.16 inch (4 mm) ⇒ *fig. 155* ①
- for damage to the rim ②
- if you have been driving with very low tire pressures or tires with no air ③

Using the **TMS** is described in the section ⇒ *page 214, Preliminary steps*.

TMS can be used at temperatures down to – 4 °F (– 20 °C).

WARNING

Take the following precautions after repairing the tire:

- Do not drive faster than 50 mph (80 km/h)!
- Avoid full-throttle acceleration, heavy braking and fast cornering.
- The vehicle's road behavior can be affected.
- Tires sealed with **TMS** are intended only for **temporary, short-term** use. Damaged tires must be replaced. Drive carefully to the next professional repair facility.
- After using the tire sealant the tire pressure monitoring system may no longer work properly. Drive carefully to the next professional repair facility.
- **TMS** must **NOT** be used,
 - for cuts or punctures in the tire which are larger than 0.16 inch (4 mm)
 - for damage to the rim
 - if you have been driving with very low tire pressures or tires with no air
- Seek professional assistance if it is not possible to repair the tire with the tire sealant.
- The tire sealant must not come into contact with skin, eyes or clothing.

- If you get any tire sealant in your eyes or come into contact with it, rinse the affected area thoroughly with clean water. Find a physician immediately!
- Change any clothing contaminated with tire sealant immediately.
- Do not inhale the vapor!
- If you have swallowed tire sealant, rinse your mouth thoroughly right away and drink plenty of water.
 - Do not induce vomiting! Find a physician immediately!
- If you have allergic reactions, find a physician immediately.
- Keep the tire sealant away from children.

Note

Do not use commercially available tire sealants. The electrical components of the tire pressure monitoring system will no longer work properly.

For the sake of the environment

Used sealant bottles can be dropped off at a recycling facility.

Tips

- If sealant has run out, allow it to dry. Then you can peel it off.
- Have the tire sealant replaced every 4 years at a dealership.

Preliminary steps

Some preliminary steps are necessary for tire repair.

- ▶ If you have a flat tire, park the vehicle as far as possible from moving traffic.
- ▶ Apply the **parking brake** firmly.
- ▶ Engage a gear.
- ▶ Check whether a repair using the Tire Mobility System is possible ⇒ *page 213*.
- ▶ Have all passengers **leave** the vehicle and stay away from the danger zone ⇒ .
- ▶ Take the **sealant bottle** and the **electric air pump** from the luggage compartment under the floor ⇒ *page 213, fig. 154*.

- ▶ Remove the “max. 50 mph” (80 km/h) sticker from the sealant bottle and affix it to the instrument cluster in the driver's view.

⚠ WARNING

- Turn the hazard flashers on if you have a flat tire in moving traffic. In this way you protect yourself and other road users.
- Make sure that all passengers are in a safe place, out of the danger zone (for example, behind a guard rail).

! Note

Particular care is necessary if you are making a tire repair on a steep incline.

i Tips

Obey all laws.

Making a tire repair

Tire repair consists of the following sections.

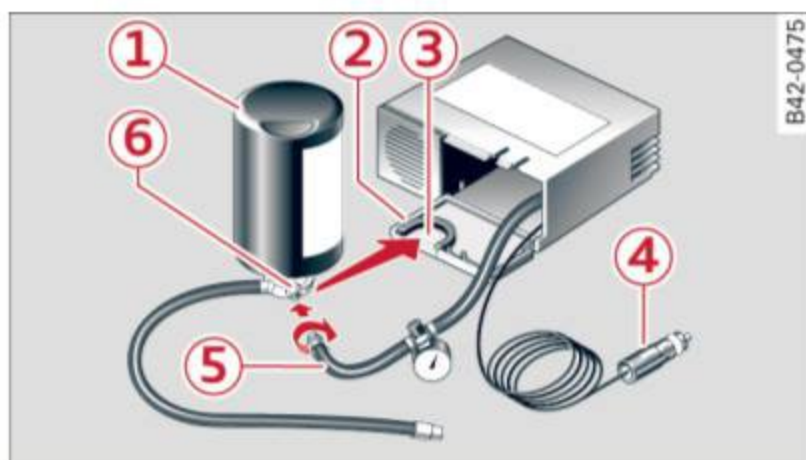


Fig. 156 Parts of the Tire Mobility System

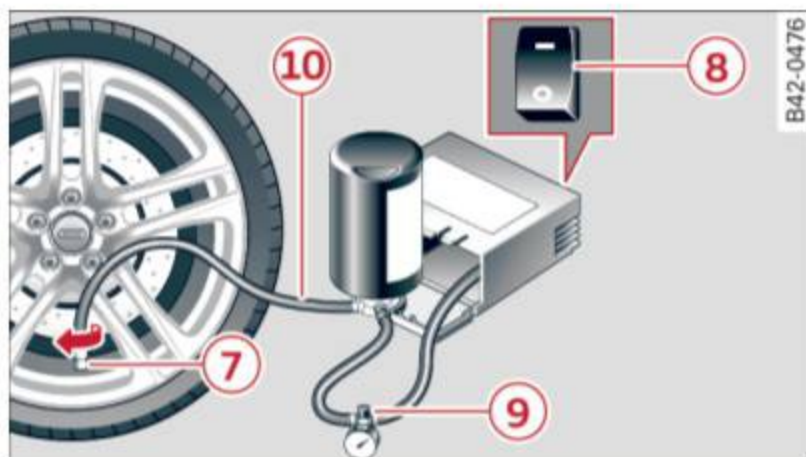


Fig. 157 Connector for the Tire Mobility System

Assembling Tire Mobility System

- ▶ Open the lid (2) of the electric air pump ⇒ fig. 156.
- ▶ Pull the plug (4) and the pressure hose (5) with the gauge out of the housing.
- ▶ Screw the pressure hose (5) of the electric air pump onto the flange (6) of the sealant bottle (1).
- ▶ Push the sealant bottle with the flange down into the recess (3) on the lid of the electric air pump.
- ▶ Remove the dust cap from the valve of the defective tire.
- ▶ Screw the hose (10) onto the valve (7) ⇒ fig. 157.
- ▶ Insert the plug (4) ⇒ fig. 156 into the socket for the cigarette lighter.

Inflating tire

- ▶ Move the switch (8) ⇒ fig. 157 on the electric air pump ¹⁾ to position **I**. After 5 minutes, tire pressure must have reached at least 1.8 bar.
- ▶ Switch the electric air pump off - switch in position **0**. If the required tire pressure of at least 1.8 bar has not been reached, follow the instructions in the section *Re-inflating tire*.

Re-inflating tire

- ▶ Remove the hose from the valve and pull the plug out of the socket.
- ▶ Drive the vehicle slowly 10 meters backward or forward. This helps to distribute the sealant better.
- ▶ Remove the empty inflation bottle and screw the hose (5) (5) ⇒ fig. 156 from the electric pump directly onto the valve.
- ▶ Insert the plug (4) into the socket for the cigarette lighter.
- ▶ Move the switch (8) ⇒ fig. 157 on the electric air pump ¹⁾ to position **I**. After 5 minutes, tire pressure must have reached at least 1.8 bar.

¹⁾ The electric air pump should never run for longer than 8 minutes.

- ▶ Switch the electric air pump off - switch in position **0**. If the required tire pressure of at least 1.8 bar has not been reached, it is not possible to make a repair with the tire sealant. Seek professional assistance.

Disassembling Tire Mobility System

- ▶ Remove the hose from the valve and pull the plug out of the socket.
- ▶ Screw the dust cap onto the valve.
- ▶ Place the empty sealant bottle back in the original packaging and clip it in place under the floor so that no tire sealant can run out into the vehicle.
- ▶ Start driving right away so that the sealant is distributed in the tire.

WARNING

- Follow the manufacturer's safety instructions on the decal for the air pump and the sealant bottle.
- If a tire pressure of 1.8 bar cannot be achieved after pumping for 5 minutes, the tire is too severely damaged. Do not continue to drive.
- Seek professional assistance if it is not possible to repair the tire with the tire sealant.

Tips

- Do not operate the electric air pump for more than 8 minutes without stopping, otherwise it can overheat. When the air pump has cooled down, you can continue to use it.
- If sealant has escaped, allow it to dry, then you can peel it off.

Final check

After driving for a short distance, tire pressure must be checked.

- ▶ After driving for about 10 minutes, stop and check the tire pressure.
- ▶ If tire pressure is still at least 1.3 bar, inflate the tire to specified pressure (see driver's side B-pillar), drive to the next repair

shop and have the tire and the sealant bottle replaced.

- ▶ If tire pressure is less than 1.3 bar, the tire is too severely damaged. Do not continue to drive. Seek professional assistance.

WARNING

If tire pressure is less than 1.3 bar after driving for 10 minutes, the tire is too severely damaged. Do not continue to drive. Seek professional assistance.

Tips

After a tire repair, have the sealant bottle replaced at a dealership. This restores full functionality to the Tire Mobility System.

What should I be aware of when changing a tire?

Tires with unidirectional tread design

Tires with unidirectional tread design must be mounted with their tread pattern pointed the right direction.

A unidirectional tire can be identified by **arrows on the sidewall**, which point in the direction of the rotation. You must follow the specified direction of rotation. This is necessary in order for these tires to develop their optimum characteristics regarding grip, road noise, wear, and hydroplaning.

Anti-theft wheel bolts

A special adapter is needed to turn the anti-theft wheel bolts.

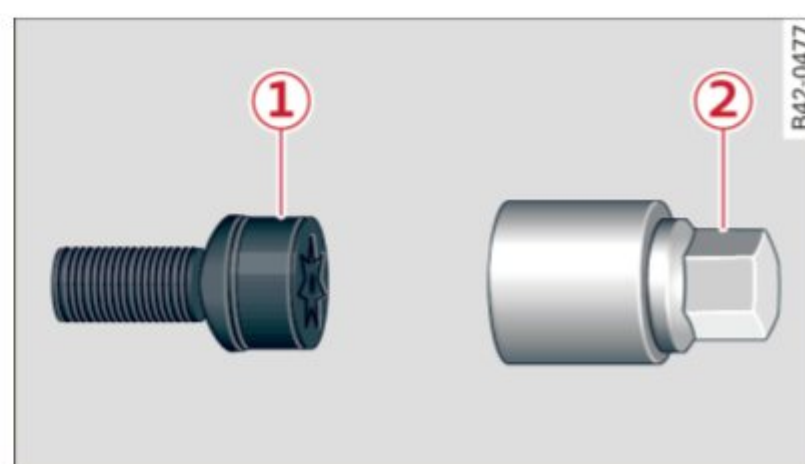


Fig. 158 Anti-theft wheel bolts with adapter

- ▶ Install the adapter ② as far as it will go on to the anti-theft wheel bolt ①.
- ▶ Push the wheel wrench over the adapter ② as far as it will go.
- ▶ Loosen or tighten the wheel bolt
⇒ page 219.

We recommend always keeping the wheel bolt adapter with you in the vehicle. It should be stored in the vehicle tool kit.

There is a **code number** for the wheel bolt locking device, stamped on the face of the adapter. You can use this number to obtain a replacement adapter at an authorized Audi dealership, if necessary.

Tips

Write down the wheel bolt locking device code number and store it in a safe place, away from the vehicle.

Raising the vehicle

Applies to vehicles: with original Audi jack

The vehicle must be lifted with the jack first before the wheel can be removed.*

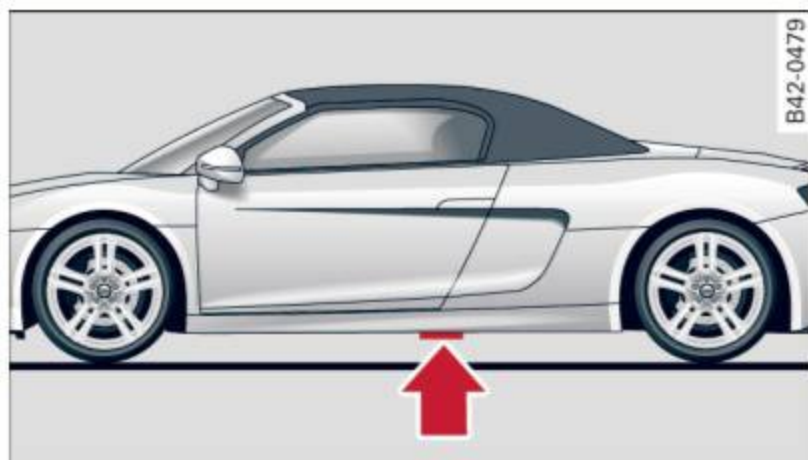


Fig. 159 Changing a wheel: mounting point for the jack

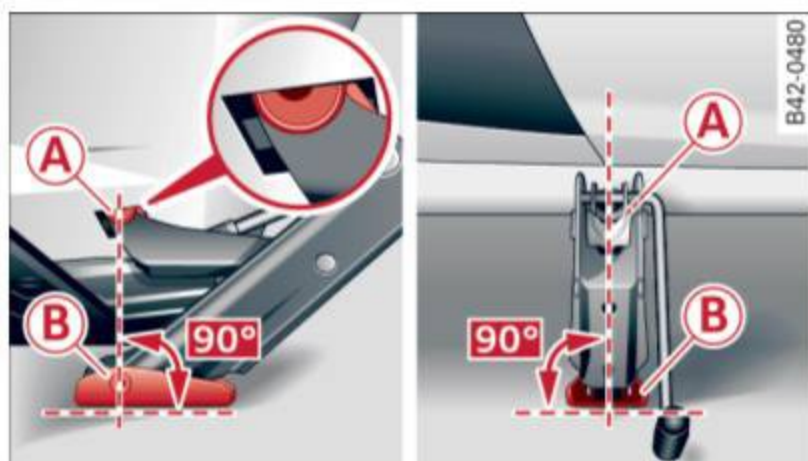


Fig. 160 Close-up: proper positioning of lifting jack

The description for using the vehicle jack only applies to the original jack* (not a vehicle component; contact your authorized Audi dealer if needed).

- ▶ Engage the **parking brake** to prevent your vehicle from rolling unintentionally.
- ▶ Shift into 1st gear.
- ▶ Find the **lifting point** in the sill on the side with the affected wheel ⇒ fig. 159.
- ▶ Extend the **jack** under the lifting point on the door sill until its arm is positioned directly under the lifting point ⇒ .
- ▶ Align the jack so that its arm ① ⇒ fig. 160 engages in the designated lifting point in the door sill and the movable base ② lies flat on the ground. The base ② must be **vertical** under the lifting point ①.
- ▶ Wind the jack up further until the flat tire comes off the ground ⇒ .

The jack must be installed **only** at the places indicated ⇒ fig. 159. There is *only one* designated jack mounting point for each side of the vehicle ⇒ .

An **unstable surface** under the jack can cause the vehicle to slip off the jack. Always provide a firm base for the jack on the ground. If necessary place a sturdy board or similar support under the jack. On **hard, slippery surfaces** (such as tiles) use a rubber mat or similar to prevent the jack from slipping ⇒ .

WARNING

- You or your passengers could be injured while changing a wheel if you do not follow safety precautions:
- Positioning the jack under the vehicle at any other place than those indicated above may damage the vehicle or may result in personal injuries.
- A soft or unstable surface under the jack may cause the vehicle to slip off the jack. Always provide a firm base for the jack on the ground. If necessary, use a sturdy board under the jack.

- On hard, slippery surface (such as tiles) use a rubber mat or similar to prevent the jack from slipping.
- To help prevent injury to yourself and your passengers:
 - Do not raise the vehicle until you are sure the jack is securely engaged.
 - Passengers must not remain in the vehicle when it is jacked up.
 - Make sure that passengers wait in a safe place away from the vehicle and well away from the road and traffic.
 - Make sure jack position is correct, adjust as necessary and then continue to raise the jack.

! Note

A floor jack or the pads on the hoist arms must **not** be positioned at the points shown -arrows-.

Removing the wheel

Follow these instructions step-by-step for changing the wheel.



Fig. 161 Wheel change: alignment pin inside the top hole

After you have loosened all wheel bolts and raised the vehicle off the ground, perform the following steps to remove and replace the wheel:

Removing the wheel

- ▶ Use the **hexagonal socket in the screwdriver handle** to completely turn out the top-most wheel bolt and set it aside on a *clean* surface.

- ▶ Screw the threaded end of the **alignment pin** from the tool kit hand-tight into the now vacant bolt hole ⇒ *fig. 161*.
- ▶ Then completely unscrew the other wheel bolts as described above.
- ▶ Take off the wheel leaving the alignment pin in the bolt hole ⇒ !.

Putting on the wheel

- ▶ Lift the spare wheel and carefully slide it over the alignment pin to guide it in place ⇒ !.
- ▶ Use the hexagonal socket in the screwdriver handle to screw in and tighten all wheel bolts *slightly*.
- ▶ Unscrew the alignment pin and insert and tighten the remaining wheel bolt slightly like the rest.
- ▶ Turn the jack handle counter-clockwise to lower the vehicle until the jack is fully released.

The wheel bolts must be clean and turn easily. Check the contact surfaces of wheel and hub. Remove contaminants on these surfaces before installing the wheel.

The hexagonal socket in the screwdriver handle makes it easier to handle the wheel bolts. The reversible blade should be removed.

When mounting **unidirectional** tires, observe the direction of rotation ⇒ *page 216*.

! Note

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

i Tips

Never use the hexagonal socket in the handle of the screwdriver to loosen or tighten the wheel bolts.

Tightening wheel bolts

- ▶ Fit the **wheel bolt wrench** over the wheel bolt and push it down as far as it will go¹⁾.
- ▶ Close your grip around the *end* of the wrench handle for maximum torque and turn each wheel bolt **clockwise** until it sits tight.

Have the **tightening torque** of the wheel bolts checked as soon as possible with a torque wrench. It should be 120 Nm.

Check the **tire pressure** as soon as possible.

Return the vehicle tool kit to its proper place.

WARNING

Loosening the wheel bolts is prohibited; danger of an accident!

Tips

- Never try and use the hexagonal socket in the handle of the screwdriver to loosen or tighten the wheel bolts.
- If you have determined that wheel bolts are corroded and difficult to turn, the bolts must be replaced before checking the torque.
- Until the tightening torque is checked, drive at reduced speeds as a precaution.

Notes on wheel change

Please read the information ⇒ *page 199, New tires and replacing tires and wheels*, if you are going to use a spare tire which is different from the tires on your vehicle.

After you change a tire:

- Check the tire pressure on the spare immediately after mounting.
- Have the wheel bolt tightening torque checked with a torque wrench as soon as possible by your authorized Audi dealer or a qualified service station.

- With steel and alloy wheel rims, the wheel bolts are correctly tightened at a torque of 90 ft lb (120 Nm).
- If you notice while changing a tire that the wheel bolts are corroded and difficult to turn, then they should be replaced before you check the tightening torque.
- Replace the flat tire with a new one and have it installed on your vehicle as soon as possible. Remount the wheel cover.

Until then, drive with extra care and at reduced speeds.

WARNING

- If you are going to equip your vehicle with tires or rims which differ from those which were factory installed, then be sure to read the information ⇒ *page 199, New tires and replacing tires and wheels*.
- Always store the tools securely in luggage compartment. Otherwise, in an accident or sudden maneuver they could fly forward, causing injury to passengers in the vehicle.

Note

Do not use commercially available tire sealants. Otherwise, the electrical components of the tire pressure monitoring system* will no longer work properly and the sensor for the tire pressure monitoring system will have to be replaced by a qualified workshop.

Jump-starting

General

If necessary, the engine can be started by connecting it to the battery of another vehicle.

If the engine should fail to start because of a discharged or weak battery, the battery can be ►

¹⁾ You need the appropriate adapter to tighten the anti-theft wheel bolts ⇒ *page 216*.

connected to the battery of *another* vehicle, using a **pair of jumper cables** to start the engine.

Both batteries must be rated at 12 volts. The **capacity** (Ah) of the booster battery must not be substantially less than the capacity of the discharged battery.

Jumper cables

Use *only* jumper cables of sufficiently large **cross section** to safely carry the starter current. Refer to the manufacturer's specifications.

Use only jumper cables which have *insulated* terminal clamps and are properly marked for distinction:

plus (+) cable: in most cases colored **red**

minus (-) cable: in most cases colored **black**



WARNING

Batteries contain electricity, acid, and gas. Any of these can cause very serious or fatal injury. Follow the instructions below for safe handling of your vehicle's battery.

- Always shield your eyes and avoid leaning over the battery whenever possible.
- A discharged battery can already freeze at temperatures just below 32 °F (0 °C). Before connecting a jumper cable, the frozen battery must be thawed completely, otherwise it could explode.
- Do not allow battery acid to contact eyes or skin. Flush any contacted area with water immediately.
- Improper use of a booster battery to start a vehicle may cause an explosion.
- Vehicle batteries generate explosive gases. Keep sparks, flame and lighted cigarettes away from batteries.
- Do not try to jump start any vehicle with a low acid level in the battery.
- The voltage of the booster battery must also have a 12-Volt rating. The capacity (Ah) of the booster battery should not be lower than that of the discharged battery. Use of batteries of different voltage

or substantially different “Ah” rating may cause an explosion and personal injury.

- Never charge a frozen battery. Gas trapped in the ice may cause an explosion.
- Never charge or use a battery that has been frozen. The battery case may have been weakened.
- Use of batteries of different voltage or substantially different capacity (Ah) rating may cause an explosion and injury. The capacity (Ah) of the booster battery should not be lower than that of the discharged battery.
- Before you check anything in the engine compartment, always read and heed all **WARNINGS** ⇒ *page 175, Working in the engine compartment.*



Note

- Applying a higher voltage booster battery will cause expensive damage to sensitive electronic components, such as control units, relays, radio, etc.
- There must be no electrical contact between the vehicles as otherwise current could already start to flow as soon as the positive (+) terminals are connected.



Tips

- The discharged battery must be properly connected to the vehicle's electrical system.
- Switch off any car phone, or follow the car phone instructions for this situation.

Use of jumper cables

Make sure to connect the jumper cable clamps in exactly the order described below!

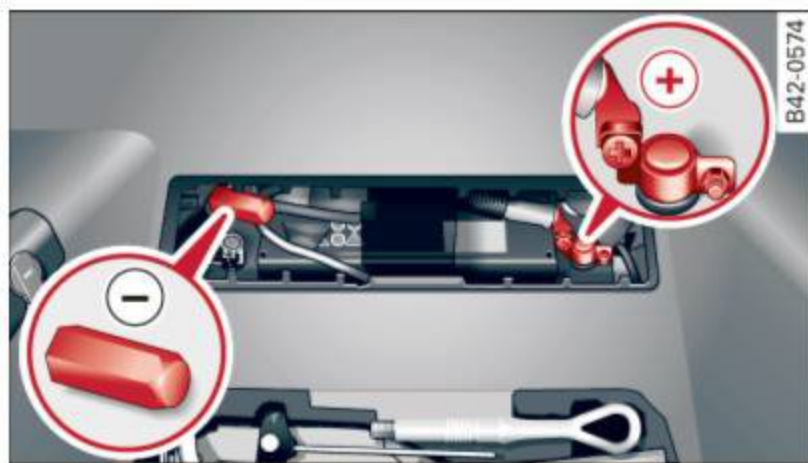


Fig. 162 Luggage compartment: connectors for a charger and jump start cables

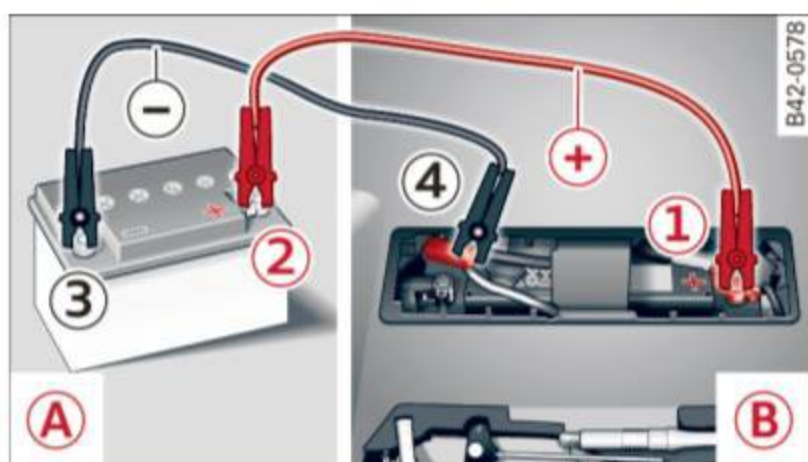


Fig. 163 Jump start using the battery in another vehicle: A - Female socket, B - Discharge

The battery is located in the luggage compartment ⇒ *page 185*. The front lid can be opened in an emergency ⇒ *page 43*.

Do *not* connect the negative cable directly to the negative terminal on the battery. Connect it to a **jump start pin** instead ⇒ *fig. 162*.

Connect the positive cable (red) to the positive terminal

1. Connect one end of the red jumper cable ⇒ *fig. 163* (1) to the positive terminal of discharged battery (B).
2. Connect the other end of the red jumper cable to the positive terminal (2) of the booster battery (A).

Connect the negative cable (black) to the negative terminal

3. Connect one end of the black jumper cable (3) to the negative terminal of the booster battery (A).

4. Secure the other end to the jump start pin (4) for the discharged battery (B).

Starting the engine

- ▶ Start the engine of the vehicle providing assistance and allow it to run at idle.
- ▶ Now start the engine of the vehicle with the discharged battery.
- ▶ If the engine does not start: Stop trying after 10 seconds and then try again after about 30 seconds.
- ▶ Disconnect the cable while the engine is running in exactly *reverse* order to that described.

The battery is vented to the outside to prevent gases from entering the vehicle interior. Make sure that the jumper clamps are well connected with their *metal parts in full contact* with the battery terminals.



WARNING

To avoid serious personal injury and damage to the vehicle, heed all warnings and instructions of the jumper cable manufacturer. If in doubt, call for road service.

- Jumper cables must be long enough so that the vehicles do not touch.
- When connecting jumper cables, make sure that they cannot get caught in any moving parts in the engine compartment.
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇒ *page 175, Working in the engine compartment*.



Note

Improper hook-up of jumper cables can ruin the generator.

- Always connect POSITIVE (+) to POSITIVE (+), and NEGATIVE (-) to NEGATIVE (-) ground post of the battery manager control unit.
- Check that all screw plugs on the battery cells are screwed in firmly. If not, tighten plugs prior to connecting clamp on negative battery terminal.

- Please note that the procedure for connecting a jumper cable as described above applies specifically to the case of your vehicle being jump started. When you are giving a jump start to another vehicle, do *not* connect the negative (–) cable to the negative (–) terminal on the discharged battery ④. Instead, securely connect the negative (–) cable to either a solid metal component that is firmly bolted to the engine block or to the engine block itself. If the battery that is being charged does not vent to the outside, escaping battery gas could ignite and explode!

Emergency towing with commercial tow truck

General hints

Your Audi requires special handling for towing.

The following information is to be used by commercial tow truck operators who know how to operate their equipment safely.

- Never tow your Audi, towing will cause damage to the engine and transmission.
- Never wrap the safety chains or winch cables around the brake lines.
- To prevent unnecessary damage, your Audi must be transported with a car carrier (flat bed truck).
- To load the vehicle on to the flat bed, use the towing loop found in the vehicle tools and attach to the front anchorage ⇒ *page 222*.



WARNING

A vehicle being towed is not safe for passengers. Never allow anyone to ride in a vehicle being towed, for any reason.



Note

The vehicle has very low ground clearance. Make sure that no damage is caused to the

underside of the vehicle when it is being loaded onto a flat bed truck.

Front towing loop

Do not install the front towing loop until it is needed.



Fig. 164 Right front bumper without grille: Towing loop fully screwed in

On the right front in the bumper, there is a threaded hole behind the air intake grill into which the towing loop is screwed.

- ▶ Remove the towing loop from the vehicle tool kit ⇒ *page 213*.
- ▶ Pull the lower part of the grill forward and out.
- ▶ Screw the towing loop tightly into the threaded hole as far as it will go ⇒ *fig. 164*.

When it is no longer needed, unscrew the towing loop and put it back into the on-board toolkit. Make sure to have the towing loop stored in the vehicle at all times.

When installing the grill for the air duct, be sure that the tabs on the grill are first inserted into their guides on the vehicle. Then push the grill into position.



WARNING

If the towing loop is not screwed in as far as it will go, the thread can pull out when the vehicle is towed - potential risk of an accident.



Tips

Check carefully to make sure the hook-up is secure.

Fuses and bulbs

Electrical fuses

Replacing fuses

Fuses that have blown will have metal strips that have burned through.



Fig. 165 Passenger's side wheel well: Foot rest with fuse arrangement

The fuses are located in the footwell area on the passenger's side behind a cover.

- ▶ Turn off the ignition and the affected electrical consumers.
- ▶ Check the following table to see which fuse belongs to the consumer.
- ▶ Remove the floor mat.
- ▶ Fold the foot rest back ⇒ fig. 165.
- ▶ Remove the clamp from the holder in the fuse box.
- ▶ Remove the fuse using the clamp and replace the blown fuse with an identical new one.
- ▶ Fold the foot rest down again.

WARNING
Do not repair fuses and never replace a blown fuse with one that has a higher amp rating. This can cause damage to the electrical system and a fire.

Note
If a new fuse burns out again after shortly have you have installed it, have the electrical system checked by your authorized Audi dealer.

Tips

- The following table does not list fuse locations that are not used.
- Some of the equipment items listed are optional or only available on certain model configurations.

Fuse assignment

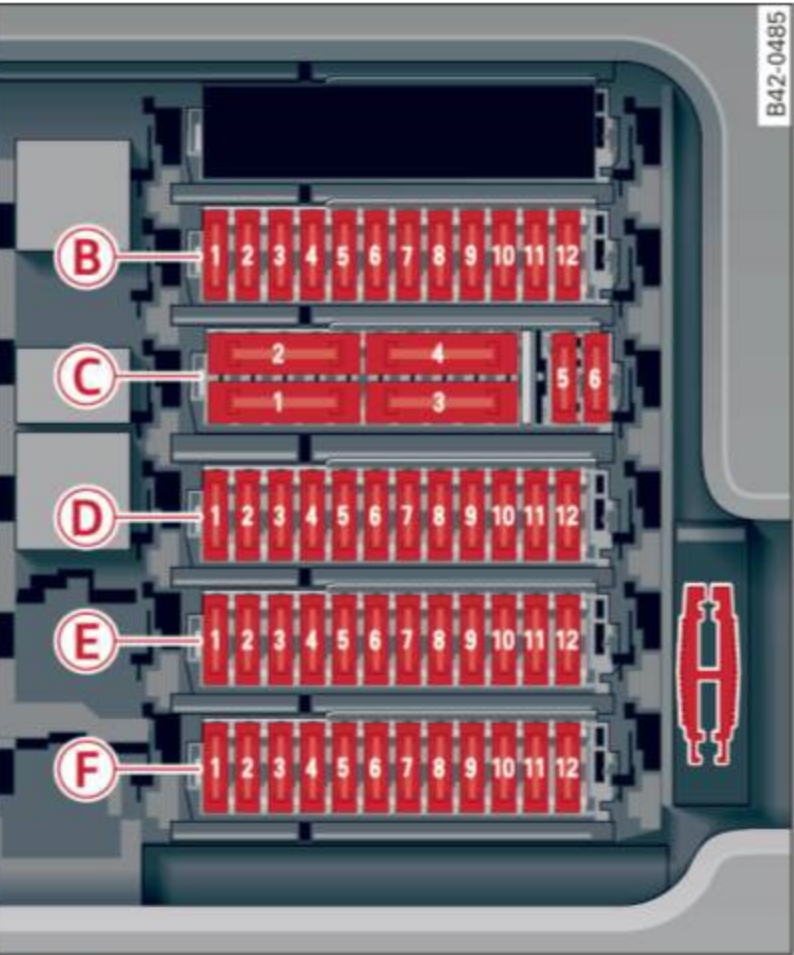


Fig. 166 Passenger footwell: Fuse assignment

Fuse panel B		
No.	Consumer	Amps
1	VDA interface	5
2	Heated windshield washer nozzle	5
3	Audi parking system	5
4	Engine compartment lid release	10
5	Diagnostic interface, light switch, indicator light Passenger Air Bag OFF , selector lever	10
6	Networking gateway	5

Fuse panel B		
No.	Consumer	Amps
8	Automatically dimming inside mirror, garage door opener (HomeLink), washer pump relay, power outlets relay	10
10	 button	10
11	Pressure sensor, climate controls	5
12	Airbag	5

Fuse panel C		
No.	Consumer	Amps
1	Radiator fan (1)	40
2	Radiator fan (2)	40
3	Exterior lighting	40
4	Exterior lighting	40
6	Blower regulator	40

Fuse panel D		
No.	Consumer	Amps
1	Rear view camera	5
2	Tire pressure monitoring system	10
4	Cell phone package, telephone antenna amplifier	7.5
5	Instrument cluster	5
6	Networking gateway	5
7	Steering column lever	5
8	Diagnostic interface, brake pedal switch, selector lever	10
9	Rain/light sensor	5
10	Light switch	5
11	Special functions control module	5
15	Sound amplifier	30
16	Radio	20

Fuse panel E		
No.	Consumer	Amps
3	Auxiliary water pump	10
5	Supply terminal 15, starter	30

Fuse panel E		
No.	Consumer	Amps
6	Pump for brake booster	15
7	Horn	20
8	Wiper motor	30
9	Wiper motor	30
10	Headlight washer system	30
12	Power outlets and cigarette lighter	20

Fuse panel F		
No.	Consumer	Amps
1	Electronic Stabilization Program	10
2	Electronic Stabilization Program	25
4	Rear window defogger	30
5	Power locking system	20
6	Interior lights, washer nozzles	20
7	Anti-theft alarm system	5
8	Climate controls	10
9	Heated seats	25
10	Lumbar support	10
11	Control module for doors	30
12	Control module for doors	10

Bulbs

Note

Your vehicle is equipped with maintenance-free headlights and rear lights. However, if a bulb has to be changed, please consult your authorized Audi dealer or other qualified workshop.

Technical data

Do-it-yourself
service

Vehicle care

Vehicle operation

Safety first

Controls and equip-
ment

General information

Explanation of technical data

Some of the technical data listed in this manual require further explanation.

The technical data for your vehicle are listed in the charts starting on ⇒ page 228. This chapter provides general information, notes and restrictions which apply to these data.

Vehicle identification

The key data are given on the vehicle identification number (VIN) plate and the vehicle data sticker.

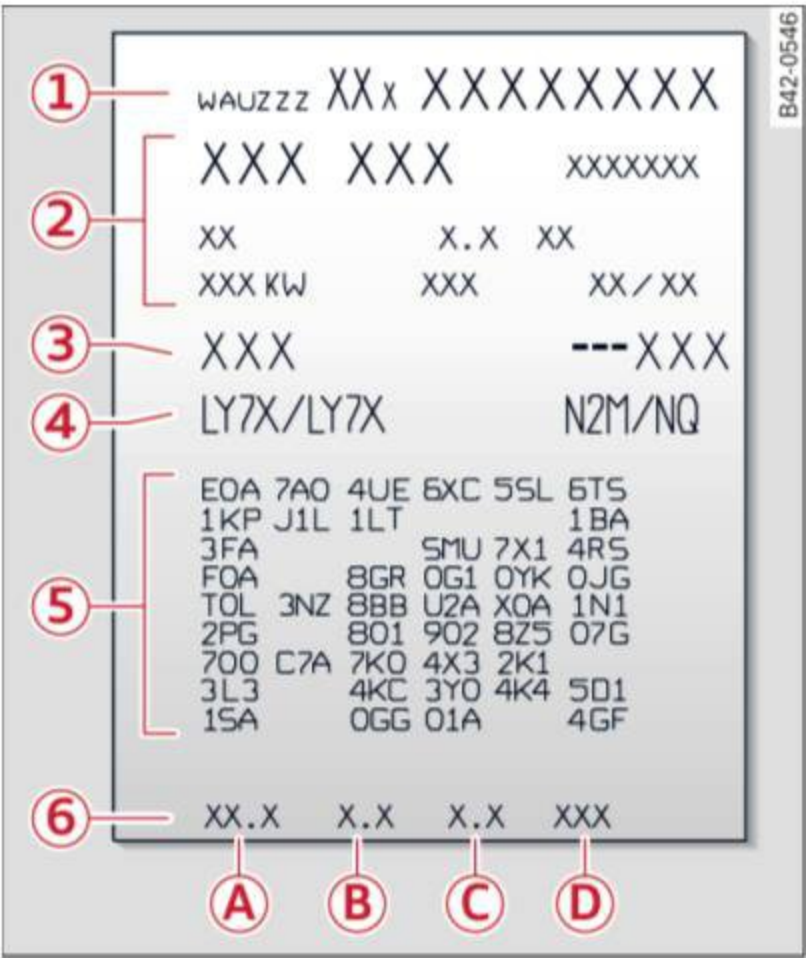


Fig. 167 The vehicle identification label

The Vehicle Identification Number (VIN)

You can find the Vehicle Identification Number (VIN) behind the windshield on the lower left side. You can also display the Vehicle Identification Number of your vehicle in the Driver Information display ⇒ page 24.

The vehicle identification label

The vehicle identification label ⇒ fig. 167 is located with the fuses in the footwell on the passenger's side ⇒ page 223.

The label shows the following vehicle data:

- ① Vehicle Identification Number (chassis number)
- ② Vehicle model/engine output/transmission
- ③ Engine and transmission codes
- ④ Paint and interior equipment numbers
- ⑤ Optional equipment numbers
- ⑥ Fuel economy and emissions data

Vehicle data are also found in your Warranty & Maintenance booklet.

The safety compliance sticker

The safety compliance sticker is your assurance that your new vehicle complies with all applicable Federal Motor Vehicle Safety Standards which were in effect at the time the vehicle was manufactured. You can find this sticker on the left door jamb. It shows the month and year of production and the vehicle identification number of your vehicle (perforation) as well as the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR).

The high voltage warning label

The high voltage warning label is located on the lock carrier.

The spark ignition system meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Weights

Gross Vehicle Weight Rating

The Gross Vehicle Weight Rating (GVWR), and the Gross Axle Weight Rating (GAWR) for front and rear are listed on a sticker on the left door jamb.

The Gross Vehicle Weight Rating includes the weight of the basic vehicle plus full fuel tank, oil and coolant, plus maximum load, which includes passenger weight (150 lbs./68 kg per designated seating position) and luggage weight.

Gross Axle Weight Rating

The Gross Axle Weight Rating is the maximum load that can be applied at each axle of the vehicle ⇒ ⚠.

Vehicle capacity weight

The vehicle capacity weight (max. load) is listed either on the driver's side B-pillar.

WARNING

- The actual Gross Axle Weight Rating at the front and rear axles should not exceed the permissible weights, and their combination must not exceed the Gross Vehicle Weight Rating.
- Exceeding permissible weight ratings can result in vehicle damage, accidents and personal injury.

Note

- The vehicle capacity weight figures apply when the load is distributed evenly in the vehicle (passengers and luggage). When transporting a heavy load in the luggage compartment, carry the load as near to the rear axle as possible so that the vehicle's handling is not impaired.
- Do not exceed the maximum permissible axle loads or the maximum gross vehicle weight. Always remember that the vehicle's handling will be affected by the extra load. Therefore, adjust your speed accordingly.
- Always observe local regulations.

Data

R8 Spyder 4.2 quattro

Engine data

Maximum output SAE net		424 hp (316 kW) @ 7900 rpm
Maximum torque SAE net		317 lb-ft (430 Nm) @ 4500 - 6000 rpm
Cylinders, Displacement		8 cylinders, 254 CID (4163 cm ³)
Number of valves per cylinder		4
Bore		3.33 in (84.5 mm)
Stroke		3.65 in (92.8 mm)
Compression ratio		12.5:1
Firing sequence		1-5-4-8-6-3-7-2
Fuel		Premium unleaded (91 AKI) Recommended for maximum engine performance. Further details ⇨ <i>page 170, Gasoline</i>

Engine oil

Engine oil with filter change	quarts/liters	approx. 10.6/10
-------------------------------	---------------	-----------------

R8 Spyder 5.2 quattro

Engine data

Maximum output SAE net		525 hp (386 kW) @ 8000 rpm
Maximum torque SAE net		391 lb-ft (530 Nm) @ 6500 rpm
Cylinders, Displacement		10 cylinders, 318 CID (5204 cm ³)
Number of valves per cylinder		4
Bore		3.33 in (84.5 mm)
Stroke		3.65 in (92.8 mm)
Compression ratio		12.5:1
Firing sequence		1-6-5-10-2-7-3-8-4-9
Fuel		Premium unleaded (91 AKI) Recommended for maximum engine performance. Further details ⇨ <i>page 170, Gasoline</i>

Engine oil

Engine oil with filter change	quarts/liters	approx. 8.8/8.3
-------------------------------	---------------	-----------------

Dimensions

	R8 Spyder 4.2 quattro	R8 Spyder 5.2 quattro
Length (with license plate bracket)	4434 mm (approx. 174.6 in)	4434 mm (approx. 174.6 in)
Width	1904 mm (approx. 75.0 in)	1904 mm (approx. 75.0 in)
Width (across mirrors)	2029 mm (approx. 80.0 in)	2029 mm (approx. 79.9 in)
Height (unloaded)	1244 mm (approx. 49.3 in)	1244 mm (approx. 49.0 in)
Turning circle diameter (curb to curb)	11.80 m (approx. 38.7 ft)	11.80 m (approx. 38.7 ft)

When driving up steep ramps, on rough roads, over curbs, etc. it is important to remember that some parts of your vehicle, such as spoilers or exhaust system components, may be close to the ground. Be careful not to damage them.

This applies especially to vehicles with a low chassis (sports chassis) and when the vehicle is fully loaded.

Capacities (approx.)

Fuel tank

		R8 Spyder 4.2 quattro	R8 Spyder 5.2 quattro
Total capacity	gal/ liters	21.1/80	21.1/80
Reserve (of total capacity)	gal/ liters	2.6/10	2.6/10

Windshield washer system

Windshield washer fluid	quarts /liters	approx. 4.2/4.0
-------------------------	-------------------	-----------------

A

- A/C operation 75
- ABS
 - refer to* Anti-Lock Brake System 150
- Accessories 211
- Active rollover protection system 107
 - Retracting rollover protection 107
- Adding
 - Engine coolant 183
 - Engine oil 180
- Additional accessories 211
- Additives 180
- Adjustable steering column 77
- Adjusting front seats 66
- Advanced Airbag System
 - Children 139
 - Components 124
 - Front airbags 122
 - How the components work together .. 125
 - Monitoring 128
 - Weight-sensing mat 139
- Airbag system 117, 136
 - Care 130
 - Child restraints 140
 - Components (front airbags) 124
 - Danger of fitting a child safety seat on the front passenger seat 119
 - Disposal 130
 - Front airbags 121
 - How do the front airbags work? 126
 - How many airbags does my vehicle have? 124
 - Important safety instructions on the knee airbag system 134
 - Important things to know 117
 - Indicator light 128
 - Knee airbags 132
 - Monitoring 128
 - PASSENGER AIR BAG OFF light 128
 - Service 130
 - Side airbags 135
 - Warning/indicator light 17
 - When must the system be inspected? . 128
- Air conditioning
 - A/C operation 75
 - Air distribution 74
 - Air recirculation mode 75
 - Automatic mode 75
 - Controls 72
 - Defrost 75
 - Economical use 76
 - Fan 74
 - Rear window defogger 76
 - Switching on and off 74
 - Temperature 73
- Air distribution 74
- Air recirculation mode
 - Air conditioning 75
- All-wheel drive 155
 - Winter tires 203
- Anti-freeze
 - refer to* Engine coolant system 181
- Anti-Lock Brake System 150
 - Warning/indicator light 18
- Anti-Slip Regulation System 150
- Anti-theft alarm system 43
- Anti-theft wheel bolts 216
- Ashtray 69
- ASR
 - refer to* Anti-Slip Regulation System .. 150
- Asterisk 6
- Audi magnetic ride 82
 - Description 82
 - Warning/indicator light 15
- Audi Service Repair Manuals and Literature 209
- Automated manual transmission
 - refer to* R tronic 85
- Automatic belt retractor 112
- Automatic car wash
 - refer to* Washing 161
- Automatic headlight 55
- Automatic headlight control 62
- Automatic headlights
 - Defective 35
- Auto Safety Hotline 105
- Average fuel mileage 23
- Average speed 23

B

- Battery 184
 - Charging 186
 - Checking 184

Disconnecting	184
Low	155
replacing	187
State of charge	155
Vehicles not driven for long periods	184
Winter operation	184, 185
Working on the battery	185
Battery voltage	34
Before driving	99
Blended gasoline	170
Booster seats	145
Brake system	
Brake fluid	184
Brake light defective	35
Brake power assist unit	153
Brakes	153
Ceramic brakes	153
Malfunction	32
Warning/indicator light	17
Worn brake pads	33
Break-in period	158
Bulbs	224

C

California Proposition 65 Warning	176
Battery specific	186
Capacities	228
Carbon-fiber parts	
Exterior	164
Interior	166
Car care	161
Cargo area	
<i>refer to</i> Luggage compartment	104
Car key	37
Catalytic converter	158
Certification	212
Changing a flat tire	216
Chassis	
<i>refer to</i> Audi magnetic ride	82
Checking	
Engine coolant level	182
Tire pressure	195

Child restraints	
Danger of using child restraints in the front seat	119
Where can I get additional information about child restraints and their use?	149
Child safety	138
Convertible locking retractor	146
Important safety instructions for using child safety seats	141
Important things to know when driving with children	138
Child safety seats	143
Booster seats	145
Convertible child seats	144
Convertible locking retractor	146
How do I properly install a child safety seat in my vehicle?	141
Infant seats	143
Installing	146
Safety instructions	141
Cigarette lighter	69
Cleaning	
Alcantara (synthetic suede)	168
Engine compartment	169
Exhaust tail pipes	165
Fabrics and fabric coverings	166
Leather	167
Radio and navigation display	165
Safety belts	168
Cleaning and protection	161
Cleaning the navigation display	165
Cleaning the radio display	165
Climate controls	72
Dust filter	72
Heating	72
Pollen filter	72
Ventilation	72
Clock	11
Closing	
Engine compartment lid	176
Clutch overheating	36
Cold tire inflation pressure	193
coming home	55
Compass mirror	64
Compliance	212
Consumer Information	105, 209
Contacting NHTSA	105

Controls and displays	8
Convenience close/open feature	40
Convertible child safety seats	144
Convertible locking retractor	
Activating	148
Deactivating	149
Using to secure a child safety seat	146, 148
Convertible top	
Emergency operation	49
Error message	47
General information	46
Indicator light	16
Malfunction	47
Opening/closing	46
Retracting/extending rear window	48
Wind deflector	48
Coolant system	181
Adding coolant	183
Checking the engine coolant level	182
Cruise control	81
Changing speed	81
Deactivating	82
Driving in control mode	81
Switching off temporarily	82
Warning/indicator light	17
Cup holder	68
Current fuel mileage	23

D

Damping	
<i>refer to</i> Audi magnetic ride	82
Data	228
Data recorder	150
Date display	11
Daytime running lights	55
Declaration of compliance	
Cell phone package	212
Electronic immobilizer	212
HomeLink® universal remote control	212
Remote control key	212
Tire pressure monitoring system	212
def	12
Defective light bulb warning	35
Defrosting the windows	75
Determining correct load limit	197
Digital compass	64

Dimensions	229
Dipstick	180
Distance	23
Doors	
Emergency locking	42
Driver information	31
Driver information system	
Menu button	25
Menu display	24
Open door or front lid warning	20
Outside temperature display	20
Red symbols	30
Service interval display	21
Setting	25
Sound system display	20
Trip computer	22
Yellow symbols	30
Driver seat	
<i>refer to</i> Seating position	100, 101
Driving safely	99
Driving through water	158
Dry sump lubrication	157
Duplicate key	37
Dust filter	73

E

Elapsed time	23
Electrical voltage	13
Electronic differential lock (EDL)	150
Warning/indicator light	18
Electronic immobilizer	12, 38
Electronic power control (EPC)	15
Electronic Stabilization Program	150
Electronic stabilization program (ESP)	
Warning/indicator lights	16
Emergency flasher	57
Warning/indicator lights	16
Emergency key	37
Emergency locking	42
Emergency operation	
Convertible top	49
Emergency release	
Front lid	43
Emergency starting	219
Emergency towing	222

- Energy management 155
 - Battery power 156
 - Driver notification 156
 - Engine
 - Coolant 181
 - Engine compartment lid 175
 - Starting 77, 78
 - Stopping 79
 - Engine compartment 177
 - Safety instructions 175
 - Engine compartment lid
 - Closing 176
 - Release lever 175
 - Engine coolant system 181
 - Malfunction 32
 - Temperature gauge 11
 - Engine data 228
 - Engine oil 178
 - Adding 180
 - Additives 180
 - Checking the engine oil level 180
 - Dry sump lubrication 157
 - Indications and conditions requiring extra checking 180
 - Level 33
 - Oil consumption 179
 - Oil grades 178
 - Sensor defective 33
 - Specification and viscosity 178
 - Temperature display 10
 - Engine oil pressure
 - Malfunction 33
 - Engine speed limitation 36
 - Environment
 - Catalytic converter 158
 - Fuel 172
 - Unleaded fuel 170
 - EPC
 - refer to* Electronic power control (EPC) . 15
 - ESP
 - refer to* Electronic Stabilization Program 150
 - refer to* Electronic stabilization program (ESP) 16
 - Event Data Recorder (EDR) 150
 - Exhaust tail pipes
 - Cleaning 165
 - Expansion tank 182
- ## F
- Fan 74
 - Fastening
 - Booster seats 145
 - Convertible child safety seats 144
 - Infant seats 143
 - Flat bed truck 222
 - Flat tire
 - Changing 216
 - Floor mats 104
 - Folding top
 - Care and cleaning 163
 - Foot pedals 104
 - For the sake of the environment
 - Gasoline fumes and the environment .. 172
 - Letting your engine warm up 78
 - Refueling 172
 - Front airbags
 - Description 121
 - How they work 126
 - Frontal collisions and the laws of physics 111
 - Front lid
 - Emergency release 43
 - light 59
 - Power locking system 42
 - Trunk escape handle 213
 - Front passenger
 - refer to* Seating position 100, 101
 - Front seats 66
 - Child restraints in the front seat 119
 - Front towing loop 222
 - Fuel
 - Additives 170
 - Blended gasoline 170
 - Current fuel mileage 23
 - Filler neck 171
 - Fuel supply too low 33
 - Gasoline additives 171
 - Octane rating 170
 - Recommendation 170
 - Refueling 172
 - Reserve 12
 - Tank capacity 228
 - Unlocking the fuel filler flap by hand .. 173

Fuel gauge 12
 Fuel range 22
 Fuses
 Assignment 223
 Replacing 223

G

Garage door opener 95
 Generator
 Warning/indicator light 17
 Glossary of tire and loading terminology 190
 Glove compartment 70
 Gross Vehicle Weight Rating (GVWR) ... 226

H

Headlight
 Defective 35
 Headlight flasher 58
 Headlights 55
 Head restraints 68, 102
 Adjusting 102
 Heated
 Outside mirrors 63
 Rear window defogger 76
 Seats 76
 Washer jets 59
 Heating 72
 High beam 55, 58
 Warning/indicator lights 16
 High voltage warning label 226
 Hill hold assist
 Starting on hills 80
 HomeLink® 95
 Horn 8
 How many airbags does my vehicle have? 124
 How often should I check my tire pressures? 195
 How safety belt pretensioners work 115
 Hydroplaning 199

I

Ignition 77
 Immobilizer 12
 Important things to do before driving ... 99

Improperly worn safety belts 114
 Indicator light
 Airbag system 128
 Clutch overheating 36
 Convertible top 16
 No reverse gear 35
 PASSENGER AIR BAG OFF 128
 Selector lever defective 35
 Indicator lights 14
 Red symbols in the center display 30
 Yellow symbols in the center display ... 30
 Infant seats 143
 Installing child safety seats
 Safety belts 146
 Instrument cluster and controls 10
 Instrument panel illumination 56
 Instruments and controls
 General illustration 8
 Interior lights 58
 Luggage compartment 59
 Intermittent wiping 59

J

Jump-starting 219

K

Key 37
 Battery replacement 38
 Emergency key 37
 Key replacement 37
 Remote master key 37
 Kick-down
 R tronic 87
 Knee airbags 132
 Description 132
 How they work 134
 Important safety instructions 134

L

Lap timer
 Deleting total results 28
 Displaying split time 27
 Ending timing 28
 Evaluating times 28
 Interrupting timing 27
 Introduction 26

Resuming timing	28
Selecting	26
Starting timing	26
Switching to the trip computer	27
Launch Control Program	
Manual transmission	84
R tronic	87
Leather	166
Cleaning	167
leaving home	55
Lifting jack	217
Light	
coming/leaving home	55
Exterior lighting	55
Light/rain sensor	
Automatic headlight control	62
Defective	35
Light sensor package	55
Wiper and washer system (intermittent wiping)	59
Lights	
Instrument panel illumination	56
switching on and off	55
Light sensor	
Defective	35
Light sensor package	55
Loading the luggage compartment	104
Locking	40
Power locking system	40
Luggage compartment	59
Emergency exit	213
light	59
Loading	104

M

Maintenance	209
Malfunction Indicator Lamp (MIL)	22
Manual transmission	
Launch Control Program	84
Menu button	25
Menu display	24
Mirror	
Vanity mirror	59
Mirrors	
Activating the digital compass	64
Automatically dimming inside mirror	62

Automatic dimming for the outside mirrors	64
Outside mirrors	63
Monitoring the Advanced Airbag System	128

N

Natural leather	166
New tires and wheels	199
NHTSA	
Contacting	105
No reverse gear	35
Number of seats	109

O

Octane rating	170
Odometer	12
Oil	
<i>refer to</i> Engine oil	178
On-Board Diagnostic System (OBD)	
Data Link Connector (DLC)	21
Malfunction Indicator Lamp (MIL)	22
Open door or front lid warning	20
Optional equipment	
Marked with an asterisk	6
Outside mirrors	63
Outside temperature display	20
Owner's manual	
How the Owner's Manual is organized	6

P

Paint	
Touch-up	164
Paint No.	226
Parking	
on a decline	80
on an incline	80
R tronic	86
Parking brake	79
Warning	32
Parking system advanced	89
Adjusting the display	93
Adjusting the warning tones	93
Parallel Parking	92
Reverse parking	92
Safety precautions	89

- Parking system advanced
Switching on and off 91
- Parts replacement 211
- PASSENGER AIR BAG OFF light 128
- Passive safety system 99
- Pedals 104
- Physical principles of a frontal collision . 111
- Polishing 161
- Pollen filter 73
- Power locking system 39
Emergency locking 42
Front lid 42
Locking 40
Locking and unlocking the vehicle from
inside 41
Opening/closing the windows 40
Switches 41
Unlocking 40
- Power seats 67
- Power steering 154
- Power windows 44
Power locking system 40
Reactivating the system 45
- Pregnant women
Special considerations when wearing a
safety belt 114
- Proper safety belt position 113
- Proper seating position
Driver 100
Front passenger 101
- ## Q
- Quartz clock 11
- ## R
- Rain sensor 59
Defective 35
- Rear light
Defective 35
- Rear spoiler 152
Warning/indicator light 16
- Rear view camera
Parallel Parking 92
Reverse parking 92
- Rear window 48
- Rear window defogger 76
- Refueling 172
- Remote control
refer to Remote master key 38
- Remote control garage door opener
(HomeLink®) 95
- Remote master key 37
Battery replacement 37, 38
Check light 37
Resetting the remote control 38
Unlocking and locking 40
- Repair manuals 209
- Replacement parts 211
- Replacing
Bulbs 224
Fuses 223
Rims 199
Tires and wheels 200
Wheel rims 201
- Reporting Safety Defects 105, 106
- Reset button 12
- Retractor 112
- Reverse gear
R tronic 85
- Rims
Replacing 199, 201
- Rollbar
refer to Active rollover protection sys-
tem 107
- R tronic 85
Description 85
Gearbox malfunction 36
Kick-down 87
Launch Control Program 87
Manual operation 86
Steering wheel with shift paddles 87
- ## S
- SAFE 12, 38
- Safe driving habits 99
- Safety belt position
Safety belts worn by pregnant women . 114
- Safety belt pretensioner
Service and disposal 115

- Safety belts
 - Cleaning 168
 - Danger to passengers who do not wear a safety belt 112
 - Fastening 112
 - General notes 109
 - Improperly worn 114
 - Not worn 112
 - Pretensioners 115
 - Safety belt position 113
 - Safety instructions 110
 - Securing child safety seats 146
 - Special considerations for pregnant women 114
 - Unfastening 114
 - Warning/indicator light 17, 109
 - Why you must wear them 110
 - Worn properly 110
 - Safety compliance sticker 226
 - Safety equipment 99
 - Safety features for occupant restraint and protection 99
 - Safety guidelines
 - Seat adjustment 66
 - Safety instructions
 - For using child safety seats 141
 - For using safety belts 110
 - Monitoring the Advanced Airbag System 130
 - Safety systems
 - Warning/indicator light 17
 - Seat adjustment
 - Driver's seat 66
 - Front passenger's seat 67
 - Front seats 66
 - Head restraints 102
 - Power seats 67
 - Safety guidelines 66
 - Seating capacity 109
 - Seating position
 - Driver 100
 - Front passenger 101
 - Incorrect seat position 103
 - Seats
 - Number of seats 109
 - Selector lever
 - Defective 35
 - Service
 - Airbag system 130
 - Service and disposal
 - Safety belt pretensioner 115
 - Service interval display 21
 - Service position for windshield wipers ... 61
 - Set menu 25
 - Setting the time 11
 - Side airbags
 - Description 135
 - How they work 136
 - Side marker lights 55
 - Snow chains 204
 - Socket 69
 - Sound system display 20
 - Sources of information about child restraints and their use 149
 - Speedometer 12
 - Speed rating letter code 200
 - Speed warning 34
 - Speed warning system 28
 - Spoiler 152
 - Starting on hills
 - Hill hold assist 80
 - Starting the engine 77
 - Steering column
 - Adjusting 77
 - Locking the steering 77
 - Steps for determining correct load limit . 197
 - Stopping the engine 79
 - Storage 70
 - Sun visors 59
 - Symbols
 - Red symbols in the center display 30
 - Yellow symbols in the center display ... 30
- T**
- Tachometer 11
 - Tank flap
 - Unlocking the fuel filler flap by hand .. 173
 - Technical modifications 211
 - Temperature 73
 - Tire mobility system 213
 - Tire pressure 195

- Tire pressure monitoring system 206
 - Loss of air pressure 34
 - Malfunctions 34
 - Sensors 201
 - Tires and wheels 201
 - Valves 201
 - Warning/indicator light 15
 - Tire repair kit 213
 - Tires 189
 - Pressure 206
 - Replacing 199, 201
 - Service life 198
 - Speed rating letter code 200
 - Tire manufacturing date 200
 - Tire pressure monitoring system 206
 - Tire specifications 200
 - Tread depth 198
 - Uniform tire quality grading 203
 - Winter tires 203
 - Tires/Wheels
 - Low aspect ratio tires 205
 - Tires and vehicle load limits 196
 - Tires and wheels
 - Checking tire pressure 195
 - Cold tire inflation pressure 193
 - Dimensions 199
 - General notes 189
 - Glossary of tire and loading terminology 190
 - New tires and wheels 199
 - Replacing 200
 - Snow chains 204
 - Tire pressure monitoring system 201
 - Tires and vehicle load limits 196
 - Wheel bolts 205
 - Winter tires 203
 - Tire service life 198
 - Tool kit 213
 - Touch-up paint 164
 - Towing
 - Tow truck procedures 222
 - Towing loop 222
 - Transport Canada 106
 - Tread Wear Indicator (TWI) 198
 - Trip computer 22
 - Trip odometer 12
 - Turn signals 58
 - Turn Signals
 - Warning/indicator lights 16
- U**
- Unfastening safety belts 114
 - Unidirectional tires 189
 - Uniform tire quality grading 203
 - Universal Radio-Frequency Remote Control (HomeLink®) 95
 - Unlocking 40
 - Power locking system 40
- V**
- Vanity mirror 59
 - Vehicle-care products 161
 - Vehicle electrical system 17
 - Vehicle Identification Number (VIN) 226
 - Vehicle jack 217
 - Vehicle literature 5
 - Vehicle tool kit 213
 - Ventilation 72
 - Voltmeter display 13
- W**
- Warning/indicator lights 10
 - Airbag system 17
 - Anti-Lock Brake System 18
 - Audi magnetic ride 15
 - Brake system 17
 - Cruise control 17
 - Electronic differential lock (EDL) 18
 - Electronic power control (EPC) 15
 - Electronic stabilization program (ESP) 16
 - Generator 17
 - High beam 16
 - Rear spoiler 16
 - Safety belts 17
 - Tire pressure monitoring system 15
 - Turn signals 16
 - Warning lights 14
 - Red symbols in the center display 30
 - Yellow symbols in the center display 30
 - Warranty coverages 209
 - Washing 161
 - Folding top cleaning 163

- Waxing 161
- Wear indicator 198
- Weights 226
- What happens if you wear your safety belt too loose? 113
- What happens to unbelted occupants? .. 112
- What impairs driving safety? 100
- What should I do after changing a wheel? 195
- Wheel bolts
 - Torque 205
- Wheels 165, 189
 - Checking tire pressure 195
 - Cold tire inflation pressure 193
 - General notes 189
 - Glossary of tire and loading terminology 190
 - New tires and wheels 199
 - Tires and vehicle load limits 196
- When must the airbag system be inspected? 128
- When should I adjust the tire pressures? 195
- When should I check the tire pressures? . 195
- Where can I find the tire pressures for my car? 195
- Why safety belts? 110
- Wind deflector 48
 - Cleaning 163
- Windows
 - Cleaning 164
 - Defrost 75
 - Deicing 164
- Windshield washer fluid 34
- Windshield wipers 188
 - Installing new wiper blades 61
 - Service position 61
- Winter operation
 - Battery 184, 185
 - Coolant system 181
 - Defrosting windows 75
 - Heated seats 76
 - Windows 164
 - Windshield wipers 188
- Winter tires 203
 - All-wheel drive 203
- Wiper and washer system 59
- Wiper blades
 - refer to* Windshield wipers 61

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products, without incurring any obligation to install them on products previously manufactured.

Text, illustrations and specifications in this manual are based on the most up-to-date information available at the time of printing.

All rights reserved. May not be reproduced or translated in whole or in part without the written consent of AUDI AG. Specifications are subject to change without notice.

"Audi", "quattro" and the four rings emblem are registered trademarks of AUDI AG. "R8 Spyder" is trademark of AUDI AG.

Editorial deadline: 08/30/2010



For the sake of the environment

Printed on environmentally friendly paper
(bleached without chlorine, recyclable).

Printed in Germany

© 2010 AUDI AG

